


When you installing AGP card, please make sure the following notice is fully understood and practiced. If your AGP card has "AGP 4X/8X (1.5V) notch"(show below), please make sure your AGP card is AGP 4X/8X (1.5V).

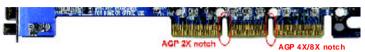

Caution: AGP 2X card is not supported by Intel® 845(GE/PE) / 845(E/G) / 850(E) / E7205 / 865(G/PE/P/GV) / 875P. You might experience system unable to boot up normally. Please insert an AGP 4X/8X card.



Example 1: Diamond Vipper V770 golden finger is compatible with 2X/4X mode AGP slot. It can be switched between AGP 2X(3.3V) or 4X(1.5V) mode by adjusting the jumper. The factory default for this card is 2X(3.3V). The GA-8l865GVMK (or any AGP 4X/8X only) motherboards might not function properly, if you install this card without switching the jumper to 4X(1.5V) mode in it.

Example 2: Some ATi Rage 128 Pro graphics cards made by "Power Color", the graphics card manufacturer & some SiS 305 cards, their golden finger is compatible with 2X(3.3V)/4X(1.5V) mode AGP slot, but they support 2X(3.3V) only. The GA-8l865GVMK (or any AGP 4X/8X only) motherboards might not function properly, If you install this card in it.

Note : Although Gigabyte's AG32S(G) graphics card is based on ATi Rage 128 Pro chip, the design of AG32S(G) is compliance with AGP 4X(1.5V) specification. Therefore, AG32S(G) will work fine with Intel® 845(GE/PE) / 845(E/G) / 850(E) / E7205 / 865(G/PE/P/GV) / 875P based motherboards.



- The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.
- Third-party brands and names are the property of their respective owners.
- Please do not remove any labels on motherboard, this may void the warranty of this motherboard.
- Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.



WARNING: Never run the processor without the hemainh properly and firmly attached. PERMAKENT DAMAGE WILL RESULT!

Miss on garde: Ne faites jamais tourner le processeur sans que le dissipateur de chaleur soit fix correctement et fermement. UN DOMMAGE PERMANENT EN RÉSULTERA!

Achtung: Der Protessor darf nur in Betrieb genommen werden, wenn der W rmeableiter ordnungsgem B und fost ungebrucht ist. DIES HAT EINEN PERMANENTEN SCHADEN ZUR FOLGE!

Advertencia: Nunca kaga funcionar el provesador sin el disipador de calor instalado carrecta y firmemente, ¡SE PRODUCIRÁ UN DAÑO PERMANENTE!

Aviso: Nunca execute o processador sem o dissipador de calor estar adequado e firmemente conectado. O RESULIADO SERÁ UM DANO PERMANENTE!

等等。 将周颈数年四周火量到处理器上之前,不要还有处理器。应强将承达程序处理器!

秦生。 特别将男主用地立其刘诚世界上之前,不要进行通过罢,运兴胜上过期被减进思广

정교: 미스성크를 제외로 또 단단히 부탁시키지 않는 데 스로세터를 구입시키지 미심시오.

警告 永久的な損傷を防ぐため、セートシンクを正しくしっかりと取り付けるまでは、プロセッサを繋ぎさかならようにしてください。

Declaration of Conformity

We, Manufacturer/Importer (full address)

G.B.T. Technology Träding GMbH Ausschlager Weg 41, 1F, 20537 Hamburg, Germany

declare that the product

(description of the apparatus, system, installation to which it refers)

Mother Board

GA-8I865GVMK

is in conformity with

(reference to the specification under which conformity is declared)

in accordance with 89/336 EEC-EMC Directive

□ EN 55011	Limits and methods of mea surement of radio disturbance characteristics of industrial, scientific and medical (ISM high frequency equipment	☐ EN 61000-3-2* ☑ EN 60555-2	Disturbances in supply systems cause by household appliances and similar electrical equipment "Harmonics"
□ EN 55013	Limits and methods of mea surement of radio disturbance characteristics of broadcast receivers and associated equipment	☐ EN 61000-3-3* ☑ EN 60555-3	Disturbances in supply systems cause by household appliances and similar electrical equipment "Voltage fluctuations"
□ EN 55014	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances,	⊠ EN 50081-1	Generic emission standard Part 1: Residual commercial and light industry
	portable tools and similar electrical apparatus	⊠ EN 50082-1	Generic immunity standard Part 1: Residual commercial and light industry
□ EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluore scent lamps and luminaries	□ EN 55081-2	Generic emission standard Part 2: Industrial environment
□ EN 55020	Immunity from radio interference of broadcast receivers and associated equipment	□ EN 55082-2	Generic emission standard Part 2: Industrial environment
⊠ EN 55022	Limits and methods of measurement of radio disturbance characteristics of information technology e quipment	□ ENV 55104	Immunity requirements for hou sehold appliances tools and similar apparatus
☐ DIN VDE 0 855 ☐ part 10 ☐ part 12	Cable d distribution systems; Equipment for receiving and/or distribution from sound and television signals	□ EN50091-2	EMC requirements for uninterru ptible power systems (UPS)
☑ CE marking		(EC conformity n	narking)
		s the conformity of above mentio standards in accordance with L	
□ EN 60065	Safety requirements for mains operated electronic and related apparatus for household and similar general use	□ EN 60950	Safety for information technology equipment including electrical bussiness equipment
□ EN 60335	Safety of household and similar electrical appliances	□ EN 50091-1	General and Safety requirements for uninterruptible power systems (UPS)
	<u>M</u>	anufacturer/Importer	
	(Stamp)	Date : September 5 , 2003	Signature: Timmy Huang Name: Timmy Huang

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

City of Industry, CA 91748

Phone/FaxNo: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard Model Number: GA-8I865GVMK

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109(a), Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received, including that may cause undesired operation.

Representative Person's Name: <u>ERIC LU</u>

Signature: Eric Lu

Date: September 5, 2003

GA-8I865GVMK P4 Titan Series Motherboard

USER'S MANUAL

Pentium* 4 Processor Motherboard Rev. 1003 12ME-8865GV-1003

Table of Content

Warning	4
3	
Chapter 1 Introduction	5
Features Summary	5
GA-8I865GVMK Motherboard Layout	7
Block Diagram	8
Chapter 2 Hardware Installation Process	11
Step 1: Install the Central Processing Unit (CPU)	12
Step 1-1: CPU Installation	12
Step 1-2: CPU Cooling Fan Installation	
Step 2: Install Memory Modules	
Step 3: Install expansion cards	16
Step 4: Connect ribbon cables, cabinet wires and power supply	17
Step 4-1: I/O Back Panel Introduction	
Step 4-2: Connectors Introduction	19
Chapter 3 BIOS Setup	33
The Main Menu (For example: BIOS Ver. : E5)	34
Standard CMOS Features	36
Advanced BIOS Features	39
Integrated Peripherals	41
Power Management Setup	46
PnP/PCI Configurations	

PC Health Status	49
Frequency/Voltage Control	51
Load Fail-Safe Defaults	53
Load Optimized Defaults	54
Set Supervisor/User Password	55
Save & Exit Setup	56
Exit Without Saving	57
Chapter 4 Technical Reference	59
@BIOS™ Introduction	59
EasyTune™ 4 Introduction	60
Flash BIOS Method Introduction	61
Method 1 : Q-Flash	
Method 2 : @BIOS Utility	
2- / 4- / 6-Channel Audio Function Introduction	76
Jack-Sensing Introduction	82
Xpress Recovery Introduction	84
Chapter 5 Appendix	89

Warning



Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should followsome precautions whenever you work on your computer.

- 1. Unplug your computer when working on the inside.
- 2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded objector to a metal object, such as the power supply case.
- 3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
- 4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
- Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the mother board.

Installing the motherboard to the chassis...

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer maybe a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

Chapter 1 Introduction

Features Summary

Form Factor	24.3cm x 24.3cm Micro ATX size form factor, 4 layers PCB
CPU	Socket 478 for Intel® Micro FC-PGA2 Pentium® 4 processor
	Support Intel® Pentium® 4 (Northwood, Prescott) processor
	Support Intel® Pentium® 4 Processor with HT Technology*
	Intel® Pentium® 4 800/533/400MHz FSB
	• 2nd cache depends on CPU
Chipset	Intel® Chipset 865GV HOST/AGP/Controller
	Intel® ICH5 I/O Controller Hub
Memory	4 184-pin DDR DIMM sockets
	Supports Dual Channel DDR400/DDR333/DDR266 DIMM
	• Supports 128MB/256MB/512MB/1GB unbuffered DRAM
	Supports up to 4GB DRAM (Max) (Note 1)
	Supports only DDR DIMM
VO Control	• ITE8712F
Slots	3 PCI slot supports 33MHz & PCI 2.3 compliant
On-Board IDE	• 2 IDE controllers provides IDE HDD/CD-ROM (IDE1, IDE2) with
	PIO, Bus Master (Ultra DMA33/ATA66/ATA100) operation modes
	Can connect up to 4 IDE devices
SerialATA	2 Serial ATA connectors in 150 MB/s operation mode
	Controlled by ICH5
On-Board Peripherals	• 1 Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M
	and 2.88M bytes
	 1 Parallel portsupports Normal/EPP/ECP mode
	 1 Serial port (COMA), 1 VGA port, COMB on board
	• 8 USB 2.0/1.1 ports (4 x Rear, 4 x Front by cable)
	• 1 IR/CIR connector
	1 Front Audio connector

to be confinued.....



Due to chipset (Intel 865GV) architecture limitation, a FSB 800 Pentium 4 processor will support DDR400/DDR333/DDR266 memory module. A FSB 533 Pentium 4 processor will support DDR333 and DDR266 memory module. A FSB 400 Pentium 4 processor will only support DDR 266 memory module.

(Note 1) Due to standard PC architecture, a certain amount of memory is reserved for system usage and therefore the actual memory size is less than the stated amount. For example, 4 GB of memory size will instead be shown as 3.xxGB memory during system startup.

Hardware Monitor	CPU/System fan revolution detect
	CPU temperature detect
	CPU warning temperature
	System voltage detect
	 CPU/System fan fail warning
On-Board LAN	Builitin Intel® 82562 Chipset
	Data transfer rate 10/100Mb supported
	• 1 RJ45 port
On-Board Sound	Realtek ALC655 CODEC
	 SupportJack-Sensing
	 Line Out/ 2 frontspeaker
	 Line In / 2 rear speaker(by s/w switch)
	 Mic In / center& subwoofer(by s/w switch)
	 CD_ln / Game Port
PS/2 Connector	PS/2 Keyboard interface and PS/2 Mouse interface
BIOS	Licensed Phoenix BIOS
AdditionalFeatures	PS/2 Keyboard power on by password
	 PS/2 Mouse power on
	 STR (Suspend-To-RAM)
	AC Recovery
	 Poly fuse for keyboard over-current protection
	 USB KB/Mouse wake up from S3
	 Supports @BIOS
	 Supports EasyTune 4



"*" HT functionality requirement content:

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:


- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology




Please set the CPU host frequency in accordance with your processor's specifications.

We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets, Memory, Cards... etc.

GA-81865GVMK Motherboard Layout

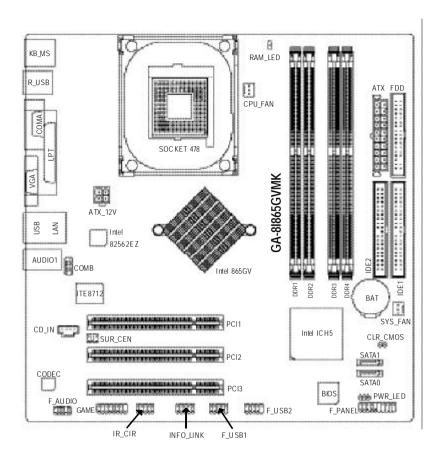


Block Diagram

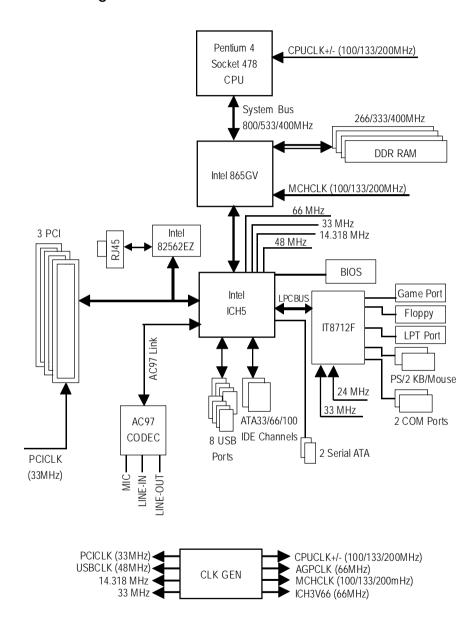

Chapter 2 Hardware Installation Process

To set up your computer, you must complete the following steps:

- Step 1-Install the Central Processing Unit (CPU)
- Step 2- Install memory modules
- Step 3- Install expansion cards
- Step 4- Connect ribbon cables, cabinet wires, and power supply

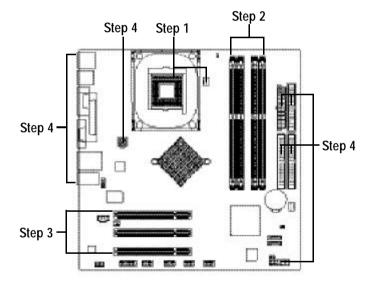

Congratulations! You have accomplished the hardware installation!

Turn on the power supply or connect the power cable to the power outlet. Continue with the BIOS/software installation.

Step 1: Install the Central Processing Unit (CPU)




Before installing the processor, adhere to the following warning:

- 1. Please make sure the CPU type is supported by the motherboard.
- 2. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.

Step 1-1: CPU Installation



 Angling the rod to 65-degree maybe feel a kind of fight, and then continue pull the rod to 90-degree when anoise "cough" made.

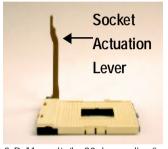

 $2. \label{eq:policy} \textbf{2. Pull the rod to the 90-degree directly}.$



3. CPU Top View



 Locate Pin 1 in the socket and look for a (golden) cutedge on the CPU upper corner. Then insert the CPU into the socket.

Step 1-2: CPU Cooling Fan Installation




Before installing the CPU cooling fan, adhere to the following warning:

- 1. Please use Intel approved cooling fan.
- 2. We recommend you to apply the thermal tape to provide better heat conduction between your CPU and cooling fan.
 - (The CPU cooling fan might stick to the CPU due to the hardening of the thermal paste. During this condition if you try to remove the cooling fan, you might pull the processor out of the CPU socket alone with the cooling fan, and might damage the processor. To avoid this from happening, we suggest you to either use thermal tape instead of thermal paste, or remove the cooling fan with extreme caution.)
- 3. Make sure the CPU fan power cable is plugged in to the CPU fan connector, this completes the installation.
 - Please refer to CPU cooling fan user's manual for more detail installation procedure.



 Fasten the cooling fan supportingbase onto the CPU socket on the motherboard.

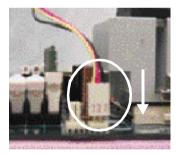

Make sure the CPU fan is plugged to the CPU fan connector, than install complete.


Step 2: Install Memory Modules



Before installing the memory modules, adhere to the following warning:

- 1. When RAM_LED is ON, do not install / remove DIMM from socket.
- 2. Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 4 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

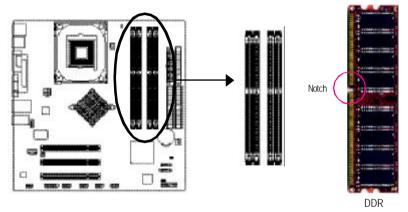



1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.



Insert the DIMM memory module vertically into the DIMM socket. Then push it down.



3. Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.

Reverse the installation steps when you wish to remove the DIMM module.

DDR Introduction

Established on the existing SDRAM infrastructure, DDR (Double Data Rate) memory is a high performance and cost-effective solution that allows easy adoption for memory vendors, OEMs, and system integrabrs.

DDR memory is a great evolutionary solution for the PC industry that builds on the existing SDRAM architecture, yetmake the awesome advances in solving the system performance bottleneck bydoubling the memory bandwidth. Nowadays, with the highest bandwidth of 3.2GB/s of DDR400 memory and complete line of DDR400/333/266/200 memory solutions, DDR memory is the best choice for building high performance and low latency DRAM subsystem that are suitable for servers, workstations, and full range of desktop PCs.

Dual Channel DDR:

GA-81865GVMK supports Dual Channel Technology.

When Dual Channel Technology is activated, the bandwidth of memory bus will be double the original one, with the fastest speed at 6.4GB/s DDR400.

GA-8l865GVMK includes four DIMM slots, and each Channel has 2 DIMMs as following:

Channel A: DIMM 1, 2
★ Channel B: DIMM 3, 4

Below are the explanations:



If you want to operate the Dual Channel Technology, please note the following explanations due to the limitation of Intel chipset specifications.

- Only one DDR memory module is installed: The Dual Channel Technology can't operate when only one DDR memory module is installed. Additionally, you can boot the system only when the memory module is inserted into Channel A. On the other hand, the memory module must be inserted into DIMM1 or DIMM3 sockets.
- 2. Two DDR memory modules are installed (the same memory size and type): The Dual Channel Technology will operate when two memory modules are inserted individually into Channel A and B. If you install two memory modules in the same channel, the Dual Channel Technology will not operate. Additionally, you can boot the system only when one of the memory modules is inserted into Channel A. On the other hand, the memory module must be inserted into DIM M1 or DIM M3 sockets.
- Three DDR memory modules are installed: Please note that The Dual Channel Technology will not operate when three DDR memory modules are installed; part of them will not be detected.
- 4. Four DDR memory modules are installed: If you install four memory modules at the same time, the Dual Channel Technology will operate only when those modules have the same memory size and type.

The following tables include all memory-installed combination types: (Please note that those types not in the tables will not boot up.)

• Figure 1: Dual Channel Technology (DS: Double Side, SS: Single Side)

	DIMM 1	DIMM 2	DIMM 3	DIMM 4
2memory modules	DS/SS	X	DS/SS	X
	Х	DS/SS	Х	DS/SS
4memory modules	DS/SS	DS/SS	DS/SS	DS/SS

• Figure 2: Don't operate Dual Channel Technology (DS: Double Side, SS: Single Side)

	DIMM 1	DIMM 2	DIMM 3	DIMM 4
1 memory module	DS/SS	Χ	X	Х
	Х	Χ	DS/SS	Х
2 memory modules	DS/SS	DS/SS	X	X


Step 3: Install expansion cards

- 1. Read the related expansion card's instruction document before install the expansion card into the computer.
- 2. Remove your computer's chassis cover, screws and slotbracket from the computer.
- 3. Press the expansion card firmly into expansion slot in motherboard.
- 4. Be sure the metal contacts on the card are indeed seated in the slot.
- 5. Replace the screw to secure the slot bracket of the expansion card.
- 6. Replace your computer's chassis cover.
- 7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
- 8. Install related driver from the operating system.



Step 4: Connect ribbon cables, cabinet wires and power supply

Step 4-1: I/O Back Panel Introduction

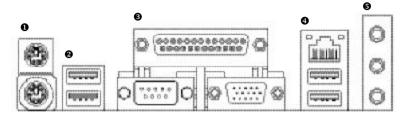

PS/2 Keyboard and PS/2 Mouse Connector




PS/2 Mouse Connector (6pin Female)

PS/2 Keyboard Connector (6pin Female)


➤ This connector supports standard PS/2 keyboard and PS/2 mouse.

2/4 USB/LAN Connector

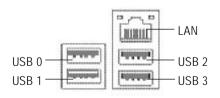

- LAN is fast Ethernet with 10/100Mbps speed.
- ➤ Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

3 Parallel Port, Serial Port and VGA port (LPT / COMA / VGA)

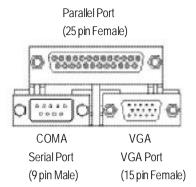

This connector supports 1 standard COM port, 1 Parallel port and 1 VGA port. Device like printer can be connected to Parallel port; mouse and modem etc. can be connected to Serial ports.

Audio Connectors



After install onboard audio driver, you may connect speaker to Line Outjack, microphone to MIC In jack. Device like CD-ROM, walkman etc. can be connected to Line-In jack.

Please note:

You are able to use 2-/4-/6-channel audio feature by S/W selection.

If you want to enable 6-channel function, you have 2 choose for hardware connection.

Method1:

Connect "Front Speaker" to "Line Out"
Connect "Rear Speaker" to "Line In"
Connect "Center and Subwoofer" to "MIC Out".


Method2:

You can refer to page 27, and contact your nearest dealer for optional SUR_CEN cable.



If you want the detail information for 2-/4-/6-channel audio setup installation, please refer to page 76.


Step 4-2: Connectors Introduction

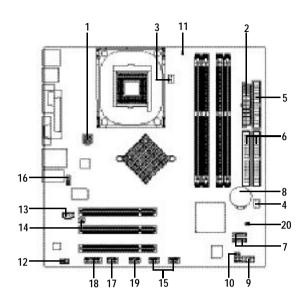

1)	ATX_12V	11)	RAM_LED
2)	ATX	12)	F_AUDIO
3)	CPU_FAN	13)	CD_IN
4)	SYS_FAN	14)	SUR_CEN
5)	FDD	15)	F_USB1 / F_USB2
6)	IDE1 / IDE2	16)	COMB
7)	SATA0/SATA1	17)	IR_CIR
8)	BAT	18)	GAME
9)	F_PANEL	19)	INFO_LINK
10)	PWR_LED	20)	CLR_CMOS

1) ATX_12V (+12V Power Connector)

This connector (ATX_12V) supplies the CPU operation voltage (Vcore). If this "ATX_12V connector" is not connected, system cannot boot.

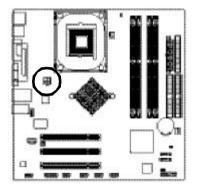





Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

2) ATX (ATX Power)

AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

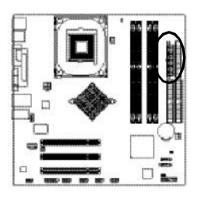


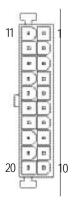

Pin No.	Definition
1	3.3V
2	3.3V
3	GND
4	VCC
5	GND
6	VCC
7	GND
8	PowerGood
9	5VSB (stand by +5V)
10	+12V
11	3.3V
12	-12V
13	GND
14	PS_ON(softon/off)
15	GND
16	GND
17	GND
18	-5V
19	VCC
20	VCC

3) CPU_FAN (CPU Fan Connector)

Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to $600\,\mathrm{m\,A}$.

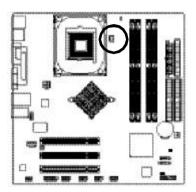




Pin No.	Definition
1	GND
2	+12V
3	Sense

4) SYS_FAN (System Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

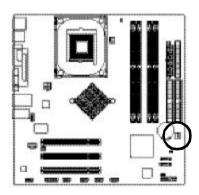




Pin No.	Definition
1	GND
2	+12V
3	Sense

5) FDD (Floppy Connector)

Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

The red stripe of the ribbon cable must be the same side with the Pin1.

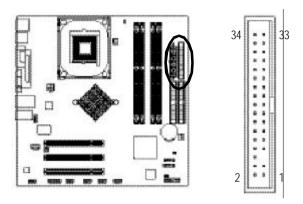



6) IDE1 / IDE2 (IDE1 / IDE2 Connector)

Important Notice:

Please connect first hard disk to IDE1 and connect CD-ROM to IDE2.


The red stripe of the ribbon cable must be the same side with the Pin1.

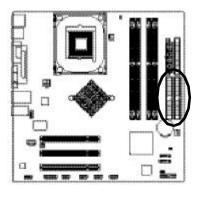

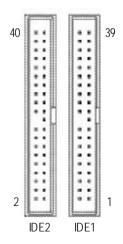

7) SATA0 / SATA1 (Serial ATA Connector)


You can connect the Serial ATA device to this connector, it provides you high speed transfer rates (150MB/sec).

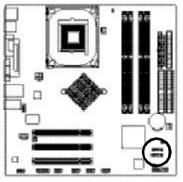


7	[5]
- 2	SATA1
7	<u>[</u>
	SATA0

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

8) BAT (BATTERY)

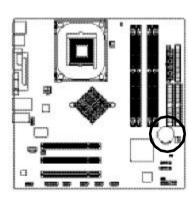

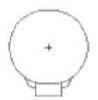

CAUTION


- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.


If you want to erase CMOS...

- 1. Turn OFF the computer and unplug the power cord.
- 2. Remove the battery, wait for 30 second.
- 3. Re-install the battery.
- 4. Plug the power cord and turn ON the computer.

9) F_PANEL (2 x 10 pins Connector)

Please connect the power LED, PC speaker, reset switch and power switch etc of your chassisfront panel to the F_PANEL connector according to the pin assignment above.

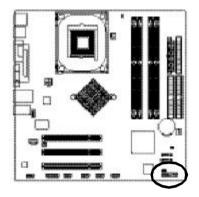


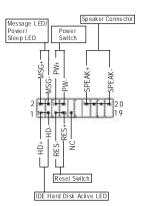

HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
SPEAK (Speaker Connector)	Pin 1: VCC(+)
	Pin 2- Pin 3: NC
	Pin 4: Data(-)
RES (Reset Switch)	Open:Normal Operation
	Close: Reset Hardware System
PW (Power Switch)	Open:Normal Operation
	Close: Power On/Off
MSG(Message LED/ Power/ Sleep LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
NC	NC

10) PWR_LED

PWR_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. If you use dual color LED, power LED will turn to another color.

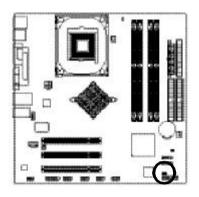




Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

11) RAM_LED


Do not remove memory modules while RAM_LED is on. It might cause short or other unexpected damages due to the stand by voltage. Remove memory modules only when AC power cord is disconnected.

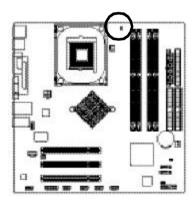



12) F_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper. In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assigment on the cable is the same as the pin assigment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

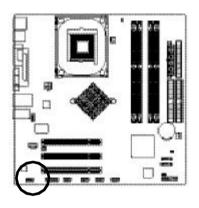


2		10
	:	
1		9

Pin No.	Definition
1	MIC
2	GND
3	REF
4	Power
5	FrontAudio (R)
6	Rear Audio (R)
7	Reserved
8	No Pin
9	FrontAudio (L)
10	Rear Audio (L)

13) CD_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

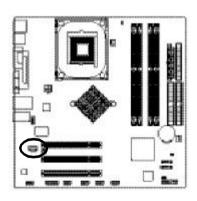




Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

14) SUR_CEN (Surround Center Connector)

Please contact your nearest dealer for optional SUR_CEN cable.

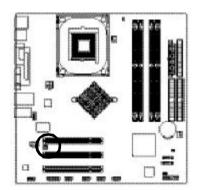


2	6
[4]	[1]
lel:	ы
1	5

Pin No.	Definition
1	SUROUTL
2	SUROUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

15) F_USB1 / F_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment while you connect the front USB cable. Please contact your nearest dealer for optional front USB cable.

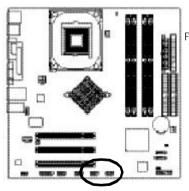






Pin No.	Definition
1	Power
2	Power
3	USB Dx-
4	USB Dy-
5	USB Dx+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

16) COMB (COM B Connector)

Be careful with the polarity of the COMB connector. Check the pin assignment while you connect the COMB cable. Please contact your nearest dealer for optional COMB cable.

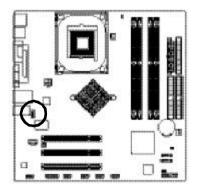


10	9
-	
1=	=
10	
2	1

Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDT RB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

17) IR_CIR

Make sure the pin 1 on the IR device is aling with pin one the connector. To enable the IR/CIR function on the board, you are required to purchase an option IR/CIR module. For detail information please contact your autherized Giga-Byte distributor. To use IR function only, please connect IR module to Pin1 to Pin5.

Be careful with the polarity of the IR/CIR connector. Check the pin assignment carefully while you connect the IR/CIR cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IR/CIR cable, please contact your local dealer.

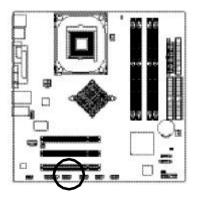


6			10
	*	٠	•
		×	•

Pin No.	Definition
1	VCC
2	NC
3	IRRX
4	GND
5	IRTX
6	NC
7	CIRRX
8	+5VSB
9	CIRTX
10	NC

18) GAME (Game Connector)

This connector supports joystick, MIDI keyboard and other relate audio devices.

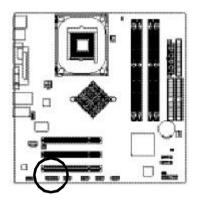


2						16
:	:	:	•	:	:	0
1						15

Pin No.	Definition
1	VCC
2	GRX1_R
3	GND
4	GPSA2
5	VCC
6	GPX2_R
7	GPY2_R
8	MSI_R
9	GPSA1
10	GND
11	GPY1_R
12	VCC
13	GPSB1
14	MSO_R
15	GPSB2
16	No Pin

19) INFO_LINK

This connector allows you to connect some external devices to provide you extra function.

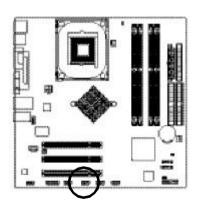




Pin No.	Definition
1	SMBCLK
2	VCC
3	SMBDATA
4	GPI0
5	GND
6	GND
7	No Pin
8	NC
9	+12V
10	+12V

20) CLR_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

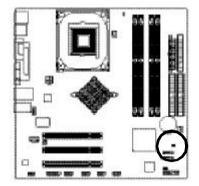

- 1 Den: Normal
- 1 Close: Clear CMOS

Chapter 3 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Powering ON the computer and pressing < Del> immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

CONTROL KEYS

< 1>>	Move to previous item
<↓>	Move to next item
< ← >	Move to the item in the left hand
< >> >	Move to the item in the right hand
Enter	Select item
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and
	Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<f2></f2>	Item Help
<f3></f3>	Reserved
<f4></f4>	Reserved
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<f6></f6>	Load the file-safe default CMOS value from BIOS default table
<f7></f7>	Load the Optimized Defaults
<f8></f8>	Q-Flash function
<f9></f9>	System Information
<f10></f10>	Save all the CMOS changes, only for Main Menu

GEITING HELP

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

The Main Menu (For example: BIOS Ver. : E5)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

	1 3 13 5 11			
▶Standard CMOS Features	Load Fail-Safe Defaults			
►Adv anced BIOS Features	Load Optimized Defaults			
►Integrated Peripherals	Set Supervisor Password			
▶Power Management Setup	Set User Password			
▶PnP/PCI Configurations	Save & Exit Setup			
▶PC Health Status	Ex it Without Sav ing			
▶Frequency/Voltage Control				
ESC:Quit ↑↓→←:Select Item				
F8: Q-Flash F10:Sav e & Exit Setup				
Time, Date, Hard Disk Type				

Figure 1: Main Menu



If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option widden.

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

Integrated Peripherals

This setup page includes all onboard peripherals.

• Power Management Setup

This setup page includes all the items of Green function features.

• PnP/PCI Configurations

This setup page includes all the configurations of PCI & PnP ISA resources.

• PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

• Frequency/Voltage Control

This setup page is control CPU's clock and frequency ratio.

• Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

• Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

• Set Supervis or pass word

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

• Set User password

Change, set, or disable password. It allows you to limit access to the system.

• Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

• Exit Without Saving

Abandon all CMOS value changes and exit setup.

Standard CMOS Features

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Standard CMOS Features

Date (mm:dd:yy)	Tue, Aug 13 2002	Item Help
Time (hh:mm:ss)	22:31:24	Menu Level ►
		Change the day, month,
►IDE Primary Master	[None]	y ear
▶IDE Primary Slave	[None]	
►IDE Secondary Master	[None]	<week></week>
▶IDE Secondary Slave	[None]	Sun. to Sat.
Drive A	[1.44M, 3.5 in.]	<month></month>
Drive B	[None]	Jan. to Dec.
Floppy 3 Mode Support	[Disabled]	
		<day></day>
Halt On	[All, But Keyboard]	1 to 31 (or max imum
		allowed in the month)
Base Memory	640K	
Extended Memory	130048K	<year></year>
Total Memory	131072K	1999 to 2098
↑↓→←: Move Enter:Select +	/-/PU/PD:Value F10:Save ESC	Exit F1:General Help
F5:Previous Values	F6:Fail-Safe Defaults	F7:Optimized Defaults

Figure 2: Standard CMOS Features

· Date

The date format is <week>, <month>, <day>, <year>.

- ▶ Week The week, from Sun to Sat, determined by the BIOS and is display only
- ▶ Month The month, Jan. Through Dec.
- Day The day, from 1 to 31 (or the maximum allowed in the month)
- → Year The year, from 1999 through 2098

· Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

DEPrimary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from driveC to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

CYLS.	Number of cylinders
→ HEADS	Number of heads
→ PRECOMP	Write precomp
▶ LANDZONE	Landing zone
→ SECTORS	Number of sectors

If a hard disk has not been installed select NONE and press <Enter>.

Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

None	No floppy drive installed
→ 360K, 5.25 in.	5.25 inch PC-type standard drive; 360K byte capacity .
→ 1.2M, 5.25 in.	5.25 inch AT-type high-density drive; 1.2M byte capacity
	(3.5 inch when 3 Mode is Enabled).
→ 720K, 3.5 in.	3.5 inch double-sided drive; 720K byte capacity
→ 1.44M, 3.5 in.	3.5 inch double-sided drive; 1.44M byte capacity.
→ 2.88M, 3.5 in.	3.5 inch double-sided drive; 2.88M byte capacity.

Floppy 3 Mode Support (for Japan Area)

Disabled Normal Floppy Drive. (Default value)
 Drive A
 Drive A is 3 mode Floppy Drive.
 Drive B is 3 mode Floppy Drive.
 Both Drive A & B are 3 mode Floppy Drives.

· Halt on

The category determines whether the computer will stop if an error is detected during power up.

NO Errors
The system boot will not stop for any error that may be detected

and you will be prompted.

▶ All Errors Whenever the BIOS detects a non-fatal error the system will be stopped.

▶ All, But Keyboard The system boot will not stop for a keyboard error; it will stop for

all other errors. (Default value)

▶ All, But Diskette The system boot will not stop for a disk error; it will stop for all

other errors.

▶ All, But Disk/Key The system boot will not stop for a keyboard or disk error; it will

stop for all other errors.

· Memory

The category is display-only which is determined by POST (PowerOn Self Test) of the BIOS.

Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512 K for systems with 512 K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1 MB in the CPU's memory address map.

Advanced BIOS Features

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Advanced BIOS Features

	► Hard Disk Boot Priority	[Press Enter]	Item Help
	First Boot Device	[Floppy]	Menu Level ►
	Second Boot Device	[Hard Disk]	Select Hard Disk Boot
	Third Boot Device	[CD-ROM]	Device priority
	Password Check	[Setup]	
#	CPU Hyper-Threading	[Enabled]	
	On-Chip Frame Buffer Size	[16MB]	
	↑↓→←: Move Enter:Select +/-/PU/PD:Value	F10:Save ESC:Ex	it F1:General Help
	F5:Previous Values F6:Fail	-Safe Defaults F	7:Optimized Defaults

Figure 3: Adv anced BIOS Features

· HardDisk Boot Priority

▶ Press Enter Select Hard Disk Boot Device priority.

First / Second / Third Boot Device

→ Floppy	Select your boot device priority by Floppy.
>> LS120	Select your boot device priority by LS120.
→ Hard Disk	Select your boot device priority by Hard Disk.
→ CDROM	Select your boot device priority by CDROM.
>> ZIP	Select your boot device priority by ZIP.
⇒ USB-FDD	Select your boot device priority by USB-FDD.
₩ USB-ZIP	Select your boot device priority by USB-ZIP.
→ USB-CDROM	Select your boot device priority by USB-CDROM.
→ USB-HDD	Select your boot device priority by USB-HDD.
→ LAN	Select your boot device priority by LAN.
▶ Disabled	Select your boot device priority by Disabled.

[&]quot; # " System will detect automatically and show up when you install the Intel® Pentium® 4 processor with HT Technology.

Password Check

→ Setup The system will boot but will not access to Setup page if the correct

password is not entered at the prompt. (Default value)

➤ System The system will not boot and will not access to Setup page if the correct

password is not entered at the prompt.

CPU Hyper-Threading

▶ Enabled Enables CPU Hyper Threading Feature. Please note that this feature is only

working for operating system with multi processors mode supported.

(Default value)

▶ Disabled Disables CPU Hyper Threading.

On-Chip Frame Buffer Size

▶ 1MB Set On-Chip Frame Buffer Size to 1MB.
 ▶ 4MB Set On-Chip Frame Buffer Size to 4MB.
 ▶ 8MB Set On-Chip Frame Buffer Size to 8MB.

▶ 16MB Set On-Chip Frame Buffer Size to 16MB. (Default value)

→ 32MB Set On-Chip Frame Buffer Size to 32MB.

Integrated Peripherals

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software Integrated Peripherals

On-Chip Primary PCI IDE	[Enabled]	Item Help	
On-Chip Secondary PCI IDE	[Enabled]	Menu Level ►	
On-Chip SATA	[Auto]	If a hard disk	
x SATA Port0 Configure as	SATA Port0	controller card is	
SATA Port1 Configure as	SATA Port1	used, set at Disable	
USB Controller	[Enabled]		
USB 2.0 Controller	[Enabled]	[Enabled]	
USB Key board Support	[Disabled]	Enable on-chip IDE	
USB Mouse Support	[Disabled]	Port	
AC97 Audio	[Auto]		
Onboard H/W LAN	[Enabled]	[Disabled]	
Onboard LAN Boot ROM	[Disabled]	Disable on-chip IDE	
Onboard Serial Port 1	[3F8/IRQ4]	Port	
Onboard Serial Port 2	[2F8/IRQ3]		
UART Mode Select	[Normal]		
x UR2 Duplex Mode	Half		
Onboard Parallel Port	[378/IRQ7]		
Parallel Port Mode	[SPP]		
x ECP Mode Use DMA	3		
Game Port Address	[201]		
Midi Port Address	[330]		
Midi Port IRQ	[10]		
↑↓→←: Move Enter:Select +/-/PU/PD:Value		'	
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults			

Figure 4: Integrated Peripherals

On-Chip Primary PCI IDE

▶ Enabled Enable onboard 1st channel IDE port. (Default value)

▶ Disabled Disable onboard 1st channel IDE port.

On-Chip Secondary PCI IDE

▶ Enabled Enable onboard 2nd channel IDE port. (Default value)

▶ Disabled Disable onboard 2nd channel IDE port.

On-chip SATA

▶ Disabled Disable SATA controller.

→ Auto When no device is plugged in IDE1 or IDE2, SATA controller will remap to IDE

controller. (Default Value)

▶ Manual Set SATA Mode manually.

SATA Port0 Configure as

▶ IDE Pri. Master
 ▶ IDE Pri. Slave
 ▶ IDE Pri. Slave
 ▶ IDE Sec. Master
 ▶ IDE Sec. Slave
 ▶ IDE Sec. Slave

Remap SATA Port 0 to IDE Sec. Master.
▶ IDE Sec. Slave
Remap SATA Port 0 to IDE Sec. Slave.

SATA PortO SATA controller set to SATA portO. As this mode, it support by WinXP or

later OS only. (Default value)

SATA Port1 SATA controller set to SATA port1. As this mode, it support by WinXP or

later OS only.

SATA Port1 Configure as

The values depend on SATA Port0.

USB Controller

▶ Enabled Enable USB Controller. (Default value)

▶ Disabled Disable USB Controller.

USB 2.0 Controller

Disable this function if you are not using onboard USB 2.0 feature.

▶ Enabled Enable USB 2.0 Controller. (Default v alue)

▶ Disabled Disable USB 2.0 Controller.

USB Keyboard Support

▶ Enabled Enable USB Keyboard Support.

▶ Disabled Disable USB Key board Support. (Default value)

USB Mouse Support

▶ Enabled Enable USB Mouse Support.

▶ Disabled Disable USB Mouse Support. (Default value)

AC97 Audio

➤ Auto Enable onboard AC'97 audio function. (Default Value)

▶ Disabled Disable this function.

Onboard H/W LAN

▶ Enabled Enable Onboard H/W LAN function. (Default value)

▶ Disabled Disable this function.

Onboard LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

▶ Disabled Disable this function. (Default Value)

▶ Enabled Enable this function.

Onboard Serial Port 1

→ Auto BIOS will automatically setup the port 1 address.

→ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)

▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
 ▶ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
 ▶ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.

▶ Disabled Disable onboard Serial port 1.

Onboard Serial Port 2

Auto BIOS will automatically setup the port 2 address.
 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.

→ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)

⇒ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
 ⇒ 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.

→ Disabled Disable onboard Serial port 2.

UART Mode Select

(This item allows you to determine which Infra Red(IR) function of Onboard I/O chip)

▶ ASKIR Set onboard I/O chip UART to ASKIR Mode.
 ▶ IrDA Set onboard I/O chip UART to IrDA Mode.
 ▶ SCR Set onboard I/O chip UART to SCR Mode.

Normal Set onboard I/O chip UART to Normal Mode. (Default Value)

UR2 Dupl ex Mode

→ Half IR Function Duplex Half. (Default Value)

Full IR Function Duplex Full.

· Onboard Parallel port

▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default Value)

→ 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.

▶ Disabled Disable onboard LPT port.

→ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

○ Parallel Port Mode

▶ SPP Using Parallel port as Standard Parallel Port. (Default Value)

▶ EPP Using Parallel port as Enhanced Parallel Port.
 ▶ ECP Using Parallel port as Extended Capabilities Port.
 ▶ ECP+EPP Using Parallel port as ECP & EPP mode.

□ FCP Mode Use DMA

▶ 3 Set ECP Mode Use DMA to 3. (Default Value)

→ 1 Set ECP Mode Use DMA to 1.

Game Port Address

⇒ 201 Set Game Port Address to 201. (Default Value)

⇒ 209 Set Game Port Address to 209.

▶ Disabled Disable this function.

Midi Port Address

→ 300 Set Midi Port Address to 300.

→ 330 Set Midi Port Address to 330. (Default Value)

▶ Disabled Disable this function.

Midi Port IRQ

▶ 5 Set Midi Port IRQ to 5.

→ 10 Set Midi Port IRQ to 10. (Default Value)

Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Power Management Setup

ACPI Suspend Type	[S1(POS)]	Item Help
Power LED in S1 State	[Blinking]	Menu Level ►
Off by Power button	[Instant-Off]	[S1(POS)]
PME Event Wake Up	[Enabled]	Set suspend type to
ModemRingOn/WakeOnLan	[Enabled]	Power On Suspend under
Resume by Alarm	[Disabled]	ACPI OS
x Date (of Month) Alarm	Ev ery day	
x Time (hh:mm:ss)	0 0 0	[S3(STR)]
Power On By Mouse	[Disabled]	Set suspend type to
Power On By Keyboard	[Disabled]	Suspend to RAM under
x KB Power ON Password	Enter	ACPI OS
AC BACK Function	[Soft-Off]	
↑↓→←: Move Enter:Select +/-/PU/PD:Value	F10:Save ESC:Ex	it F1:General Help
F5:Previous Values F6:Fa	il-Safe Defaults F	7:Optimized Defaults

Figure 5: Power Management Setup

ACPI Suspend Type

→ S1(POS) Set ACPI suspend type to S1. (Default Value)

S3(STR) Set ACPI suspend type to S3.

Power LED in S1 state

▶ Blinking In standby mode(S1), power LED will blink. (Default Value)

Dual/OFF In standby mode(S1):

a. If use single color LED, power LED will turn off.

b. If use dual color LED, power LED will turn to another color.

Off by Power button

▶ Instant-off Press power button then Power off instantly. (Default value)

▶ Delay 4 Sec. Press power button 4 sec to Power off. Enter suspend if button is pressed less

than 4 sec.

○ PME Event Wake Up

▶ Disabled Disable this function.

▶ Enabled Enable PME Event Wake up. (Default Value)

ModemRingOn/WakeOnLAN

▶ Disabled Disable Modem Ring on/wake on Lan function.

▶ Enabled Enable Modem Ring on/wake on Lan. (Default Value)

Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

▶ Disabled Disable this function. (Default Value)

▶ Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

Date (of Month) Alarm: Every day, 1~31

Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

Power On By Mouse

▶ Disabled Disabled this function. (Default value)

Mouse Click Double click on PS/2 mouse left button to power on system.

Power On By Keyboard

▶ Password Enter from 1 to 5 characters to set the Keyboard Power On Password.

▶ Disabled Disabled this function. (Default value)

▶ Key board 98 If your key board have "POWER Key" button, you can press the key to

power on your system.

KB Power ON Password

▶ Enter Input password (from 1 to 5 characters) and press Enter to set the Key-

board Power On Password.

AC BACK Function

▶ Memory System power on depends on the status before AC lost.

→ Soft-Off Always in Off state when AC back. (Default value)

▶ Full-On Always power on the system when AC back.

PnP/PCI Configurations

CMOS Setup Utility -Copy right (C) 1984-2003 Award Software

PnP/PCI Configurations

PCI 1 IRQ Assignment	[Auto]	Item Help
PCI 2 IRQ Assignment	[Auto]	Menu Level ►
PCI 3 IRQ Assignment	[Auto]	
↑↓→←: Move Enter:Select	+/-/PU/PD:Value F10:Save ESC	:Exit F1:General Help
F5:Previous Value	s F6:Fail-Safe Defaults	F7:Optimized Defaults

Figure 6: PnP/PCI Configurations

PCI 1 IRQ Assignment

★ Auto Auto assign IRQ to PCI 1. (Default value)
 ★ 3,4,5,7,9,10,11,12,14,15
 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

PCI 2 IRQ Assignment

Auto Auto assign IRQ to PCI 2. (Default value)
 3,4,5,7,9,10,11,12,14,15 to PCI 2.

PCI3 IRQ Assignment

Auto assign IRQ to PCI 3. (Default value)
 → 3,4,5,7,9,10,11,12,14,15 to PCI 3.

PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

PC Health Status

Vcore	OK	Item Help
DDR25V	OK	Menu Level ►
+3.3V	OK	
+12V	OK	
Current CPU Temperature	40°C	
Current CPU FAN Speed	6490 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	
↑↓→←: Move Enter:Select +/-/PU/PD:Value	F10:Save ESC:Ex	it F1:General Help
F5:Previous Values F6:Fai	I-Safe Defaults F	7:Optimized Defaults

Figure 7: PC Health Status

** Current Voltage (V) Vcore / DDR25V / +3.3 V / +12V

▶ Detect system's voltage status automatically.

Current CPU Temperature

▶ Detect CPU Temp. automatically.

Current CPU/SYSTEM FAN Speed (RPM)

▶ Detect CPU/SYSTEM Fan speed status automatically.

CPU Warning Temperature

Monitor CPU Temp. at 60°C / 140°F.
 Monitor CPU Temp. at 70°C / 158°F.
 Monitor CPU Temp. at 70°C / 158°F.
 Monitor CPU Temp. at 80°C / 176°F.
 Monitor CPU Temp. at 90°C / 194°F.
 Disabled
 Disable this function. (Default value)

CPU FAN Fail Warning

▶ Disabled Fan Warning Function Disable. (Default value)

▶ Enabled Fan Warning Function Enable.

SYSTEM FAN Fail Warning

▶ Disabled Fan Warning Function Disable. (Default value)

▶ Enabled Fan Warning Function Enable.

Frequency/Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Frequency/Voltage Control

CPU Clock Ratio	[15X]	Item Help
CPU Host Clock Control	[Disabled]	Menu Level ▶
*CPU Host Frequency (Mhz)	100	
*AGP/PCI/SRC Fixed	66/33/100	
Memory Frequency For	[Auto]	
Memory Frequency (Mhz)	266	
AGP/PCI/SRC Frequency (Mhz)	66/33/100	
↑↓→←: Move Enter:Select +/-/PU/PD:Value	F10:Save ESC:Ex	it F1:General Help
F5:Previous Values F6:Fail	-Safe Defaults F	7:Optimized Defaults

Figure 8: Frequency/Voltage Control

*Those items will be available when "CPU Host Clock Control" is set to Enabled.

CPU Clock Ratio

This option will not be shown or not be available if you are using a CPU with the locked ratio.

→ 15X~21X
It depends on CPU Clock Ratio.

This setup option will automatically assign by CPU detection.

For C-Stepping P4: 8X, 10X~24X default: 15X For Northwood CPU: 12X~24X default: 16X

The option will display "Locked" and read only if the CPU ratio is not changeable.

CPU Host Clock Control

Note: If system hangs up before enter CMOS setup utility, wait for 20 sec for times out reboot. When time out occur, system will reset and run at CPU default Host clock at next boot.

▶ Disabled Disable CPU Host Clock Control. (Default value)

▶ Fnabled Fnable CPU Host Clock Control

CPU Host Frequency

▶ 100MHz ~ 355MHz Set CPU Host Clock from 100MHz to 355MHz.

Incorrect using it may cause your system broken. For power End-User use only!

□ AGP/PCI/S RC Fixed

Serial ATA device is very sensitive to SRC clock. SRC over clock may make Serial ATA device function can't work properly.

→ Adjust AGP/PCI/SRC clock asychrohous with CPU.

Memory Frequency For

for FSB(Front Side Bus) frequency = 400MHz,

▶ 2.0 Memory Frequency = Host clock X 2.0.▶ 2.66 Memory Frequency = Host clock X 2.66.

→ Auto Set Memory frequency by DRAM SPD data. (Default value)

for FSB(Front Side Bus) frequency =533MHz,

⇒ 2.0 Memory Frequency = Host clock X 2.0.

→ 2.5 Memory Frequency = Host clock X 2.5.

→ Auto Set Memory frequency by DRAM SPD data. (Default value)

for FSB(Front Side Bus) frequency=800MHz.

▶ 2.0 Memory Frequency = Host clock X 2.0.

▶ 1.6 Memory Frequency = Host clock X 1.5.

▶ 1.33 Memory Frequency = Host clock X 1.33.

→ Auto Set Memory frequency by DRAM SPD data. (Default value)

Memory Frequency(Mhz)

▶ The values depend on CPU Host Frequency (Mhz) .

AGP/PCI/SRC Frequency(Mhz)

▶ The values depend on Fixed AGP/PCI/SRC Frequency.

Load Fail-Safe Defaults

CMOS Setup Utility -Copyright (C) 1984-2003 Award Software



Figure 9: Load Fail-Safe Defaults

Load Fail-Safe Defaults

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

Load Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

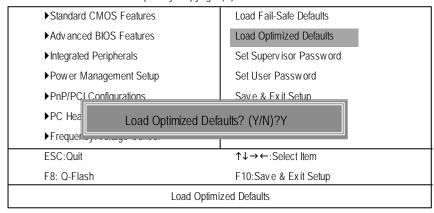


Figure 10: Load Optimized Defaults

Load Optimized Defaults

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

Set Supervisor/User Password

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

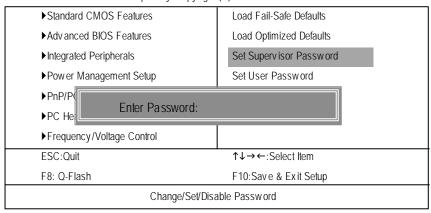


Figure 11: Password Setting

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the passwordbeing disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, any one may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password C heck" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

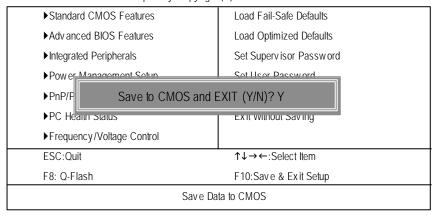


Figure 12: Save & Exit Setup

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS. Type "N" will return to Setup Utility.

Exit Without Saving

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

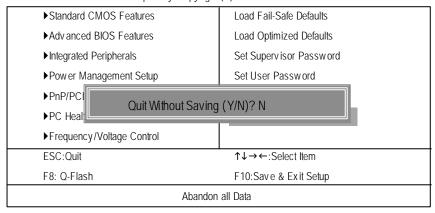


Figure 13: Exit Without Saving

Type "Y" will quit the Setup Utility without saving to RTC CMOS. Type "N" will return to Setup Utility.

Chapter 4 Technical Reference

@BIOS™ Introduction

Gigabyte announces **@BIOS™** Windows BIOS live update utility



Have you ever updated BIOS by yourself? Or like many other people, you just know what BIOS is, but always hesitate to update it? Because you think updating newest BIOS is unnecessary and actually you don't know how to update it.

Maybe not like others, you are very experienced in BIOS updating and spend quite a lot of time to do it. But of course you don't like to do it too much. First, download different BIOS from website and then switch the operating system to DOS mode. Secondly, use different flash utility to update BIOS. The above process is not a interesting job. Besides, always be carefully to store the BIOS source code correctly in your disks as if you update the wrong BIOS, it will be a nightmare.

Certainly, you wonder why motherboard vendors could not just do something right to save your time and effort and save you from the lousy BIOS updating work? Here it comes! Now Gigabyte announces @BIOS— the first Windows BIOS live update utility. This is a smart BIOS update software. It could help you to download the BIOS from internetand update it. Not like the other BIOS update software, it's a Windows utility. With the help of "@BIOS", BIOS updating is no more than a click.

Besides, no matter which mainboard you are using, if it's a Gigabyte's product*, @BIOS help you to maintain the BIOS. This utility could detect your correct mainboard model and help you to choose the BIOS accordingly. It then downloads the BIOS from the nearest Gigabyte ftp site automatically. There are several different choices; you could use "Internet Update" to download and update your BIOS directly. Or you may want to keep a backup for your current BIOS, just choose "Save Current BIOS" to save it first. You make a wise choice to use Gigabyte, and @BIOS update your BIOS smartly. You are now worry free from updating wrong BIOS, and capable to maintain and manage your BIOS easily. Again, Gigabyte's innovative product erects a milestone in mainboard industries.

For such a wonderful software, how much it costs? Impossible! It's free! Now, if you buy a Gigabyte's motherboard, you could find this amazing software in the attached driver CD. But please remember, connected to internet at first, then you could have a internet BIOS update from your Gigabyte @BIOS.

EasyTune[™] 4 Introduction

Gigabyte announces *EasyTune*[™] 4 Windows based Overclocking utility

EasyTune 4 carries on the heritage so as to pave the way for future generations.



Overclock might be one of the most common issues in computer field. But have many users ever tried it? The answer is probably "no". Because "Overclock" is thought to be very difficult and includes a lot of technical know-how, sometimes "Overclock" is even considered as special skills found only in some enthusiasts. But as to the experts in "Overclock", what's the truth? They may spend quite a lot of time and money to study, try and use many different

hardware or BIOS tools to do "Overclock". And even with these technologies, they still learn that it's quite a risk because the safety and stability of an "Overclock" system is unknown. Now everything is different because of a Windows based overclocking utility "EasyTune 4" -- announced by Gigabyte. This windows based utility has totally changed the gaming rule of "Overclock". This is the first windows based overclocking utility is suitable for both normal and power users. Users can choose either "Easy Mode" or "Advanced Mode" for overclocking at their convenience. For users who choose "Easy Mode", they just need to click "Auto Optimize" to have autoed and immediate CPU overclocking. This software will then overdrive CPU speed automatically with the result being shown in the control panel. If users prefer "Overclock" by them, there is also another choice. Click "Advanced Mode" to enjoy "sport drive" class Overclocking user interface. "Advanced Mode", allows users to change the system bus / AGP / Memory working frequency in small increments to get ultimate system performance. It operates in coordination with Gigabyte motherboards. Besides, it is different from other traditional over-clocking methods, EasyTune 4 doesn't require users to change neither BIOS nor hardware switch/jumper setting; on the other hand, they can do "Overclock" at easy step. Therefore, this is a safer way for "Overclock" as nothing is changed on software or hardware. If user runs EasyTune 4 over system's limitation, the biggest lost is only to restart the computer again and the side effect is then well controlled. Moreover, if one well-performed system speed has been tested in EasyTune 4, user can "Save" this setting and "Load" it in next time. Obviously, Gigabyte EasyTune 4 has already turned the "Overclock" technology toward to a newer generation. This wonderful software is now free bundled in Gigabyte motherboard attached in driver CD. Users may make a test drive of "EasyTune 4" to find out more amazing features by themselves.

*Some Gigabyte products are not fully supported by EasyTune 4. Please find the products supported list in the web site.

*Any "Overclocking action" is at user's risk, Gigabyte Technology will not be responsible for any damage or instability to your processor, motherboard, or any other components.

Flash BIOS Method Introduction

Method 1: O-Flash



Flash BIOS Method Introduction

Q-Flash[™] is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash™ allows users to flash BIOS without any utility in DOS or Windows. Using Q-Flash[™] indicating no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.



Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system **CAUTION** because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

- 1. Download the latest BIOS for your motherboard from Gigabyte's website.
- 2. Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 7VRXP.F12) to a floppy disk.
- 3. Reboot your PC and press **Del** to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts.

If your motherboard has dual BIOS, please refer to Part One.

If your motherboard has single BIOS, please refer to Part Two.

Part One:


Updating BIOS with Q-Flash™ Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash* and Dual BIOS, the Q-Flash* utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash* utility. In the following sections, we take GA-7VRXP as the example to guide you how to flash BIOS from an older version to the latest version. For example, from F10 to F12.




Entering the Q-Flash™ utility:

Step1: To use Q-Flash[™] utility, you must press **Del** in the boot screen to enter BIOS menu.

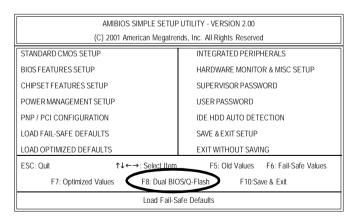


Step 2: Press **F8** button on your keyboard and then **Y** button to enter the Q-Flash" utility.

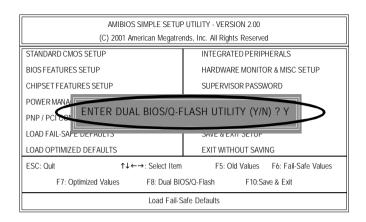

Exploring the Q-Flash™/Dual BIOS utility screen

The Q-Flash™/Dual BIOS utility screen consists of the following key components.

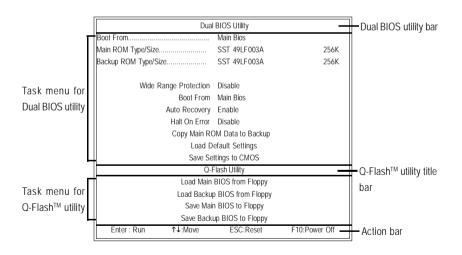

Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.

Task menu for Q-Flash™ utility:

Contains the names of four tasks. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.

Action bar:

Contains the names of four actions needed to operate the Q-Flash™/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash™ utility:


This section tells you how to update BIOS using the Q-Flash** utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash** utility, please follow the steps below to flash BIOS.

Steps:

 Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in the Q-Flash" menu and press Enter button.



If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save Main BIOS to Floppy" item.

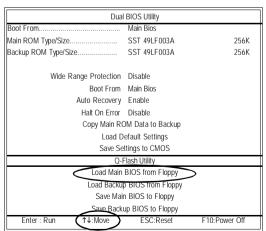


Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.

2. Move to the BIOS file you want to flash and press Enter.


In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 7VRXP.F12. is listed.



Please confirm again you have the correct BIOS file for your motherboard.

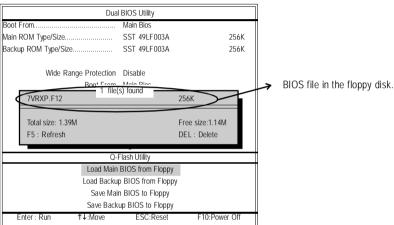


After pressing **Enter**, you'll then see the progress of reading the BIOS file from the floppy disk.

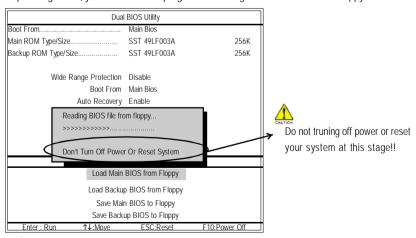


CAUTION

Please do not take out the floppy disk when it begins flashing BIOS.

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

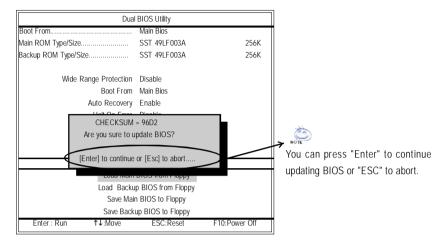


3. Press **Y** button on your keyboard after you are sure to update BIOS.
Then it will begin to update BIOS. The progress of updating BIOS will be displayed.

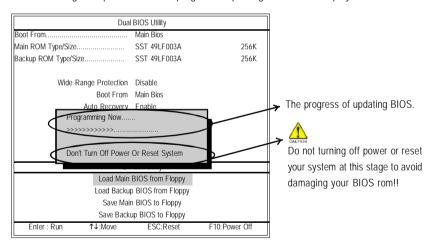



Please do not take out the floppy disk when it begins flashing BIOS.


4. Press any keys to return to the Q-Flash™ menu when the BIOS updating procedure is completed.

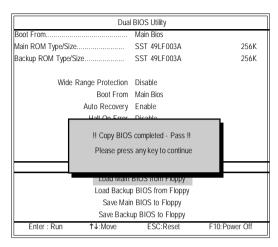



You can repeat Step 1 to 4 to flash the backup BIOS, too.

5. Press **Esc** and then **Y** button to exit the Q-Flash dutility. The computer will restart automatically after you exit Q-Flash™.

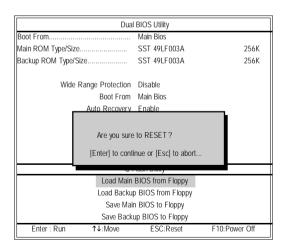



After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed




The following is an AMI BIOS menu screen. However, you can also find similar option in AWARD BIOS menu.

6. Press Del to enter BIOS menu after system reboots. When you are in BIOS menu, move to Load Fail-Safe Defaults item and press Enter to load BIOS Fail-Safe Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

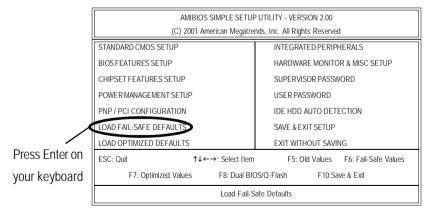

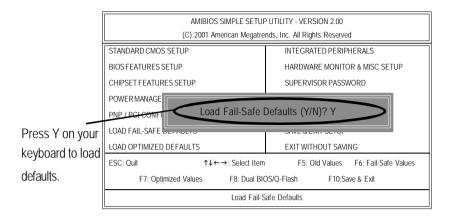

7. Select **Save & Exit Setup** item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

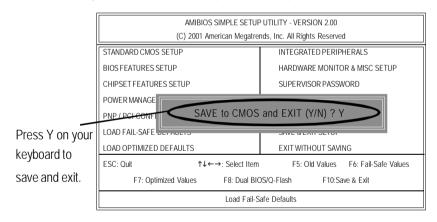

Part Two:

Updating BIOS with Q-Flash™ Utility on Single-BIOS Motherboards.

This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™ utility.

Entering the Q-Flash[™] **utility:**


Step1: To use the Q-Flash™ utility, you must press **Del** in the boot screen to enter BIOS menu.

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

▶Standard CMOS Features	Top Performance	
►Advanced BIOS Features	Load Fail-Safe Defaults	
►Integrated Peripherals	Load Optimized Defaults	
▶Power Management Setup	Set Supervisor Password	
▶PnP/PCI Configurations	Set User Password	
▶PC Health Status	Save & Exit Setup	
▶Frequency/Voltage Control	Exit Without Saving	
ESC:Quit	↑↓→←:Select Item	
F8: Q-Flash	F10:Save & Exit Setup	
Time, Date, Hard Disk Type		


2. Press **F8** on your keyboard and then **Y** button to enter the Q-Flash™ utility.

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

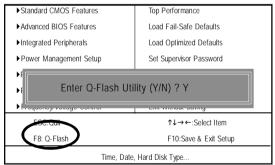

Exploring the Q-Flash™ utility screen

The Q-Flash™ BIOS utility screen consists of the following key components.

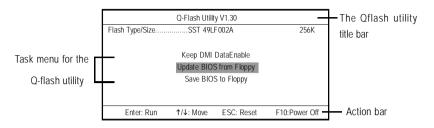

Task menu for the Q-Flash[™] **utility:** Contains the names of three tasks. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.


Action bar: Contains the names of four actions needed to operate the Q-Flash[™] utility. Pressing the buttons mentioned on your keyboard to perform these actions.


Using the Q-Flash[™] utility:

This section tells you how to update BIOS using the Q-Flash" utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have enter the Q-Flash" utility, please follow the steps below to flash BIOS.

Steps:

 Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in the Q-Flash* menu and press Enter button.

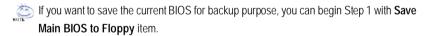

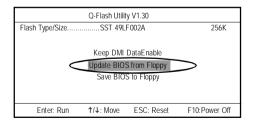



Later, you will see a box showing the BIOS files you downloaded to the floppy disk. In this example, we only download one BIOS for this board, 8GE800.F4 so only one BIOS file is listed.

2. Highlight the BIOS file you want to flash and press **Enter** button on your keyboard to enable reading from the BIOS file from the floppy.




Please confirm again you have the correct BIOS file for your motherboard.

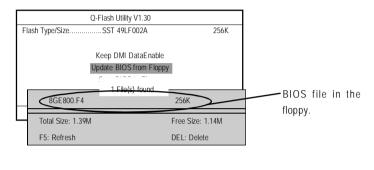

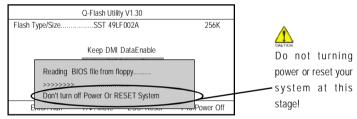


After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

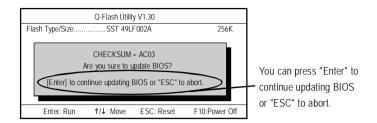


3. Press Y button if you make sure to update BIOS.


Then it will begin to update BIOS. The progress of updating will be shown at the same time.

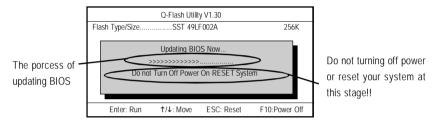

4. Press any keys to return to the Q-Flash[™] menu when the BIOS updating procedure is completed.

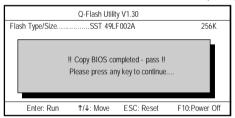

5. Press **Esc** and then **Enter** to exit the Q-Flash™ utility. System will restart.

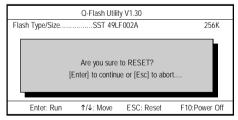


6. Press **Del** to enter BIOS menu after system reboots and load BIOS Fail-Safe Defaults. See how to load BIOS Fail-Safe Defaults, please kindly refer to Step 6 to 7 in Part One.


Congratulation!! You have updated BIOS successfully!!


Method 2: @BIOS Utility

If you don't have DOS boot disk, we recommend that you used Gigabyte @BIOS[™] program to flash BIOS.



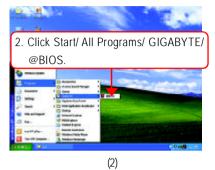

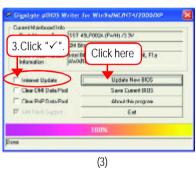

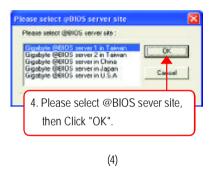

Methods and steps:

- I. Update BIOS through Internet
 - a. Click "Internet Update" icon
 - b. Click "Update New BIOS" icon
 - c. Select @BIOS™ sever
 - d. Select the exact model name on your motherboard.
 - e. System will automatically download and update the BIOS.

- II. Update BIOS NOT through Internet:
- a. Do not click "Internet Update" icon
- b. Click "Update New BIOS"
- c. Please select "All Files" in dialog box while opening the old file.
- d. Please search for BIOS unzip file, downloading from internet or any other methods (such as: 81865GVMK.F2).
- e. Complete update process following the instruction.

III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

Note:

- a. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- b. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- c. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- d. Please note that any interruption during updating will cause system unbooted

2- / 4- / 6-Channel Audio Function Introduction

The installation of Windows 98SE/2K/ME/XP is very simple. Please follow next step to install the function!

Stereo Speakers Connection and Settings:

We recommend that you use the speaker with amplifier to acquire the best sound effect if the stereo output is applied.

STEP 1:

Connect the stereo speakers or earphone to "Line Out"




STEP 2:

After installation of the audio driver, you'll find an

icon on the taskbar's status area. Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.



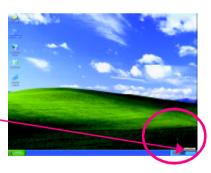

STFP 3:

Select "Speaker Configuration", and choose the "2 channel for stereo speakers out put".

2-channel mode for stereo speaker output



4 Channel Analog Audio Output Mode

STFP 1:

Connect the front channels to "Line Out", the rear channels to "Line In".



STEP 2:

After installation of the audio driver, you'll find an icon on the taskbar's status area. Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.






STFP 3:


Select "Speaker Configuration", and choose the "4 channel for 4 speakers out put".

Disable "Only SURROUND-KIT", and press "OK".

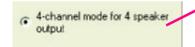



When the "Environment settings" is "None", the sound would be performed as stereo mode (2 channels output). Please select the other settings for 4 channels output.

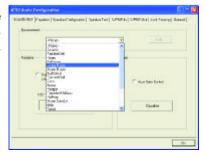


Basic 6 Channel Analog Audio Output Mode

Use the back audio panel to connect the audio output without any additional module.

STFP 1:


Connect the front channels to "Line Out", the rear channels to "Line In", and the Center/Subwoofer channels to "MIC In".

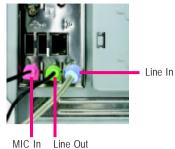

STEP 2:


After installation of the audio driver, you'll find an icon on the taskbar's status area. Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.



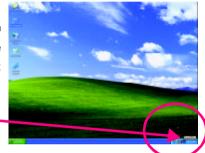

STEP 3:

Select "Speaker Configuration", and choose the "6 channel for 5.1 speakers out put".

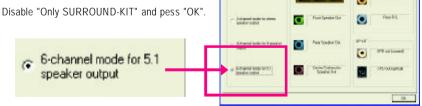

Advanced 6 Channel Analog Audio Output Mode (using SURROUND-KIT, Optional Device):


(SURROUND-KIT provides Rear R/L and Center/subwoofer)

SURROUND-KIT access analog output to rear channels and Center/Subwoofer channels. It is the best solution if you need 6 channel output, Line In and MIC at the same time.



STFP 1:

Insert the "SURROUND-KIT" in the back of the case, and fix it with the screw.

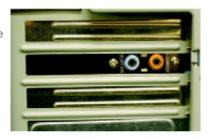


STEP 2:

Connect the "SURROUND-KIT" to SUR_CEN on the motherboard.



STEP 3:

Connect the front channels to back audio panel's "Line Out", the rear channels to SURROUND-KIT's REAR R/L, and the Center/Subwoofer channels to SURROUND-KIT's SUB CENTER.

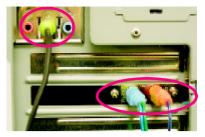

STFP 4:

Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.





STEP 5:

Select "Speaker Configuration", and choose the "6 channels for 5.1 speakers out put".


Enable "Only SURROUND-KIT" and press "OK".





Basic & Advanced 6 Channel Analog Audio Output Mode Notes:

When the "Environment settings" is "None", the sound would be performed as stereo mode (2 channels output). Please select the other settings for 6 channels output.

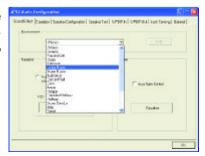

Jack-Sensing Introduction



Jack-Sensing provides audio connectors error-detection function.



Install Microsoft DirectX8.1 or later version before to enable Jack-Sensing support for Windows 98/98SE/2000/ME.

Jack-Sensing includes 2 parts: AUTO and MANUAL. Following is an example for 2 channels (Windows XP):

Introduction of audio connectors

You may connect CDROM, Walkman or others audio input devices to Line In jack, speakers, earphone or others output devices to Line Out jack, and microphone to MIC In jack.



Auto-detecting:

Please connect the devices to the right jacks as above. A window will appear as right picture if you setup the devices properly.

Please note that 3D audio function will only appear when 3D audio inputs.




If you set wrong with the connectors, the warning message will come out as right picture.



Manual setting:

If the device picture shows different from what you set, please press "Manual Selection" to set.

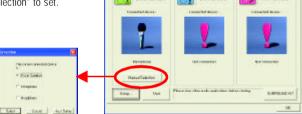

Xpress Recovery Introduction

What is Xpress Recovery?

Xpress Recovery utility is an utility for backing up and restoring O.S. partition . If the hard drive cannot work properly, you can restore it to the original state.



- 1. It supports FAT16, FAT32, NTFS format.
- 2. It must be connected to IDE1 Master.
- 3. It's only allows you to install one O.S.
- 4. It must be used with IDE hard disk supporting HPA.
- 5. The first partition must be set as the boot partition. When the boot partition is backed up, please do not change the its size.
- 6. It is not recommend to use Xpress Recovery if you had ever used Ghost to return boot manager to NTFS format.



- 1. System data and hard disk's reading/writing speed will affect backing up speed.
- 2. We recommend that you install Xpress Recovery immediately after installing O.S , drivers and applications.

How to use the Xpress Recovery

There are two ways to enter the Xpress Recovery utility. (see the below)

1. Text Mode: press F9 during powering on the computer.

Press F9 during powering on the computer.




2. BMP Mode: boot from CD-ROM

Please go to "Advanced BIOS" setting menu and set boot from CD-ROM, then save and exit the BIOS menu. Later, please insert MB driver CD into your drive when "Boot from CD:" appears at the bottom of the screen, press any key to enter Xpress Recovery.




You can highlight the item by using the arrows keys on your keyboard and enter key to enter the menu.

Text Mode:

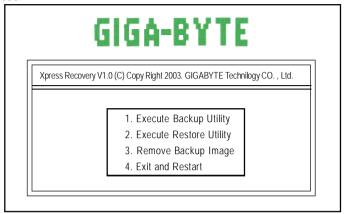

BMP Mode:

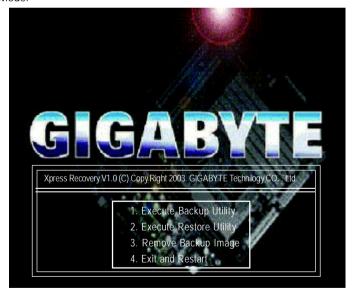



If you ever entered Xpress Recovery by booting from CD-ROM, you'll still be directed to BMP mode by pressing F9 in the bootup screen.

1. Execute Backup Utility:

Press B to Backup your System or Esc to Exit

The Backup utility will scan the system automatically and back up it.

The backed up data will be saved as an hidden image.

2.Execute Restore Utility:

This program will recover your system to factory default.

Press R to recover your system.

Press Esc to exit

Restore the backup image to the original state.

3. Remove Backup Image:

Remove the backup image.

4.Exit and Restart:

Exit and restart your computer.

-		

-		

Chapter 5 Appendix

Install Drivers



Pictures below are shown in Windows XP (CD ver. 2.4)


Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

INSTALL CHIPSET DRIVER


This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the to install the drivers automatically.



The "Xpress Install" uses the "Click and Forget" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The will finish the installation for you automatically.

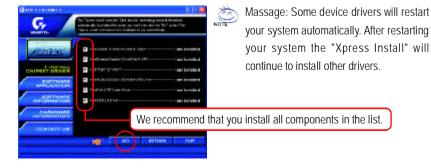



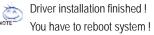

Item Description

- Intel Chipset Software Installation Utility
 Tell the operating system how the chipset components will be configured.
- Intel Extreme Graphics Driver For Intel* 845G/GL/GE/GV/865G Chipsets
- USB Patch for WinXP

 This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- Intel 82562/82562EX/82540EM LAN Driver
 For Intel® PRO/10/1000/1000/Wireless Ethernet connections
- RealTek AC97 Codec Driver
 For Intel® ICH/ICH2/ICH4/ICH5/ICH5R AC97 audio
- Intel USB 2.0 Driver
 It is recommended that you use the Microsoft Windows update for the most updated driver for XP/2K



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

SOFTWARE APPLICATION

This page reveals the value-added software developed by Gigabyte and its worldwide partners.



Gigabyte Windows Utilities Manager (GWUM)
 This utility can integrate the Gigabyte's applications in the system tray

Gigabyte Management Tool (GMT)
 A useful tool which can manage the computer via the network

- EasyTune 4
 Powerful utility that integrates the overclocking and hardware monitoring functions
- DMI Viewer
 Windows based utility which is used to browse the DMI/SMBIOS information of the system
- Face-Wizard

 New utility for adding BIOS logo
- @BIOSGigabyte windows flash BIOS utility
- Acrobat e-BookUseful utility from Adobe
- Acrobat Reader

 Popular utility from Adobe for reading .PDF file format documents
- Norton Internet Security (NIS)
 Integrated utility which includes anti-virus, ads, etc.
- DirectX 9.0
 Install Microsoft DirectX 9 to enable 3D hardware acceleration that support for operating system to achieve better 3D performence.

SOFTWARE INFORMATION

This page list the contects of softwares and drivers in this CD title.



HARDWARE INFORMATION

This page lists all device you have for this motherboard.



CONTACT US

Please see the last page for details.




EasyTune 4 Utilities Installation

Powerful utility that integrates the overclocking and hardware monitoring functions





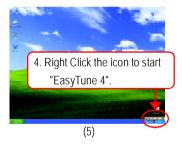







FAQ

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to http://tw.giga-byte.com/faq/faq.htm

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why? Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down? Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

- Turn off power.
- 2. Disconnect the power cord from MB.
- 3. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for one minute).
- 4. Re-insert the battery to the battery holder.
- 5. Connect power cord to MB again and turn on power.
- 6. Press Del to enter BIOS and load Fail-Safe Defaults.
- 7. Save changes and reboot the system.

Question 4: Why does system seem unstable after updating BIOS?

Answer: Please remember to load Fail-Safe Defaults (Or Load BIOS Defaults) after flashing BIOS. However, if the system instability still remains, please clear CMOS to solve the problem.

Question 5: Why do I still get a weak sound after turning up the speaker to the maximum volume? Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 6: How do I disable onboard VGA card in order to add an external VGA card? Answer: Gigabyte motherboards will auto-detect the external VGA card after it is plugged in, so you don't need to change any setting manually to disable the onboard VGA.

Question 7: Why cannot I use the IDE 2?

Answer: Please refer to the user manual and check whether you have connected any cable that is not provided with the motherboard package to the USB Over Current pin in the Front USB Panel. If the cable is your own cable, please remove it from this pin and do not connect any of your own cables to it.

Question 8: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

→AMI BIOS Beep Codes

*Computer gives 1 short beep when system boots successfully.

*Except for beep code 8, these codes are always fatal.

- 1 beep Refresh failure
- 2 beeps Parity error
- 3 beeps Base 64K memory failure
- 4 beeps Timer not operational
- 5 beeps Processor error
- 6 beeps 8042 gate A20 failure
- 7 beeps Processor exception interrupt error
- 8 beeps Display memory read/write failure
- 9 beeps ROM checksum error
- 10 beeps CMOS shutdown register read/write error
- 11 beeps Cache memory bad

AWARD BIOS Beep Codes

1 short: System boots successfully

2 short: CMOS setting error

1 long 1 short: DRAM or M/B error

1 long 2 short: Monitor or display card error

1 long 3 short: Keyboard error


1 long 9 short: BIOS ROM error


Continuous long beeps: DRAM error Continuous short beeps: Power error

Troubleshooting



If you encounter any trouble during boot up, please follow the troubleshooting procedures.

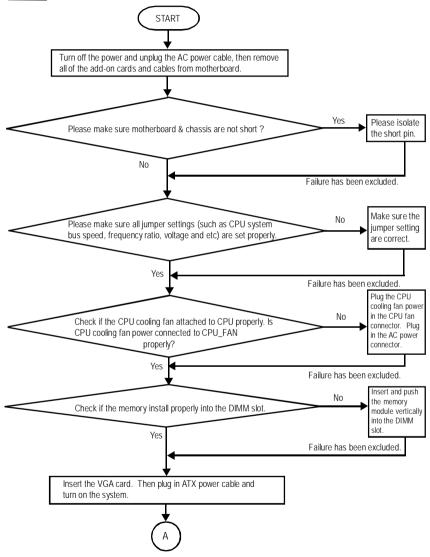

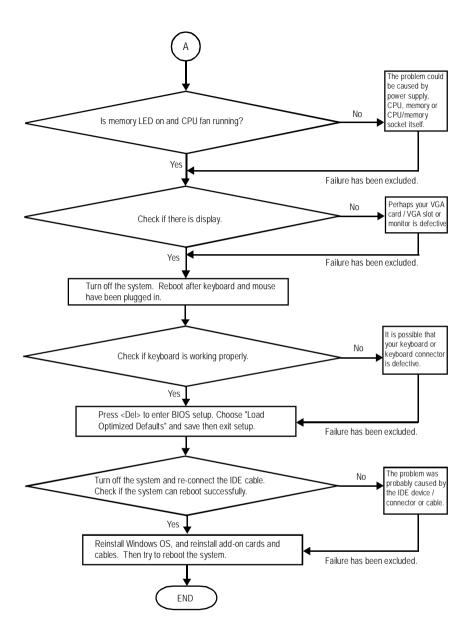

If the above procedure unable to solve your problem, please contact with your local retailer or national distributor for help. Or, you could submit your question to the service mail via Gigabyte website technical support zone (http://www.gigabyte.com.tw). The appropriate response will be provided ASAP.

Technical Support/RMA Sheet

Customer/Cour	ntry:		Company:		Phone No.:	
Contact Person	1:	E-ma	ail Add. :		1	
Model name/Lo	t Number:				PCB revision:	
BIOS version:		0.S.	/A.S.:		•	
Hardware	Mfs.	Mod	el name	Size:	Driver/Utility:	
Configuration						
CPU						
Memory						
Brand						
/ideo Card						
Audio Card						
HDD						
CD-ROM /						
OVD-ROM						
Лodem						
Vetwork						
AMR / CNR						
Keyboard						
Mouse						
Power supply						
Other Device						
Problem Descri	ption:	ı		I	1	
	•					
_						
_						_

Acronyms

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Advanced Communications Riser
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
FSB	Front Side Bus
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request

to be continued.....

Acronyms	Meaning
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture
LAN	Local Area Network
I/O	Input / Output
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Instrument Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory

-		
-		
-		



Taiwan (Headquarters)

GIGA-BYTE TECHNOLOGY CO., LTD.

Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien,

Taiwan

TEL: +886 (2) 8912-4888

FAX: +886 (2) 8912-4003

Tech. Support:

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp

WEB address (English): http://www.gigabyte.com.tw

WEB address (Chinese): http://chinese.giga-byte.com

U.S.A.

G.B.T. INC.

Address: 17358 Railroad St, City of Industry, CA 91748.

TEL: +1 (626) 854-9338

FAX: +1 (626) 854-9339

Tech. Support:

http://www.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp WEB address: http://www.giga-byte.com

Germany

G.B.T. TECHNOLOGY TRADING GMBH

Address: Friedrich-Ebert-Damm 112 22047 Hamburg

TEL: +49-40-2533040 (Sales)

+49-1803-428468 (Tech.)

FAX: +49-40-25492343 (Sales)

+49-1803-428329 (Tech.)

Tech. Support:

http://de.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp WEB address : http://www.gigabyte.de Japan

NIPPON GIGA-BYTE CORPORATION

WEB address: http://www.gigabyte.co.jp

Singapore

GIGA-BYTE SINGAPORE PTE. LTD.

Tech. Support:

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm

 ${\tt Non-Tech.\ Support(Sales/Marketing):}$

http://ggts.gigabyte.com.tw/nontech.asp

U.K.

G.B.T. TECH. CO., LTD.

Address: GUnit 13 Avant Business Centre 3 Third Avenue, Denbigh West Bletchley Milton Keynes, MK1 1DR, UK, England

TEL: +44-1908-362700

FAX: +44-1908-362709

Tech. Support:

http://uk.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp

WEB address : http://uk.giga-byte.com

The Netherlands

GIGA-BYTE TECHNOLOGY B.V.

TEL: +31 40 290 2088

NL Tech.Support: 0900-GIGABYTE (0900-44422983)

BE Tech.Support: 0900-84034

FAX: +31 40 290 2089

Tech. Support:

http://nz.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing) : http://ggts.gigabyte.com.tw/nontech.asp

WEB address: http://www.giga-byte.nl

• China

NINGBO G.B.T. TECH. TRADING CO., LTD.

Tech. Support:

http://cn.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing) : http://gqts.gigabyte.com.tw/nontech.asp

WEB address: http://www.gigabyte.com.cn

Shanghai

TEL: +86-021-63410999 FAX: +86-021-63410100

Beijing

TEL: +86-010-82886651 FAX: +86-010-82888013

Wuhan

TEL: +86-027-87851061 FAX: +86-027-87851330

GuangZhou

TEL: +86-020-87586074 FAX: +86-020-85517843

Chengdu

TEL: +86-028-85236930 FAX: +86-028-85256822

Xian

TEL: +86-029-85531943 FAX: +86-029-85539821

Shenyang

TEL: +86-024-23960918 FAX: +86-024-23960918-809

Australia

GIGABYTE TECHNOLOGY PTY. LTD.

Tech. Support:

http://www.giga-byte.com.au/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp

WEB address: http://www.giga-byte.com.au

France

GIGABYTE TECHNOLOGY FRANCES S.A.R.L.

Tech. Support:

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm

 $Non-Tech.\ Support(Sales/Marketing): \\ http://ggts.gigabyte.com.tw/nontech.asp$

WEB address: http://www.gigabyte.fr

Russia

Moscow Representative Office Of Giga-Byte Technology Co., Ltd.

Tech. Support:

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing):

http://ggts.gigabyte.com.tw/nontech.asp

WEB address: http://www.gigabyte.ru

Poland

Representative Office Of Giga-Byte Technology Co., Ltd. POLAND

Tech. Support:

http://tw.giga-byte.com/TechSupport/ServiceCenter.htm

Non-Tech. Support(Sales/Marketing) : http://ggts.gigabyte.com.tw/nontech.asp

WEB address: http://www.gigabyte.pl