

When you installing AGP card, please make sure the following notice is fully understood and practiced. If your AGP card has "AGP 4X notch"(show below), please make sure your AGP card is AGP 4X (1.5V).



Do not use AGP 2X card (3.3V) in this motherboard. It will burn and damage the motherboard due to Intel® 845(E/G) / 850(E) chipset can't support AGP 2X(3.3V).



Example 1: Diamond Vipper V770 golden finger is compatible with 2X/4X mode AGP slot. It can be switched between AGP 2X(3.3V) or 4X (1.5V) mode by adjusting the jumper. The factory default for this card is 2X (3.3V). If you install this card in GA-8ID533 (or any AGP 4X only) motherboards without switching the jumper to 4X mode (1.5V), it will burn the motherboard.

Example 2: Some ATi Rage 128 Pro graphics cards made by "Power Color", the graphics card manufacturer & some SiS 305 cards, their golden finger is compatible with 2X/4X mode AGP slot, but they support 2X(3.3V) only. If you install this card in GA-8ID533 (or any AGP4X only) motherboards, it will burn the motherboard.

Note: Although Gigabyte's AG32S(G) graphics card is based on ATi Rage 128 Pro chip, the design of AG32S(G) is compliance with AGP 4X (1.5V) specification. Therefore, AG32S(G) will work fine with Intel® 845(E/G) / 850(E) based motherboards.



- The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.
- Third-party brands and names are the property of their respective owners.
- Please do not remove any labels on motherboard, this may void the warranty of this motherboard.
- Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.



WARNING: Never run the processor without the heatsink properly and firmly attached.
PERMANENT DAMAGE WILL RESULT!

Mise en garde: Ne faites jamais tourner le processeur sans que le dissipateur de chaleur soit fix correctement et fermement. UN DOMMAGE PERMANENT EN RÉSULTERA!

Achtung: Der Prozessor darf nur in Betrieb genommen werden, wenn der W rmeableiter ordnungsgem β und fest angebracht ist. DIES HAT EINEN PERMANENTEN SCHADEN ZUR FOLGE!

Advertencia: Nunca haga funcionar el procesador sin el disipador de calor instalado correcta y firmemente. ¡SE PRODUCIRÁ UN DAÑO PERMANENTE!

Aviso: Nunca execute o processador sem o dissipador de calor estar adequado e firmemente conectado. O RESULTADO SERÁ UM DANO PERMANENTE!

警告: 将散热板牢固地安装到处理器上之前,不要运行处理器。过热将永远损坏处理器!

將散熱器牢固地安裝到處理器上之前,不要運行處理器。過熱將永遠損壞處理器!

히트싱크를 제대로 또 난단히 부획시키지 않은 제 프로세시를 구동시키지 마십시오. 영구적 고장이 반생합니다! 경고:

警告: 永久的な損傷を防ぐため、ヒートシンクを正しくしっかりと取り付けるまでは、プロセッサを動作させないようにしてください。

## Declaration of Conformity We, Manufacturer/Importer (full address)

# G.B.T. Technology Träding GMbH Ausschlager Weg 41, 1F, 20537 Hamburg, Germany

declare that the product ( description of the apparatus, system, installation to which it refers)

Mother Board
GA-8ID533
is in conformity with
(reference to the specification under which conformity is declared)

in accordance with 89/336 EEC-EMC Directive

□ EN 55011	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM high frequency equipment	☐ EN61000-3-2* ☑ EN 60555-2	Disturbances in supply systems cause by household appliances and similar electrical equipment "Harmonics"
☐ EN 55013	Limits and methods of measurement	□ EN 61000-3-3*	Disturbances in supply systems cause
	of radio disturbance characteristics of broadcast receivers and associated equipment	⊠ EN 60555-3	by household appliances and similar electrical equipment "Voltage fluctuations"
☐ EN 55014	Limits and methods of measurement	☑ EN 50081-1	Generic emission standard Part 1:
	of radio disturbance characteristics of household electrical appliances,		Residual commercial and light industry
	portable tools and similar electrical	☑ EN 50082-1	Generic immunity standard Part 1:
	apparatus		Residual commercial and light industry
□ EN 55015	Limits and methods of measurement	□ EN 55081-2	Generic emission standard Part 2:
	of radio disturbance characteristics of fluorescent lamps and luminaries		Industrial environment
☐ EN 55020	Immunity from radio interference of	□ EN 55082-2	Generic emission standard Part 2:
	broadcast receivers and associated equipment		Industrial environment
☑ EN 55022	Limits and methods of measurement	☐ ENV 55104	Immunity requirements for household
	of radio disturbance characteristics of		appliances tools and similar apparatus
	information technology equipment		
☐ DIN VDE 0855	Cabled distribution systems; Equipment	☐ EN50091-2	EMC requirements for uninterruptible
☐ part 10 ☐ part 12	for receiving and/or distribution from		power systems (UPS)
Li part 12	sound and television signals		
		<b>(EC conform</b>	the second to all
□ CE marking			
	The manufacturer also declares th with the actual required safety sta	•	•
□ EN 60065	Safety requirements for mains operated	□ EN 60950	
	electronic and related apparatus for household and similar general use		
□ EN 60335	Safety of household and similar	□ FN 50091-1	
□ EN 00333	electrical appliances	□ EN 30071-1	
		Manufacturer/Importer	

Timmy Huang Signature: Timmy Huang

(Stamp)

Date : Aug. 9, 2002

## **DECLARATION OF CONFORMITY**

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard Model Number:GA-8ID533

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109 (a), Class B Digital Device

## **Supplementary Information:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received, including that may cause undesired operation.

Representative Person's Name: <u>ERIC LU</u>

Signature: Eric Lu

Date: Aug. 9, 2002

# GA-8ID533 P4 Titan SDRAM Motherboard

# **USER'S MANUAL**

Pentium\*4 Processor Motherboard Rev. 1101 12ME-8ID533-1101

# **Table of Content**

Item Checklist	4
WARNING!	4
Chapter 1 Introduction	5
Features Summary	5
GA-8ID533 Motherboard Layout	
Chapter 2 Hardware Installation Process	8
Step 1: Install the Central Processing Unit (CPU)	
Step1-1: CPU Installation	
Step1-2: CPU Heat Sink Installation	
Step 3: Install expansion cards	
Step 4: Connect ribbon cables, cabinet wires, and power supply	
Step 4. Confrict hisbori cables, cabinet wires, and power suppry	
Step4-2: Connectors & Jumper Introduction	15
Chapter 3 BIOS Setup	23
The Main Menu (For example: BIOS Ver. :F1)	24
Standard CMOS Features	26
Advanced BIOS Features	29
Integrated Peripherals	31
Power Management Setup	35
PnP/PCI Configurations	37
PC Health Status	38
Frequency/Voltage Control	39
Top Performance	41
Load Fail-Safe Defaults	42
Load Optimized Defaults	43

Set Supervisor/User Password	44
Save & Exit Setup	45
Exit Without Saving	46
Chapter 4 Technical Reference	49
Block Diagram	49
@ BIOS™ Introduction	50
Easy Tune™ 4 Introduction	51
Q-Flash Introduction	52
Chanter 5 Annondiv	60

## Item Checklist

- ☑ The GA-8ID533 motherboard
- ☑ IDE cable x 1/ Floppy cable x 1
- ☑ CD for motherboard driver & utility (IUCD)
- ☐ I/O Shield
- □ RAID Manual
- ☐ IEEE1394 Cable x 1
- ✓ Motherboard Settings Label

- ☑ GA-8ID533 user's manual
- ☑ Quick PC Installation Guide
- ☑ 2 Port USB cable x 1
- ☐ 4 Port USB cable x 1
- ☐ SPDIF KIT x 1 (SPD-KIT)
- ☐ Center / Subwoofer Cable x 1 (SURROUND-KIT)



## WARNING!

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

- 1. Unplug your computer when working on the inside.
- Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
- Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
- 4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
- 5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

#### Installing the motherboard to the chassis...

If the mother board has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the mother board to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the mother board PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

# Chapter 1 Introduction Features Summary

Form Factor	20.1cm x 29.5cm ATX size form factor, 4 layers PCB.
CPU	Socket 478 for Intel® Micro FC-PGA2 Pentium® 4 processor
	Support Intel® Pentium® 4 (Northwood, 0.13µm) processor
	<ul> <li>Intel Pentium®4 400MHz FSB</li> </ul>
	2nd cache depends on CPU
Chipset	Chipset Intel 845S HOST/AGP/Controller
	ICH2 I/O Controller Hub
Memory	• 3 168-pin DIMM sockets
	• Supports PC-100/PC-133 SDRAM (Auto)
	Supports only 3.3V SDRAM DIMM
	Supports ECC function
	Supports up to 3GB SDRAM (Max)
I/O Control	• ITE8702
Slots	1 AGP slot 4X (1.5V) device support
	• 5 PCI slot supports 33MHz & PCI 2.2 compliant
On-Board IDE	2 IDE bus master (DMA33/ATA66/ATA100) IDE ports for up to 4
	ATAPI devices
	• Supports PIO mode3,4 (UDMA33/ATA66/ATA100) IDE & ATAF
	CD-ROM
On-Board Peripherals	• 1 Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M
	and 2.88M bytes.
	1 Parallel port supports Normal/EPP/ECP mode
	2 Serial ports (COMA & COMB)
	• 4 x USB 1.1 (2 by cable )
	1 Front Audio connector
On-Board Sound	RealTek AC97 CODEC (for PCB Ver.: 1.1)
	• SigmaTel AC97 CODEC (for PCB Ver.: 1.0)
	• Line In/Line Out/Mic In/AUX In/CD In/Game Port
PS/2 Connector	PS/2 Keyboard interface and PS/2 Mouse interface


to be continued.....

BIOS	<ul> <li>Licensed AWARD BIOS, 2M bit FWH</li> </ul>
	<ul> <li>Supports Q-Flash</li> </ul>
Additional Features	PS/2 Key board password power on
	<ul> <li>PS/2 Mouse power on</li> </ul>
	STR(Suspend-To-RAM)
	AC Recovery
	<ul> <li>USB KB/Mouse wake up from S3</li> </ul>
	Supports @BIOS
	Supports EasyTune 4
Jumper less	Over Clock (CPU/SDRAM/AGP) by BIOS
Overclocking	



Please set the CPU host frequency in accordance with your processor's specifications. We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets,SDRAM,Cards... .etc.


# **GA-8ID533 Motherboard Layout**

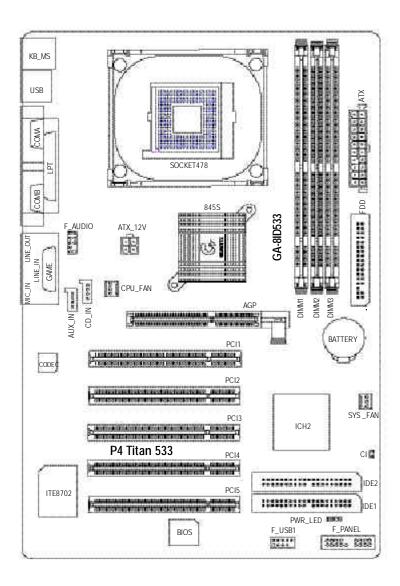

# Chapter 2 Hardware Installation Process


To set up your computer, you must complete the following steps:

- Step 1- Install the Central Processing Unit (CPU)
- Step 2- Install memory modules
- Step 3- Install expansion cards
- Step 4- Connect ribbon cables, cabinet wires, and power supply
- Step 5- Setup BIOS software
- Step 6- Install supporting software tools

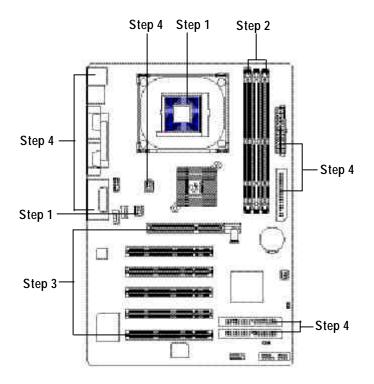


## Step 1: Install the Central Processing Unit (CPU)

## Step1-1: CPU Installation

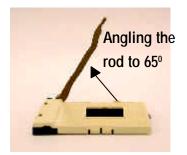

1. Angling the rod to 65-degree may be feel a kind of tight, and then continue pull the rod to 90-degree when a noise "cough" made.

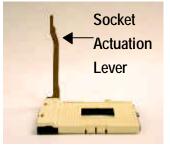

2. Pull the rod to the 90-degree directly .



3. CPU Top View




 Locate Pin 1 in the socket and look for a (golden) cut edge on the CPU upper corner. Then insert the CPU into the socket.

- Please make sure the CPU type is supported by the motherboard.
- If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.

## Step1-2: CPU Heat Sink Installation



 Hook one end of the cooler bracket to the CPU socket first.

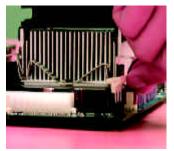


Hook the other end of the cooler bracket to the CPU socket.


- ◆ Please use Intel approved cooling fan.
- We recommend you to apply the thermal tape to provide better heat conduction between your CPU and heatsink.
  - (The CPU cooling fan might stick to the CPU due to the hardening of the thermal paste. During this condition if you try to remove the cooling fan, you might pull the processor out of the CPU socket alone with the cooling fan, and might damage the processor. To avoid this from happening, we suggest you to either use thermal tape instead of thermal paste, or remove the cooling fan with extreme caution.)
- Make sure the CPU fan power cable is plugged in to the CPU fan connector, this completes the installation.
- Please refer to CPU heat sink user's manual for more detail installation procedure.

## Step 2: Install memory modules

 The motherboard has 3 dual in-line memory module (DIMM) sockets support 6 banks. The BIOS will automatically detects memory type and size. To install the memory module, justpush it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the two notch. Memory size can vary between sockets.



SDRAM

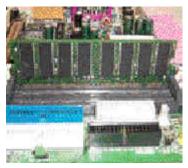


 The DIMM slot has two notch, so the DIMM memory module can only fit in one direction.



- Insert the DIMM memory module vertically into the DIMM slot. Then push it down.
- 3. Close the plastic clip at both edges of the DIMM slots to lock the DIMM module. Reverse the installation steps when you wish to remove the DIMM module.
- **6** When STR/DIMM LED is ON, do not install/remove SDRAM from socket.
- Please note that the DIMM module can only fit in one direction due to the two notches. Wrong orientation will cause improper installation. Please change the insert orientation.

## Step 3: Install expansion cards

- 1. Read the related expansion card's instruction document before install the expansion card into the computer.
- 2. Remove your computer's chassis cover, screws and slot bracket from the computer.
- 3. Press the expansion card firmly into expansion slot in motherboard.
- 4. Be sure the metal contacts on the card are indeed seated in the slot.
- 5. Replace the screw to secure the slot bracket of the expansion card.
- 6. Replace your computer's chassis cover.
- 7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
- 8. Install related driver from the operating system.

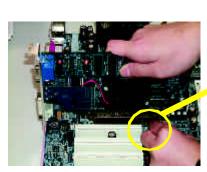


AGP Card



Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install/ Uninstall the AGP card.
Please align the AGP card to the onboard AGP slot and press firmly down on the slot.
Make sure your AGP card is locked by the small white-drawable bar.

# Step 4: Connect ribbon cables, cabinet wires, and power supply
 
## Step4-1: I/O Back Panel Introduction



## PS/2 Keyboard and PS/2 Mouse Connector

 


PS/2 Mouse Connector (6 pin Female)

PS/2 Keyboard Connector (6 pin Female)


➤ This connector supports standard PS/2 keyboard and PS/2 mouse.

## USB Connector



➤ Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker..etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendorfor possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

## 9 Parallel Port and Serial Ports (COMA/COMB)

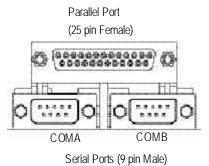

➤ This connector supports 2 standard COM ports and 1 Parallel port. Device like printer can be connected to Parallel port; mouse and modem etc can be connected to Serial ports.


## Game /MIDI Ports



Joystick/ MIDI (15 pin Female)


➤ This connector supports joy stick, MIDI key board and other relate audio devices.

## Audio Connectors

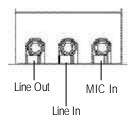

➤ After install onboard audio driver, you may connect speaker to LineOut jack, microphone to MIC In jack. Device like CD-ROM, walkman etc can be connected to Line-In jack.

Step4-2: Connectors & Jumper Introduction

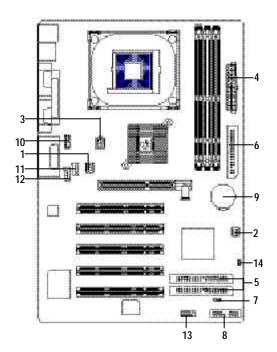


1) CPU_FAN	9) BATTERY
2) SYS_FAN	10) F_AUDIO
3) ATX_12V	11) CD_IN
4) ATX	12) AUX_IN
5) IDE1/IDE2	13) F_USB1
6) FDD	14) CI
7) PWR_LED	
8) F_PANEL	

## 1 ) CPU\_FAN (CPU FAN Connector)



 
> Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.




2 ) SYS\_FAN (System FAN Connector) > This connector allows you to link with the cooling fan on the system case to lower the system temperature.

## 3 ) ATX\_12V (+12V Power Connector)

 

➤ This connector (ATX +12V) supplies the CPU operation voltage (Vcore). If this " ATX+ 12V connector" is not connected, system cannot boot.


## 4 ) ATX (ATX Power)

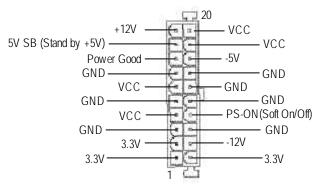

> AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

## 5 ) IDE1/IDE2

 (Primary / Secondary Connector)




> Important Notice:

Please connect first harddisk to IDE1 and connect CDROM to IDE2.

The rad stripe of the ribbn cable must be the same side with the Pin1.

## 6 ) FDD (Floppy Connector)

 

➤ Please connect the floppy driver ribbon cables to FDD. It supports 360K,1.2M,720K,1.44M and 2.88M bytes floppy disk types.

The rad stripe of the ribbn cable must be the same side with the Pin1.


## 7) PWR\_LED



 PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

If you use dual color LED, power LED will turn to another color.

## 8 ) F\_PANEL (2x10 pins jumper)



GN (Green Switch)	Open: Normal Operation
	Close: Entering Green Mode
GD (Green LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
SPK (Speaker Connector)	Pin 1: VCC(+)
	Pin 2- Pin 3: NC
	Pin 4: Data(-)
RST (Reset Switch)	Open: Normal Operation
	Close: Reset Hardware System
PW (Soft Power Connector)	Open: Normal Operation
	Close: Power On/Off
MPD(Message LED/Power/	Pin 1: LED anode(+)
Sleep LED)	Pin 2: LED cathode(-)
	I

➤ Please connect the power LED, PC speaker, reset switch and power switch etc of your chassis front panel to the F\_PANEL connector according to the pin assignment above.


## 9 ) BATTERY


 
## CAUTION


- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

## 10 ) F\_AUDIO (Front Audio)




➤ If you want to use "Front Audio" connector, you must move 5-6, 9-10 Jumper. In order to utilize the front audio header, your chassis must have front audio connector. Also pleasemake sure the pin assigment on the cable is the same as the pin assigment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer.

## 11 ) CD\_IN (CD Audio Line In)

 


Connect CD-ROM or DVD-ROM audio out to the connector.

## 12 ) AUX\_IN (AUX In Connector)

 


Connect other device(such as PCI TV Tunner audio out ) to the connector.

## 13 ) F\_USB1 (Front USB Connector) (F\_USB1 connector in yellow is for USB 1.1)

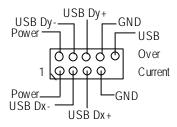

Be careful with the polarity of the front USB connector. Check the pin assignment while you connect the front USB cable.Please contact your nearest dealer for optional front USB cable.

## 14 ) CI (CASE\_OPEN)

 

➤ This 2 pin connector allows your system to enable or disable the "Case Open" item in BIOS if the system case begin remove.

# Chapter 3 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

## ENTERING SETUP

Powering ON the computer and pressing < Del> immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

## **CONTROL KEYS**

	· · · · · · · · · · · · · · · · · · ·
< <b>↑</b> >	Move to previous item
<√>	Move to next item
< <b>←</b> >	Move to the item in the left hand
< <del>&gt;&gt;</del> >	Move to the item in the right hand
<enter></enter>	Select item
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and
	Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<f2></f2>	Reserved
<f3></f3>	Reserved
<f4></f4>	Reserved
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<f6></f6>	Load the file-safe default CMOS value from BIOS default table
<f7></f7>	Load the Optimized Defaults
<f8></f8>	Q-Flash function
<f9></f9>	Reserved
<f10></f10>	Save all the CMOS changes, only for Main Menu

#### GEITING HELP

#### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

## Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

## The Main Menu (For example: BIOS Ver. :F1)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

## CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

▶Standard CMOS Features	Top Performance	
▶Adv anced BIOS Features	Load Fail-Safe Defaults	
►Integrated Peripherals	Load Optimized Defaults	
▶Power Management Setup	Set Supervisor Password	
▶PnP/PCI Configurations	Set User Password	
▶PC Health Status	Save & Exit Setup	
▶Frequency/Voltage Control	Ex it Without Sav ing	
ESC:Quit	↑↓→←:Select Item	
F8: Q-Flash	F10:Save & Exit Setup	
Time, Date	, Hard Disk Type	

Figure 1: Main Menu

## • Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

## • Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

## • Integrated Peripherals

This setup page includes all onboard peripherals.

## • Power Management Setup

This setup page includes all the items of Green function features.

#### • PnP/PCI Configurations

This setup page includes all the configurations of PCI & PnP ISA resources.

#### PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

## • Frequency/Voltage Control

This setup page is control CPU's clock and frequency ratio.

## Top Performance

If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".

## • Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

## $\bullet \qquad \textbf{Load Optimized Defaults}$

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

## • Set Supervis or pass word

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

## • Set User password

Change, set, or disable password. It allows you to limit access to the system.

#### • Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

## • Exit Without Saving

Abandon all CMOS value changes and exit setup.

## **Standard CMOS Features**

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

## Standard CMOS Features

Date (mm:dd:yy)	Mon, Jun 5 2002	Item Help
Time (hh:mm:ss)	22:31:24	Menu Level ▶
		Change the day, mont
▶IDE Primary Master	None	year
▶IDE Primary Slave	None	
▶IDE Secondary Master	None	<week></week>
▶IDE Secondary Slave	None	Sun. to Sat.
Driv e A	1.44M, 3.5 in.	<month></month>
Drive B	None	Jan. to Dec.
Floppy 3 Mode Support	Disabled	
		<day></day>
Halt On	All, But Keyboard	1 to 31 (or max imum
		allowed in the month)
Base Memory	640K	
Extended Memory	130048K	<year></year>
Total Memory	131072K	1999 to 2098
-		
↑↓→←: Move Enter: Select +	-/-/PU/PD:Value F10:Save ES	SC:Exit F1:General Help

F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Figure 2: Standard CMOS Features

## Tate

The date format is <week>, <month>, <day>, <year>.

➤ Week The week, from Sun to Sat, determined by the BIOS and is display only

Month The month, Jan. Through Dec.

→ Day The day, from 1 to 31 (or the maximum allowed in the month)

→ Year The year, from 1999 through 2098

#### ☐ Time

The times format in <hour> <minute> < second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

## ○ IDE Pri mary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from driveC to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

<b>▶</b> CYLS.		Number of cylinde			
	<b>→</b> HEADS	Number of heads			
	<b>▶</b> PRECOMP	Write precomp			
	<b>▶</b> LANDZONE Landing zone				
	→ SECTORS Number of sectors				

If a hard disk has not been installed select NONE and press <Enter>.

## ♡ Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

<b>→</b> None	No floppy drive installed
<b>→</b> 360K, 5.25 in.	5.25 inch PC-type standard drive; 360K byte capacity.
▶ 1.2M, 5.25 in.	5.25 inch AT-type high-density drive; 1.2M byte capacity
	(3.5 inch when 3 Mode is Enabled).
→ 720K, 3.5 in.	3.5 inch double-sided drive; 720K byte capacity
▶1.44M, 3.5 in.	3.5 inch double-sided drive; 1.44M byte capacity.
<b>▶</b> 2.88M, 3.5 in.	3.5 inch double-sided drive; 2.88M byte capacity.

## ○ Floppy 3 Mode Support (for Japan Area)

Disabled Normal Floppy Drive. (Default value)
 Drive A
 Drive A is 3 mode Floppy Drive.
 Drive B is 3 mode Floppy Drive.
 Both Drive A & B are 3 mode Floppy Drives.

#### ҈ Halt on

The category determines whether the computer will stop if an error is detected during power up.

NO Errors
The system boot will not stop for any error that may be detected

and you will be prompted.

▶ All Errors Whenever the BIOS detects a non-fatal error the system will be stopped.

▶ All, But Keyboard The system boot will not stop for a keyboard error; it will stop for

all other errors. (Default value)

▶All, But Diskette The system boot will not stop for a disk error; it will stop for all

other errors.

► All, But Disk/Key The system boot will not stop for a keyboard or disk error; it will

stop for all other errors.

## **∽** Memory

The category is display-only which is determined by POST (PowerOn Self Test) of the BIOS.

#### **Base Memory**

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512 K for systems with 512 K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

#### **Extended Memory**

The BIOS determines how much extended memory is present during the POST. This is the amount of memory located above 1 MB in the CPU's memory address map.

## **Advanced BIOS Features**

CMOS Setup Utility -Copyright (C) 1984-2002 Award Software

## Advanced BIOS Features

First Boot Device		Floppy		Item Help
Second Boot Device		HDD-0		Menu Level ▶
Third Boot Device		CDROM		Select Boot Device
Boot Up Floppy Seek		Disabled		priority
DRAM Data Integrity Mode		Non-ECC		
Init Display First		AGP		[Floppy]
				Boot from floppy
				[LS120]
				Boot from LS120
				[HDD-0]
				Boot from First HDD
				[HDD-1]
				Boot from second HDD
↑↓→←: Move Enter: Select	+/-/PU/PD:Value	F10:Save	ESC:E	xit F1:General Help
F5:Previous Values	F6:Fail-Safe Defa	6:Fail-Safe Defaults F7:Op		mized Defaults

Figure 3: Adv anced BIOS Features

## ▽ First / Second / Third Boot Device

<b>→</b> Floppy	Select your boot device priority by Floppy.
<b>▶</b> LS120	Select your boot device priority by LS120.
<b>▶</b> HDD-0~3	Select your boot device priority by HDD-0~3.
<b>≯</b> SCSI	Select your boot device priority by SCSI.
<b>→</b> CDROM	Select your boot device priority by CDROM.
<b>≯</b> ZIP	Select your boot device priority by ZIP.
<b>▶</b> USB-FDD	Select your boot device priority by USB-FDD.
<b>₩</b> USB-ZIP	Select your boot device priority by USB-ZIP.
<b>▶</b> USB-CDROM	Select your boot device priority by USB-CDROM.
<b>▶</b> USB-HDD	Select your boot device priority by USB-HDD.
<b>▶</b> LAN	Select your boot device priority by LAN.
<b>▶</b> Disabled	Select your boot device priority by Disabled.

## ○ Boot Up Floppy Seek

During POST, BIOS will determine the floppy disk drive installed is 40 or 80 tracks. 360 K type is 40 tracks 720 K, 1.2 M and 1.44 M are all 80 tracks.

▶Enabled BIOS searches for floppy disk drive to determine it is 40 or 80 tracks. Note

that BIOS can not tell from 720 K, 1.2 M or 1.44 M drive type as they are

all 80tracks.

▶ Disabled BIOS will not search for the type of floppy disk drive by track number. Note

that there will not be any warning message if the drive installed is 360 K.

(Default value)

## TO DRAM Data Integrity Mode

▶ECC Set DRAM Data Integrity Mode by ECC.

► Non-ECC Set DRAM Data Integrity Mode by Non-ECC. (Default value)

## ☐ Init Display First

▶ AGP Set Init Display First to AGP. (Default value)

▶PCI Set Init Display First to PCI.

# **Integrated Peripherals**

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

Integrated Peripherals					
On-Chip Primary PCI IDE	Enabled	Item Help			
On-Chip Secondary PCI IDE	Enabled	Menu Level ▶			
IDE1 Conductor Cable	Auto	If a hard disk			
IDE2 Conductor Cable	Auto	controller card is			
USB Controller	Enabled	used, set at Disabled			
USB Key board Support	Disabled				
USB Mouse Support	Disabled	[Enabled]			
AC97 Audio	Auto	Enable onboard IDE			
Onboard Serial Port 1	3F8/IRQ4	PORT			
Onboard Serial Port 2	2F8/IRQ3	[Disabled]			
UART Mode Select	Normal	Disable onboard IDE			
x UR2 Duplex Mode	Half	PORT			
Onboard Parallel Port	378/IRQ7				
Parallel Port Mode	SPP				
x ECP Mode Use DMA	3				
Game Port Address	201				
Midi Port Address	330				
Midi Port IRQ	10				
CIR Port Address	Disabled				
x CIR Port IRQ	11				
↑↓→←: Move Enter:Select	+/-/PU/PD:Value F10:Save ESC:E	xit F1:General Help			
F5:Previous Values	F6:Fail-Safe Defaults F7:Op	otimized Defaults			

Figure 4: Integrated Peripherals

## ○ On-Chip Primary PCI IDE

► Enabled Enable onboard 1st channel IDE port. (Default value)

▶ Disabled Disable onboard 1st channel IDE port.

#### On-Chip Secondary PCI IDE

▶ Enabled Enable onboard 2nd channel IDE port. (Default value)

⇒ Disabled Disable onboard 2nd channel IDE port.

#### **☞ IDE1 Conductor Cable**

→ Auto Will be automatically detected by BIOS. (Default Value)

▶ ATA66/100 Set IDE1 Conductor Cable to ATA66/100 (Please make sure your IDE device

and cable is compatible with ATA66/100).

▶ ATA33 Set IDE1 Conductor Cable to ATA33 (Please make sure your IDE device and

cable is compatible with ATA33).

## **☞ IDE2 Conductor Cable**

➤ Auto Will be automatically detected by BIOS. (Default Value)

▶ ATA66/100 Set IDE2 Conductor Cable to ATA66/100 (Please make sure your IDE device

and cable is compatible with ATA66/100).

▶ ATA33 Set IDE2 Conductor Cable to ATA33 (Please make sure your IDE device and

cable is compatible with ATA33).

## **♡** USB Controller

➤ Enabled Enable USB Controller. (Default value)

▶ Disabled Disable USB Controller.

#### TUSB Keyboard Support

▶ Enabled Enable USB Key board Support.

▶ Disabled Disable USB Key board Support. (Default value)

## ♡ USB Mouse Support

▶ Enabled Enable USB Mouse Support.

▶ Disabled Disable USB Mouse Support. (Default value)

#### **☞ AC97 Audio**

→ Auto Enable onboard AC'97 audio function. (Default Value)

▶ Disabled Disable this function.

#### Tonboard Serial Port 1

→ Auto BIOS will automatically setup the port 1 address.

▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)

▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
 ▶ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
 ▶ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.

Disabled Disable onboard Serial port 1.

# ○ Onboard Serial Port 2

▶ Auto BIOS will automatically setup the port 2 address.▶ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.

▶2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)

→ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
 → 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.

→ Disabled Disable onboard Serial port 2.

#### **☞ UART Mode Select**

(This item allows you to determine which Infra Red(IR) function of Onboard I/O chip)

▶ASKIR Set onboard I/O chip UART to ASKIR Mode.▶IrDA Set onboard I/O chip UART to IrDA Mode.

► Normal Set onboard I/O chip UART to Normal Mode. (Default Value)

## ☐ UR2 Dupl ex Mode

→ Half IR Function Duplex Half. (Default Value)

▶Full IR Function Duplex Full.

## TONDOARD Parallel port

▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default Value)

- 33 -

▶ 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.

▶ Disabled Disable onboard LPT port.

▶ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

#### **⇔** Parallel Port Mode

⇒SPP Using Parallel port as Standard Parallel Port. (Default Value)

▶EPP Using Parallel port as Enhanced Parallel Port.▶ECP Using Parallel port as Extended Capabilities Port.

▶ECP+EPP Using Parallel port as ECP & EPP mode.

# **□ ECP Mode Use DMA**

→ 3 Set ECP Mode Use DMA to 3. (Default Value)

▶1 Set ECP Mode Use DMA to 1.

#### **⇔** Game Port Address

▶ 201 Set Game Port Address to 201. (Default Value)

⇒ 209 Set Game Port Address to 209.

▶ Disabled Disable this function.

#### ○ Midi Port Address

▶290 Set Midi Port Address to 290.▶300 Set Midi Port Address to 300.

→ 330 Set Midi Port Address to 330. (Default Value)

▶ Disabled Disable this function.

#### ← CIR Port Address

▶310 Set CIR Port Address to 310. (Default Value)

▶ 320 Set CIR Port Address to 320.

**▶** Disabled Disable this function.

#### CIR Port IRQ

▶5 Set CIR Port IRQ to 5.

▶ 11 Set CIR Port IRQ to 11. (Default Value)

# **Power Management Setup**

CMOS Setup Utility -Copyright (C) 1984-2002 Award Software

Power Management Setup

S1(POS)	Item Help
Blinking	Menu Level ►
Instant-Off	[S1]
Enabled	Set suspend type to
Enabled	Power On Suspend under
Disabled	ACPI OS
Ev ery day	
0 0 0	[S3]
Disabled	Set suspend type to
Disabled	Suspend to RAM under
Enter	ACPI OS
Soft-Off	
+/-/PU/PD:Value F10:Save ES	C:Exit F1:General Help
	Blinking Instant-Off Enabled Enabled Disabled Every day 0 0 0 Disabled Disabled Enter Soft-Off

F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Figure 5: Power Management Setup

# ← ACPI Suspend Type

▶S1(POS) Set ACPI suspend type to S1. (Default Value)

► S3(STR) Set ACPI suspend type to S3.

## **☞ Power LED in S1 state**

▶ Blinking In standby mode(S1), power LED will blink. (Default Value)

Dual/Off In standby mode(S1):

a. If use single color LED, power LED will turn off.

b. If use dual color LED, power LED will turn to another color.

# ○ Soft-off by PWR\_BTIN

▶ Instant-off
Press power button then Power off instantly. (Default value)

▶ Delay 4 Sec. Press power button 4 sec to Power off. Enter suspend if button is pressed less

than 4 sec.

#### **ModemRingOn**

▶ Disabled Disable Modem Ring On / Wake On LAN function.

▶ Enabled The modem ring / LAN wake up will bring the system out of soft-off or

suspend state if this option is set "Enabled". (Default Value)

#### **☞ PME Event Wake Up**

▶ Disabled Disable this function.

▶ Enabled Enable PME Event Wake up. (Default Value)

#### ~ Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

▶ Disabled Disable this function. (Default Value)

**▶** Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

Date ( of Month) Alarm : Every day , 1~31

Time ( hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

#### Power On By Mouse

➤ Disabled Disabled this function. (Default value)

Mouse Click Set mouse power on by double click mouse bottom.

## Power On By Keyboard

▶ Password Enter from 1 to 5 characters to set the Keyboard Power On Password.

▶ Disabled Disabled this function. (Default value)

→ Key board 98 If your key board have "POWER Key" button, you can press the key to

power on your system.

#### **☞ KB Power ON Password**

▶ Enter Input password (from 1 to 5 characters) and press Enter to set the Key

board Power On Password.

#### **⇔AC Back Function**

Memory System power on depends on the status before AC lost.
 Soft-Off Always in Off state when AC back. (Default value)
 ►Full-On Always power on the system when AC back.

# PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

#### PnP/PCI Configurations

PCI 1/ PCI5 IRQ Assignment	Auto	Item Help
PCI 2 IRQ Assignment	Auto	Menu Level ▶
PCI 3 IRQ Assignment	Auto	
PCI 4 IRQ Assignment	Auto	
↑↓→←: Move Enter:Select	+/-/PU/PD:Value F10:Save	ESC:Exit F1:General Help
F5:Previous Values	F6:Fail-Safe Defaults	F7:Optimized Defaults

Figure 6: PnP/PCI Configurations

# ← PCI 1/PCI5 IRQ Assignment

▶Auto Auto assign IRQ to PCI 1/ PCI5. (Default value)
 ▶3,4,5,7,9,10,11,12,14,15 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

## **☞ PCI 2 IRQ Assignment**

→ Auto Auto assign IRQ to PCI 2. (Default value)→ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

## **→ PCI3 IRQ Assignment**

➤ Auto Auto assign IRQ to PCI 3. (Default value)➤ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

# **PC Health Status**

CMOS Setup Utility -Copyright (C) 1984-2002 Award Software

# PC Health Status

Reset Case Open Stat	us		Disabled	Ite	m Help
Case Opened		N	No	Me	enu Level ►
<b>A</b> 1 M	F 1 C 1 1	/ /DI //DD // /	F10.0		. 510
T → ←: Move	Enter: Select	+/-/PU/PD:Value	F IU:Save	ESC:EXI	t F1:General Help
F5:P	revious Values	F6:Fail-Safe Defa	aults F7:Opti	mized Def	faults

Figure 7: PC Health Status

# **▽ Reset Case Open Status**

# **○** Case Opened

If the case is closed, "Case Opened" will show "No".

If the case have been opened, "Case Opened" will show "Yes".

If you want to reset "Case Opened" value, set "Reset Case Open Status" to

"Enabled" and save CMOS, your computer will restart.

# Frequency/Voltage Control

CMOS Setup Utility -Copy right (C) 1984-2002 Award Software

## Frequency/Voltage Control

CPU Clock Ratio	15X	Item Help
CPU Host Clock Control	Disabled	Menu Level ▶
x CPU Host Frequency (Mhz)	100	
x Fixed PCI/AGP Frequency	33/66	
Host/DRAM Clock ratio	Auto	
Memory Frequency (Mhz)	266	
PCI/AGP Frequency (Mhz)	33/66	
↑↓→←: Move Enter:Select +/-/PU/PD:V	alue F10:Save ES0	C:Exit F1:General Help
F5:Previous Values F6:Fail-Sa	ife Defaults F7:Optim	ized Defaults

Figure 8: Frequency/Voltage Control

## ← CPU Clock Ratio

This option will not be shown or not be available if you are using a CPU with the locked ratio.

▶10X~24X It's depends on CPU Clock Ratio.

## CPU Host Clock Control

Note: If system hangs up before enter CMOS setup utility, wait for 20 sec for times out reboot. When time out occur, system will reset and run at CPU default Host clock at next boot.

▶ Disable Disable CPU Host Clock Control. (Default value)

▶ Enable Enable CPU Host Clock Control.

## **○ CPU Host Frequency**

▶ 100MHz ~ 355MHz Set CPU Host Clock from 100MHz to 355MHz.

#### ☐ Fixed PCI/AGP Divider

 $\blacktriangleright$  You can choose Disabled, PLL/40, PLL/32, PLL/24, PLL/20/PLL/16 mode to adjust PCI/AGP frequency .

#### → Host/DRAM Clock Ratio

(Warning: wrong frequency may make system can't boot, clear CMOS to overcome wrong frequency issue)  $\,$ 

▶2.0 Memory Frequency = Host clock X 2.0.▶2.66 Memory Frequency = Host clock X 2.66.

→ Auto Set Memory frequency by DRAM SPD data. (Default value)

# → Memory Frequency(Mhz)

▶The values depend on CPU Host Frequency (Mhz) .

# PCI/AGP Frequency(Mhz)

→ Setup PCI/AGP frequency by adjusting CPU Host Frequency or PCI/AGP Divider item.

# **Top Performance**

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

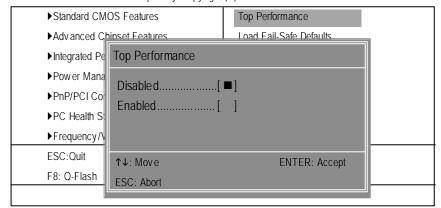


Figure 9: Top Performance

## Top Performance

If you wish to maximize the performance of your system, set "Top Performance" as "Enabled".

- ▶ Disabled Disable this function. (Default Value)
- **▶** Enabled Enable Top Performance function.

# **Load Fail-Safe Defaults**

CMOS Setup Utility -Copyright (C) 1984-2002 Award Software



Figure 10: Load Fail-Safe Defaults

## Load Fail-Safe Defaults

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

# **Load Optimized Defaults**

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

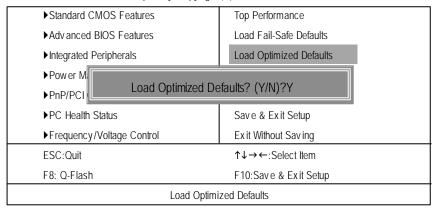


Figure 11: Load Optimized Defaults

## Load Optimized Defaults

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

# Set Supervisor/User Password

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

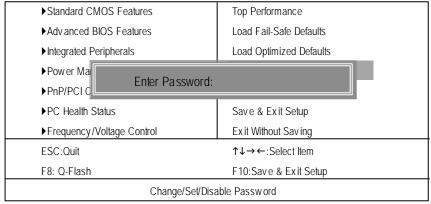


Figure 12: Password Setting

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, any one may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

# Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

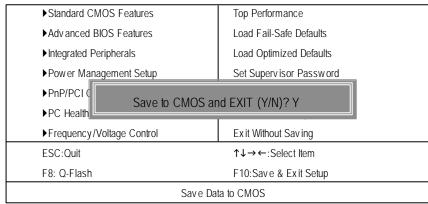


Figure 13: Save & Exit Setup

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

# **Exit Without Saving**

CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

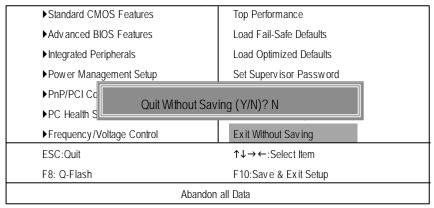


Figure 14: Exit Without Saving


Type "Y" will quit the Setup Utility without saving to RTC CMOS. Type "N" will return to Setup Utility.


- 47 -

BIOS Setup

# Chapter 4 Technical Reference
 
# **Block Diagram**

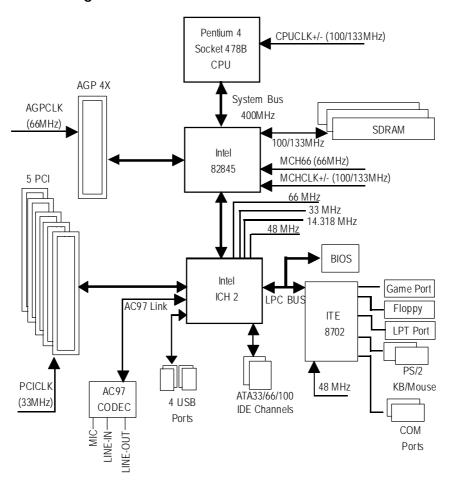



# @ BIOS™ Introduction

# Gigabyte announces @ BIOS Windows BIOS live update utility



Have you ever updated BIOS by yourself? Or like many other people, you just know what BIOS is, but always he sitate to update it? Because you think updating newest BIOS is unnecessary and actually you don't know how to update it.

Maybe not like others, you are very experienced in BIOS updating and spend quite a lot of time to do it. But of course you don't like to do it too much. First, download different BIOS from website and then switch the operating system to DOS mode. Secondly, use different flash utility to update BIOS. The above process is not a interesting job. Besides, always be carefully to store the BIOS source code correctly in your disks as if you update the wrong BIOS, it will be a nightmare.

Certainly, you wonder why motherboard vendors could not just do something right to save your time and effort and save you from the lousy BIOS updating work? Here it comes! Now Gigabyte announces @BIOS— the first Windows BIOS live update utility. This is a smart BIOS update software. It could help you to download the BIOS from internetand update it. Not like the other BIOS update software, it's a Windows utility. With the help of "@BIOS", BIOS updating is no more than a click.

Besides, no matter which mainboard you are using, if it's a Gigabyte's product\*, @BIOS help you to maintain the BIOS. This utility could detect your correct mainboard model and help you to choose the BIOS accordingly. It then downloads the BIOS from the nearest Gigabyte ftp site automatically. There are several different choices; you could use 'Internet Update "to download and update your BIOS directly. Or you may want to keep a backup for your current BIOS, just choose 'Save Current BIOS" to save it first. You make a wise choice to use Gigabyte, and @BIOS update your BIOS smartly. You are now worry free from updating wrong BIOS, and capable to maintain and manage your BIOS easily. Again, Gigabyte's innovative product erects a milestone in mainboard industries.

For such a wonderful software, how much it costs? Impossible! It's free! Now, if you buy a Gigabyte's motherboard, you could find this amazing software in the attached driver CD. But please remember, connected to internet at first, then you could have a internet BIOS update from your Gigabyte @BIOS.

# Easy Tune™ 4 Introduction

# Gigabyte announces $EasyTune^{TM} 4$ Windows based Overclocking utility

EasyTune 4 carries on the heritage so as to pave the way for future generations.



Overclock" mightbe one of the most common issues in computer field. But have many users ever tried it? The answer is probably "no". Because "Overclock" is thought to be very difficult and includes a lot of technical know-how, sometimes "Overclock" is even considered as special skills found only in some enthusiasts. But as to the experts in "Overclock", what's the truth? They may spend quite a lot of time and money to study, try and use many different hard-

ware or BIOS tools to do "Overclock". And even with these technologies, they still learn that it's quite a risk because the safety and stability of an "Overclock" system is unknown. Now everything is different because of a Windows based overclocking utility "EasyTune 4" -- announced by Gigabyte. This windows based utility has totally changed the gaming rule of "Overclock". This is the first windows based overclocking utility is suitable for both normal and power users. Users can choose either "Easy Mode" or "Advanced Mode" for overclocking at their convenience. For users who choose "Easy Mode", they just need to click "Auto Optimize" to have autoed and immediate CPU overclocking. This software will then overdrive CPU speed automatically with the result being shown in the control panel. If users prefer "Overclock" by them, there is also another choice. Click "Advanced Mode" to enjoy "sport drive" class Overclocking user interface. "Advanced Mode", allows users to change the system bus / AGP / Memory working frequency in small increments to get ultimate system performance. It operates in coordination with Gigabyte motherboards. Besides, it is different from other traditional over-clocking methods, EasyTune 4 doesn't require users to change neither BIOS nor hardware switch/jumper setting; on the other hand, they can do "Overclock" at easy step. Therefore, this is a safer way for "Overclock" as nothing is changed on software or hardware. If user runs EasyTune 4 over system's limitation, the biggestlost is only to restart the computer again and the side effect is then well controlled. Moreover, if one well-performed system speed has been tested in EasyTune 4, user can "Save" this setting and "Load" itin next time. Obviously, Gigabyte EasyTune 4 has already turned the "Overclock" technology toward to a newer generation. This wonderful software is now free bundled in Gigabyte motherboard attached in driver CD. Users may make a test drive of "EasyTune 4" to find out more amazing features by themselves.

\*Some Gigabyte products are not fully supported by EasyTune 4. Please find the products supported list in the web site.

\*Any "Overclocking action" is at user's risk, Gigabyte Technology will not be responsible for any damage or instability to your processor, motherboard, or any other components.

# **Q-Flash Introduction**

# A. What is Q-Flash Utility?

Q-Flash utility is a pre-O.S. BIOS flash utility enables users to update its BIOS within BIOS mode, no more fooling around anyOS.

#### B. How to use Q-Flash?

a. After power on the computer, pressing <Del> immediately during POST (Power On Self Test) it will allow you to enter AWARD BIOS CMOS SETUP, then press <F8> to enter Q-Flash utility.

▶Standard CMOS Features Top Performance ▶Advanced BIOS Features Load Fail-Safe Defaults ▶Integrat Enter Q-Flash Utility (Y/N)? Y ▶Power ▶PnP/Pd ▶PC Health Status Save & Exit Setup ▶Frequency/Voltage Control Exit Without Saving ↑↓→←:Select Item F8: Q-Flash F10:Save & Exit Setup Time, Date, Hard Disk Type...


CMOS Setup Utility-Copyright (C) 1984-2002 Award Software

## b. Q-Flash Utility

	Q-Flash Utility V3.06	
Flash Type/Size : Keep DMI Data :	SST 39SF020/256K Yes	
	Load BIOS from Floppy Save BIOS to Floppy	
Enter: Run	SpaceBar:Change Value ESC: Reset	↑/↓: Select Item

# Load BIOS From Floppy

 $\ensuremath{\mathscr{I}}$  In the A:drive, insert the "BIOS" diskette, then Press Enter to Run.

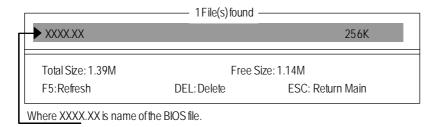

Press Enter to Run.

Are you sure to update BIOS?
[Enter] to contiune Or [ESC] ot abort...

Press Enter to Run.

!! COPY BIOS Completed -Pass !! Please press any keyto confinue

 $Congratulation! \ You \ have \ completed \ the \ flashed \ and \ now \ can \ restart system.$ 

#### C: BIOS Flash Procedure

BIOS update procedure:

Method 1:

We use GA-7VTX motherboard and Flash841 BIOS flash utility as example.

Please flash the BIOS according to the following procedures if you are now under the DOS mode. Flash BIOS Procedure:

STEP 1:

(1) Please make sure your system has installed the extraction utility such as winzip or pkunzip. Firstly you have to install the extraction utility such as winzip or pkunzip for unzip the files. Both ofthese utilities are available on many shareware download pages like <a href="http://www.shareware.cnet.com">http://www.shareware.cnet.com</a>

STEP 2: Make a DOS boot diskette. (See example: Windows 98 O.S.)


Beware: Windows ME/2000 are notallowed to make a DOS bootdiskette.

(1) With an available floppy disk in the floppydrive. Please leave the diskette "UN-write protected" type. Double click the "My Computer" icon from Desktop, then click "3.5 diskette (A)" and right click to select "Format (M)"




(2) Select the "Quick (erase)" for Format Type, and pick both "Display summary when finished" and "Copy system files", after that press "Start". That will format the floppy and transfer the needed system files to it.

Beware: This procedure will erase all the prior data on that floppy, so please proceed accordingly.

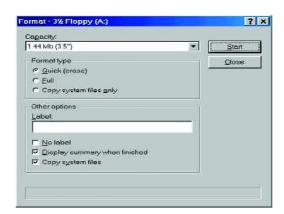

(3) After the floppy has been formatted completely, please press "Close".

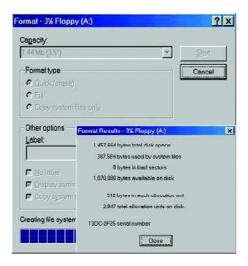

STEP 3: Download BIOS and BIOS utility program.


(1) Please go to Gigabyte website <a href="http://www.gigabyte.com.tw/index.html">http://www.gigabyte.com.tw/index.html</a>, and click "Support".



(2) From Supportzone, click the "Motherboards BIOS & Drivers".




 $\label{thm:continuous} We use {\tt GA-7VTX} \, mo {\tt therboard} \, as \, example. \, Please \, select {\tt GA-7VTX} \, by \, Model \, or \, Chipset optional \, menu \, to \, obtain \, BIOS \, flash \, files.$ 

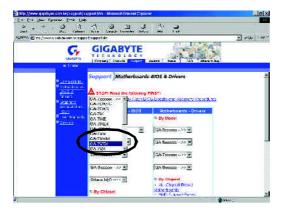


(4) Select an appropriate BIOS version (For example: F4), and click to download the file. It will pop up a file download screen, then select the "Open this file from its current location" and press "OK".



(5) At this time the screen shows the following picture, please click "Extract" button to unzip the files.

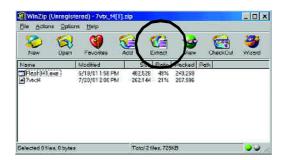

(6) Please extract the download files into the clean bootable floppy disk A mentioned in STEP 2, and press "Extract".

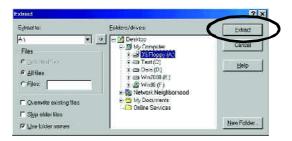

STEP 4: Make sure the system will boot from the floppy disk.


(1) Insert the floppy disk (contains bootable program and unzip fle) into the floppy drive A. Then, restart the system. The system will boot from the floppy disk. Please press < DEL> key to enter BIOS setup main menu when system is bootup.



(2) Once you enter the BIOS setup utility, the main menu will appear on the screen. Use the arrows to highlight the item "BIOS FEATURES SETUP".

AMIBIOS SIMPLE SETUP UTILITY - VERSION 1.24b			
(C) 1999 American Megatre	nds, Inc. All Rights Reserved		
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS		
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP		
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD		
POWER MANAGEMENT SETUP	USER PASSWORD		
PNP / PCI CONFIGURATION	IDE HDD AUTO DETECTION		
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP		
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING		
ESC: Quit ↑↓←→ : Select Item (Shi	ift)F2 : Change Color F5: Old Values		
F6: Load BIOS Defaults F7: Load Setup Defaults F10:Save & Exit			
Time, Date , Hard Disk Type			

(3) Press "Enter" to enter "BIOS FEATURES SETUP" menu. Use the arrows to highlight the item "1st Boot Device", and then use the "Page Up" or "Page Down" keys to select "Floppy".

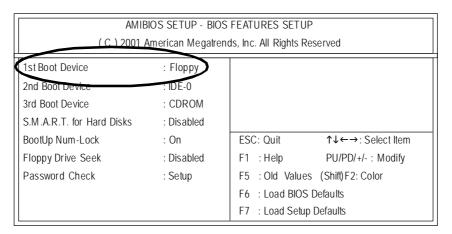


(4) Press "ESC" to go back to previous screen. Use the arrows to highlight the item "SAVE & EXIT SETUP" then press "Enter". System will ask "SAVE to CMOS and EXIT (Y/N)?" Press "Y" and "Enter" keys to confirm. Now the system will reboot automatically, the new BIOS setting will be taken effectnextboot-up.


AMIBIOS SIMPLE SETUP UTILITY - VERSION 1.24b			
(C) 2001 American Megatrends, Inc. All Rights Reserved			
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS		
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP		
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD		
POWER MANAGEMENT SETUD	LICED DACCIMODO		
PNP / PCI CONF Save to CMOS an	d EXIT (Y/N)? Y		
LOAD BIOS DEFAULTS	SAVE & EXIT SETUP		
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING		
ESC: Quit ↑↓←→ : Select Item (Shi	ft)F2 : Change Color F5: Old Values		
F6: Load BIOS Defaults F7: Load Setup Defaults F10:Save & Exit			
Save Data to CMOS & Exit SETUP			

#### STEP 5: BIOS flashing.

(1) After the system boot from floppy disk, type "A:\> dir/w" and press "Enter" to check the entire files in floppy A. Then type the "BIOS flash utility" and "BIOS file" after A:\>. In this case you have to type "A:\> Flash841 7VTX.F4" and then press "Enter".

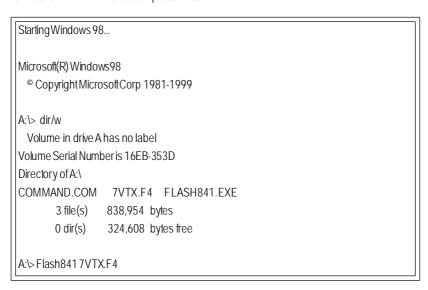


(2) Now screen appears the following Flash Utility main menu. Press "Enter", the highlighted item will locate on the model name of the right-upper screen. Right after that, press "Enter" to start BIOS Flash Utility.

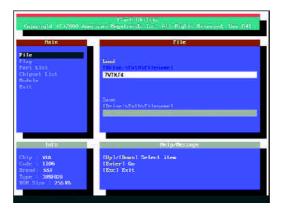


(3) It will pop up a screen and asks "Are you sure to flash the BIOS?" Press [Enter] to continue the procedure, or press [ESC] to quit.

Beware: Please do not turn off the system while you are upgrading BIOS. It will render your BIOS corrupted and system totally inoperative.

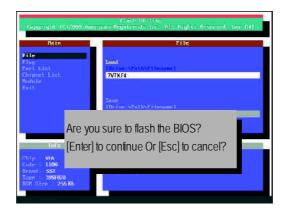

(4) The BIOS flash completed. Please press [ESC] to exit Flash Utility.

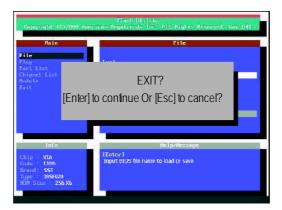


#### STEP 6: Load BIOS defaults.

Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded. This important step resets everything after the flash.


(1) Take out the floppy diskette from floppy drive, and then restart the system. The bootup screen will indicate your motherboard model and current BIOS version.



(2) Don't forget to press <DEL> key to enter BIOS setup again when system is boot up. Use the arrows to highlight the item "LOAD SETUP DEFAULTS" then press "Enter". System will ask "Load Setup Defaults (Y/N)?" Press "Y" and "Enter" keys to confirm.

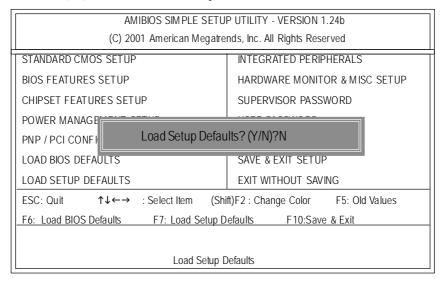

(3) Use the arrows to highlight the item "SAVE & EXIT SETUP" and press "Enter". System will ask "SAVE to CMOS and EXIT (Y/N)?" Press "Y" and "Enter" keys to confirm. Now the system will reboot automatically, the new BIOS setting will be taken effect next boot-up.

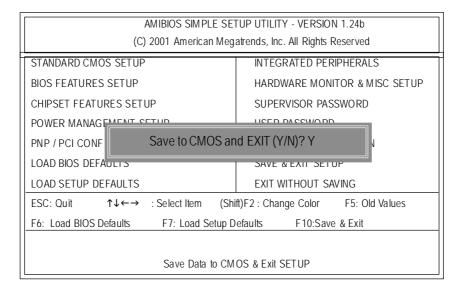


(4) Congratulate you have accomplished the BIOS flash procedure.

#### Method 2:

If your OS is Win9X, we recommend that you used Gigabyte @BIOS™ Program to flash BIOS.





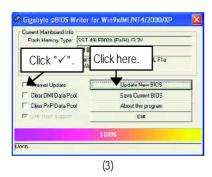

#### Methods and steps:

- I. Update BIOS through Internet
- a. Click "Internet Update" icon
- b. Click "Update New BIOS" icon
- c. Select @BIOS™ sever ("Gigabyte @BIOS™ sever 1 in Taiwan" and "Gigabyte @BIOS™ sever 2 in Taiwan" are available for now, the others will be completed soon)
- $d. \ \ Select the \ exact model \ name \ on \ your \ mother board$
- e. System will automatically download and update the BIOS.

II. Update BIOS NOT through Internet:

- a. Do not click "Internet Update" icon
- b. Click "Update New BIOS"
- c. Please select "All Files" in dialog box while opening the old file.
- d. Please search for BIOS unzip file, downloading from internet or any other methods (such as: 8ID533.F1).
- e. Complete update process following the instruction.

#### III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

#### IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

#### Note

- a. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the systemunbooted.
- b. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- c. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- d. Please note that any interruption during updating will cause system unbooted

# Chapter 5 Appendix

## Picture below are shown in Windows XP (IUCD driver version 2.02)

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

#### A. Installing Intel 845 Chipset Driver

Please install this driver as the first priority. this item installs the chipset driver utility that enableds Plug-n-Plag INF support for Intel chipset component.

#### B. Installing Sound Driver

Click this item to install sound driver.



#### Appendix A: Intel 845 Chipset Driver Installation

Follow the setup that showing on the scween to install the Utility.




Inorder to install the driver successfully, please refer to the following installation procedures.



### A-1. Intel Chipset Software Installation Utility





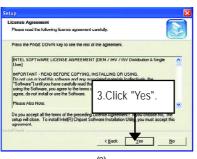









### A-2. Intel Application Accelerator




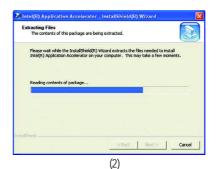





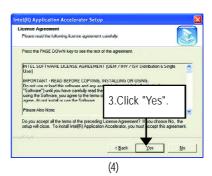



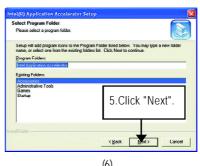

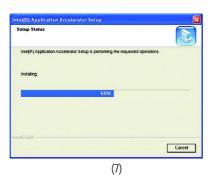

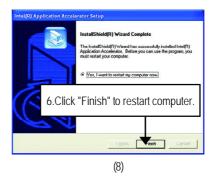

#### A-3. USB Patch Driver






## Appendix B: RealTek AC'97 Audio Driver









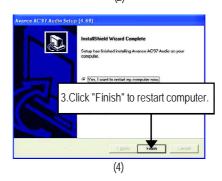

### Appendix C: EasyTune 4 Utilities Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.






(2)







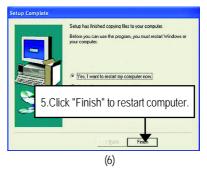

## Appendix D: Acronyms

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Advanced Communications Riser
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
FSB	Front Side Bus
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request
1/0	Input / Output
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture
LAN	Local Area Network

to be continued.....

Acronyms	Meaning
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Instrument Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory
SMP	Symmetric Multi-Processing
SMI	System Management Interrupt
USB	Universal Serial Bus
VID	Voltage ID

Customer/Country:		Company:		Phone No.:
Contact Person	:	E-mail Add. :		
Model name/Lo	t Number:			PCB revision:
BIOS version:		O.S./A.S.:		
Hardware	Mfs.	Model name	Size:	Driver/Utility:
Configuration				·
CPU				
Memory Brand				
Video Card				
Audio Card				
HDD				
CD-ROM / DVD-ROM				
Modem				
Network				
AMR / CNR				
Keyboard				
Mouse				
Power supply				
Other Device				
Problem Descri	ption:			
-				


- 81 -


- 83 -

- 85 -

		_

- 87 -

- 89 -

- 91 -