GA-K8NNXP

AMD Socket 754 Processor Motherboard

User's Manual

Rev. 1002 12ME-K8NNXP-1002

Copyright

© 2004 GIGABYTE TECHNOLOGY CO., LTD

Copyright by GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT"). No part of this manual may be reproduced or transmitted in any from without the expressed, written permission of GBT.

<u>Trademarks</u>

Third-party brands and names are the property of their respective owners.

Notice

 $Please\ do\ not\ remove\ any\ labels\ on\ mother board,\ this\ may\ void\ the\ warranty\ of\ this\ mother board.$

 $\label{thm:continuous} Due \ to \ rapid \ change \ in \ technology, some \ of \ the \ specifications \ might be \ out \ of \ date \ before \ publication \ of \ this \ booklet.$

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information ontained herein.

Declaration of Conformity

We, Manufacturer/Importer (full address)

G.B.T. Technology Träding GMbH Ausschlager Weg 41, 1F, 20537 Hamburg, Germany

declare that the product

(description of the apparatus, system, installation to which it refers)

Mother Board GA-K8NNXP

is in conformity with

(reference to the specification under which conformity is declared)

in accordance with 89/336 EEC-EMC Directive

	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM high frequency equipment	☐ EN 61000-3-2* ☑ EN 60555-2	Disturbances in supply systems cause by household appliances and similar electrical equipment "Harmonics"
□ EN 55013	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	☐ EN 61000-3-3* ☑ EN 60555-3	Disturbances in supply systems cause by household appliances and similar electrical equipment "Voltage fluctuations"
□ EN 55014	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances,	⊠ EN 50081-1	Generic emission standard Part 1: Residual commercial and light industry
	portable tools and similar electrical apparatus	⊠ EN 50082-1	Generic immunity standard Part 1: Residual commercial and light industry
□ EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	□ EN 55081-2	Generic emission standard Part 2: Industrial environment
□ EN 55020	Immunity from radio interference of broadcast receivers and associated equipment	□ EN 55082-2	Generic emission standard Part 2: Industrial environment
	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	□ ENV 55104	Immunity requirements for household appliances tools and similar apparatus
part 10	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals	EN50091-2	EMC requirements for uninterruptible power systems (UPS)
☑ CE marking		(EC conformity	marking)
	The manufacturer also declares the with the actual required safety star	•	-
□ EN 60065	Safety requirements for mains operated electronic and related apparatus for household and similar general use	□ EN 60950	Safety for information technology equipment including electrical bussiness equipment
□ EN 60335	Safety of household and similar electrical appliances	□ EN 50091-1	General and Safety requirments for uninterruptible power systems (UPS)
		Manufacturer/Importer	
		B	Signature: Timmy Huang
	(Stamp)	Date: August 11,2003	Name: Timmy Huang

k8nnxp_1001_i.p65 2003/8/18, ¤U¤È 05:50

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard Model Number: GA-K8NNXP

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(a), Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: August 11,2003



Read Me First!

When you installing AGP card, please make sure the following notice is fully understood and practiced. If your AGP card has "AGP 4X/8X(1.5V) notch" (show below), please make sure your AGP card is AGP 4X/8X(1.5V).



AGP 2X(3.3V) card is not supported by nVIDIA® nForce™ 3 150 chipset. You might experience system unable to boot up normally. Please insert an AGP 4X/8X(1.5V) card.

Although Gigabyte's AG32S(G) graphics card is based on ATi Rage 128 Pro chip, the design of AG32S(G) is compliance with AGP 4X(1.5V) specification. Therefore, AG32S(G) will work fine with nVIDIA® nForce™ 3 150 based motherboards.

Before you install PCI cards, please remove the Dual BIOS label from PCI slots if there is one.

WARNING: Never run the processor without the heatsink properly and firmly attached.

PERMANENT DAMAGE WILL RESULT!

Mise en garde: Ne faites jamais tourner le processeur sans que le dissipateur de chaleur soit fix correctement et fermement. UN DOMMAGE PERMANENT EN RÉSULTERA!

Achtung: Der Prozessor darf nur in Betrieb genommen werden, wenn der W rmeableiter ordnungsgem β und fest angebracht ist. DIES HAT EINEN PERMANENTEN SCHADEN ZUR FOLGE!

Advertencia: Nunca haga funcionar el procesador sin el disipador de calor instalado correcta y firmemente. ¡SE PRODUCIRÁ UN DAÑO PERMANENTE!

Aviso: Nunca execute o processador sem o dissipador de calor estar adequado e firmemente conectado. O RESULTADO SERÁ UM DANO PERMANENTE!

警告: 将散热板牢固地安装到处理器上之前,不要运行处理器。过热将永远损坏处理器!

警告: 將散熱器牢固地安裝到處理器上之前,不要運行處理器。過熱將永遠損壞處理器!

경고: 히트싱크를 제대로 또 단단히 부착시키지 않은 체 프로세서를 구동시키지 마십시오. 영구적 고장이 발생합니다!

警告: 永久的な損傷を防ぐため、ヒートシンクを正しくしっかりと取り付けるまでは、プロセッサを動作させないようにしてください。

Preparing Your Computer

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

- 1. Unplug your computer when working on the inside.
- Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
- Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
- 4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
- 5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

Installing the motherboard to the chassis...

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

The manufacturer assumes no liability for any damage, caused directly or indirectly, by improper installation of any comfortable performing the installation, consult a qualified computer technician. Damage to system components, and injury to yourself may result if power is applied during installation.

5 Read Me First

Table of Content

Chapter 1 Introduction 8 1-1 Check List 8 1-2 Features Summary 8 1-3 GA-K8NNXP Motherboard Layout 11 1-4 Block Diagram - GA-K8NNXP 12 Chapter 2 Hardware Installation Process 15 Step 1: Installing Processor and CPU Cooling Fan 16 Step 2: Installing Memory Modules 18 Step 3: Installing expansion cards 20 Step 3-1: AGP Card Installation 20 Step 3-2: K8DPS (Dual Power System) Installation 21 Step 4: Connect ribbon cables, cabinet wires and power supply 22 Step 4-1: I/O Back Panel Introduction 22 Step 4-2: Connectors Introduction 24 Chapter 3 BIOS Setup 41 The Main Menu (For example: BIOS Ver. : F1c) 42 Standard CMOS Features 44 Advanced BIOS Features 47 Integrated Peripherals 49 Power Management Setup 54 PnP/PCI Configurations 57	Read Me First!	4
1-1 Check List 8 1-2 Features Summary 8 1-3 GA-K8NNXP Motherboard Layout 11 1-4 Block Diagram - GA-K8NNXP 12 Chapter 2 Hardware Installation Process 15 Step 1: Installing Processor and CPU Cooling Fan 16 Step 2: Installing Memory Modules 18 Step 3: Installing expansion cards 20 Step 3-1: AGP Card Installation 20 Step 3-2: K8DPS (Dual Power System) Installation 21 Step 4: Connect ribbon cables, cabinet wires and power supply 22 Step 4-1: I/O Back Panel Introduction 22 Step 4-2: Connectors Introduction 24 Chapter 3 BIOS Setup 41 The Main Menu (For example: BIOS Ver. : F1c) 42 Standard CMOS Features 44 Advanced BIOS Features 47 Integrated Peripherals 49 Power Management Setup 54	Chapter 1 Introduction	0
1-2 Features Summary	·	
1-3 GA-K8NNXP Motherboard Layout		
1-4 Block Diagram - GA-K8NNXP	•	
Chapter 2 Hardware Installation Process	1-3 GA-K8NNXP Motherboard Layout	11
Step 1: Installing Processor and CPU Cooling Fan	1-4 Block Diagram - GA-K8NNXP	12
Step 2: Installing Memory Modules	Chapter 2 Hardware Installation Process	15
Step 3: Installing expansion cards	Step 1: Installing Processor and CPU Cooling Fan	16
Step 3-1: AGP Card Installation	Step 2: Installing Memory Modules	18
Step 3-2: K8DPS (Dual Power System) Installation	Step 3: Installing expansion cards	20
Step 4: Connect ribbon cables, cabinet wires and power supply 22 Step 4-1: I/O Back Panel Introduction 24 Chapter 3 BIOS Setup 41 The Main Menu (For example: BIOS Ver. : F1c) 42 Standard CMOS Features 44 Advanced BIOS Features 47 Integrated Peripherals 49 Power Management Setup 54	Step 3-1: AGP Card Installation	20
Step 4-1: I/O Back Panel Introduction 22 Step 4-2: Connectors Introduction 24 Chapter 3 BIOS Setup 41 The Main Menu (For example: BIOS Ver. : F1c) 42 Standard CMOS Features 44 Advanced BIOS Features 47 Integrated Peripherals 49 Power Management Setup 54	Step 3-2: K8DPS (Dual Power System) Installation	21
Chapter 3 BIOS Setup	Step 4: Connect ribbon cables, cabinet wires and power supply	22
Chapter 3 BIOS Setup	Step 4-1: I/O Back Panel Introduction	22
The Main Menu (For example: BIOS Ver. : F1c) 42 Standard CMOS Features 44 Advanced BIOS Features 47 Integrated Peripherals 49 Power Management Setup 54	Step 4-2: Connectors Introduction	24
Standard CMOS Features	Chapter 3 BIOS Setup	41
Advanced BIOS Features	The Main Menu (For example: BIOS Ver. : F1c)	42
Integrated Peripherals	Standard CMOS Features	44
Power Management Setup54	Advanced BIOS Features	47
Power Management Setup54	Integrated Peripherals	49
·	•	
	PnP/PCI Configurations	57

PC Health Status	58
Frequency/Voltage Control	60
Load Fail-Safe Defaults	62
Load Optimized Defaults	63
Set Supervisor/User Password	64
Save & Exit Setup	65
Exit Without Saving	66
Chapter 4 Technical Reference	69
@BIOS [™] Introduction	
EasyTune™ 4 Introduction	70
K8DPS (Dual Power System) Introduction	71
Flash BIOS Method Introduction	72
2- / 4- / 6-Channel Audio Function Introduction	82
Jack-Sensing Introduction	88
UAJ Introduction	90
Xpress Recovery Introduction	92
Chapter 5 Appendix	97

- 7 - Table of Content

7

Chapter 1 Introduction

1-1 Item Checklist

- ☑ The GA-K8NNXP motherboard
- ☑ GA-K8NNXP user's manual
- ☑ Quick PC Installation Guide
- ☑ GigaRAID manual
- ☑ SATA RAID manual
- ☐ GC-SATA card (Optional)

 (Manual; SATA cable x 1; Power cable x 1)
- ☑ IDE cable x 3 / Floppy cable x 1

- ✓ Serial ATA cable x 1
- ☑ USB & IEEE 1394 cable x 1
- ☑ USB cable x1
- ✓ Audio Combo Kit x 1 (SURROUND-Kit + SPDIF Out Kit)
- ☑ I/O Shield
- ☑ K8DPS x 1
- ${\hspace{.2cm}} { \hspace{.2cm}} { \hspace{.2cm}}$

1-2 Features Summary

	00.5 00.0 4TV 1 6 6 1 41 DOD
Form Factor	 30.5cm x 23.2cm ATX size form factor, 4 layers PCB
CPU	 Socket 754 for AMD Althlon™ 64 processor (K8)
	128K L1& 256K / 512K / 1M L2 cache on die
	 Support core frequencies in excess of 1.6 GHz(2800+) and faster
Chipset	 nVIDIA® nForce™ 3 150
Memory	3 184-pin DDR DIMM sockets
	 Supports DDR400/DDR333/DDR266 DIMM
	 Supports unbuffered DIMMs with a 64-bit data bus with optional 8
	bits of Error Correcting Code (ECC)
	Supports 128MB/256MB/512MB/1GB DRAM
	 Supports up to 3GB DRAM (Max)
I/O Control	• IT8712F
Slots	 1 AGP slot supports 8X/4X mode,
	AGP3.0 8X interface at 533MHz
	 5 PCI slots support 33MHz & PCI 2.3 compliant

to be continued.....

On-Board IDE	2 IDE controllers provides IDE HDD/CD-ROM (IDE1, IDE2) with
OII-DUAIU IDE	PIO, Bus Master (Ultra DMA33/ATA66/ATA100/ATA133) operation
	modes
	IDE3 and IDE4 compatible with RAID, Ultra ATA133/100, IDE
	·
Hardware Monitor	Built-in GigaRAID IT8212F CPU/System/Power fan revolution detect
Hardware Monitor	•
	CPU temperature detect CPU version temperature
	CPU warning temperature Circles will be added.
	System voltage detect GRUS reterr (Payor for fell yearing)
	CPU/System/Power fan fail warning CPU/System/Fower fan fail warning
	CPU Smart Fan control The grand shut drawn for notice.
On Doord Dorinhorals	Thermal shutdown function Tenny part supports 3 EDD with 340K, 730K 1,3M, 1,44M.
On-Board Peripherals	1 Floppy port supports 2 FDD with 360K, 720K,1.2M, 1.44M 2 20M bytes
	and 2.88M bytes
	1 Parallel port supports Normal/EPP/ECP mode 3
	2 Serial ports (COMA & COMB)
	• 6 USB 2.0/1.1 ports (4 x Front by cable)
	• 3 IEEE1394 ports (by cable), IEEE1394b can approach the
	maximum speed to 800Mb/S, but the speed can be achieved only
	when you use particular IEEE1394b cable.
	 1 IrDA connector for IR/CIR
	1 Front Audio connector
On-Board LAN	Dual LAN (Gigabit Ethernet RTL8110S)+(10/100 Ethernet RTL8201)
	• 2 RJ45 ports
On-Board Sound	Realtek ALC658 CODEC (UAJ)
	 Supports Jack Sensing function
	 Line Out / 2 front speaker
	 Line In / 2 rear speaker (by s/w switch)
	 Mic In / center & subwoofer (by s/w switch)
	SPDIF In / Out
	CD In / AUX In / Game port
On-Board SATA RAID	Onboard Silicon Image Sil3512
	 Supports Disk striping (RAID0) or DISK Mirroring (RAID1)
	Supports UDMA up to 150 MB/sec
	Up to 2 SATA Device
	Supports hot plug function

to be continued.....

- 9 - Introduction


On-Board IDE RAID	Onboard GigaRAID IT8212F chipset
	Supports data striping (RAID 0) or mirroring (RAID 1) or
	striping+mirroring (RAID 0 + RAID 1)
	Supports JBOD function
	Supports concurrent dual ATA133 IDE controller operation
	Support ATAPI mode for HDD
	Supports IDE bus master operation
	Support ATA133/RAID mode switch by BIOS
	Displays status and error checking messages during boot-up
	Mirroring supports automatic background rebuilds
	Features LBA and Extended Interrupt 13 drive translation in
	controller onboard BIOS
On-Board IEEE1394	Built-in Ti TSB82AA2
PS/2 Connector	PS/2 Keyboard interface and PS/2 Mouse interface
BIOS	Licensed AWARD BIOS
	 Supports Dual BIOS
	Supports Face Wizard
	Supports Q-Flash
Additional Features	Supports CPU Dual Power System (DPS)
	 PS/2 Keyboard power on
	 PS/2 Mouse power on
	External Modem ring on
	 STR(Suspend-To-RAM)
	Wake on LAN (WOL)
	AC Recovery
	 Poly fuse for keyboard over-current protection
	 USB KB/Mouse wake up from S3
	 Supports Thermal Shutdown function
	 Supports Easy Tune 4
	Supports @BIOS
Overclocking	 Over Voltage (CPU/DDR/AGP) by BIOS
	 Over Clock (CPU/DDR/AGP) by BIOS



Please set the CPU host frequency in accordance with your processor's specifications.


We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets, SDRAM, Cards...etc.

1-3 GA-K8NNXP Motherboard Layout

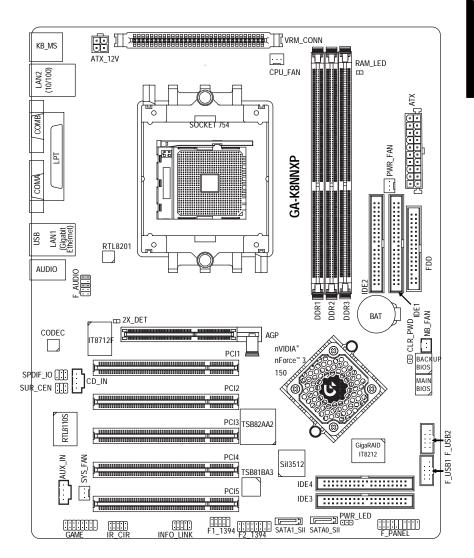

- 11 - Introduction

1-4 Block Diagram - GA-K8NNXP

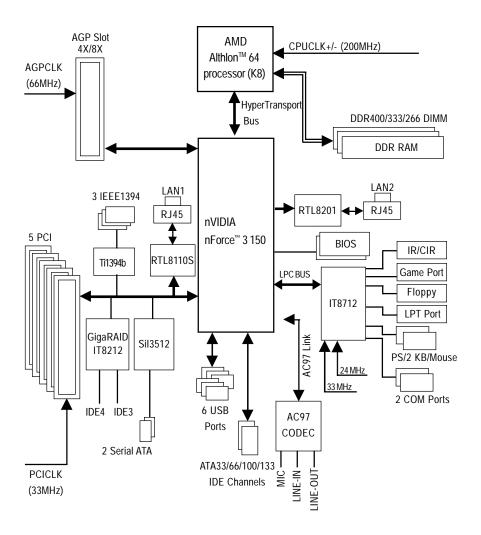

12


- 13 -	Introduction

- 14 -

Chapter 2 Hardware Installation Process

To set up your computer, you must complete the following steps:

- Step 1- Installing Processor and CPU Cooling Fan
- Step 2- Installing Memory Modules
- Step 3- Installing Expansion Cards
- Step 4- Connect ribbon Cables, Cabinet Wires, And Power Supply

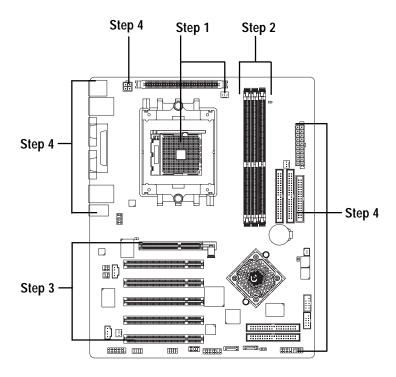

Congratulations! You have accomplished the hardware installation!

Turn on the power supply or connect the power cable to the power outlet. Continue with the BIOS/software installation.

Step 1: Installing Processor and CPU Cooling Fan

Before installing the processor and cooling fan, adhere to the following warning:



- 1. The processor will overheat without the heatsink and/or fan, resulting in permanent irreparable damage.
- 2. Never force the processor into the socket.
- 3. Apply thermal grease between the processor and cooling fan.
- 4. Please make sure the CPU type is supported by the motherboard.
- If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation. Please use AMD approved cooling fan.

The installation of the processor and cooling fan is performed in four main steps:

- Step 1-1. Processor insertion
- Step 1-2. Applying thermal grease
- Step 1-3. Cooling fan attachment
- Step 1-4. Connecting processor fan power

Step1-1. First, check the processor pins to see that none are bent. Move the socket lever to the unlocked position as shown in Figure 1 & Figure 2.(90° to the plane of the motherboard) prior to inserting the processor. The A1 pin location is designated on the processor by a copper triangle that matches up to a triangle on the socket as shown in Figure 3. Align the processor to the socket and gently lower it into place. Do not force the processor into the socket.

 


Figure 1.Angling the rod to 65-degree maybe feel a kind of tight, and then continue pull the rod to 90-degree when a noise "cough" made.

 


Figure 2.Pull the rod to the 90-degree directly.



Figure 3. A1 pin location on the Socket and Processor. Move the socket lever to the locked position while holding pressure on the center of the processor.

Step1-2. When the processor is installed in the socket, apply thermal grease to the processor(as shown in Figure 4) prior to installing the heatsink. AMD recommends using a high thermal conductivity grease (such as Shin-Etsu types G751 or G749, or an equivalent product) for the thermal interface material rather than a phase change material. Phase change materials develop strong adhesive forces between the heatsink and processor.

Removing the heatsink under such conditions can cause the processor to be removed from the socket without moving the socket lever to the unlocked position and then damage the processor pins or socket contacts.

** We recommend you to apply the thermal tape to provide better heat conduction between your CPU and heatsink. (The CPU cooling fan might stick to the CPU due to the hardening of the thermal paste. During this condition if you try to remove the cooling fan, you might pull the processor out of the CPU socket alone with the cooling fan, and might damage the processor. To avoid this from happening, we suggest you to either use thermal tape instead of thermal paste, or remove the cooling fan with extreme caution.)

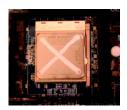


Figure 4. Application of Thermal Grease to the processor.

Step 1-3.Once the thermal grease has been applied to the processor, the heatsink can be attached to the processor. Align the heatsink assembly with the support frame mating with the backer plate standoffs as shown in Figure 5&6.





Figure 5&6 Alignment of Heatsink Assembly with Standoffs

Step 1-4. Connect the fan power wires to the header on the motherboard as shown in Figure 7.



Figure 7. Connecting the Fan Power Wires

- 17 -


Step 2: Installing Memory Modules



Before installing the memory modules, adhere to the following warning:

- 1. When DIMM LED is ON, do not install / remove DIMM from socket.
- 2. Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 3 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

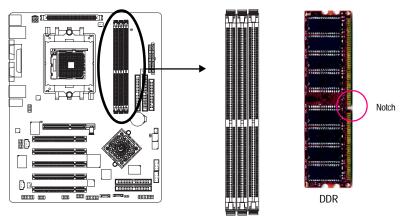

Total Memory Size Per Chip Select

Device Used on DIMMs	Size Per CS	Comments
64 Mbit (2Mx8-bitsx4 banks)	64 Mbyte	
64 Mbit (1Mx16-bitsx4 banks)	32 Mbyte	
128 Mbit(4Mx8-bitsx4 banks)	128 Mbyte	
128 Mbit(2Mx16-bitsx4 banks)	64 Mbyte	
256 Mbit(8Mx8-bitsx4 banks)	256 Mbyte	
256 Mbit(4Mx16x4 banks)	128 Mbyte	
512 Mbit(16Mx8-bitsx4 banks)	512 Mbyte	
512 Mbit(8Mx16-bitsx4 banks)	256 Mbyte	
1 Gbit(32Mx8-bitsx4 banks)	1 Gbyte	
1 Gbit(16Mx16-bitsx4 banks)	512 Mbyte	



1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.



2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.



 Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.
 Reverse the installation steps when you wish to remove the DIMM module.

DDR Introduction

Established on the existing SDRAM infrastructure, DDR (Double Data Rate) memory is a high performance and cost-effective solution that allows easy adoption for memory vendors, OEMs, and system integrators.

DDR memory is a great evolutionary solution for the PC industry that builds on the existing SDRAM architecture, yet make the awesome advances in solving the system performance bottleneck by doubling the memory bandwidth. Nowadays, with the highest bandwidth of 3.2GB/s of DDR400 memory and complete line of DDR400/333/266/200 memory solutions, DDR memory is the best choice for building high performance and low latency DRAM subsystem that are suitable for servers, workstations, and full range of desktop PCs.

Step 3 Installing expansion cards

Step 3-1: AGP Card Installation

- 1. Read the related expansion card's instruction document before install the expansion card into the computer.
- 2. Remove your computer's chassis cover, screws and slot bracket from the computer.
- 3. Press the expansion card firmly into expansion slot in motherboard.
- 4. Be sure the metal contacts on the card are indeed seated in the slot.
- 5. Replace the screw to secure the slot bracket of the expansion card.
- 6. Replace your computer's chassis cover.
- 7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
- 8. Install related driver from the operating system.



Please carefully pull out the small white-drawable bar at the end of the AGP slot when you try to install / uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot. Make sure your AGP card is locked by the small white-drawable bar.



When an AGP 2X (3.3V) card is installed the 2X_DET will light up, indicating a non-supported graphics card is inserted. Informing users that system might not boot up normally due to AGP 2X (3.3V) is not supported by the chipset.

Step 3-2: K8 DPS (Dual Power System) Installation

What is K8DPS?

K8 DPS (Dual Power System) is a daughter card which can provide you the Dual Power System function. A cool stylish neon blue K8DPS that supply a total 6-phase power circuit design, delivers a high durable power design for the new generation motherboard.




The K8DPS can work in a Dual Power System:

Parallel Mode:
 K8DPS and motherboard CPU power can work simultaneously, providing a total of 6-phase power circuit.


How to install a DPS?

- 1. The K8DPS connector has a notch, so the K8DPS can only fit in one direction.
- 2. Insert the K8DPS vertically into the socket and then push it down.
- 3. Fix the K8DPS on the motherbard with the clip.
- 4. Reverse the installation steps if you want to remove the K8DPS.

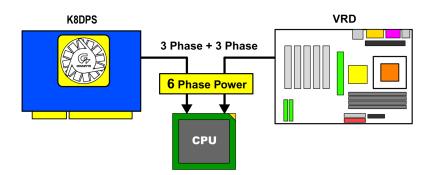

- 21 -

Step 4: Connect ribbon Cables, Cabinet Wires And Power Supply Step 4-1: I/O Back Panel Introduction

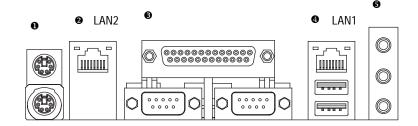

PS/2 Keyboard and PS/2 Mouse Connector



 
PS/2 Mouse Connector (6 pin Female)



PS/2 Keyboard Connector (6 pin Female)


➤ This connector supports standard PS/2 keyboard and PS/2 mouse.

2/4 USB/LAN Connector



- ➤ Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard,mouse, scanner, zip, speaker...etc. Have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device (s) vendors.
- ➤ LAN2 is fast Ethernet with 10/100Mbps speed. LAN1 is Gigabit Ethernet with 1000Mbps speed.

 9 Parallel Port, Serial Ports (COMA / COMB)



According to your motherboard, please see the following descriptions for the devices. Device like printer can be connected to Parallel port; mouse and modem etc. can be connected to Serial ports.

Audio Connectors



After install onboard audio driver, you may connect speaker to Line Out jack, microphone to MIC In jack. Device like CD-ROM, walkman etc. can be connected to Line-In jack.

Please note:

You are able to use 2-/4-/6-channel audio feature by S/W selection.

If you want to enable 6-channel function, you have 2 choose for hardware connection.

Method1:

Connect "Front Speaker" to "Line Out"
Connect "Rear Speaker" to "Line In"
Connect "Center and Subwoofer" to "MIC Out ".

Method2:


You can refer to page 33, and contact your nearest dealer for optional SUR_CEN cable.



If you want the detail information for 2-/4-/6-channel audio setup installation, please refer to page 82.

- 23 -


Step 4-2: Connectors Introduction

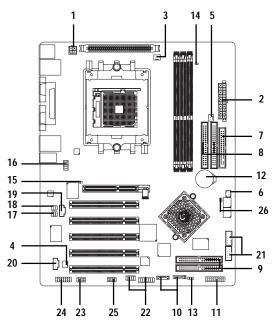

1)	ATX_12V	14)	RAM_LED
2)	ATX (Power Connector)	15)	2X_DET
3)	CPU_FAN	16)	F_AUDIO
4)	SYS_FAN	17)	SUR_CEN
5)	PWR_FAN	18)	SPDIF_IO
6)	NB_FAN	19)	CD_IN
7)	FDD	20)	AUX_IN
8)	IDE1 / IDE2	21)	F_USB1 / F_USB2
9)	IDE3 / IDE4	22)	F1_1394 / F2_1394
10)	SATA0 / SATA1	23)	IR_CIR
11)	F_PANEL	24)	GAME
12)	BAT	25)	INFO_LINK
13)	PWR_LED	26)	CLR_PWD

1) ATX_12V (+12V Power Connector)

This connector (ATX_12V) supplies the CPU operation voltage (Vcore). If this "ATX_12V connector" is not connected, system cannot boot.

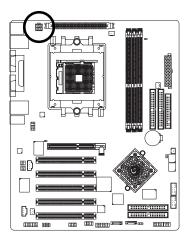





Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

2) ATX (ATX Power)

 AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

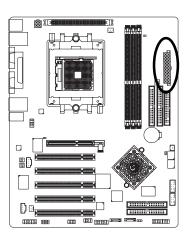




Pin No.	Definition
1	3.3V
2	3.3V
3	GND
4	VCC
5	GND
6	VCC
7	GND
8	Power Good
9	5V SB (stand by +5V)
10	+12V
11	3.3V
12	-12V
13	GND
14	PS_ON(soft on/off)
15	GND
16	GND
17	GND
18	-5V
19	VCC
20	VCC

- 25 -

3) CPU_FAN (CPU Fan Connector)

Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 mA.

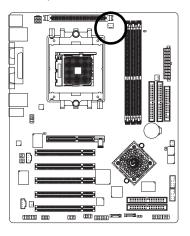




Pin No.	Definition
1	GND
2	+12V
3	Sense

4) SYS_FAN (System Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

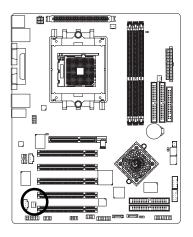




Pin No.	Definition
1	GND
2	+12V
3	Sense

5) PWR_FAN (Power Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

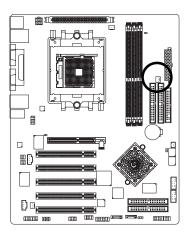


Γ	•	_
ı		1
	٠	L
	1	

Pin No.	Definition
1	GND
2	+12V
3	Sense

6) NB_FAN (Chip Fan Connector)

If you installed wrong direction, the chip fan will not work. Sometimes will damage the chip fan. (Usually black cable is GND)

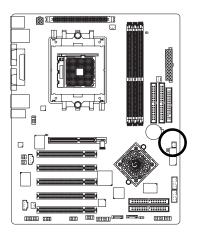



Pin No.	Definition
1	VCC
2	GND


7) FDD (Floppy Connector)

Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

2

33


The red stripe of the ribbon cable must be the same side with the Pin1.

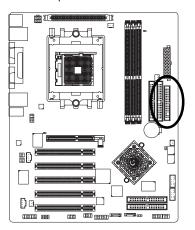


8) IDE1 / IDE2 (IDE1 / IDE2 Connector)

Important Notice:

 
Please connect first hard disk to IDE1 and connect CD-ROM to IDE2. The red stripe of the ribbon cable must be the same side with the Pin1.

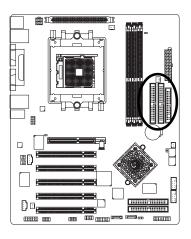




9) IDE3 / IDE4 (RAID/ATA133, Green Connector)


Important Notice: The red stripe of the ribbon cable must be the same side with the Pin1. If you wish to use IDE3 and IDE4, please use it in unity with BIOS (either RAID or ATA133). Then, install the correct driver to have proper operation. For details, please refer to the GigaRAID manual.

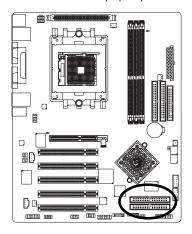

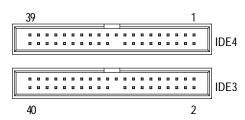

10) SATA0_SII / SATA1_SII (Serial ATA Connector)

You can connect the Serial ATA device to this connector, it provides you high speed transfer rates (150MB/sec). If you wish to use RAID function, please use it in unity with BIOS and install the correct driver to have proper operation. For details, please refer to the SATA RAID manual.

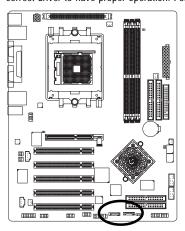



Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND





Silicon Image Sil3512 chip supports Serial ATA NOTE connectors hot plug function.

- 29 -

11) F_PANEL (2 x 10 pins Connector)


Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignment above.

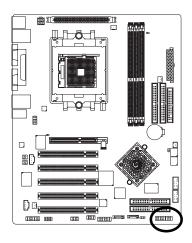


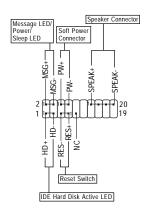

HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+)
(Blue)	Pin 2: LED cathode(-)
SPK (Speaker Connector)	Pin 1: VCC(+)
(Amber)	Pin 2- Pin 3: NC
	Pin 4: Data(-)
RES (Reset Switch)	Open: Normal Operation
(Green)	Close: Reset Hardware System
PW (Soft Power Connector)	Open: Normal Operation
(Red)	Close: Power On/Off
MSG(Message LED/ Power/ Sleep LED)	Pin 1: LED anode(+)
(Yellow)	Pin 2: LED cathode(-)
NC (Purple)	NC

 12) BATTERY

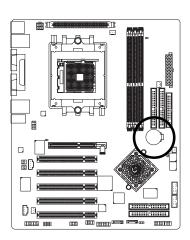



CAUTION


- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

- 1. Turn OFF the computer and unplug the power cord.
- 2. Remove the battery, wait for 30 second.
- 3. Re-install the battery.
- 4. Plug the power cord and turn ON the computer.

13) PWR_LED

PWR_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. If you use dual color LED, power LED will turn to another color.

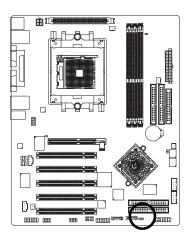


1 000

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

- 31 -


14) RAM_LED

Do not remove memory modules while RAM_LED is on. It might cause short or other unexpected damages due to the stand by voltage. Remove memory modules only when AC power cord is

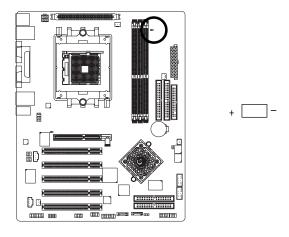

15) 2X_DET


When an AGP 2X (3.3V) card is installed the 2X_DET will light up, indicating a non-supported graphics card is inserted. Informing users that system might not boot up normally due to AGP 2X (3.3V) is not supported by the chipset.

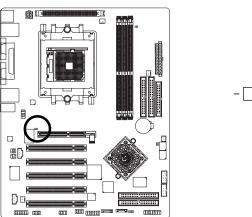

16) F_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.

In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignment on the cable is the same as the pin assignment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

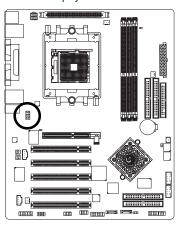




Pin No.	Definition
1	MIC
2	GND
3	REF
4	Power
5	Front Audio (R)
6	Rear Audio (R)
7	Reserved
8	No Pin
9	Front Audio (L)
10	Rear Audio (L)

17) SUR_CEN (Surround Center Connector)

Please contact your nearest dealer for optional SUR_CEN cable.

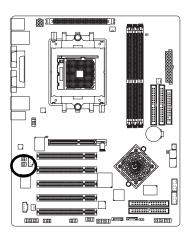




Pin No.	Definition
1	SUR OUTL
2	SUR OUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT

18) SPDIF_IO (SPDIF In / Out Connector)

The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIF_IO connector. Check the pin assignment carefully while you connect the SPDIF_IO cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF_IO cable, please contact your local dealer.

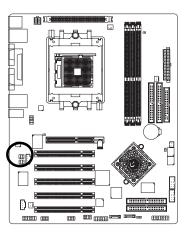


2		6
\cap	F	n
Ŀ	Ŀ	U
1		5

Pin No.	Definition
1	VCC
2	No Pin
3	SPDIF
4	SPDIFI
5	GND
6	GND

19) CD_IN (CD In Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

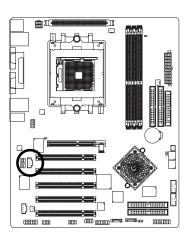




Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

20) AUX_IN (AUX In Connector)

Connect other device (such as PCI TV Tunner audio out) to the connector.

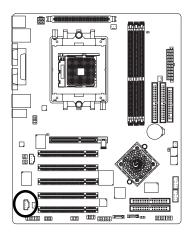





Pin No.	Definition
1	AUX-L
2	GND
3	GND
4	AUX-R

21) F_USB1/F_USB2 (Front USB Connector, Yellow)

 Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

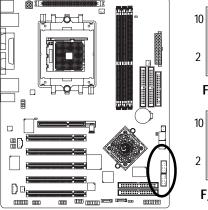




Definition
Power
Power
USB Dx-
USB Dy-
USB Dx+
USB Dy+
GND
GND
No Pin
NC

- 35 -

22) F1_1394 / F2_1394 (Front IEEE1394 Connector)

Serial interface standard set by Institute of Electrical and Electronics Engineers, which has features like high speed, highbandwidth and hot plug. Be careful with the polarity of the IEEE1394 connector. Check the pin assignment carefully while you connect the IEEE1394 cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IEEE1394 cable, please contact your local dealer.IEEE1394b can approach the maximum speed to 800Mb/S, but the speed can be achieved only when you use particular IEEE1394b cable.

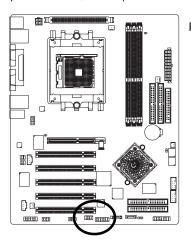

F1_	_1394 [10
	Pin No.	Definition
	1	Power
	2	Power
	3	TPA0+
	4	TPA0-
	5	GND
	6	GND

Definition		
Power		
Power		_
TPA0+		_
TPA0-		
GND		
GND		
TPB0+		
TPB0-		
Power		_
Power		_
TPA1+		
TPA1-		

GND

No Pin TPB1+

TPB1-

F	2_	_1	30	94				
2							16	
				ſ	ſ	[ſ	ı
1	_	_	_	_	_	_	ب	

Pin No.	Definition
1	TPA2+
2	TPA2-
3	GND
4	GND
5	TPB2+
6	TPB2-
7	Power
8	Power
9	No Pin
10	GND


23) IR_CIR

 
To enable the IR/CIR function on the board, you are required to purchase an option IR/CIR module. To use IR function only, please connect IR module to Pin1 to Pin5. Be careful with the polarity of the IR/CIR connector. Check the pin assignment carefully while you connect the IR/CIR cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IR/CIR cable, please contact your local dealer.

10 11 12

13 14

15

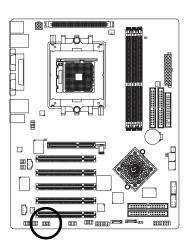



+5VSB

CIRTX NC

IR_CIR


GA-K8NNXP Motherboard

- 36 -

8

24) GAME (Game Connector)

This connector supports joystick, MIDI keyboard and other relate audio devices. Check the pin assignment while you connect the game cables. Please contact your nearest dealer for optional game cables.

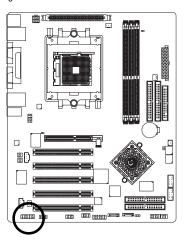




Pin No.	Definition
1	VCC
2	GRX1_R
3	GND
4	GPSA2
5	VCC
6	GPX2_R
7	GPY2_R
8	MSI_R
9	GPSA1
10	GND
11	GPY1_R
12	VCC
13	GPSB1
14	MSO_R
15	GPSB2
16	No Pin

25) INFO_LINK

This connector allows you to connect some external devices to provide you extra function. Check the pin assignment while you connect the external device cable. Please contact your nearest dealer for optional external device cable.

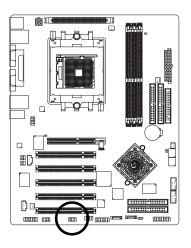




Pin No.	Definition
1	SMBCLK
2	VCC
3	SMBDATA
4	GPIO
5	GND
6	GND
7	No Pin
8	NC
9	+12V
10	+12V

26) CLR_PWD

When Jumper is set to "open" and system is restarted, the password that is set will be cleared. On the contrary when Jumper is set to "close", the current status remains.

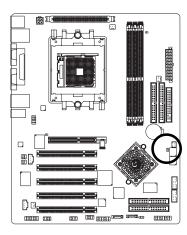

Open: Clear Password

1 Close: Normal

	- 39 -	Hardware Installation Process

-	

GA-K8NNXP Motherboard

Chapter 3 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Powering ON the computer and pressing immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

CONTROL KEYS

< ↑ >	Move to previous item
<↓>	Move to next item
< ← >	Move to the item in the left hand
< > >	Move to the item in the right hand
Enter	Select item
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and
	Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<f2></f2>	Item Help
<f3></f3>	Reserved
<f4></f4>	Reserved
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<f6></f6>	Load the file-safe default CMOS value from BIOS default table
<f7></f7>	Load the Optimized Defaults
<f8></f8>	Dual BIOS/Q-Flash function
<f9></f9>	System Information
<f10></f10>	Save all the CMOS changes, only for Main Menu

- 41 - BIOS Setup

GETTING HELP

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press < Esc>.

The Main Menu (For example: BIOS Ver.: F1c)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

► Standard CMOS Features	Load Fail-Safe Defaults			
► Advanced BIOS Features	Load Optimized Defaults			
► Integrated Peripherals	Set Supervisor Password			
► Power Management Setup	Set User Password			
▶ PnP/PCI Configurations	Save & Exit Setup			
▶ PC Health Status	Exit Without Saving			
► Frequency/Voltage Control				
ESC: Quit	↑↓→←: Select Item			
F8: Dual BIOS / Q-Flash	F10: Save & Exit Setup			
Time, Date, Hard Disk Type				

Figure 1: Main Menu



If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option widden.

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

GA-K8NNXP Motherboard

• Integrated Peripherals

This setup page includes all onboard peripherals.

• Power Management Setup

This setup page includes all the items of Green function features.

• PnP/PCI Configurations

This setup page includes all the configurations of PCI & PnP ISA resources.

• PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

• Frequency/Voltage Control

This setup page is control CPU's clock and frequency ratio.

• Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

• Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

Set Supervisor password

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

• Set User password

Change, set, or disable password. It allows you to limit access to the system.

• Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

- 43 - BIOS Setup

Standard CMOS Features

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Standard CMOS Features

Date (mm:dd:yy)	Tue, May 20 2003	Item Help
Time (hh:mm:ss)	22:31:24	Menu Level ▶
		Change the day, month,
►IDE Primary Master	[None]	year
▶IDE Primary Slave	[None]	
►IDE Secondary Master	[None]	<week></week>
▶IDE Secondary Slave	[None]	Sun. to Sat.
Drive A	[1.44M, 3.5"]	<month></month>
Drive B	[None]	Jan. to Dec.
Floppy 3 Mode Support	[Disabled]	
		<day></day>
Halt On	[All, But Keyboard]	1 to 31 (or maximum
		allowed in the month)
Base Memory	640K	
Extended Memory	95M	<year></year>
Total Memory	96M	1999 to 2098
$\uparrow \downarrow \rightarrow \leftarrow$: Move Enter:Select	+/-/PU/PD: Value F10: Save	ESC:Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

Figure 2: Standard CMOS Features

♡ Date

The date format is <week>, <month>, <day>, <year>.

Week The week, from Sun to Sat, determined by the BIOS and is display only

➤ Month The month, Jan. Through Dec.

→ Day The day, from 1 to 31 (or the maximum allowed in the month)

→ Year The year, from 1999 through 2098

○ Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

☐ IDE Primary Master, Slave / IDE Secondary Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation form your hard disk vendor or the system manufacturer.

➤ CYLS.	Number of cylinders
→ HEADS	Number of heads
▶ PRECOMP	Write precomp
▶ LANDZONE	Landing zone
→ SECTORS	Number of sectors

If a hard disk has not been installed select NONE and press <Enter>.

→ Drive A/Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

None	No floppy drive installed	
→ 360K, 5.25"	5.25 inch PC-type standard drive; 360K byte capacity.	
→ 1.2M, 5.25"	5.25 inch AT-type high-density drive; 1.2M byte capacity	
	(3.5 inch when 3 Mode is Enabled).	
→ 720K, 3.5"	3.5 inch double-sided drive; 720K byte capacity	
→ 1.44M, 3.5"	3.5 inch double-sided drive; 1.44M byte capacity.	
▶ 2.88M, 3.5"	3.5 inch double-sided drive; 2.88M byte capacity.	

- 45 - BIOS Setup

○ Floppy 3 Mode Support (for Japan Area)

Disabled Normal Floppy Drive. (Default value)
 Drive A Drive A is 3 mode Floppy Drive.
 Drive B Drive B is 3 mode Floppy Drive.
 Both Drive A & B are 3 mode Floppy Drives.

ு Halt on

The category determines whether the computer will stop if an error is detected during power up.

NO Errors The system boot will not stop for any error that may be detected and you

will be prompted.

→ All Errors Whenever the BIOS detects a non-fatal error the system boot will be stopped.

▶ All, But Keyboard The system boot will not stop for all errors except a keyboard error.

(Default value)

→ All, But Diskette The system boot will not stop for all errors except a disk error.

▶ All, But Disk/Key The system boot will not stop for all errors except keyboard and disk errors.

→ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512 K for systems with 512K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

ExtendedMemory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1MB in the CPU's memory address map.

Advanced BIOS Features

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software
Advanced BIOS Features

FSCSI/RAID Cntlr Boot Order	[Press Enter]	Item Help
First Boot Device	[Floppy]	Menu Level ▶
Second Boot Device	[HDD-0]	Select boot Sequence for
Third Boot Device	[CDROM]	onboard (or add-on cards)
Boot Up Floppy Seek	[Disabled]	SCSI,RAID,etc.
Password check	[Setup]	
Flexible AGP 8X	[Auto]	
Init Display First	[PCI slot]	
↑↓→←: Move Enter:Select	+/-/PU/PD: Value F10: Save	ESC:Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

Figure 3: Advanced BIOS Features

¬SCSI/RAID Cntlr Boot Order

This feature allows you to select the boot order Serial ATA, RAID or SCSI device.

Select boot Sequence for onboard (or add-on cards)SCSI,RAID,etc.

1.ITE RAID Controller

2.Silicon Image RAID Controller

☞ First / Second / Third Boot Device

▶ Floppy	Select your boot device priority by Floppy.
▶ LS120	Select your boot device priority by LS120.
▶ HDD 0~3	Select your boot device priority by Hard Disk 0~3.
⇒ SCSI	Select your boot device priority by SCSI.
→ CDROM	Select your boot device priority by CDROM.
→ ZIP	Select your boot device priority by ZIP.
→ USB-FDD	Select your boot device priority by USB-FDD.

- 47 - BIOS Setup

▶ USB-ZIP Select your boot device priority by USB-ZIP.
 ▶ USB-CDROM Select your boot device priority by USB-CDROM.
 ▶ USB-HDD Select your boot device priority by USB-HDD.
 ▶ LAN Select your boot device priority by LAN.
 ▶ Disabled Select your boot device priority by Disabled.

☞ Boot Up Floppy Seek

During POST, BIOS will determine the floppy disk drive installed is 40 or 80 tracks. 360K type is 40 tracks 720K, 1.2M and 1.44M are all 80 tracks.

▶ Enabled BIOS searches for floppy disk drive to determine it is 40 or 80 tracks. Note

that BIOS can not tell from 720K, 1.2M or 1.44M drive type as they are all

80tracks.

▶ Disabled BIOS will not search for the type of floppy disk drive by track number. Note

that there will not be any warning message if the drive installed is 360K.

(Default value)

☞ Password Check

➤ Setup The system will boot but will not access to Setup page if the correct

password is not entered at the prompt. (Default value)

➤ System The system will not boot and will not access to Setup page if the correct

password is not entered at the prompt.

▽FlexibleAGP8X

→ Auto

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Automatically set AGP transfer rate according to AGP compatibility and

Output

Description:

Output

Des

stability. (Default value)

▶ 8X Always set AGP transfer rate to 8X mode if the 8X mode supported by the AGP

card.

▶ 4X Set AGP transfer rate to 4X mode no matter what the AGP transfer rate the

card is.

☐ Init Display First

This feature allows you to select the first initiation of the monitor display from which card when you install an AGP card and a PCI VGA card on board.

▶ PCI slot Set initial display first to PCI slot. (Default value)

>> Onboard/AGP Set initial display first to AGP.

Integrated Peripherals

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software Integrated Peripherals

	integrated i cripilerais	
On-Chip Primary PCI IDE	[Enabled]	Item Help
On-Chip Secondary PCI IDE	[Enabled]	Menu Level ►
USB Host Controller	[V1.1+V2.0]	If a hard disk
USB Keyboard Support	[Disabled]	controller card is
USB Mouse Support	[Disabled]	used, set at Disabled
AC97 Audio	[Auto]	
On-chip LAN(nVIDIA)	[Auto]	[Enabled]
Onboard Serial ATA	[Enabled]	Enabled onboard IDE
Serial ATA Function	[RAID]	Port
Onboard Giga-RAID	[Enabled]	
Giga-RAID Function	[RAID]	[Disabled]
Onboard 1394	[Enabled]	Disabled onboard IDE
Onboard LAN Control	[Enabled]	Port
Onboard LAN Boot Rom	[Disabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
ECP Mode Use DMA	[3]	
Game Port Address	[Disabled]	
Midi Port Address	[Disabled]	
x Midi Port IRQ	10	
CIR Port Address	[Disabled]	
x CIR Port IRQ	11	
IDE DMA transfer	[Enabled]	
↑↓→←: Move Enter:Selec	t +/-/PU/PD: Value F10: Save	ESC:Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

Figure 5: Integrated Peripherals

- 49 - BIOS Setup

Ton-Chip Primary PCI IDE

➤ Enabled Enable onboard 1st channel IDE port. (Default value)

▶ Disabled Disable onboard 1st channel IDE port.

Ton-Chip Secondary PCI IDE

➤ Enabled Enable onboard 2nd channel IDE port. (Default value)

▶ Disabled Disable onboard 2nd channel IDE port.

♡ USB Host Controller

▶ Disabled Disable this function if you are not using onboard USB function.

→ V1.1+V2.0 Enable 1.1&2.0 USB controllers (Default Value)

▶ V1.1 Enable 1.1 USB controller.

☞ USB Keyboard Support

➤ Enabled Enable USB Keyboard Support.

→ Disabled Disable USB Keyboard Support. (Default value)

□ USB Mouse Support

When USB Mouse is installed, please set at enabled.

➤ Enabled Enable USB Mouse Support.

▶ Disabled Disable USB Mouse Support. (Default value)

○ AC97 Audio

➤ Auto Auto detect AC'97 audio function. (Default Value)

▶ Disabled Disable AC'97 audio function.

∽ On-chip Lan (nVIDIA)

➤ Auto Auto detect on-chip LAN function. (Default Value)

▶ Disabled Disable this function.

♡ Onboard Serial ATA

▶ Enabled Enable onboard H/W Serial ATA chip function. (Default Value)

▶ Disabled Disable this function.

▽Serial ATA Function

▶ RAID Select onboard serial ATA chip function as RAID. (Default value)

▶ BASE Select onboard serial ATA chip function as base.

☞ OnboardGiga-RAID

➤ Enabled Enable onboard GigaRAID chip function. (Default value)

▶ Disabled Disable this function.

▽Giga-RAIDFunction

▶ RAID Select onboard Giga-RAID chip function as RAID. (Default value)

▶ BASE Select onboard Giga-RAID chip function as base.

○ Onboard 1394

➤ Enabled Auto detect onboard 1394 function. (Default Value)

▶ Disabled Disable this function.

♡ Onboard LAN Control

➤ Enabled Enable Onboard LAN chip function. (Default value)

▶ Disabled Disable this function.

♡ Onboard LAN Boot Rom

This function decide whether to invoke the boot ROM of the onboard LAN chip.

➤ Enabled Enable Onboard LAN chip function.➤ Disabled Disable this function. (Default value)

♡ Onboard Serial Port 1

▶ Disabled Disable onboard Serial port 1.

▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8, using IRQ4. (Default value)

≯ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8, using IRQ3.
 ≯ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8, using IRQ4.
 ≯ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8, using IRQ3.

➤ Auto BIOS will automatically setup the port 1 address.

→ Onboard Serial Port 2

▶ Disabled Disable onboard Serial port 2.

⇒ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8, using IRQ4.

▶ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8, using IRQ3. (Default value)

→ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8, using IRQ4.
 → 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8, using IRQ3.

→ Auto BIOS will automatically setup the port 2 address.

Tonboard Parallel port

This feature allows you to select from a given set of parameters if the parallel port uses the onboard I/O controller.

▶ Disabled Disable onboard LPT port.

→ 378/IRQ7 Enable onboard LPT port and address is 378, using IRQ7. (Default Value)

▶ 278/IRQ5 Enable onboard LPT port and address is 278, using IRQ5.
 ▶ 3BC/IRQ7 Enable onboard LPT port and address is 3BC, using IRQ7.

ு Parallel Port Mode

This feature allows you to connect with an advanced printer via the port mode it supports.

▶ SPP Using Parallel port as Standard Parallel Port.(Default Value)

▶ EPP Using Parallel port as Enhanced Parallel Port.▶ ECP Using Parallel port as Extended Capabilities Port.

▶ ECP+EPP Using Parallel port as ECP & EPP mode.

☞ ECPMode UseDMA

This feature allows you to select Direct Memory Access(DMA) channel if the ECP mode selected.

This function will available when "Parallel Port Mode" set at ECP or ECP+EPP.

→ 3 Set ECP Mode Use DMA to 3. (Default Value)

▶ 1 Set ECP Mode Use DMA to 1.

☞ Game Port Address

Disabled Disable this function.(Default Value)
 ≥ 201 Set Game Port Address to 201.
 ≥ 209 Set Game Port Address to 209.

☞ Midi Port Address

Disabled Disable this function.(Default Value)
 330 Set Midi Port Address to 330.
 300 Set Midi Port Address to 300.

[→] Midi Port IRQ

▶ 5 Set Midi Port IRQ to 5.

➤ 10 Set Midi Port IRQ to 10. (Default Value)

□ CIR Port Address

Disabled Disable this function. (Default Value)
 310 Set CIR Port Address to 310.
 320 Set CIR Port Address to 320.

☞ CIR Port IRQ

This function will available when "CIR Port Address" doesn't set at "Disabled".

→ 5 Set CIR Port IRQ to 5.

➤ 11 Set CIR Port IRQ to 11. (Default Value)

□ IDEDMA transfer

▶ Enabled Detect the IDE UDMA automatically.▶ Disabled Disable UDMA function. (Default value)

- 53 - BIOS Setup

Power Management Setup

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

Power Management Setup

	ACPI Suspend Type	[S1(POS)]	Item Help
	Soft-Off by PWR-BTTN	[Instant-off]	Menu Level ▶
	PME Event Wake Up	[Disabled]	
	Modem Ring On	[Disabled]	
	S3 Resume by USB Device	[Disabled]	
	Resume by Alarm	[Disabled]	
Х	Day of Month Alarm	0	
X	Time (hh:mm:ss) Alarm	0:0:0	
	Power On by Mouse	[Disabled]	
	Power On by Keyboard	[Disabled]	
X	KB Power ON Password	Enter	
	AC Back Function	[Soft-Off]	
		510.0	
	↑↓→←: Move Enter:Select +/-/PU/PD: Val		SC:Exit F1: General Help
	F5: Previous Values F6: Fail-Safe De	faults F	7: Optimized Defaults

Figure 6: Power Management Setup

☞ ACPI Suspend Type

➤ S1(POS) Set ACPI suspend type to S1. (Default Value)

▶ S3(STR) Set ACPI suspend type to S3.

Soff-Off by PWR-BTIN

▶ Instant-off
Press power button then Power off instantly. (Default value)

▶ Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed

less than 4 sec.

PME Event Wake Up

When set at Enabled, any PCI-PM event awakes the system from a PCI-PM controlled state.

This feature requires an ATX power supply that provides at least 1A on the 5VSB lead.

▶ Disabled Disable this function.

▶ Enabled Enable PME Event Wake up. (Default Value)

→ Modem Ring On

You can enable wake on LAN feature by the "ModemRingOn/WakeOnLAN" or "PME Event Wake up" when the M/B has "WOL" onboard connector. Only enabled the feature by "PME Event Wake up"

An incoming call via modem awakes the system from its soft-off mode.

▶ Disabled Disable Modem Ring on function.

▶ Enabled Enable Modem Ring on . (Default Value)

☞ S3 Resume by USB Device

You can resume the system from USB device.

▶ Disabled Disable this function. (Default Value)

➤ Enabled Enable this function.

rightarrange Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

▶ Disabled Disable this function. (Default Value)

➤ Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

Day of Month Alarm: Everyday, 1~31

Time (hh: mm: ss) Alarm: (0~23): (0~59): (0~59)

Power On By Mouse

➤ Disabled Disabled this function. (Default value)

▶ Double Click Double click on PS/2 mouse left button to power on the system.

Power On By Keyboard

This feature allows you to set the method for powering-on the system.

The option "Password" allows you to set up to 5 alphanumeric characters to power-on the system. The option "Keyboard 98" allows you to use the standard keyboard 98 to power on the system.

▶ Password Enter from 1 to 5 characters to set the Keyboard Power On Password.

▶ Disabled Disabled this function. (Default value)

▶ Keyboard 98 If your keyboard have "POWER Key" button, you can press the key to

power on the system.

☞ KB Power ON Password

When "Power On by Keyboard" set at Password, you can set the password here.

▶ Enter Input password (from 1 to 5 characters) and press Enter to set the Keyboard

Power On password.

☞ ACBACK Function

▶ Soft-Off When AC-power back to the system, the system will be in "Off" state.

(Default Value)

▶ Full-On▶ MemoryWhen AC-power back to the system, the system always in "On" state.▶ MemoryWhen AC-power back to the system, the system will return to the Last state

before AC-power off.

PnP/PCI Configurations

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software PnP/PCI Configurations

PCI 3 IRQ Assignment	[Auto]	Item Help
PCI 4 IRQ Assignment	[Auto]	Menu Level ▶
PCI 1/PCI 5 IRQ Assignment	[Auto]	Device(s) using this
PCI 2 IRQ Assignment	[Auto]	INT:
		Network Cntrlr
		- Bus 1 Dev 11 Func 0
↑↓→←: Move Enter:Select	+/-/PU/PD: Value F10: Save	ESC:Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

Figure 7: PnP/PCI Configurations

PCI 3 IRQ Assignment

➤ Auto Auto assign IRQ to PCI 3. (Default value)
 ➤ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

→ PCI 4 IRQ Assignment

➤ Auto Auto assign IRQ to PCI 4. (Default value)
 ➤ 3,4,5,7,9,10,11,12,14,15 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 4.

PCI 1/PCI 5 IRQ Assignment

➤ Auto Auto assign IRQ to PCI 1/PCI 5. (Default value)
 ➤ 3,4,5,7,9,10,11,12,14,15
 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1/PCI 5.

PCI 2 IRQ Assignment

→ Auto Auto assign IRQ to PCI 2. (Default value)
 → 3,4,5,7,9,10,11,12,14,15 to PCI 2.

- 57 - BIOS Setup

PC Health Status

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

PC Health Status

Vcore		1.566V		Item Help
DDR25V		2.800V		Menu Level ►
+3.3V		3.232V		
+12V		11.668V		
Current CPU temperature		25°C		
Current CPU FAN Speed		3125 RPM		
Current POWER FAN Speed		0 RPM		
Current SYSTEM FAN Speed		0 RPM		
CPU Warnng Temperature		[Disabled]		
CPU FAN Fail Warning		[Disabled]		
POWER FAN Fail Warning		[Disabled]		
SYSTEM FAN Fail Warning		[Disabled]		
↑↓→←: Move Enter:Select	+/-/PU/PD: Value	F10: Save	ESC:Exi	t F1: General Help
F5: Previous Values	F6: Fail-Safe De	faults	F7: 0	ptimized Defaults

Figure 8: PC Health Status

\bigcirc Current Voltage (V) Vcore / DDR25V / +3.3V / +12V

▶ Detect system's voltage status automatically.

☞ Current CPU Temperature

▶ Detect CPU temperature automatically.

☐ Current CPU/SYSTEM/POWER FAN Speed (RPM)

▶ Detect CPU/SYSTEM/POWER Fan speed status automatically.

GA-K8NNXP Motherboard

☞ CPU Warning Temperature

Alarm When current temperature over than the selected temperature.

→ 60°C / 140°F
 → 70°C / 158°F
 → 80°C / 176°F
 → 80°C / 176°F
 → 90°C / 194°F
 Monitor CPU Temp. at 80°C / 176°F.
 → 90°C / 194°F
 Monitor CPU Temp. at 90°C / 194°F.

➤ Disabled Don't monitor current temperature. (Default value)

☞ CPU FAN Fail Warning

➤ Disabled Fan Warning Function Disable. (Default value)

➤ Enabled Fan Warning Function Enable.

☞ POWER FAN Fail Warning

➤ Disabled Fan Warning Function Disable. (Default value)

➤ Enabled Fan Warning Function Enable.

☞ System FAN Fail Warning

➤ Disabled Fan Warning Function Disable. (Default value)

➤ Enabled Fan Warning Function Enable.

Frequency/Voltage Control

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software Frequency/Voltage Control

	. , ,	
CPU OverClock in MHz	[200]	Item Help
AGP OverClock in MHz	[66]	Menu Level ▶
Auto Detect DIMM/PCI CIk	[Enabled]	
CPU Voltage Control	[Normal]	
Normal CPU Vcore	1.550V	
VDDQ Voltage Control	[Normal]	
Vcc12-HT Voltage Control	[Normal]	
DDR Voltage Control	[Normal]	
↑↓→←: Move Enter:Select	t +/-/PU/PD: Value F10: Save	ESC:Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

Figure 9: Frequency/Voltage Control

☞ CPU OverClock in MHz

Increase CPU frequency may get stable for Over_Clock. But it may damage to CPU when enable this feature.

- **→** 200~250 Increase CPU frequency as user selected.
- **6**[™] Incorrect using it may cause your system to fail. For power End-User use only!

☐ AGP OverClock in MHz

Increase AGP frequency may get stable for Over_Clock. But it may damage to AGP when enable this feature.

- ₩ 66~100 Increase AGP frequency as user selected.
- **★** Incorrect using it may cause your system to fail. For power End-User use only!

GA-K8NNXP Motherboard

☐ Auto Detect DIMM/PCI clk

▶ Enabled Detect the DIMM/PCI clock automatically. (Default value)

▶ Disabled Disable this function.

☞ CPU Voltage Control

Normal Set CPU Voltage Control to Normal. (Default value)
 Supports adjustable CPU Vcore from 0.800V to 1.625V by 0.025V step.

★Incorrect using it may cause your system to fail. For power End-User use only!

☞ Normal CPU Vcore

>> Display your CPU Vcore Voltage.

♡ VDDQ Voltage Control

▶ Normal Set VDDQ Voltage Control to Normal. (Default value)

→ +0.1V Set VDDQ Voltage Control to +0.1V.
 → +0.2V Set VDDQ Voltage Control to +0.2V.
 → +0.3V Set VDDQ Voltage Control to +0.3V.

☞ Vcc12-HT Voltage Control

▶ Normal Set Vcc12-HT Voltage Control to Normal. (Default value)

→ +0.1V Set Vcc12-HT Voltage Control to +0.1V.
 → +0.2V Set Vcc12-HT Voltage Control to +0.2V.
 → +0.3V Set Vcc12-HT Voltage Control to +0.3V.

☞ DDR Voltage Control

▶ Normal Set DDR Voltage Control to Normal. (Default value)

→ +0.1V Set DDR Voltage Control to +0.1V.
 → +0.2V Set DDR Voltage Control to +0.2V.
 → +0.3V Set DDR Voltage Control to +0.3V.

♠™ Incorrect using it may cause your system to fail. For power End-User use only!

Load Fail-Safe Defaults

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

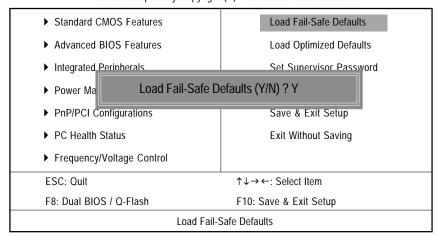


Figure 10: Load Fail-Safe Defaults

Load Fail-Safe Defaults

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

Load Optimized Defaults

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

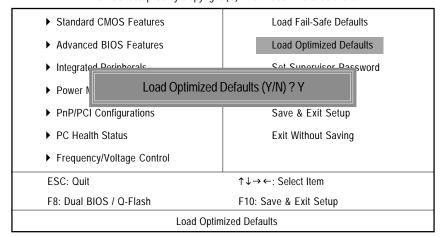


Figure 11: Load Optimized Defaults

Load Optimized Defaults

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

- 63 - BIOS Setup

Set Supervisor/User Password

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

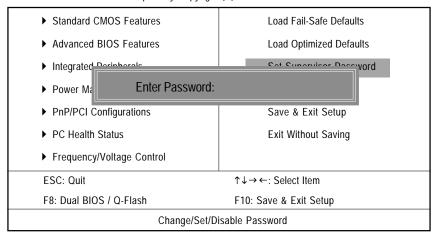


Figure 12: Password Setting

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

GA-K8NNXP Motherboard

Save & Exit Setup

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

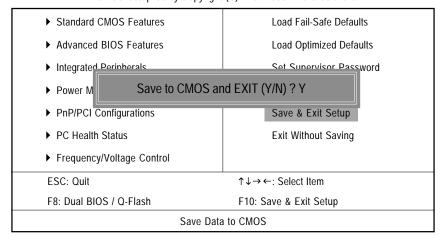


Figure 13: Save & Exit Setup

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

Exit Without Saving

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

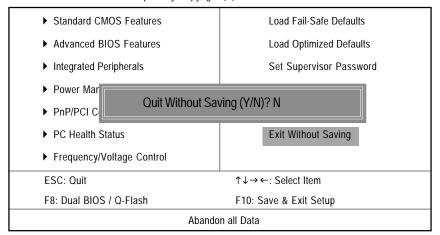


Figure 14: Exit Without Saving

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

- 67 -	BIOS Setup

67

- 68 -

GA-K8NNXP Motherboard

Chapter 4 Technical Reference

@BIOS™ Introduction

Gigabyte announces @BIOS Windows BIOS Live Update Utility



Have you ever updated BIOS by yourself? Or like many other people, you just know what BIOS is, but always hesitate to update it? Because you think updating newest BIOS is unnecessary and actually you don't know how to update it.

Maybe not like others, you are very experienced in BIOS updating and spend quite a lot of time to do it. But of course you don't like to do it too much. First, download different BIOS from website and then switch the operating system to DOS mode. Secondly, use different flash utility to update BIOS. The above process is not a interesting job. Besides, always be carefully to store the BIOS source code correctly in your disks as if you update the wrong BIOS, it will be a nightmare.

Certainly, you wonder why motherboard vendors could not just do something right to save your time and effort and save you from the lousy BIOS updating work? Here it comes! Now Gigabyte announces @BIOS -- the first Windows BIOS live update utility. This is a smart BIOS update software. It could help you to download the BIOS from internetand update it. Not like the other BIOS update software, it's a Windows utility. With the help of "@BIOS", BIOS updating is no more than a click.

Besides, no matter which mainboard you are using, if it's a Gigabyte's product*, @BIOS help you to maintain the BIOS. This utility could detect your correct mainboard model and help you to choose the BIOS accordingly. It then downloads the BIOS from the nearest Gigabyte ftp site automatically. There are several different choices; you could use "Internet Update" to download and update your BIOS directly. Or you may want to keep a backup for your current BIOS, just choose "Save Current BIOS" to save it first. You make a wise choice to use Gigabyte, and @BIOS update your BIOS smartly. You are now worry free from updating wrong BIOS, and capable to maintain and manage your BIOS easily. Again, Gigabyte's innovative product erects a milestone in motherboard industries.

For such a wonderful software, how much it costs? Impossible! It's free! Now, if you buy a Gigabyte's motherboard, you could find this amazing software in the attached driver CD. But please remember, connected to internet at first, then you could have a internet BIOS update from your Gigabyte @BIOS.

- 69 -

Technical Reference

Easy Tune™ 4 Introduction Gigabyte announces EasyTune™ 4

Windows based Overclocking utility

EasyTune 4 carries on the heritage so as to pave the way for future generations.



Overclock" might be one of the most common issues in computer field. But have many users ever tried it? The answer is probably "no". Because "Overclock" is thought to be very difficult and includes a lot of technical know-how, sometimes "Overclock" is even considered as special skills found only in some enthusiasts. But as to the experts in "Overclock", what's the truth? They may spend quite a lot of time and money to study, try

and use many different hardware or BIOS tools to do "Overclock". And even with these technologies, they still learn that it's quite a risk because the safety and stability of an "Overclock" system is unknown. Now everything is different because of a Windows based overclocking utility "EasyTune 4" -- announced by Gigabyte. This windows based utility has totally changed the gaming rule of "Overclock". This is the first windows based overclocking utility is suitable for both normal and power users. Users can choose either "Easy Mode" or "Advanced Mode" for overclocking at their convenience. For users who choose "Easy Mode", they just need to click "Auto Optimize" to have autoed and immediate CPU overclocking. This software will then overdrive CPU speed automatically with the result being shown in the control panel. If users prefer "Overclock" by them, there is also another choice. Click "Advanced Mode" to enjoy "sport drive" class Overclocking user interface. "Advanced Mode", allows users to change the system bus / AGP / Memory working frequency in small increments to get ultimate system performance. It operates in coordination with Gigabyte motherboards. Besides, it is different from other traditional over-clocking methods, EasyTune 4 doesn't require users to change neither BIOS nor hardware switch/ jumper setting; on the other hand, they can do "Overclock" at easy step. Therefore, this is a safer way for "Overclock" as nothing is changed on software or hardware. If user runs EasyTune 4 over system's limitation, the biggest lost is only to restart the computer again and the side effect is then well controlled. Moreover, if one well-performed system speed has been tested in EasyTune 4, user can "Save" this setting and "Load" it in next time. Obviously, Gigabyte EasyTune 4 has already turned the "Overclock" technology toward to a newer generation. This wonderful software is now free bundled in Gigabyte motherboard attached in driver CD. Users may make a test drive of "EasyTune 4" to find out more amazing features by themselves.

*Some Gigabyte products are not fully supported by EasyTune 4. Please find the products supported list

in the web site.

*Any "Overclocking action" is at user's risk, Gigabyte Technology will not be responsible for any damage or instability to your processor, motherboard, or any other components.

GA-K8NNXP Motherboard

70

K8DPS (Dual Power System) Introduction



K8DPS - A new innovation technology from Gigabyte Technology in which gives you a total of 6-phase power circuit design. Providing 2 extra phase power circuits that motherboard design guideline recommended. In a K8DPS (Dual Power


System)

designed motherboard, an additional 3-phase power circuit K8DPS daughter card is added on the motherboard. Providing a more durable and stable power circuit to sustain a larger electric current up to 150A. K8DPS (Dual Power System) specially design for the future coming processor, which demands a higher working frequency and a more stable and durable power circuit.

Working mode in a K8 Dual Power System:

Parallel Mode:

Both K8DPS and onboard power circuit working simultaneously, providing a total of 6-phase power circuit. If any power circuit fails, the remaining power circuit will keep working as main power circuit.

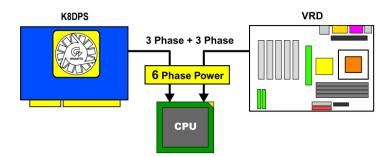

- 71 - Technical Reference

Flash BIOS Method Introduction

Method 1: Dual BIOS/Q-Flash


A. What is Dual BIOS Technology?

Dual BIOS means that there are two system BIOS (ROM) on the motherboard, one is the Main BIOS and the other is Backup BIOS. Under the normal circumstances, the system works on the Main BIOS. If the Main BIOS is corrupted or damaged, the Backup BIOS can take over while the system is powered on. This means that your PC will still be able to run stably as if nothing has happened in your BIOS.

B. How to use Dual BIOS and Q-Flash Utility?

1.) After power on the computer, pressing immediately during POST (Power On Self Test) it will allow you to enter Award BIOS CMOS SETUP, then press <F8> to enter Flash utility.

CMOS Setup Utility-Copyright (C) 1984-2003 Award Software

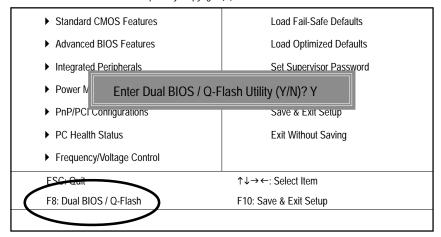

2.) Award Dual BIOS Flash ROM Programming Utility

Dual BIOS Utility V1.30				
Boot From	Main Bios			
Main ROM Type/Size	SST 49LF003A	512K		
Backup ROM Type/Size	SST 49LF003A	512K		
Wide Range Protection	Disable			
Boot From	Main Bios			
Auto Recovery	Enable			
Halt On Error	Disable			
Keep DMI Data	Enable			
Copy Main ROM Data to Backup				
Load Default Settings				
Save Settings to CMOS				
Q-Flash Utility				
Update Main BIOS from Floppy				
Update Backup BIOS from Floppy				
Save Main BIOS to Floppy				
Save Backup BIOS to Floppy				
PgDn/PgUp: Modify ↑↓: Move	ESC: Reset	F10: Power Off		

3.) Dual BIOS Item explanation:

• Wide Range Protection: Disable(Default), Enable

Status 1:

If any failure (ex. Update ESCD failure, checksum error or reset...) occurs in the Main BIOS, just before the Operating System is loaded and after the power is on, and that the Wide Range Protection is set to "Enable", the PC will boot from Backup BIOS automatically.

Status 2:

If the ROM BIOS on peripherals cards(ex. SCSI Cards, LAN Cards,...) emits signals torequest restart of the system after the user make any alteration on it, the boot up BIOS will not be changed to the Backup BIOS.

Boot From : Main BIOS(Default), Backup BIOS

Status 1:

The user can set to boot from main BIOS or Backup BIOS.

Status 2:

If one of the main BIOS or the Backup BIOS fails, this item "Boot From: Main BIOS(Default)" will become gray and will not be changed by user.

- 73 - Technical Reference

· Auto Recovery : Enable(Default), Disable

When one of the Main BIOS or Backup BIOS occurs checksum failure, the working BIOS will automatically recover the BIOS of checksum failure.

(In the Power Management Setup of the BIOS Setting, if ACPI Suspend Type is set to Suspend to RAM, the Auto Recovery will be set to Enable automatically.)

(If you want to enter the BIOS setting, please press"Del" key when the boot screen appears.)

· Halt On Error : Disable(Default), Enable

If the BIOS occurs a checksum error or the Main BIOS occurs a WIDE RANGE PROTECTION error and Halt On Error set to Enable, the PC will show messages on the boot screen, and the system will pause and wait for the user's instruction.

If Auto Recovery : Disable, it will show <or the other key to continue.>

If Auto Recovery : Enable, it will show <or the other key to Auto Recover.>

· Keep DMI Data: Enable(Default), Disable

Enable: The DMI data won't be replaced by flashing new BIOS. (recommend)

Disable: The DMI data will be replaced by flashing new BIOS.

· Copy Main ROM Data to Backup

(If you boot from Backup ROM, this item will change to "Copy Backup ROM Data to Main") Auto recovery message:

BIOS Recovery: Main to Backup

The means that the Main BIOS works normally and could automatically recover the Backup BIOS.

BIOS Recovery: Backup to Main

The means that the Backup BIOS works normally and could automatically recover the Main BIOS. (This auto recovery utility is set by system automatically and can't be changed by user.)

Load Default Settings

Load dual BIOS default value.

· Save Settings to CMOS

Save revised setting.

C. What is Q-Flash Utility?

Q-Flash utility is a pre-O.S. BIOS flash utility enables users to update its BIOS within BIOS mode, no more fooling around any OS.


D. How to use Q-Flash?

Update Main BIOS from Floppy / Update Backup BIOS from Floppy

In the A: drive, insert the "BIOS" diskette, then Press Enter to Run.

→ XXXX.XX	1 File(s) found	256K
Total Size: 1.39M	Free Size: 1.14M	
F5: Refresh	DEL: Delete	ESC: Return Main
Where XXXX.XX is name o	f the BIOS file.	

 Press Enter to Run.



Press Enter to Run.

!! COPY BIOS Completed -Pass !!


Please press any key to continue

Congratulation! You have completed the flashed and now can restart system.

- 75 - Technical Reference

Save Main BIOS to Floppy / Save Backup BIOS to Floppy

✓ In the A:drive, insert the floppy disk, then Press Enter to Run.

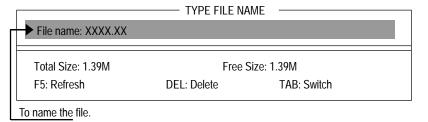

Congratulate you have accomplished the saving.

CONTROLKEYS

Make changes
Move to previous item
Move to next item
Run
Reset
Power Off

76



DualBIOS™ Technology FAQ

GIGABYTE Technology is pleased to introduce DualBIOS technology, a hot spare for your system BIOS. This newest "Value-added" feature, in a long series of innovations from GIGABYTE, is available on this motherboard. Future GIGABYTE motherboards will also incorporate this innovation.

What's DualBIOS™?

On GIGABYTE motherboards with DualBIOS there are physically two BIOS chips. For simplicity we'll call one your "Main BIOS" and the other we'll call your "Backup BIOS" (your "hot spare"). If your Main BIOS fails, the Backup BIOS almost automatically takes over on your next system boot. Almost automatically and with virtually zero down time! Whether the problem is a failure in flashing your BIOS or a virus or a catastrophic failure of the Main BIOS chip, the result is the same - the Backup BIOS backs you up, almost automatically.

I. Q: What is DualBIOS™ technology?

Answer:

DualBIOS technology is a patented technology from Giga-Byte Technology. The concept of this technology is based on the redundancy and fault tolerance theory. DualBIOS™ technology simply means there are two system BIOSes (ROM) integrated onto the motherboard. One is a main BIOS, and the other is a backup BIOS. The mainboard will operate normally with the main BIOS, however, if the main BIOS is corrupt or damaged for various reasons, the backup BIOS will be automatically used when the system powered-On. Your PC will operate as before the main BIOS was damaged, and is completely transparent to the user.

- 77 - Technical Reference

II. Q: Why does anyone need a motherboard with DualBIOS™ technology? Answer:

In today's systems there are more and more BIOS failures. The most common reasons are virus attacks, BIOS upgrade failures, and/or deterioration of the BIOS (ROM) chip itself.

- 1. New computer viruses are being found that attack and destroy the system BIOS. They may corrupt your BIOS code, causing your PC to be unstable or even not boot normally.
- BIOS data will be corrupted if a power loss/surge occurs, or if a user resets the system, or if the power button is pressed during the process of performing a system BIOS upgrade.
- 3. If a user mistakenly updates their mainboard with the incorrect BIOS file, then the system may not be able to boot correctly. This may cause the PC system hang in operation or during boot.
- 4. A flash ROM's life cycle is limited according to electronic characteristics. The modern PC utilizes the Plug and Play BIOS, and is updated regularly. If a user changes peripherals often, there is a slight chance of damage to the flash ROM.

With Giga-Byte Technology's patented DualBIOS™ technology you can reduce the possibility of hangs during system boot up, and/or loss BIOS data due to above reasons.

This new technology will eliminate valuable system down time and costly repair bills cause by BIOS failures.

III. Q: How does DualBIOS™ technology work?

Answer:

This new technology will eliminate valuable system down time and costly repair bills cause by RIOS failures

- DualBIOS[™] technology provides a wide range of protection during the boot up procedure. It protects your BIOS during system POST, ESCD update, and even all the way to PNP detection/assignment.
- 2. DualBIOS™ provides automatic recovery for the BIOS. When the first BIOS used during boot up does not complete or if a BIOS checksum error occurs, boot-up is still possible. In the DualBIOS™ utility, the "Auto Recovery" option will guarantee that if either the main BIOS or backup BIOS is corrupted, the DualBIOS™ technology will use the good BIOS and correct the wrong BIOS automatically.
- 3. DualBIOS[™] provides manual recovery for the BIOS. DualBIOS[™] technology contains a built-in flash utility, which can flash your system BIOS from backup to main and/or visa versa. There is no need for an OS-dependent flash utility program.
- 4. DualBIOS™ contains a one-way flash utility. The built-in one-way flash utility will ensure that the corrupt BIOS is not mistaken as the good BIOS during recovery and that the correct BIOS (main vs. backup) will be flashed. This will prevent the good BIOS from being flashed.

IV. Q: Who Needs DualBIOS™ technology?

Answer:

This new technology will eliminate valuable system down time and costly repair bills cause by BIOS failures.


- 1. Every user should have DualBIOS™ technology due to the advancement of computer viruses. Everyday, there are new BIOS-type viruses discovered that will destroy your system BIOS. Most commercial products on the market do not have solutions to guard against this type of virus intrusion. The DualBIOS™ technology will provide a state-of-the-art solution to protect your PC:
 - Case I.) Vicious computer viruses may wipe out your entire system BIOS. With a conventional single system BIOS PC, the PC will not be functional until it is sent for repairs.
 - Case II.) If the "Auto Recovery" option is enabled in the DualBIOS™ utility, and if a virus corrupts your system BIOS, the backup BIOS will automatically reboot the system and correct the main BIOS.
 - Case III.) Auser may override booting from the main system BIOS. The DualBIOS™ utility may be entered to manually change the boot sequence to boot from the backup BIOS.
- 2. During or after a BIOS upgrade, if DualBIOS™ detects that the main BIOS is corrupt, the backup BIOS will take over the boot-up process automatically. Moreover, it will verify the main and backup BIOS checksums when booting-up. DualBIOS™ technology examines the checksum of the main and backup BIOS while the system is powered on to guarantee your BIOS operates properly.
- 3. Power Users will have the advantage of having two BIOS versions on their mainboard. The benefit is being able to select either version BIOS to suit the performance system needs.
- 4. Flexibility for high-end desktop PCs and workstation/servers. In the DualBIOS™ utility, the option can be set, "Halt On When BIOS Defects" to be enabled to halt your system with awarning message that the main BIOS has been corrupted. Most workstation/servers require constant operation to guarantee services have not been interrupted. In this situation, the "Halt On When BIOS Defects" message may be disabled to avoid system pauses during normal booting. Another advantage you gain from Giga-Byte's DualBIOS™ technology is the ability to upgrade from dual 2 Mbit BIOS to dual 4 Mbit BIOS in the future if extra BIOS storage is need.


- 79 - Technical Reference

Method 2 : @BIOS™ Utility

If you don't have DOS boot disk, we recommend that you used Gigabyte @BIOS™ program to flash BIOS.



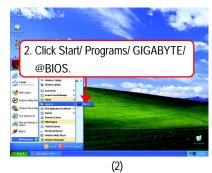

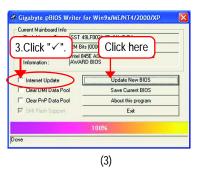



Methods and steps:

- I. Update BIOS through Internet
- a. Click "Internet Update" icon
- b. Click "Update New BIOS" icon
- c. Select @BIOS™ sever
- d. Select the exact model name on your motherboard
- e. System will automatically download and update the BIOS.

II. Update BIOS NOT through Internet:

- a. Do not click "Internet Update" icon
- b. Click "Update New BIOS"
- c. Please select "All Files" in dialog box while opening the old file.
- d. Please search for BIOS unzip file, downloading from internet or any other methods. (such as: K8NNXP.F1).
- e. Complete update process following the instruction.

III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

Note:

- a. In method I, if it shows two or more motherboard's model names to be selected, please
 make sure your motherboard's model name again. Selecting wrong model name will
 cause the system unbooted.
- b. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- c. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- d. Please note that any interruption during updating will cause system unbooted.

- 81 - Technical Reference

2-/4-/6-Channel Audio Function Introuction

The installation of windows 98SE/2K/ME/XP is very simple. Please follow next step to install the function!

Stereo Speakers Connection and Settings:

We recommend that you use the speaker with amplifier to acquire the best sound effect if the stereo output is applied.

STEP 1:

Connect the stereo speakers or earphone to "Line Out".



STEP 2:

After installation of the audio driver, you'll find an

icon on the taskbar's status area. Click the audio icon "Sound Effect" from the windows tray at the bot-

tom of the screen.






STEP 3:

Select "Speaker Configuration", and choose the "2 channel for stereo speakers out put".

> 2-channel mode for stereo speaker output

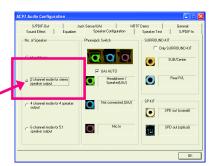

4 Channel Analog Audio Output Mode

 
STEP 1:

Connect the front channels to "Line Out", the rear channels to "Line In".



STEP 2:

After installation of the audio driver, you'll find an








STEP 3:


Select "Speaker Configuration", and choose the "4 channel for 4 speakers out put".

Disable "Only SURROUND-KIT", and press "OK".

4-channel mode for 4 speaker output

When the "Environment settings" is "None", the sound would be performed as stereo mode (2 channels output). Please select the other settings for 4 channels output.

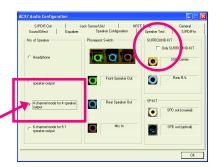

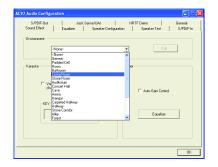

- 83 -


Technical Reference

Basic 6 Channel Analog Audio Output Mode

Use the back audio panel to connect the audio output without any additional module.

STEP 1:

Connect the front channels to "Line Out", the rear channels to "Line In", and the Center/Subwoofer channels to "MIC In".

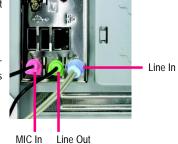

STEP 2:

After installation of the audio driver, you'll find an

 
icon on the taskbar's status area. Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.





STEP 3:

Select "Speaker Configuration", and choose the "6 channel for 5.1 speakers out put".



Advanced 6 Channel Analog Audio Output Mode (using Audio Combo Kit, Optional Device):

(Audio Combo Kit provides SPDIF output port : optical & coaxis and SURROUND-KIT : Rear R/L & CEN / Subwoofer)

SURROUND-KIT access analog output to rear channels and Center/Subwoofer channels. It is the best solution if you need 6 channel output, Line In and MIC at the same time. "SURROUND-KIT" is included in the GIGABYTE unique "Audio Combo Kit" as picture.




STEP 1:

Insert the "SURROUND-KIT" in the back of the case , and fix it with the screw.



STEP 2:

Connect the "SURROUND-KIT" to SUR_CEN on the $\mbox{\it M/B}.$

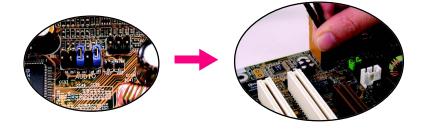

- 85 -

Technical Reference

STEP 3:

Connect the front channels to back audio panel's


"Line Out", the rear channels to SURROUND-KIT's REAR R/L, and the Center/Subwoofer channels to SURROUND-KIT's SUB CENTER.



STEP 4:

Click the audio icon "Sound Effect" from the windows tray at the bottom of the screen.



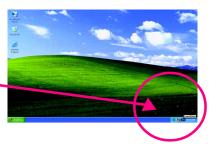


STEP 5:

Select "Speaker Configuration", and choose the "6 channel for 5.1 speakers out put".


Enable "Only SURROUND-KIT" and press "OK".



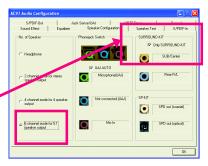

Basic & Advanced 6 Channel Analog Audio Output ModeNotes:

When the "Environment settings" is "None", the sound would be performed as stereo mode(2 channels output). Please select the other settings for 6 channels output.

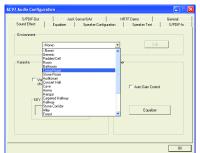

SPDIF Output Device (Optional Device)


A "SPDIF output" device is available on the motherboard. Cable with rear bracket is provided and could link to the "SPDIF output" connector (As picture.) For the further linkage to decoder, rear bracket provides coaxial cable and Fiber connecting port.



 Connect the SPDIF output device to the rear bracket of PC, and fix it with screw.



2. Connect SPDIF device to the motherboard.

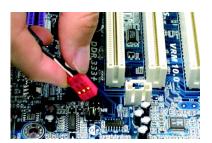

3. Connect SPDIF to the SPDIF decoder.



- 87 -

Technical Reference

Jack-Sensing Introuction



Jack-Sensing provides audio connectors error-detection function.



Install Microsoft DirectX8.1 or later version before to enable Jack-Sensing support for Windows 98/98SE/2000/ME.

Jack-Sensing includes 2 parts: AUTO and MANUAL. Following is an example for 2 channels (Windows XP):

Introduction of audio connectors

You may connect CDROM, Walkman or others audio input devices to Line In jack, speakers, earphone or others output devices to Line Out jack, and microphone to MIC In jack.



Auto-detecting:

Please connect the devices to the right jacks as above. A window will appear as right picture if you setup the devices properly.

Please note that 3D audio function will only appear when 3D audio inputs.



If you set wrong with the connectors, the warning message will come out as right picture.



Manual setting:

If the device picture shows different from what you set, please press "Manual Selection" to set.



UAJ Introuction


UAJ (Universal Audio Jack) has a very smart feature: It will switch signal automatically when user plugs his audio device to the wrong jack (Line-in/ Line-out).

That means users do not need to worry the Audio device should be plug in Line-in or Line-out jack, the device will work perfectly after UAJ is activated.



Install Microsoft DirectX8.1 or later version before to enable UAJ support for Windows 98/98SE/2000/ME.


PS. If UAJ couldn't work as expected, please disable this function by pressing button "UAJ information". And then Jack-Sense function will awake and auto-detect if the Audio device is plugged to the right jack (Line-in or Line-out).

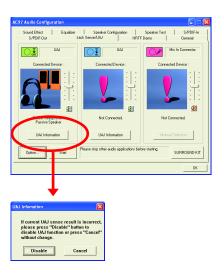

Reviving UAJ:

You can click "UAJ AUTO" to revive UAJ function.



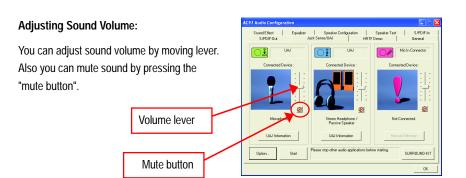

If there is only Line-in device plugged, UAJ will remind you there is no any Line-out device plugged in.



Note:

If you want to use AUX IN function, you must disable UAJ function from the Speaker Configuration item

in the AC97 Audio Configuation menu. After that, you'll have to use the Line-In volume lever in the "Volume Control" menu to adjust the volume because AUX IN and Line-In functions are controlled by the

same audio signals.

Xpress Recovery Introduction

What is Xpress Recovery?

Xpress Recovery utility is an utility for backing up and restoring O.S. partition . If the hard drive can not work properly, you can restore it to the original state.



- 1. It supports FAT16; BFAT32; BNTFS format.
- 2. It must be connected to IDE1 Master .
- 3. It's only allows you to install one O.S.
- 4. It must be used with IDE hard disk supporting HPA.
- 5. The first partition must be set as the boot partition. When the boot partition is backed up, please do not change the its size.
- 6. It is not recommend to use Xpress Recovery if you had ever used Ghost to return boot manager to NTFS format.
- NOTE
- 1. System data and hard disk's reading/writing speed will affect backing up speed.
- 2. We recommend that you install Xpress Recovery immediately after installing O.S , drivers and applications.

How to use the Xpress Recovery

There are two ways to enter the Xpress Recovery utility. (see the below)

1. Text Mode: press F9 during powering on the computer.

Press F9 during powering on the computer .




2. BMP Mode: boot from CD-ROM

Please go to "Advanced BIOS" setting menu and set boot from CD-ROM, then save and exit the BIOS menu. Later, please insert MB driver CD into your drive when "Boot from CD:" appears at the bottom of the screen, press any key to enter Xpress Recovery.



You can highlight the item by using the arrows keys on your keyboard and enter key to enter the menu.

Text Mode:

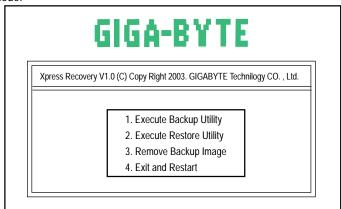

BMP Mode:



If you ever entered Xpress Recovery by booting from CD-ROM, you'll still be directed to BMP mode by pressing F9 in the bootup screen.

> - 93 -Technical Reference

1.Execute Backup Utility:

Press B to Backup your System or Esc to Exit

The Backup utility will scan the system automatically and back up it. The backed up data will be saved as an hidden image .

2. Execute Restore Utility:

This program will recover your system to factory default.

Press R to recover your system.

Press Esc to exit

Restore the backup image to the original state.

3. Remove Backup Image:

Are you sure to remove backup image? (Y/N)

Remove the backup image.

4.Exit and Restart:

Exit and restart your computer.

- 95 -	Technical Reference

- 96 -

Chapter 5 Appendix

Install Drivers



Pictures below are shown in Windows XP


Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

INSTALL CHIPSET DRIVER

This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the to install the drivers automatically.




The "Xpress Install" uses the "Click and Forget" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The will finish the installation for you automatically.

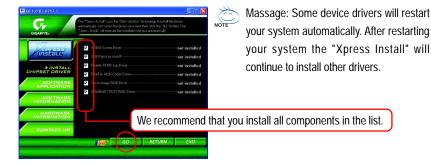

- 97 - Appendix



 

Item Description

- Nvidia System Driver nVIDIA Chipset Driver
- USB Patch for WinXP
 This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- Realtek 8110S Lan Driver / RealTek LAN Drive Realtek Giga Lan Driver
 RealTek 10/100 LAN driver for 81xx series chips
- RealTek AC97 Codec Driver Realtek Audio Driver
- Silicon Image RAID Driver
 Serial-ATA RAID driver for Silicon Image Sil3112
- GIGARAID IT8212 RAID Driver
 For GigaRAID IT8212 RAID IDE controller
- Nvidia USB 2.0 Driver Information
 USB 2.0 Driver information for XP



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

SOFTWARE APPLICATION

This page reveals the value-added software developed by Gigabyte and its worldwide partners.



- Gigabyte Windows Utilities Manager (GWUM)

 This utility can integrate the Gigabyte's applications in the system tray
- Gigabyte Management Tool (GMT)

 A useful tool which can manage the computer via the network
- EasyTune 4
- Powerful utility that integrates the overclocking and hardware monitoring functions

 DMI Viewer
- Windows based utility which is used to browse the DMI/SMBIOS information of the system Face-Wizard
- New utility for adding BIOS logo
- @BIOS
- Gigabyte windows flash BIOS utility

 Acrobat e-Book
 Useful utility from Adobe
- Acrobat Reader
 - Popular utility from Adobe for reading .PDF file format documents
- Norton Internet Security (NIS)
 Integrated utility which includes anti-virus, ads, etc.
- DirectX 9.0
 - Install Microsoft DirectX 9 to enable 3D hardware acceleration that support for operating system to achieve better 3D performence.
- Silicon Image SATA RAID Utility
 Serial-ATA RAID utility for Silicon Image Sil3112
- GigaRAID Utility
 RAID utility for GigaRAID IT8212

- 99 - Appendix

SOFTWARE INFORMATION

This page list the contects of softwares and drivers in this CD title.



HARDWARE INFORMATION

This page lists all device you have for this motherboard.



CONTACT US

Please see the last page for details.



Face-Wizard Utilities Installation

What is Face-Wizard™?


Face-Wizard[™] is a windows based utility with user-friendly interface that allows users to change the boot-up logo with picture from Gigabyte Logo Gallery on web site or other compatible picture you have.

How does it work?

Face-Wizard[™] allows user to select BIOS on board or file in hard drive, floppy disk, zip, MO or other storage devices and combine the compatible picture you prefer into BIOS. And not only this, Face-Wizard[™] also helps user to update BIOS in windows mode.

What's benefit for using Face-Wizard™?

It can personalize boot-up logo to show your unique style from others, and never again looking at the black and white boot up screen.

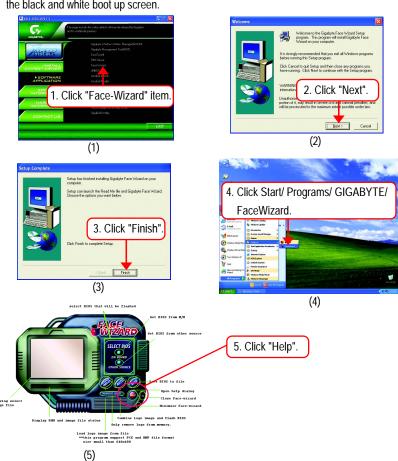

- 101 - Appendix


EasyTune 4 Utilities Installation

Powerful utility that integrates the overclocking and hardware monitoring functions





(3)

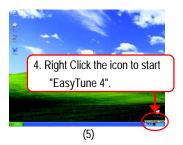







FAQ

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to http://tw.qiga-byte.com/fag/fag.htm

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why?

Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down? Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: Why cannot I use all functions in EasyTune™ 4?

Answer: The availability of the listed functions in EasyTune[™] 4 depends on the MB chipset. If the chipset doesn't support certain functions in EasyTune[™] 4, these functions will be locked automatically and you will not be able to use them.

Question 4: Why do I fail to install RAID and ATA drivers under Win 2000 and XP on boards that support RAID function after I connect the boot HDD to IDE3 or IDE4?

Answer: First of all, you need to save some files in the CD-ROM to a floppy disk before installing drivers. You also need to go through some rather different steps in the installation process. Therefore, we suggest that you refer to the installation steps in the RAID manual at our website.

(Please download it at http://tw.giga-byte.com/support/user_pdf/raid_manual.pdf)

Question 5: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

- 1. Turn off power.
- 2. Disconnect the power cord from MB.
- 3. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to make $\frac{1}{2}$

them short for one minute).

- 4. Re-insert the battery to the battery holder.
- 5. Connect power cord to MB again and turn on power.
- 6. Press Del to enter BIOS and load Fail-Safe Defaults.
- 7. Save changes and reboot the system.

Question 6: Why does system seem unstable after updating BIOS?

Answer: Please remember to load Fail-Safe Defaults (Or Load BIOS Defaults) after flashing BIOS. However, if the system instability still remains, please clear CMOS to solve the problem.

Question 7: Why do I still get a weak sound after turning up the speaker to the maximum volume?

Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

- 103 - Appendix

Question 8: How do I disable onboard VGA card in order to add an external VGA card?

Answer: Gigabyte motherboards will auto-detect the external VGA card after it is plugged in, so you don't need to change any setting manually to disable the onboard VGA.

Question 9: Why cannot I use the IDE 2?

Answer: Please refer to the user manual and check whether you have connected any cable that is not provided with the motherboard package to the USB Over Current pin in the Front USB Panel. If the cable is your own cable, please remove it from this pin and do not connect any of your own cables to it.

Question 10: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

→ AMI BIOS Beep Codes

*Computer gives 1 short beep when system boots successfully. *Except for beep code 8, these codes are always fatal.

- 1 beep Refresh failure
- 2 beeps Parity error
- 3 beeps Base 64K memory failure
- 4 beeps Timer not operational
- 5 beeps Processor error
- 6 beeps 8042 gate A20 failure
- 7 beeps Processor exception interrupt error
- 8 beeps Display memory read/write failure
- 9 beeps ROM checksum error
- 10 beeps CMOS shutdown register read/write error
- 11 beeps Cache memory bad

→ AWARD BIOS Beep Codes

1 short: System boots successfully

2 short: CMOS setting error

1 long 1 short: DRAM or M/B error

1 long 2 short: Monitor or display card error

1 long 3 short: Keyboard error

1 long 9 short: BIOS ROM error

Continuous long beeps: DRAM error

Continuous short beeps: Power error

Question 11: How to set in the BIOS in order to bootup from SATA HDDs by either RAID or ATA mode?

Answer: Please set in the BIOS as follow:

- 1. Advanced BIOS features--> SATA/RAID/SCSI boot order: "SATA"
- 2. Advanced BIOS features--> First boot device: "SCSI"
- 3. Integrated Peripherals--> Onboard H/W Serial ATA: "enable"

Then it depends on the SATA mode that you need to set "RAID" to RAID mode or "BASE" to normal ATA mode in the item named Serial ATA function.

Question 12: For the M/B which have RAID function, how to set in the BIOS in order to bootup from IDE3, 4 by either RAID or ATA mode?

Answer: Please set in the BIOS as follow:

- 1. Advanced BIOS features --> (SATA)/RAID/SCSI boot order: "SATA"
- 2. Advanced BIOS features --> First boot device: "SCSI"
- 3. Integrated Peripherals--> Onboard H/W ATA/RAID: "enable"

Then it depends on the RAID mode that you need to set "RAID" to RAID mode or "ATA" to normal ATA mode in the item named RAID controller function.

Question 13: How to set in the BIOS to bootup from the IDE/ SCSI/ RAID card?

Answer: Please set in the BIOS as follow:

- 1. Advanced BIOS features --> (SATA)/RAID/SCSI boot order: "SCSI"
- 2. Advanced BIOS features --> First boot device: "SCSI"


104

Then it depends on the mode(RAID or ATA) that you need to set in RAID/ SCSI BIOS.


Troubleshooting



If you encounter any trouble during boot up, please follow the troubleshooting procedures.

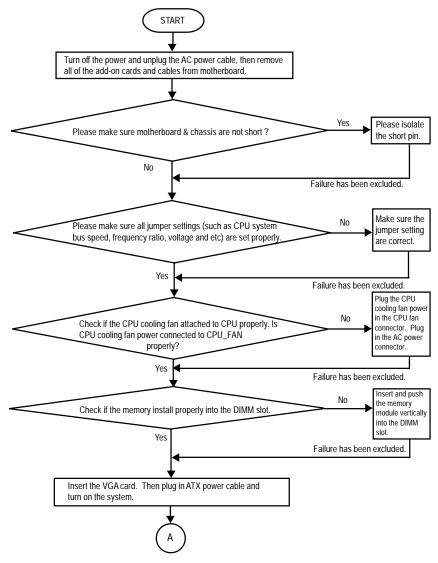

- 105 - Appendix

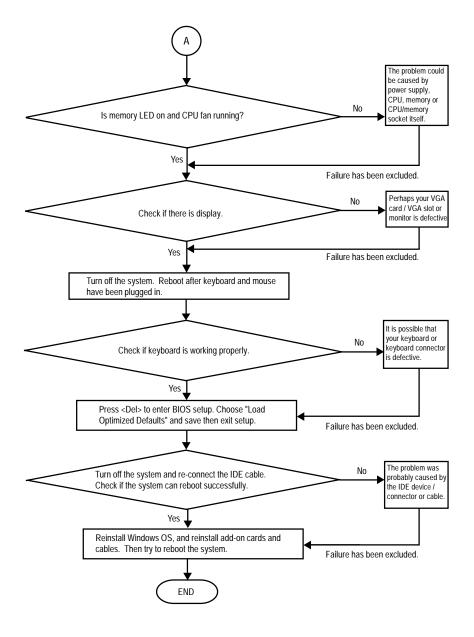

If the above procedure unable to solve your problem, please contact with your local retailer or national distributor for help. Or, you could submit your question to the service mail via Gigabyte website technical support zone (http://www.gigabyte.com.tw). The appropriate response will be provided ASAP.

<u>Technical Support/RMA Sheet</u>

Customer/Country	y:	Company:		Phone No.:	Phone No.:	
Contact Person:		E-mail Add. :				
	del name/Lot Number:		PCB revision:			
BIOS version:		O.S./A.S.:				
		1	0.			
	Mfs.	Model name	Size:	Driver/Utility:		
Configuration						
CPU						
Memory						
Brand						
Video Card						
Audio Card						
HDD						
CD-ROM /						
DVD-ROM						
Modem						
Network						
AMR / CNR						
Keyboard						
Mouse						
Power supply						
Other Device						
Problem Descript	ion:		I	I		
					_	
		- 107 -			Арре	

<u>Acronyms</u>

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Advanced Communications Riser
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
FSB	Front Side Bus
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request

to be continued.....

Acronyms	Meaning
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture
LAN	Local Area Network
I/O	Input / Output
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Instrument Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory

- 109 - Appendix

GA-K8NNXP Motherboard

- 110 -

- 111 -	Appendix

CONTACT US

Contact us via the information in this page all over the world.

Taiwan

Gigabyte Technology Co., Ltd.

Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien, Taiwan, R.O.C.

TEL: 886 (2) 8912-4888 FAX: 886 (2) 8912-4003

E-mail:

We have been constantly striving hard to provide you with faster and more efficient mail replying service.

If you have any inquiry please classify it into the following topics.

The respective department will attend to the inquiry as soon as possible. Thank you for your cooperation!

WEB Address: http://tw.giga-byte.com

USA

G.B.T. INC.

Address: 17358 Railroad St, City of Industry, CA 91748.

Germany

G.B.T. Technology Trading GmbH

WEB Address: http://us.giga-byte.com

Tel: 49-40-2533040

49-01803-428468 (Tech.)

Fax: 49-40-25492343 (Sales)

49-01803-428329 (Tech.)

E-mail:support@gigabyte.de

WEB Address: http://de.giga-byte.com

Japan

Nippon Giga-Byte Corporation

WEB Address: http://www.gigabyte.co.jp

• U.K

G.B.T. TECH. CO. LTD.

Tel: 44-1908-362700 Fax: 44-1908-362709

E-mail:support@gbt-tech.co.uk WEB Address: http://uk.giga-byte.com · The Netherlands

Giga-Byte Technology B.V.

Address: Verdunplein 8 5627 SZ, Eindhoven, The

Netherlands

Tel: +31 40 290 2088

NL Tech.Support : 0900-GIGABYTE (0900-44422983,

£á0.2/M)

BE Tech.Support: 0900-84034 (£á0.4/M)

Fax: +31 40 290 2089

E-mail:info@giga-byte.nl

Tech. Support E-mail:support@giga-byte.nl

WEB Address: http://nl.giga-byte.com

China

Shanghai Office

Tel: 86-21-64737410 Fax: 86-21-64453227

WEB Address: http://cn.giga-byte.com

GuangZhou Office
Tel: 86-20-87586273

Fax: 86-20-87544306

WEB Address: http://cn.giga-byte.com

Beijing Office

Tel: 86-10-82856054

86-10-82856064

86-10-82856094

Fax: 86-10-82856575

E-mail:bjsupport@gigabyte.com.cn

WEB Address: http://cn.giga-byte.com

Chengdu Office

Tel: 86-28-85236930

Fax: 86-28-85256822

WEB Address: http://cn.giga-byte.com