

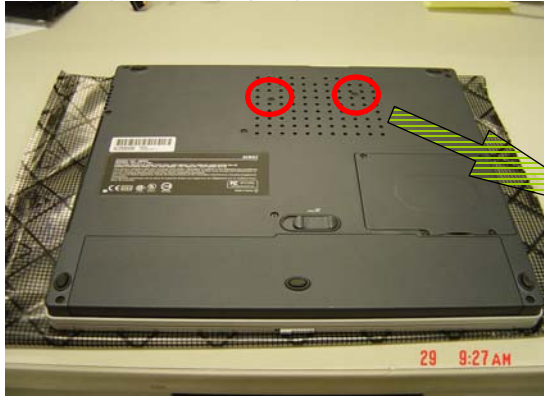


NB-1401 CPU & RAM upgrade step by step

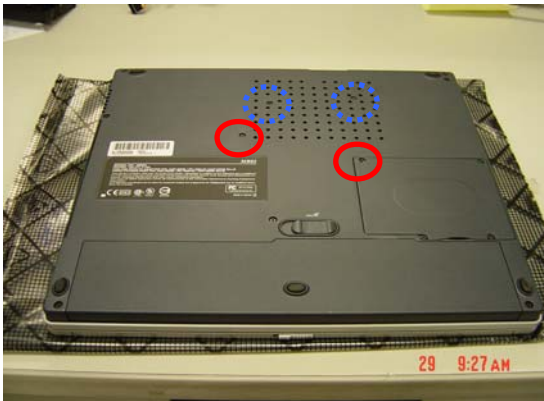

1. Remove the mylar on the bottom

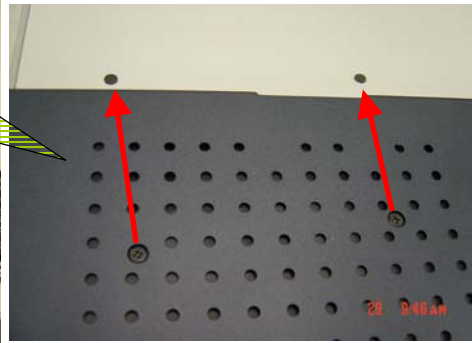

2. Loosen the 4 screws. Marked as blue circle is the longer screw, red is




3. Disassemble the top cover after loosen the screws.




4. Remove the keyboard and connector.




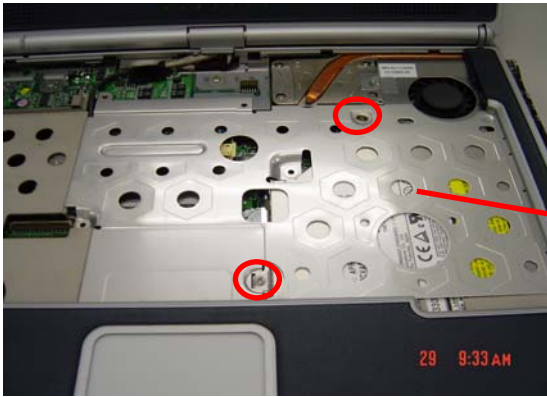

5. Loosen the 2 screws and disassemble the protective cover.

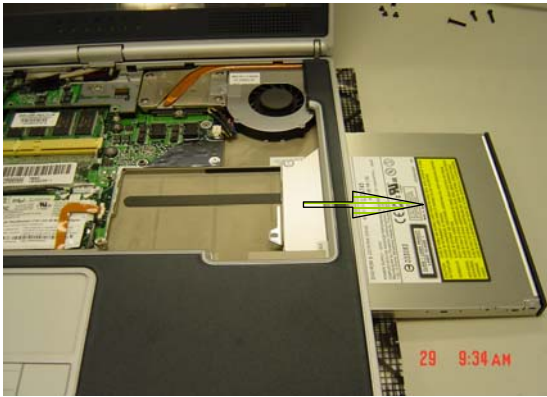

6. Push the optical drive to the left and loosen the 4 screws on CPU heat sink by sequence.

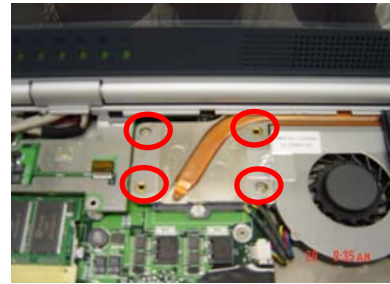


7. Turn the screw to the right to relax the CPU socket.

NB-1401 HDD upgrade step by step



1. Loosen the 4 screws on the bottom

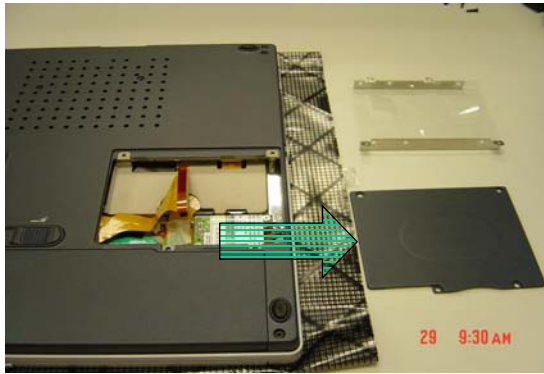

2. Remove the cover to change the HDD unit.