

GIGABYTE ODIN

Power Supply User's Manual

ATX 12V version 2.2 power supply

Products: ODIN GT / ODIN PRO

Models: GE-S800A-D1, GE-S680A-D1, GE-S550A-D1 /
GE-M800A-D1, GE-M680A-D1, GE-M550A-D1

Specifications are subject to change without notice.
All brand names and products are registered trademarks of their
respective companies

Introduction

The GIGABYTE Odin series power supply delivers outstanding compatibilities and performance for power users and hardcore gamers. It also delivers a comprehensive set of tuning utilities for performance optimization. Additionally, the all Japan-made capacitor design within the Odin series enhances overall system durability and stability.

The Odin series power supply complies with the newest ATX 12V version 2.2 specifications, and goes beyond. This includes 4 x 12V outputs that deliver powerful, safer and more reliable power to your hardware. With 80%+ efficiency, the power supply helps save more energy and money on user's electricity cost compared to typical power supplies. It also generates less heat thanks to the high efficiency of the 14cm cooling fan keeping the power supply itself cooler, silent and prolong its life. In addition, the Odin series power supply includes a variety of industrial-grade protective circuitries.

The Odin series power supply features Smart Cable Management function and all cables are in sleeved finishing with connector protectors, allowing users to connect the cables which are only in use for better internal air flow and tidier internal space.

As a member of the global community, Gigabyte provides environment friendly products and observes the European Union's Restriction of Hazardous Substances (RoHS) directive, which limits the use of lead, mercury, cadmium and other hazardous substances in electronic products. From components and material selection to production processes, making up of accessories, packaging/color boxes etc; GIGABYTE has carefully examined and designed this product to be 100% RoHS compliant.

GIGABYTE will continue to develop RoHS compliant PC components and provide valuable resources to promote and advance RoHS directive goals and objectives.

The following are not covered by the warranty:

1. Using the product incorrectly or in a manner other than the designed purpose.
2. Nonobservance of the proper operation provided.
3. Malfunction due to interference from other devices
4. Unapproved medication of the product.
5. Consequential damage to other objects due to the product's fault.
6. Malfunction arising from natural hazards E.g. earthquake, lightning, fire, and floods.
7. The product's warranty label has been removed or damaged.
8. The devices inside, including power supply, hard disk, CD-ROM drive, motherboard, ventilator, etc, are not detached from the casing prior to transportation of the computer system, resulting in damage to the casing or computer-related devices.
9. Any loss/damage caused by failure to follow the installation process within the user manual.



CAUTION

Caution! Hazardous

Do not open this power supply unit!

No serviceable components inside!

Refer Servicing to Qualified service personnel only!

No modification to this power supply unit!

Incorrect connector installation may possible burn out the motherboard and other components. Be sure to observe the instructions on installation in the manual.

Please refer to the English version for all pictures.

System Requirement

1. Windows 2000\ XP\ Vista
2. CD-Rom
3. Recommended HDD Space: 30Mb
4. Recommended RAM: 512mb RAM
5. Recommended display resolution: >1024 x 768

			
Power Supply Unit	Fixing Screws	System fan speed control and power cable (ODIN GT only)	Thermal sensor cable (ODIN GT only)
1	4	1	4
			
USB Converter (ODIN GT only)	PCI-E (Red) power cable	PCI-E (Blue) power cable (800W & 680W only)	Peripheral power with FDD connector cable
1	1	1	1
			
S-ATA power cable	Peripheral power cable	CD (ODIN GT only)	
2	1	1	

Contain Item

1. Power Supply

Power Supply Unit.....	P.06
Power Supply Cables.....	P.07
Power Supply Connectors	P.08

2. Specification


Input	P.10
Output	P.11
Remote On/Off.....	P.12
Hold-Up Time	P.12
Power Good Delay	P.12
Power Fail Delay.....	P.12
Turn-On Delay Time.....	P.12
Transient Overshoot.....	P.12
Rise Time.....	P.12
Protection.....	P.13
Environment.....	P.13
HI-POT (Input/Out Isolation).....	P.14
CE Requirements	P.14
MTBF	P.14
Dimensions.....	P.14

3. Installation Instruction

4. Power Tuner Installation Instruction (ODIN GT series only)


1. Power Supply


1-1. Power Supply Unit

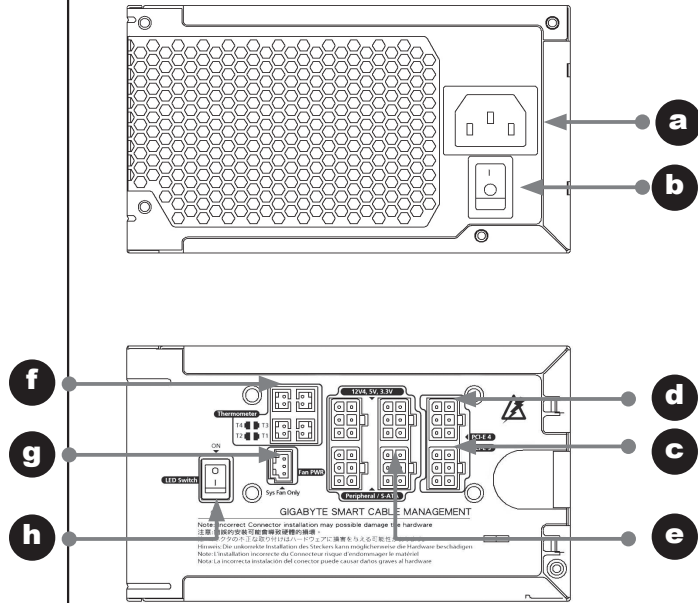

- a. AC In
- b. AC power switch
- c. PCI-E 1 cable management Red
- d. PCI-E 2 cable management Blue
- e. 12V, 5V, 3.3V peripheral power cable management
- f. Thermal sensor cable management (For Odin GT only)
- g. Fan speed control power cable management (For Odin GT only)
- h. LED light switch (For Odin Pro only)

1-2. Power Supply Cables

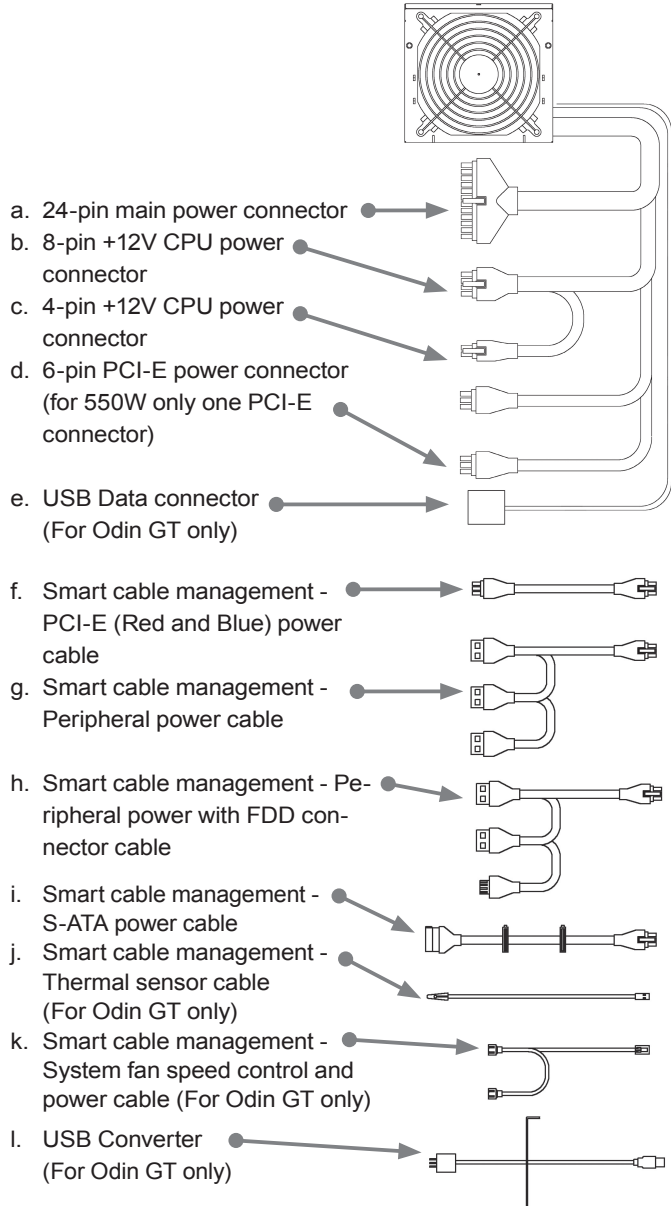

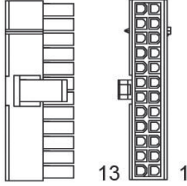



1-3. Power Supply Connectors

1-3-1. 24-PIN Main Power Connector

18AWG (Wire)	Signal	Pin	Pin	Signal	18AWG (Wire)
Orange	+3.3Vdc	13	1	+3.3Vdc	Orange
Blue	-12Vdc	14	2	+3.3Vdc	Orange
Black	COM	15	3	COM	Black
Green (22AWG)	PS-ON	16	4	+5Vdc	Red
Black	COM	17	5	COM	Black
Black	COM	18	6	+5Vdc	Red
Black	COM	19	7	COM	Black
		20	8	POK	Gray (22 AWG)
Red	+5Vdc	21	9	+5VSB	Purple
Red	+5Vdc	22	10	+12V1dc	Yellow
Red	+5Vdc	23	11	+12V1dc	Yellow
Black	COM	24	12	+3.3Vdc	Orange



1-3-2. +12 V CPU Power Connector

8 PIN 12V+

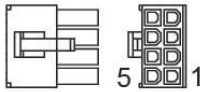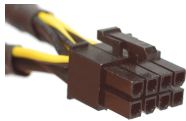



18AWG (Wire)	Signal	Pin	Pin	Signal	18AWG (Wire)
Yellow	+12V2DC	5	1	COM	Black
Yellow	+12V2DC	6	2	COM	Black
Yellow	+12V2DC	7	3	COM	Black
Yellow	+12V2DC	8	4	COM	Black

4 PIN 12V+

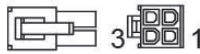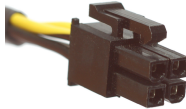

18AWG (Wire)	Signal	Pin	Pin	Signal	18AWG (Wire)
Yellow	+12V2DC	3	1	COM	Black
Yellow	+12V2DC	4	2	COM	Black

1-3-3. +12 V PCI Express Power Connector

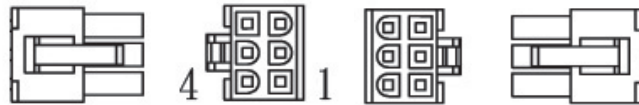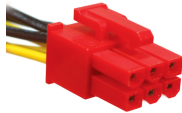

Odin GT, PRO Smart Cable Management PCI-Express connector to PSU (There are Red and Blue connectors for different 12V rails)

18AWG (Wire)	Signal	Pin	Pin	Signal	18AWG (Wire)
Black	COM	4	1	12V1DC	Yellow
Black	COM	5	2	12V1DC	Yellow
Black	COM	6	3	12V1DC	Yellow

1-3-4. Smart cable management - Peripheral power with FDD connector cable




Pin	Signal	18AWG (Wire)
1	+12V4DC	Yellow
2	COM	Black
3	COM	Black
4	+5VDC	Red




Pin	Signal	18AWG (Wire)
1	+5VDC	Red
2	COM	Black
3	COM	Black
4	+12V4DC	Yellow

1-3-6. Peripheral power with S-ATA HDD connector cable

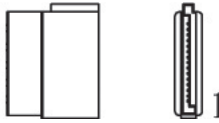

Pin	Signal	18AWG (Wire)
1	+3.3 VDC	Orange
2	COM	Black
3	+5VDC	Red
4	COM	Black
5	+12V4DC	Yellow

1-3-7. Smart cable management - Peripheral power with SATA HDD connector cable

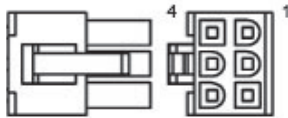

Pin	Signal	18AWG (Wire)
1	+12 VDC	Yellow
2	COM	Black
3	+5VDC	Red
4	COM	Black
5	+3.3VDC	Orange
6	NC	NC

1-3-8. USB Data Connector


For ODIN GT series power supply only, please refer to the motherboard's user manual for connecting the USB data connector to motherboard's USB port or using the USB converter to connect the rear I/O.




Pin	Signal	20AWG (Wire)
1		
2	Data -	White
3	Data +	Green
4	Ground	Black
5		



Incorrect connector installation may possible burn out the motherboard and other components. Be sure to observe the instructions on installation in the manual. Double check the pin definition color to match with motherboard's users' manual.

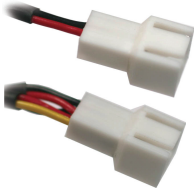


1-3-9. Fan Speed Control connectors

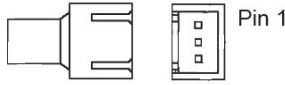

Pin	Signal	24 AWG (Wire)
1	Com	Black
2	+5VDC	Red
3	Signal	Yellow

1-3-10. Smart Cable Management - Fan Speed Control connectors

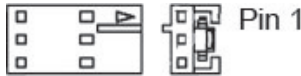

Pin	Signal	24 AWG (Wire)
1	Com	Black
2	+5VDC	Red
3	Signal	Yellow

1-3-11. Smart cable management - Thermal sensor



Smart cable management - Thermal sensor Connector

CAUTION

Don't place the Thermal sensor between CPU and Cooler; it will damage the thermal sensor and probably cause the CPU overheating, and could damage the CPU.

2. Specification

2-1 INPUT

2-1-1 VOLTAGE

Model Name	Minimum	Nominal	Maximum	Units
GE-S800A-D1	90	115~230	264	VAC rms
GE-S680A-D1	90	115~230	264	VAC rms
GE-S550A-D1	90	115~230	264	VAC rms

2-1-2 FREQUENCY

47Hz~63Hz

2-1-3 CURRENT

115Vac - 8.0A max / 230Vac - 4.0A max
 115Vac - 10.0A max / 230Vac - 5.0A max
 (800W only)

2-1-4 INRUSH CURRENT

55A max. when AC input 115Vac at 25°C cold start
 110A max. when AC input 230Vac at 25°C cold start

2-1-5 POWER EFFICIENCY

80% (min) at full load (typical) and 115Vac and 230Vac input
 (For 20%, 50%, 100% load condition)

2-1-6 LEAKAGE CURRENT

3.5mA max.

2-1-7 POWER FACTOR

PF> 0.9

2-2 OUTPUT

Voltage	+5V	+3.3V	+12V1	+12V2	+12V3	+12V4	-12V	+5Vsb
Max Load *1	28.0 A	30.0 A	18.0 A	18.0 A	18.0A 25.0A	18.0A/ 25.0A	0.8 A	3.0 A
Min Load	2.0 A	0.5 A	1.0 A	1.0 A	1.0 A	1.0 A	0.0 A	0.0 A
Peak Load	--	--	--	--	--	--	--	3.5 A
Regulation	+5, -4%	+5, -3%	+5, -4%	+5, -4%	+5, -4%	+5, -4%	+9, -5%	+5, -4%
Ripple & Noise	50 mV	50 mV	120 mV	120 mV	120 mV	120 mV	120 mV	50 mV

*1 The continuous total power is 800W MAX (GE-S800A-D1; GE-M800A-D1)/680W (GE-S680A-D1; GE-M680A-D1)/550W (GE-S550A-D1; GE-M550A-D1)

- The Combined power of +5V +3.3V is 180W max. (GE-S800A-D1; GE-M800A-D1; GE-S680A-D1; GE-M680A-D1)/140W (GE-S550A-D1; GE-M550A-D1)

- Peak currents may last up to 12 seconds with no more than one occurrence per minute.

- Total combined +12V output load not exceeding 62A (GE-S800A-D1; GE-M800A-D1)/52A (GE-S680A-D1; GE-M680A-D1)/41A (GE-S550A-D1; GE-M550A-D1)

2-3 REMOTE ON/OFF

TTL High/PS-OFF; TTL Low/PS-ON

VIL = 0.8V max, IIL = -1.6mAmax@Vin=0.4V

VIH = 2.0V min @ Iin=-200uA, VIH = 5.25Vmax@open ckt.

2-4 HOLD-UP TIME

16msec (min.) at 80% of full load at 230Vac input

2-5 POWER GOOD DELAY

100-500 msec

2-6 POWER FAIL DELAY

>1msec.

2-7 TURN-ON DELAY TIME

2000 msec max. At nominal line full load

2-8 TRANSIENT OVERSHOOT


Step load changes of up to 50% of full load, while other loads remains constant within the rating. The DC output voltage will stay within regulation during the 20% load changes.

Load slew rating is 0.5A/uS and capacitive load as below:

+5V	+3.3V	+12V1	+12V2	+12V3	+12V4	-12V	+5Vsb
1000uF	1000uF	2200uF	2200uF	2200uF	2200uF	NA	1uF

2-9 RISE TIME

20ms max at full load

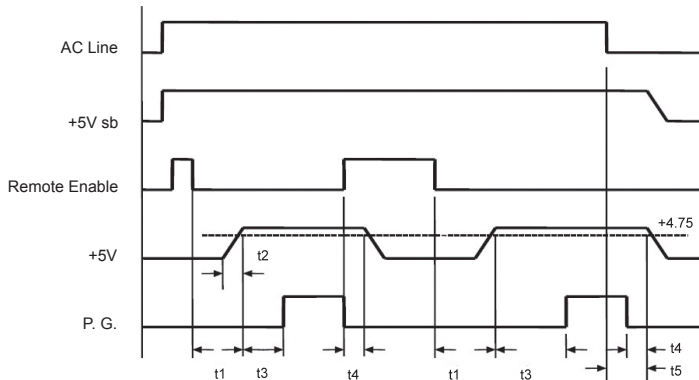

- t 1: TURN-ON DELAY TIME
- t 2: RISE TIME
- t 3: POWER GOOD DELAY
- t 4: POWER FAIL DELAY
- t 5: HOLD-UP TIME

2-10 PROTECTION

When OCP, OVP, OTP, or short protection is triggered, the main output will be latched off. The main outputs can be reset by cycling the DC remote on/off or AC power +5Vsb output is automatically recovered when a fault condition is removed.

2-10-1.OVER CURRENT PROTECTION

No exceeding 240VA every output voltage (Beside of 12V)

+12V1, +12V2 output 25A max (GE-S800A-D1; GE-M800A-D1; GE-S680A-D1; GE-M680A-D1)
 +12V3, +12V4 output 38A max (GE-S800A-D1; GE-M800A-D1; GE-S680A-D1; GE-M680A-D1)

2-10-2.OVER VOLTAGE PROTECTION

+3.3V output 4.5V max.
 +5.0V output 7.0V max.
 +12.0V output 15.6V max.

2-10-3.UNDER VOLTAGE PROTECTION

12V1 & 12V2 output 9.5V min
 12V3 & 12V4 output 9.5V min
 +5V output 4.1V min
 +3.3V output 2.55V min

2-10-4.SHORT PROTECTION

All output to GND

2-10-5.OVER TEMPERATURE PROTECTION

The power supply includes an over-temperature sensor, which can trip and shutdown the power supply at 100°C. Such an overheated condition is typically the result of internal current overloading or a cooling fan failure.

2-11 ENVIRONMENT

2-11-1 Operating Temp

0°C to +50°C

2-11-2 Storage Temp

-20°C to +70°C

2-11-3 Operating Humidity

20% to 90%, non condensing

2-11-4 Storage Humidity

5% to 95%, non condensing

2-11-5 Operating Altitude

0-10,000 feet

2-11-6 Storage Altitude

0-50,000 feet

2-12 HI-POT (Input/Out isolation)

2-12-1 PRIMARY TO SECONDARY

3535 Vdc for 3 seconds

2-12-2 INSULATION RESISTANCE

Primary to earth ground 500Vdc, 50M ohms Min.

2-13 CE REQUIREMENTS

2-13-1 Conducted EMI

- Meet FCC: Class B
- Meet CISPR 22: Class B
- Meet BSMI: Class B

2-13-2 Safety Standards

- Meet CUL (UL60950)
- Meet TUV (EN60950)
- Meet CB (IEC 950)
- Meet CE
- Meet CCC

2-13-3 Harmonic

- Meet IEC 1000-3-2 Class D

2-14 MTBF

@25°C (demonstrated) - 100K hours minimum



2-15 DIMENSIONS


150 x 160 x 86 mm (W x L x H)

3. Installation Instruction

(For a new system, please go directly to Section 4)

1. Switch off the system.
2. Disconnect the power cord from your old power supply.
3. Follow the direction provided in your case's user manual to open your computer case.
4. Disconnect all the power connectors from the power supply to the motherboard and the peripheral devices such as the case fans, hard drives, and floppy drives, etc.
5. Remove the existing power supply from your computer case
6. Insert Odin GT power supply into the chassis and secure it with screws
7. Connect the 24-pin main power connector and the 4-pin/8-pin +12V to your motherboard as needed.
8. Connect the 4 / 8-pin 12V CPU power connector to your motherboard as needed
9. When there is a need for PCI-E power, please use the PCI-E connector from the power supply unit first. When you are using more than two graphic cards (SLI, crossfire or quad - SLI), please use Smart Cable management PCI-E power connectors. Note: Please refer to your PCI express graphic card's user manual for usage details.


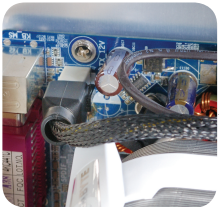
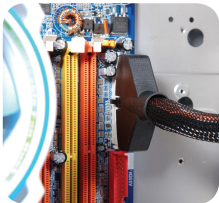


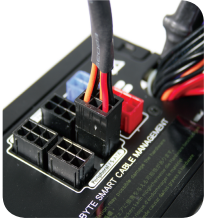


10. To connect peripheral devices, please use Smart Cable Management power connectors.



11. With a Smart Cable Management -Fan speed control power connector, users may connect two 3-pin system fans. This allows Odin GT power supply to monitor and control the speed of the fans you've connected (Odin GT only).
CAUTION: Do not connect to the CPU fan

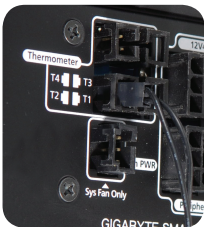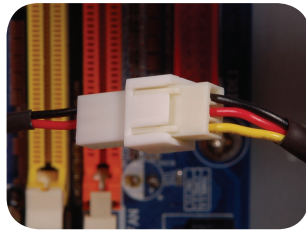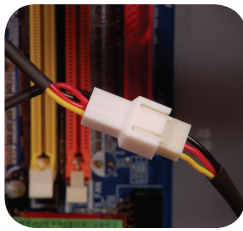



12. Connect Smart Cable Management - Thermal Sensor cable, use the thermal tape to stick the thermal sensor to the surface where you want to monitor the temperature. The thermal tape has an insulating property. It can be used in high temperature environment. Caution: Do not place the thermal sensor between the CPU and Cooler; it will damage the thermal sensor and CPU. (Odin GT series only)

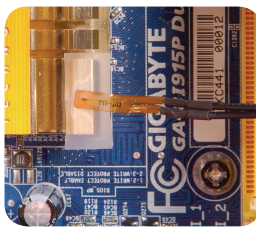



13. To enable the software control function, connect the USB connector from the power supply to Motherboard. If there is no USB connector on the motherboard, please use the USB converter to connect to the rear of the motherboard or an add-on card with a USB I/O port. (Odin GT series only)

To connect the USB connector to the rear I/O USB port, please use the converter, which is included in the package, and connect the converter to the rear USB port by passing the rear slot. (Odin GT series only)

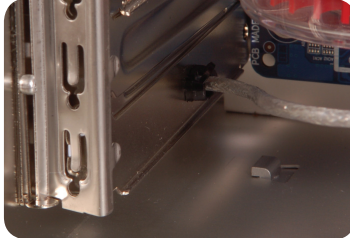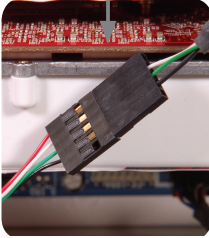

14. After installation, connect the power cord to the Odin GT power supply unit. Now you are ready to experience the performance of the Odin series power supply. (Odin GT series only)

4. Power Tuner Installation Instruction (ODIN GT series only)

For the first time of the system's boot-up, Windows will inform that a new hardware is found, and there is no driver needed for Odin GT.

To enable the software control function, please install the power supply management software, "Power Turner", in the system to monitor and adjust the hardware function.

1. Start up the system.
2. Insert the CD in the ODD drive, and the installation should start automatically. If it doesn't start, please open the ODD folder and double click on the setup.exe file to install manually.
3. Follow the instruction and install Power Tuner into the system step by step.
4. When the installation completes, there will be a window of P-Tuner shown as left.
(It's possible that your P-Tuner may differ slightly from the sample in this manual. This is not a problem; it's simply an improvement. We continually refine and improve our products to ensure the highest quality)
5. When the system starts up, P-tuner should start automatically; if not, please start up by double clicking on the "Power Tuner" logo on the desktop or in the menu. Copy the link into the "start up" folder in the menu for automatic start when booting up the PC.



6. Power Tuner main page



The images below display the Power Tuner window; all function can be controlled by a click of the mouse.

Labels and descriptions for the Power Tuner main page:


- Display of power usage (points to Watt section)
- Click to get the reading (points to Voltage section)
- Click "all" for single window *2 (points to "ALL" button in Voltage section)
- PSU fan speed reading (in centre flash, *1) (points to PSU Fan gauge)
- Thermometer T1 and T3 reading (points to T1 and T3 gauges)
- Switch between °C & °F (points to temperature unit switch)
- Peak rate of power usage (points to Peak wattage display)
- Clear peak button (points to CLEAR PEAK button)
- Display voltage reading (points to Voltage gauges)
- Display Current reading (points to Current gauges)
- System fan speed reading (points to System Fan gauge)
- Thermometer T2 and T4 reading (points to T2 and T4 gauges)
- (-) Minimize (X) Shut down (points to window control buttons)
- (M) Main menu (C) Configuration menu (A) Alarm menu (points to bottom menu buttons)
- Power Supply Light switch (points to light switch icon)

*1 When the button or fan flashes in red, there is a reading exceeding the alarm setting. Please check if the system is still in proper condition.

*2 When the "all" button is clicked, there will be a pop up window to display all readings in the window.

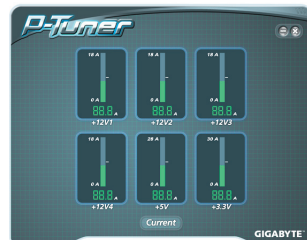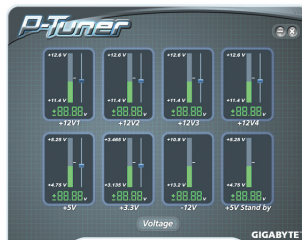

7. P-Tuner Voltage page

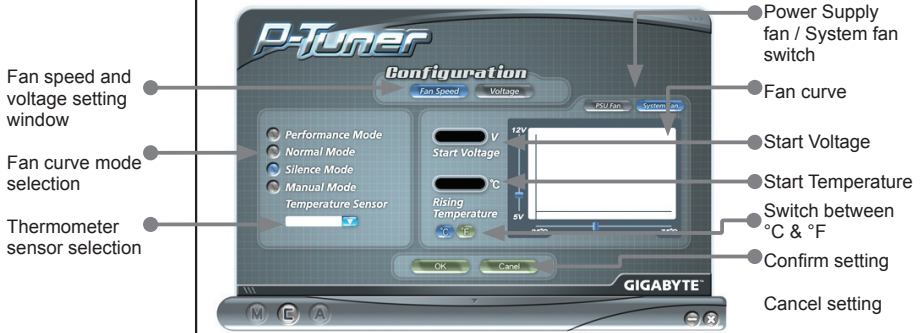

Performance mode: High Fan speed to cool down power supply and system more efficiently.


Normal mode: A balance setting between performance and silent mode

Silence mode: Fan Speed set to low RPM to keep the system silent; the fan speed automatically rises as temperature increases.

Manual mode: In this mode users can use mouse to drag the fan curve or set the start voltage and increase temperature for fan curve.

Temperature sensor: for choosing the sensor to which the PSU use as guideline.

Cooling down the power supply and system at higher fan speed will improve the performance, lower the fan speed to provide users with a silent power supply; the fan speed will automatically rise to full speed when temperature reaches 75°C (167°F)

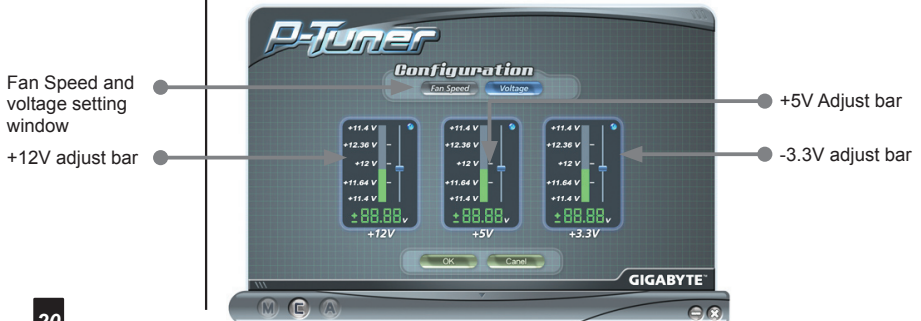


Please don't set the voltage over Intel spec. It may cause the system into protection mode.

(Power Tuner only allows the power supply to adjust the voltage within Intel spec. It is safe to adjust the voltage setting.)


8. P-Tuner Alarm: Watt



9. P-Tuner Alarm: Voltage

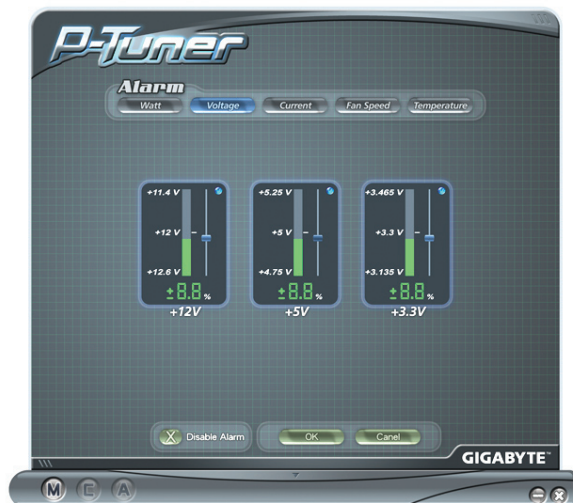


10. P-Tuner Alarm Current

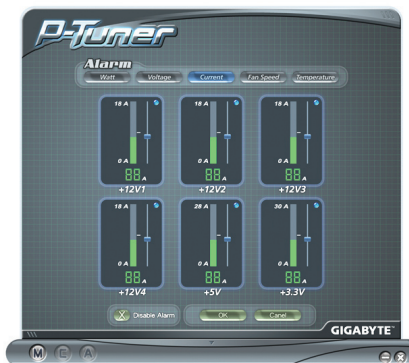

11. P-Tuner Alarm Fan Speed




12. P-Tuner Alarm Temperature

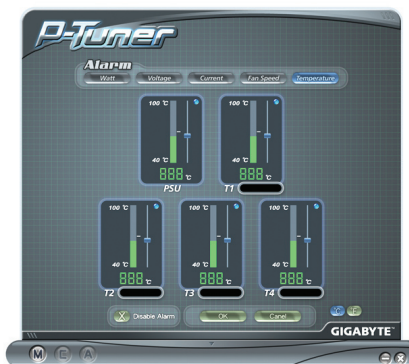

NOTE:

1. When the program crashes, simply close the program and re-start it.
2. When there is an error within the settings, it will cause a boot-up failure to the hardware, normally caused by over-voltage or under-voltage protection. Therefore, to protect the hardware, the system will not boot up. Please follow the steps below to recover the system.
 - a. Remove the AC power cord.
 - b. Disconnect all the power connectors from the power supply to motherboard, and the peripheral devices such as the case fan, hard drives, and floppy drives, etc.
 - c. Use the USB converter kit to connect the Power supply to another computer, and install Power Tuner.
 - d. Short the connector as in the image below, or use ODIN GT PSU jump start kit to start ODIN GT power supply.

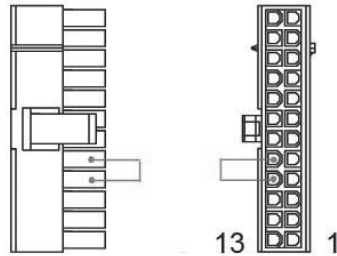

- e. Use the USB converter to connect the Odin GT power supply to another computer.
- f. Install Power Tuner in the computer, which the USB cable connects to.
- g. Connect the power cord into the Odin GT power supply.
- h. Now the Odin GT should automatically start.
- i. Use Power Tuner to re-adjust the ODIN GT power supply.
- j. Now revise the steps, and ODIN GT should be able to boot the system.