# **GIGABYTE**<sup>™</sup>

## SUPERB 550/550P





### The following are not covered by the warranty:

- 1. Using the product incorrectly or in a manner other than the designed purpose.
- Nonobservance of the proper operation provided.
- 3. Malfunction due to interference from other devices 4. Unapproved modification of the product.
  - 5. Consequential damage to other objects due to the product's fault.
  - Malfunction arising from natural hazards E.g. earthquake, lightning, fire, and floods.
    The product's warranty label has been removed or damaged.

  - The devices inside, including power supply, hard disk, CD-ROM drive, motherboard, ventilator, etc, are not detached from the casing prior to transportation of the computer system, resulting in damage to the casing or computer-related devices
  - 9. Any loss/damage caused by failure to follow the installation process within the user manual.



Do not open this power supply unit! No serviceable components inside! Qualified service personnel only! Incorrect connector installation may possibly burn out the motherboard and other components.

## **Features**

- Complies to Intel ATX 12V v2.3
- 12cm intelligent transparent cooling fan
- Dual rails of +12V
- PCI-E 2.0 ready: 6+2 pin
- Multiple safety protection features : OPP/OCP/OVP/OTP
- Sleeved cabling
- Dual Core CPU ready
- Color-coded copper heat-sink
- RoHS ready
- Passive PFC (W550P Only)



24-Pin Main Power Connector Head




S-ATA HDD Connector Head




4-Pin Peripheral Connector



4+4-Pin ATX/EPS CPU Power Connector Head

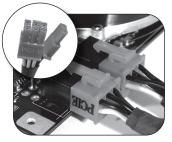

PCI-E 2.0, 6+2-Pin Connector Head

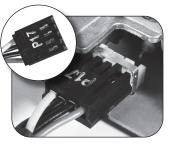

FDD Connector Head

If your system does not have a power supply installed, please skip to Part 2.

- 1. Turn off power and disconnect power cable.
- 2. Disconnect all connectors from your existing power supply.
- 3. Remove your existing power supply.

- 1. Install your SUPERB Power Supply.
- 2. Connect all power connectors to the motherboard and all devices as needed.

