GA-P55A-UD3P GA-P55A-UD3R

LGA1156 socket motherboard for Intel[®] Core[™] i7 processor family/ Intel[®] Core[™] i5 processor family/Intel[®] Core[™] i3 processor family

User's Manual

Rev. 2001 12ME-P55AU3P-2001R

(Stamp) Dele: Apr. 19, 2010 Name : Timmy Huang	CA (reference to the a n Record in Record in Resourcement in Record in Record in Resourcement in Record in Record in Record in Resourcement in Record and methods of measurement in Record and Record in Resourcement in Record and Record in Resourcement in Record and Record in Record in Record Record and Record in Record in Record Record and Records in Record in Record Record and Records in Record in Record Record and Records in Records in Record Record and Records in Records in Record Record and Records in Records in Records Record and Records in Records in Records Records and Records and Records and Records Records and Reco	Motherboard Desc.UD37104-PESA-UD37 and BEN 4000-32 and BEN 400-32 and BEN 40	2 By Is declarent) Beerne Dectribunces in supply systems caused behaviour despress to sumply suppresentationers. Information Theoremapy suppressional compared to suppress to suppressional compared by the duatry researcement. Genece memory subcases Part 1. Readed in compared and byte for the researcement. Genece memory subcases Part 2. Inductrial environment. Remarks model and byte for destruction books and aleritar separation. EDC requirements for functionary envintement products. EDC requirements for uninterruptible power systems (UPS) Solidey for Information technology equipment uninterruptible power systems (UPS). Solidey for Information technology equipment uninterruptible power systems (UPS). Suppress and Saley power systems (UPS). Suppress and Saley Transmitters to uninterruptible power systems (UPS). Suppress The Sale Saley Power Saley Sale Sale Sale Sale Sale Sale Sale Sale	Responsible Party Name: G.B.T. INC. (U.S.A) Address: 17358 Railroad Street City of Industry, CA 91748 Phone/Fax No: (818) 854-9338 / 818) 854-9339 hereby declares that the product Product Name: Motherboard Model Number: G.AP55A-UD3P/ GA-P55A-UD3R Conforms to the following specifications: FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109 (a), Class B Digital Device Supplementary Information: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received, including that may cause undesired operation. Representative Person's Name: <u>ERIC LU</u> Signature: <u>Eric Lu</u> Signature: <u>Eric Lu</u>
Windextormal Construction An UDDP (CASE ADDORF) An UDDP (CASE ADDORF) B N 000-32 Database in supply systems caused B N 000-33 Database in supply systems caused B N 000-34 Database in supply systems caused B N 000-35 Database in supply systems caused B N 000-35 Database in supply systems caused B N 000-36 Database in supply systems caused B N 000-37 Database in subsci systems B N 000-37 Control to subsci systems B N 000-37 Control to subsci systems B N 000-37 Control to subsci systems B N 000-36 Control to subsci systems <t< td=""><td>G.I. Bullenk</td><td>G.B.T. Technology Trading GMbH Bullenkoppel 16, 22047 Hamburg, Germany declare that the product</td><td>nany</td><td>Per FCC Part 2 Section 2.1077(a)</td></t<>	G.I. Bullenk	G.B.T. Technology Trading GMbH Bullenkoppel 16, 22047 Hamburg, Germany declare that the product	nany	Per FCC Part 2 Section 2.1077(a)
Midnehond ALDUR AUDIR/GA-RESALUUSR Bit Monolation B	Bullenk: (description of the :	oppel 16, 22047 Hamburg, Gern declare that the product opparatus, system, installation to	nany Which it refers)	Per FCC Part 2 Section 2.10
Nonconcerning Concentration Status Status in concentrative Status in concontrative	(description of the	apparatus, system, installation to	which it refers)	
an encoding one Bit NOODIC	0	Motherboard		
Bit Monocols Person Bit Monocols Pers	GA	P55A-UD3P/GA-P55A-UD3F	~	
Bit NEOGA-2 Distributions is supply systems cause Bit NEOGA-2 Distributions is supply systems cause Bit NEOGA-2 Distributions is supply systems cause Bit NEOGA-2 Distributions in supply systems cause Bit NEOGA-2 Distributions in supply systems cause Bit NEOGA-2 Distributions in supply systems cause Bit NEOGA-2 Distribution in systems Bit NEOGA-3 Distribution in systems Bit NEOGA-4 Distribution in systems Bit NEOGA-4 Distribution in systems Bit NEOGA-5 Distribution in systems Bit NEOGA-6 Distribution in systems Bit NEOGA-7 Distribution in systems Bit NEOGA-7 Distribution in systems <	(reference to the s	is in conformity with pecification under which conform	ity is declared)	
III N 0000-32 Datubaroos in uspóly system causa III N 0001-32 Datubaroos in uspóly system causa III N 0001-42 Datubaroos in uspóly system causa III N 0001-12 Datubaroos in uspóly system causa III N 0001-13 Datubaroos in uspóly system causa <td>in accord</td> <td>ance with 2004/108/EC EMC Dire</td> <td>octive .</td> <td></td>	in accord	ance with 2004/108/EC EMC Dire	octive .	
It NY 0000-12 Contractive one is usaging system causes and inclusions. Interview of the inclusion of the inclusions. It NY 0000-12 Contractive interview of the inclusions. Interview of the inclusion of the inclusions. It NY 0000-12 Contractive interview of the inclusions. Interview of the inclusion of the inclusions. It NY 0000-12 Contractive interview of the inclusions. Contractive of the inclusions. It NY 0000-12 Contractive of the inclusions. Contractive of the inclusions. It NY 0000-12 Contractive of the inclusions. Support inclusions. It NY 0000-12 Contractive of the inclusions. Support inclusions. It NY 0000-11 Contractive of the inclusions. Support inclusions. It NY 0000-11 Contractive of the inclusions evaluations. P It NY 0000-11 Contractive of the inclusions in the inclusions. P It NY 0000-11 Contractive of the inclusion inclusions. P It NY 0000-11 Contractive of the inclusion inclusion inclusion inclusions. P			Disturbances in supply systems caused	Responsible Party Name: G.B.T
Image: Section of Section o	industrial, scientific and medical (15 high frequency equipment		Disturbances in supply systems caused by household appliances and similar	4.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1
Image: Biology in the second secon	menupation of the second second second		by notseense appliances and similar electrical equipment "Votage fluctuations"	Address: 17358
Image: Statute of memory standard Part 1: Image: Ended. Image:			Information Technology	City of
Image:	broadcast receivers and associate equipment		equippediate international methods of measurement	Phone/Fax No: (818) 8
Image:		<u>x</u>	Generic immunity standard Part 1: Residual: commercial and light industry	hereby declares that the product
Image: None of the intervention of section were section were section were section were section were section of the intervention of a factor mark mark the intervention of a factor mark mark the intervention of a factor mark mark the intervention of the intervention mark the intervention of the intervention interventinterventi	household electrical appliances, portable tools and similar electrical apparatus		Generic immunity standard Part 2: Industrial environment	Product Name: Mot
C Conformity marking C Conformity			Immunity requirements for household appliances tools and similar apparetus	Model Number: GA GA Conforms to the following specifications
FC contervity marking FC contervity marking FC contervity marking FC contervity marking FC contervity marking Server 20 Support Support FC contervity marking Support FC contervity marking Support FC contervity marking FC contervity marking			EMC requirements for uninterruptible power systems (UPS)	FCC Part 15, Subpart B, Section 15.
ICC confamily marking ICC confamily marking readarch in accordance with UN2 20052EC ICC and the for information including requirements ICC 1000011 General and Safety requirements for Intelecturer/Importer Syname Turner Grades	R	of		(a),Class B Digital Device Supplementary Information:
EC conformity marking) rest conformity of above meetitened product restandards in accordances with 2008/89/EC B N 9099 Scher /r Internation technology equipment including delational trainers a couperant including delational trainers accurate undertunent/Importer Segurature Turing Fundang	XE 0855 Cabled distribution systems; Equip for receiving and/or distribution from the system of the system of t	ment n		This device complies with part 15 of
EC conformity marking) The manufacturer also decisions the conformity of above manufacture produced produce Subject requirements to main operand to in accordance with tWO 2006958EC Subject requirements for main operand to in accordance with tWO 2006958EC Subject requirements for main operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with tWO 2006958EC Subject for business operand to in accordance with two accordance with twith thetwith the accordance with two accordance with twith thetwit	2 sound and television signals			subject to the following two conditions
The nanufacture sho decimes the conformity of above mentioned product with the actual required and y standards in accordance with UC 200555EC. Software for the second actual accordance with UC 200555EC. Software for the second according of above mentioned with UC 200555EC. Software for the second according of above for information methods with UC 200555EC. Software for the second according of above for information methods with UC 200555EC. Software for the second according of above for information methods with UC 200555EC. Representative Person's 1 Representative Person's 1 United upplations Stately of household and similar decimate applations EM 600591. Concerns and Safety requirements for United upplations Software for the second according of above for the second according of the second acco	rking	(EC o	onformity marking)	cause harmful and (2) this device must
Sakey regulaments for main openand 32 EN 6699 Solely for information technology equipment becaution and main openand to be including electrical business equipment Sakey of household and similar C N 900H-1 General and Sakey regulaments for uniterruptible power systems (UPS) Manufacturer/Importer Separate County Fuerage Separate Section 2 Sign Section 2 Sign Section 2 Se	The manufacturer also d with the actual required a	eclares the conformity of abov afety standards in accordance	e mentioned product with LVD 2006/96/EC	including that may cause undesired of
Skey of household and similar C N 90091-1 General and Saley requirements for uninterruptible power systems (UPS) Manufacture/Importer Signature Towardy Hudday			Safety for information technology equipment including electrical business equipment	Representative Person's Name: ERIC
electrical appliances uninterruptible power systems (UPS) Manufacturer/Importer Signature: <i>Tuneney Heateng</i>		EN 50091-1	General and Safety requirements for	Signature: Eri
Synature Kinney Hurang		C) EN 50091-1	General and Safety requirements for uninterruptible power systems (UPS)	
		Manufacturer/Importer		Date: Apr.
	Dat	≞: Apr. 19, 2010		1

Copyright

© 2010 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in this manual are legally registered to their respective owners.

Disclaimer

Information in this manual is protected by copyright laws and is the property of GIGABYTE. Changes to the specifications and features in this manual may be made by GIGABYTE without prior notice. No part of this manual may be reproduced, copied, translated, transmitted, or published in any form or by any means without GIGABYTE's prior written permission.

Documentation Classifications

In order to assist in the use of this product, GIGABYTE provides the following types of documentations:

- For quick set-up of the product, read the Quick Installation Guide included with the product.
- For detailed product information, carefully read the User's Manual.
- For instructions on how to use GIGABYTE's unique features, read or download the information on/from the Support&Downloads\Motherboard\Technology Guide page on our website.

For product-related information, check on our website at: http://www.gigabyte.com.tw

Identifying Your Motherboard Revision

The revision number on your motherboard looks like this: "REV: X.X." For example, "REV: 1.0" means the revision of the motherboard is 1.0. Check your motherboard revision before updating motherboard BIOS, drivers, or when looking for technical information.

Example:

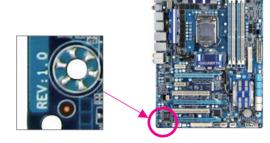


Table of Contents

Box Conte	nts		6
Optional It	ems		6
GA-P55A-	UD3P/	9/ GA-P55A-UD3R Motherboard Layout	7
		/GA-P55A-UD3R Motherboard Block Diagram	
		ware Installation	
	1-1	Installation Precautions	
		Product Specifications	
		Installing the CPU and CPU Cooler	
		3-1 Installing the CPU	
	1-3	3-2 Installing the CPU Cooler	
	1-4	Installing the Memory	
	1-4		
	1-4	4-2 Installing a Memory	17
	1-5	Installing an Expansion Card	
	1-6	Back Panel Connectors	19
	1-7	Internal Connectors	21
Chapter 2	BIOS	Setup	33
	2-1	Startup Screen	
	2-2	The Main Menu	
	2-3	MB Intelligent Tweaker(M.I.T.)	
	2-4	Standard CMOS Features	
	2-5	Advanced BIOS Features	
	2-6	Integrated Peripherals	50
	2-7	Power Management Setup	54
	2-8	PC Health Status	
	2-9	Load Fail-Safe Defaults	58
	2-10	Load Optimized Defaults	
	2-11	Set Supervisor/User Password	
	2-12	Save & Exit Setup	
	2-13	Exit Without Saving	
	2-14	Security Chip Configuration ①	
Chapter 3	Driver	rs Installation	63
	3-1	Installing Chipset Drivers	63
	3-2	Application Software	64
	3-3	Technical Manuals	64
	3-4	Contact	65
	3-5	System	65


	3-6	Do	wnload Center	
	3-7	Ne	v Utilities	
Chapter 4	Uniqu	le F	eatures	67
·	4-1 [.]	Xpr	ress Recovery2	67
	4-2	BIC	OS Update Utilities	70
	4-2	2-1	Updating the BIOS with the Q-Flash Utility	70
	4-2	2-2	Updating the BIOS with the @BIOS Utility	73
	4-3	Eas	syTune 6	74
	4-4	Dyr	namic Energy Saver™2	75
	4-5	Q-8	Share	77
	4-6	Sm	art 6 [™]	
	4-7	Sm	art TPM ①	81
	4-8	Aut	o Green	82
	4-9	eXt	reme Hard Drive (X.H.D)	83
Chapter 5	Appe	ndix		85
	5-1	Cor	nfiguring SATA Hard Drive(s)	85
	5-1	1-1	Configuring Intel P55 SATA Controllers	85
	5-1	1-2	Configuring JMicron JMB362 SATA Controller	93
	5-1	1-3	Configuring Marvell 9128 SATA Controller	99
	5-1	1-4	Making a SATA RAID/AHCI Driver Diskette	104
	5-1	1-5	Installing the SATA RAID/AHCI Driver and Operating System	106
	5-2	Сог	nfiguring Audio Input and Output	119
	5-2	2-1	Configuring 2/4/5.1/7.1-Channel Audio	119
	5-2	2-2	Configuring S/PDIF In/Out	121
	5-2	2-3	Enabling the Dolby Home Theater Function	123
	5-2	2-4	Configuring Microphone Recording	124
	5-2	2-5	Using the Sound Recorder	126
	5-3	Tro	ubleshooting	127
	5-3	3-1	Frequently Asked Questions	127
	5-3	3-2	Troubleshooting Procedure	128
	5-4	Re	gulatory Statements	

Box Contents	
 GA-P55A-UD3P or GA-P55A-UD3R motherboard Motherboard driver disk User's Manual Quick Installation Guide One IDE cable Four SATA cables I/O Shield 	
 The box contents above are for reference only and the actual items shall depend The box contents are subject to change without notice. The motherboard image is for reference only. 	on the product package you obtain.

Optional Items

- □ Floppy disk drive cable (Part No. 12CF1-1FD001-7*R)
- □ 2-port USB 2.0 bracket (Part No. 12CR1-1UB030-5*R)
- □ 2-port SATA power cable (Part No. 12CF1-2SERPW-0*R)
- S/PDIF In cable (Part No. 12CR1-1SPDIN-0*R)
- COM port cable (Part No. 12CF1-1CM001-3*R)
- LPT port cable (Part No. 12CF1-1LP001-0*R)


GA-P55A-UD3P/ GA-P55A-UD3R Motherboard Layout

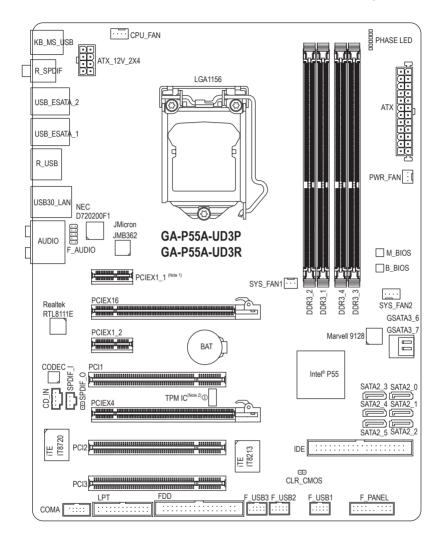

① Only for GA-P55A-UD3P.

- (Note 1) Due to a hardware limitation, the PCIEX1_1 slot can only accommodate a shorter PCI Express x1 expansion card. For a longer expansion card, use other expansion slots.
- (Note 2) This feature is optional due to different regional policy.

GA-P55A-UD3P/GA-P55A-UD3R Motherboard Block Diagram

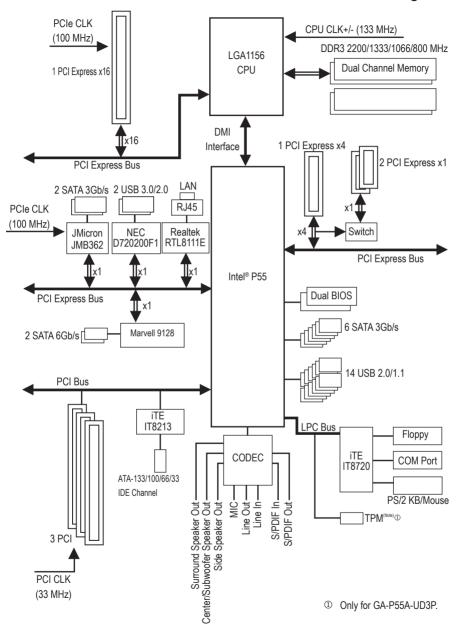

(Note) This feature is optional due to different regional policy.

Chapter 1 Hardware Installation

1-1 Installation Precautions

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Prior to installation, carefully read the user's manual and follow these procedures:

- Prior to installation, do not remove or break motherboard S/N (Serial Number) sticker or warranty sticker provided by your dealer. These stickers are required for warranty validation.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.
- When connecting hardware components to the internal connectors on the motherboard, make sure they are connected tightly and securely.
- When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) wrist strap when handling electronic components such as a motherboard, CPU or memory. If you do not have an ESD wrist strap, keep your hands dry and first touch a metal object to eliminate static electricity.
- Prior to installing the motherboard, please have it on top of an antistatic pad or within an electrostatic shielding container.
- Before unplugging the power supply cable from the motherboard, make sure the power supply has been turned off.
- Before turning on the power, make sure the power supply voltage has been set according to the local voltage standard.
- Before using the product, please verify that all cables and power connectors of your hardware components are connected.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components.
- Make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- Do not place the computer system on an uneven surface.
- Do not place the computer system in a high-temperature environment.
- Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

1-2 Product Specifications

CPU	 Support for an Intel[®] Core[™] i7 series processor/Intel[®] Core[™] i5 series processor
	/Intel [®] Core [™] i3 series processor in the LGA1156 package (Go to GIGABYTE's website for the latest CPU support list.)
Chinast	L3 cache varies with CPU Intel® P55 Express Chinset
Chipset	
Memory	 4 x 1.5V DDR3 DIMM sockets supporting up to 16 GB of system memory (Note 1) Dual channel memory architecture
	Support for DDR3 2200/1333/1066/800 MHz memory modules
	Support for non-ECC memory modules
	Support for Extreme Memory Profile (XMP) memory modules
	(Go to GIGABYTE's website for the latest supported memory speeds and memory modules)
Audio	Realtek ALC889 codec
	High Definition Audio
	2/4/5.1/7.1-channel
	 Support for Dolby[®] Home Theater Support for S/PDIF In/Out
	Support for CD In
	1 x Realtek RTL8111E chip (10/100/1000 Mbit)
Expansion Slots	1 x PCI Express x16 slot, running at x16 (PCIEX16) (Note 2)
	(The PCIEX16 slot conforms to PCI Express 2.0 standard.)
	1 x PCI Express x16 slot, running at x4 (PCIEX4) (Note 3)
	 2 x PCI Express x1 slots 3 x PCI slots
Multi-Graphics	Support for ATI CrossFireX [™] technology (Note 4)
Technology	
Storage Interface	
	- 6 x SATA 3Gb/s connectors (SATA2_0, SATA2_1, SATA2_2, SATA2_3,
	SATA2_4, SATA2_5) supporting up to 6 SATA 3Gb/s devices - Support for SATA RAID 0, RAID 1, RAID 5, and RAID 10
	Marvell 9128 chip:
	- 2 x SATA 6Gb/s connectors (GSATA3_6, GSATA3_7) supporting up to
	2 SATA 6Gb/s devices
	- Support for SATA RAID 0 and RAID 1
	JMicron JMB362 SATA2 chip: 2 x eSATA 3Gb/c connectors on the back papel supporting up to 2 SATA
	 2 x eSATA 3Gb/s connectors on the back panel supporting up to 2 SATA 3Gb/s devices
	- Support for SATA RAID 0, RAID 1, and JBOD
	• iTE IT8213 chip:
	- 1 x IDE connector supporting ATA-133/100/66/33 and up to 2 IDE devices
	 iTE IT8720 chip: 1 x floppy disk drive connector supporting up to 1 floppy disk drive
	r x hoppy alow and connector capporting up to r hoppy alow and

USB	 Chipset: Up to 14 USB 2.0/1.1 ports (8 on the back panel, 6 via the USB brackets connected to the internal USB headers) NEC D720200F1 chip: Up to 2 USB 3.0/2.0 ports on the back panel
Internal	1 x 24-pin ATX main power connector
Connectors	1 x 8-pin ATX 12V power connector
	1 x floppy disk drive connector
	1 x IDE connector
	6 x SATA 3Gb/s connectors
	2 x SATA 6Gb/s connectors
	1 x CPU fan header
	2 x system fan headers
	1 x power fan header
	1 x front panel header
	1 x front panel audio header
	1 x CD In connector
	1 x S/PDIF In header
	1 x S/PDIF Out header
	• 3 x USB 2.0/1.1 headers
	1 x serial port header
	1 x parallel port header
	1 x clearing CMOS jumper
Back Panel	 1 x PS/2 keyboard or PS/2 mouse port
Connectors	1 x coaxial S/PDIF Out connector
	1 x optical S/PDIF Out connector
	 8 x USB 2.0/1.1 ports
	 2 x USB 3.0/2.0 ports
	2 x eSATA 3Gb/s ports
	 1 x RJ-45 port
	6 x audio jacks (Center/Subwoofer Speaker Out/Rear Speaker Out/
	Side Speaker Out/Line In/Line Out/Microphone)
I/O Controller	iTE IT8720 chip
Hardware Monitor	System voltage detection
	CPU/System temperature detection
	CPU/System/Power fan speed detection
	CPU overheating warning
	CPU/System/Power fan fail warning
	CPU/System fan speed control (Note 5)

BIOS	2 x 16 Mbit flash
	Use of licensed AWARD BIOS
	 Support for DualBIOS[™]
	 PnP 1.0a, DMI 2.0, SM BIOS 2.4, ACPI 1.0b
Unique Features	Support for @BIOS
	Support for Q-Flash
	Support for Xpress BIOS Rescue
	Support for Download Center
	Support for Xpress Install
	Support for Xpress Recovery2
	Support for EasyTune (Note 6)
	 Support for Dynamic Energy Saver[™] 2
	Support for Smart TPM (Note 7) ①
	 Support for Smart 6[™]
	Support for Auto Green
	Support for eXtreme Hard Drive(X.H.D)
	Support for ON/OFF Charge
	Support for Q-Share
Bundled Software	Norton Internet Security (OEM version)
Operating System	• Support for Microsoft® Windows® 7/Vista/XP
Form Factor	ATX Form Factor; 30.5cm x 24.4cm

- ① Only for GA-P55A-UD3P.
- (Note 1) Due to Windows 32-bit operating system limitation, when more than 4 GB of physical memory is installed, the actual memory size displayed will be less than 4 GB.
- (Note 2) For optimum performance, if only one PCI Express graphics card is to be installed, be sure to install it in the PCIEX16 slot.
- (Note 3) When the PCIEX1_1 or PCIEX1_2 slot is populated with an expansion card, the PCIEX4 slot will operate at up to x1 mode.
- (Note 4) The PCIEX16 slot operates at up to x4 mode when ATI CrossFireX is enabled.
- (Note 5) Whether the CPU/system fan speed control function is supported will depend on the CPU/system cooler you install.
- (Note 6) Available functions in EasyTune may differ by motherboard model.
- (Note 7) This feature is optional due to different regional policy.

1-3 Installing the CPU and CPU Cooler




Read the following guidelines before you begin to install the CPU:

- Make sure that the motherboard supports the CPU.
 (Go to GIGABYTE's website for the latest CPU support list.)
- Always turn off the computer and unplug the power cord from the power outlet before installing the CPU to prevent hardware damage.
- Locate the pin one of the CPU. The CPU cannot be inserted if oriented incorrectly. (Or you may locate the notches on both sides of the CPU and alignment keys on the CPU socket.)
- Apply an even and thin layer of thermal grease on the surface of the CPU.
- Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur.
- Set the CPU host frequency in accordance with the CPU specifications. It is not recommended
 that the system bus frequency be set beyond hardware specifications since it does not meet the
 standard requirements for the peripherals. If you wish to set the frequency beyond the standard
 specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

1-3-1 Installing the CPU

A. Locate the alignment keys on the motherboard CPU socket and the notches on the CPU.

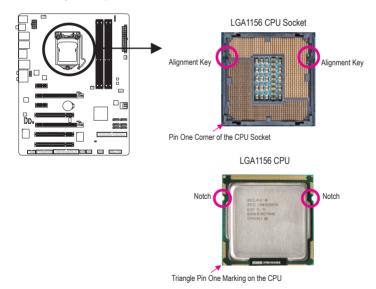


B. Follow the steps below to correctly install the CPU into the motherboard CPU socket.

Before installing the CPU, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the CPU.



Step 1:

Gently press the CPU socket lever handle down and away from the socket with your finger. Then completely lift the CPU socket lever and the metal load plate will be lifted as well.



Step 3:

Hold the CPU with your thumb and index fingers. Align the CPU pin one marking (triangle) with the pin one corner of the CPU socket (or you may align the CPU notches with the socket alignment keys) and gently insert the CPU into position.



Step 5: Push the CPU socket lever back into its locked position.



Step 2:

Remove the CPU socket cover as shown. Hold your index finger down on the rear side of the socket cover and use your thumb to lift up the front edge (next to the "REMOVE" mark) of the socket cover and remove it. (DO NOT touch socket contacts. To protect the CPU socket, always replace the protective socket cover when the CPU is not installed.)





Once the CPU is properly inserted, use one hand to hold the socket lever and use the other to lightly replace the load plate. When replacing the load plate, make sure the front end of the load plate is under the shoulder screw.





1-3-2 Installing the CPU Cooler

Follow the steps below to correctly install the CPU cooler on the motherboard. (The following procedure uses Intel[®] boxed cooler as the example cooler.)




Step 1:

Apply an even and thin layer of thermal grease on the surface of the installed CPU.



Step 3:

Place the cooler atop the CPU, aligning the four push pins through the pin holes on the motherboard. Push down on the push pins diagonally.



Step 5:

After the installation, check the back of the motherboard. If the push pin is inserted as the picture above shows, the installation is complete.




Step 2:

Before installing the cooler, note the direction of the arrow sign \frown on the male push pin. (Turning the push pin along the direction of arrow is to remove the cooler, on the contrary, is to install.)





You should hear a "click" when pushing down each push pin. Check that the Male and Female push pins are joined closely. (Refer to your CPU cooler installation manual for instructions on installing the cooler.)





Finally, attach the power connector of the CPU cooler to the CPU fan header (CPU_FAN) on the motherboard.



Use extreme care when removing the CPU cooler because the thermal grease/tape between the CPU cooler and CPU may adhere to the CPU. Inadequately removing the CPU cooler may damage the CPU.

Installing the Memory 1.4



Read the following guidelines before you begin to install the memory:

Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.

(Go to GIGABYTE's website for the latest supported memory speeds and memory modules.)


- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- · Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction,

1-4-1 Dual Channel Memory Configuration

This motherboard provides four DDR3 memory sockets and supports Dual Channel Technology. After the memory is installed, the BIOS will automatically detect the specifications and capacity of the memory. Enabling Dual Channel memory mode will double the original memory bandwidth.

The four DDR3 memory sockets are divided into two channels and each channel has two memory sockets as followina:

Channel 0: DDR3 1, DDR3 2 Channel 1: DDR3 3. DDR3 4

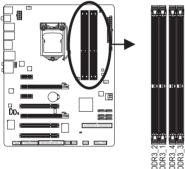

<u>11 - 11</u>	4,04,0	
1 81 1 81		
i transfer	121121	
75	46	
222	22.22	

I Channel Memory Configurations Table			
DDR3_2	DDR3_1	DDR3_4	DDR3_3

Two Modules		DS/SS		DS/SS
Four Modules	DS/SS	DS/SS	DS/SS	DS/SS

(SS=Single-Sided, DS=Double-Sided, "- - "=No Memory)

If only one DDR3 memory module is installed, be sure to install it in the DDR3 1 or DDR3 3.

Due to CPU limitations, read the following guidelines before installing the memory in Dual Channel mode.


- 1. Dual Channel mode cannot be enabled if only one DDR3 memory module is installed.
- 2. When enabling Dual Channel mode with two or four memory modules, it is recommended that memory of the same capacity, brand, speed, and chips be used for optimum performance. When enabling Dual Channel mode with two memory modules, be sure to install them in the DDR3_1 and DDR3 3 sockets.

1-4-2 Installing a Memory




Before installing a memory module, make sure to turn off the computer and unplug the power ord from the power outlet to prevent damage to the memory module.

DDR3 and DDR2 DIMMs are not compatible to each other or DDR DIMMs. Be sure to install DDR3 DIMMs on this motherboard.

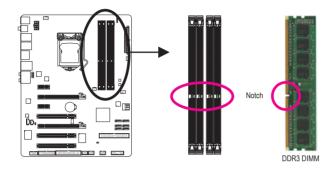

A DDR3 memory module has a notch, so it can only fit in one direction. Follow the steps below to correctly install your memory modules in the memory sockets.

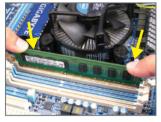

Step 1:

Note the orientation of the memory module. Spread the retaining clips at both ends of the memory socket. Place the memory module on the socket. As indicated in the picture on the left, place your fingers on the top edge of the memory, push down on the memory and insert it vertically into the memory socket.



Step 2:


The clips at both ends of the socket will snap into place when the memory module is securely inserted.

1-5 Installing an Expansion Card



Read the following guidelines before you begin to install an expansion card:

- Make sure the motherboard supports the expansion card. Carefully read the manual that came with your expansion card.
- Always turn off the computer and unplug the power cord from the power outlet before installing an expansion card to prevent hardware damage.

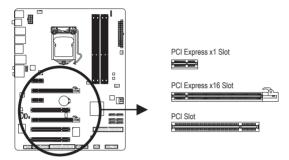

Follow the steps below to correctly install your expansion card in the expansion slot.

- 1. Locate an expansion slot that supports your card. Remove the metal slot cover from the chassis back panel.
- 2. Align the card with the slot, and press down on the card until it is fully seated in the slot.
- 3. Make sure the metal contacts on the card are completely inserted into the slot.
- 4. Secure the card's metal bracket to the chassis back panel with a screw.
- 5. After installing all expansion cards, replace the chassis cover(s).
- Turn on your computer. If necessary, go to BIOS Setup to make any required BIOS changes for your expansion card(s).
- 7. Install the driver provided with the expansion card in your operating system.

Example: Installing and Removing a PCI Express Graphics Card:



• Installing a Graphics Card:


Gently push down on the top edge of the card until it is fully inserted into the PCI Express slot. Make sure the card is securely seated in the slot and does not rock.



Removing the Card:

Press the white latch at the end of the PCI Express slot to release the card and then pull the card straight up from the slot.

1-6 **Back Panel Connectors**



USB 2.0/1.1 Port

The USB port supports the USB 2.0/1.1 specification. Use this port for USB devices such as a USB keyboard/mouse. USB printer. USB flash drive and etc.

• PS/2 Keyboard or Mouse Port

Use this port to connect a PS/2 keyboard or mouse.

Optical S/PDIF Out Connector

This connector provides digital audio out to an external audio system that supports digital optical audio. Before using this feature, ensure that your audio system provides an optical digital audio in connector.

Coaxial S/PDIF Out Connector


This connector provides digital audio out to an external audio system that supports digital coaxial audio. Before using this feature, ensure that your audio system provides a coaxial digital audio in connector.

eSATA 3Gb/s Port

The eSATA 3Gb/s port conforms to SATA 3Gb/s standard and is compatible with SATA 1.5Gb/s standard. Use the port to connect an external SATA device. Refer to Chapter 5, "Configuring SATA Hard Drive(s)," for instructions on configuring a RAID array.

RJ-45 LAN Port

The Gigabit Ethernet LAN port provides Internet connection at up to 1 Gbps data rate. The following describes the states of the LAN port LEDs.



Connection/Speed LED:			
State	Description		
Orange	1 Gbps data rate		
Green	100 Mbps data rate		
Off	10 Mbps data rate		

	Activity LED:				
State Description		Description			
	Blinking	Data transmission or receiving is occurring			
Off No data transmission or receiving is or		No data transmission or receiving is occurring			



- · When removing the cable connected to a back panel connector, first remove the cable from your device and then remove it from the motherboard.
- When removing the cable, pull it straight out from the connector. Do not rock it side to side to prevent an electrical short inside the cable connector.

USB 3.0/2.0 Port

The USB 3.0 port supports the USB 3.0 specification and is compatible to the USB 2.0/1.1 specification. Use this port for USB devices such as a USB keyboard/mouse, USB printer, USB flash drive and etc.

Center/Subwoofer Speaker Out Jack (Orange)

Use this audio jack to connect center/subwoofer speakers in a 5.1/7.1-channel audio configuration.

Rear Speaker Out Jack (Black)

Use this audio jack to connect rear speakers in a 7.1-channel audio configuration.

• Side Speaker Out Jack (Gray)

Use this audio jack to connect side speakers in a 4/5.1/7.1-channel audio configuration.

Line In Jack (Blue)

The default line in jack. Use this audio jack for line in devices such as an optical drive, walkman, etc.

• Line Out Jack (Green)

The default line out jack. Use this audio jack for a headphone or 2-channel speaker. This jack can be used to connect front speakers in a 4/5.1/7.1-channel audio configuration.


Mic In Jack (Pink)

The default Mic in jack. Microphones must be connected to this jack.



In addition to the default speakers settings, the **●** ~ **●** audio jacks can be reconfigured to perform different functions via the audio software. Only microphones still MUST be connected to the default Mic in jack (**●**). Refer to the instructions on setting up a 2/4/5.1/7.1-channel audio configuration in Chapter 5, "Configuring 2/4/5.1/7.1-Channel Audio."

1-7 Internal Connectors

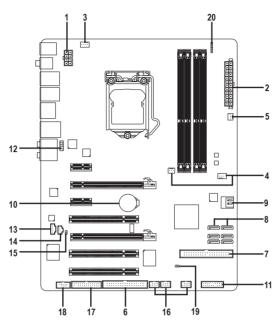

1)	ATX_12V_2X4	11)	F_PANEL
2)	ATX	12)	F_AUDIO
3)	CPU_FAN	13)	CD_IN
4)	SYS_FAN1/2	14)	SPDIF_I
5)	PWR_FAN	15)	SPDIF_O
6)	FDD	16)	F_USB1/F_USB2/F_USB3
7)	IDE	17)	LPT
8)	SATA2_0/1/2/3/4/5	18)	СОМА
9)	GSATA3_6/7	19)	CLR_CMOS
10)	BAT	20)	PHASE LED



Read the following guidelines before connecting external devices:

- · First make sure your devices are compliant with the connectors you wish to connect.
- Before installing the devices, be sure to turn off the devices and your computer. Unplug the power cord from the power outlet to prevent damage to the devices.
- After installing the device and before turning on the computer, make sure the device cable has been securely attached to the connector on the motherboard.


1/2) ATX_12V_2X4/ATX (2x4 12V Power Connector and 2x12 Main Power Connector)

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, first make sure the power supply is turned off and all devices are properly installed. The power connector possesses a foolproof design. Connect the power supply cable to the power connector in the correct orientation. The 12V power connector mainly supplies power to the CPU. If the 12V power connector is not connected, the computer will not start.




Use of a power supply providing a 2x4 12V power connector is recommended by the CPU manufacturer when using an Intel Extreme Edition CPU (130W).

 To meet expansion requirements, it is recommended that a power supply that can withstand high power consumption be used (500W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable or unbootable system.

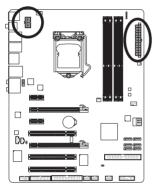




ATX_12V_2X4:		
Pin No.	Definition	
1	GND (Only for 2x4-pin 12V)	
2	GND (Only for 2x4-pin 12V)	
3	GND	
4	GND	
5	+12V (Only for 2x4-pin 12V)	
6	+12V (Only for 2x4-pin 12V)	
7	+12V	
8	+12V	



ATX:			
Pin No.	Definition	Pin No.	Definition
1	3.3V	13	3.3V
2	3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON (soft On/Off)
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power Good	20	-5V
9	5VSB (stand by +5V)	21	+5V
10	+12V	22	+5V
11	+12V (Only for 2x12-pin ATX)	23	+5V (Only for 2x12-pin ATX)
12	3.3V (Only for 2x12-pin ATX)	24	GND (Only for 2x12-pin ATX)

3/4/5) CPU_FAN/SYS_FAN1/SYS_FAN2/PWR_FAN (Fan Headers)


The motherboard has a 4-pin CPU fan header (CPU_FAN), a 4-pin (SYS_FAN2) and a 3-pin (SYS_ FAN1) system fan headers, and a 3-pin power fan header (PWR_FAN). Most fan headers possess a foolproof insertion design. When connecting a fan cable, be sure to connect it in the correct orientation (the black connector wire is the ground wire). The motherboard supports CPU fan speed control, which requires the use of a CPU fan with fan speed control design. For optimum heat dissipation, it is recommended that a system fan be installed inside the chassis.

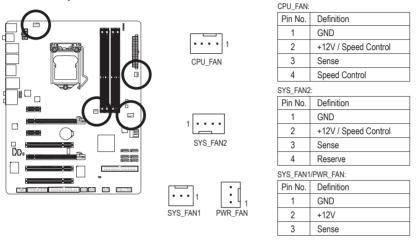


- Be sure to connect fan cables to the fan headers to prevent your CPU and system from overheating. Overheating may result in damage to the CPU or the system may hang.
- These fan headers are not configuration jumper blocks. Do not place a jumper cap on the headers.

6) FDD (Floppy Disk Drive Connector)


This connector is used to connect a floppy disk drive. The types of floppy disk drives supported are: 360 KB, 720 KB, 1.2 MB, 1.44 MB, and 2.88 MB. Before connecting a floppy disk drive, be sure to locate pin 1 of the connector and the floppy disk drive cable. The pin 1 of the cable is typically designated by a stripe of different color. For purchasing the optional floppy disk drive cable, please contact the local dealer.

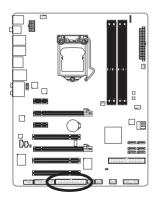




7) IDE (IDE Connector)


The IDE connector supports up to two IDE devices such as hard drives and optical drives. Before attaching the IDE cable, locate the foolproof groove on the connector. If you wish to connect two IDE devices, remember to set the jumpers and the cabling according to the role of the IDE devices (for example, master or slave). (For information about configuring master/slave settings for the IDE devices, read the instructions from the device manufacturers.)

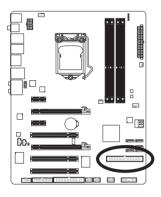



8) SATA2_0/1/2/3/4/5 (SATA 3Gb/s Connectors, Controlled by Intel P55 Chipset)

The SATA connectors conform to SATA 3Gb/s standard and are compatible with SATA 1.5Gb/s standard. Each SATA connector supports a single SATA device. The Intel P55 Chipset supports RAID 0, RAID 1, RAID 5, and RAID 10. Refer to Chapter 5, "Configuring SATA Hard Drive(s)," for instructions on configuring a RAID array.

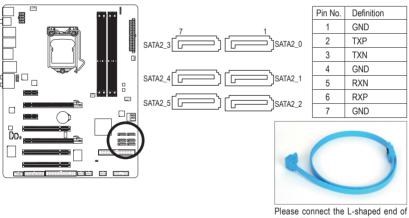

Please connect the L-shaped end of the SATA cable to your SATA hard drive.




- A RAID 0 or RAID 1 configuration requires at least two hard drives. If more than two hard drives are to be used, the total number of hard drives must be an even number.
- A RAID 5 configuration requires at least three hard drives. (The total number of hard drives does not have to be an even number.)
- A RAID 10 configuration requires at least four hard drives and the total number of hard drives must be an even number.

9) GSATA3_6/7 (SATA 6Gb/s Connectors, Controlled by Marvell 9128)

A RAID 0 or RAID 1 configuration requires at least two hard drives. If more than two hard drives are to be used, the total

number of hard drives must be an even number

The SATA connectors conform to SATA 6Gb/s standard and are compatible with SATA 3Gb/s and SATA 1.5Gb/s standards. Each SATA connector supports a single SATA device. The Marvell 9128 supports RAID 0 and RAID 1. Refer to Chapter 5, "Configuring SATA Hard Drive(s)," for instructions on configuring a RAID array.

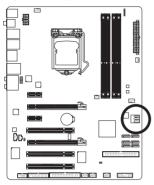




Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND



Please connect the L-shaped end of the SATA cable to your SATA hard drive.

10) BAT (Battery)

The battery provides power to keep the values (such as BIOS configurations, date, and time information) in the CMOS when the computer is turned off. Replace the battery when the battery voltage drops to a low level, or the CMOS values may not be accurate or may be lost.

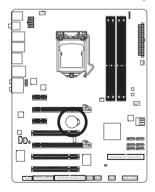



You may clear the CMOS values by removing the battery:

 $1. \ \ {\rm Turn \ off \ your \ computer \ and \ unplug \ the \ power \ cord.}$


- Gently remove the battery from the battery holder and wait for one minute. (Or use a metal object like a screwdriver to touch the positive and negative terminals of the battery holder, making them short for 5 seconds.)
- 3. Replace the battery.
- 4. Plug in the power cord and restart your computer.




- Always turn off your computer and unplug the power cord before replacing the battery.
- Replace the battery with an equivalent one. Danger of explosion if the battery is replaced with an incorrect model.
- Contact the place of purchase or local dealer if you are not able to replace the battery by yourself or uncertain about the battery model.
- When installing the battery, note the orientation of the positive side (+) and the negative side (-) of the battery (the positive side should face up).
- · Used batteries must be handled in accordance with local environmental regulations.

11) F_PANEL (Front Panel Header)

Connect the power switch, reset switch, speaker, chassis intrusion switch/sensor and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

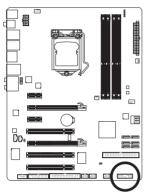

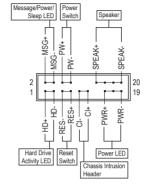

• MSG/PWR (Message/Power/Sleep LED, Yellow/Purple):

System Status	LED	Connects to the power status indicator on the chassis front panel. The LED
S0	On	is on when the system is operating. The LED keeps blinking when the sys-
S1	Blinking	tem is in S1 sleep state. The LED is off when the system is in S3/S4 sleep
S3/S4/S5	Off	state or powered off (S5).

• PW (Power Switch, Red):

Connects to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch (refer to Chapter 2, "BIOS Setup," "Power Management Setup," for more information).

• SPEAK (Speaker, Orange):

Connects to the speaker on the chassis front panel. The system reports system startup status by issuing a beep code. One single short beep will be heard if no problem is detected at system startup. If a problem is detected, the BIOS may issue beeps in different patterns to indicate the problem. Refer to Chapter 5, "Troubleshooting," for information about beep codes.

 HD (Hard Drive Activity LED, Blue) Connects to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.


- RES (Reset Switch, Green):
 Connects to the reset switch on the chassis front panel. Press the reset switch to restart the computer
 if the computer freezes and fails to perform a normal restart.
- CI (Chassis Intrusion Header, Gray): Connects to the chassis intrusion switch/sensor on the chassis that can detect if the chassis cover has been removed. This function requires a chassis with a chassis intrusion switch/sensor.



The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

12) F_AUDIO (Front Panel Audio Header)

The front panel audio header supports Intel High Definition audio (HD) and AC'97 audio. You may connect your chassis front panel audio module to this header. Make sure the wire assignments of the module connector match the pin assignments of the motherboard header. Incorrect connection between the module connector and the motherboard header will make the device unable to work or even damage it.

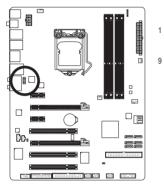

	For HD F	ront Panel Audio
	Pin No.	Definition
	1	MIC2_L
	2	GND
0	3	MIC2_R
	4	-ACZ_DET
	5	LINE2_R
	6	GND
	7	FAUDIO_JD
	8	No Pin
	9	LINE2_L
	10	GND


For AC'97 Front Panel Audio: Pin No. Definition		
FIITINU.	Deminion	
1	MIC	
2	GND	
3	MIC Power	
4	NC	
5	Line Out (R)	
6	NC	
7	NC	
8	No Pin	
9	Line Out (L)	
10	NC	



- The front panel audio header supports HD audio by default. If your chassis provides an AC'97 front panel audio module, refer to the instructions on how to activate AC'97 functionality via the audio software in Chapter 5, "Configuring 2/4/5.1/7.1-Channel Audio."
- Audio signals will be present on both of the front and back panel audio connections simultaneously. If you want to mute the back panel audio (only supported when using an HD front panel audio module), refer to Chapter 5, "Configuring 2/4/5.1/7.1-Channel Audio."
- Some chassis provide a front panel audio module that has separated connectors on each wire
 instead of a single plug. For information about connecting the front panel audio module that
 has different wire assignments, please contact the chassis manufacturer.

13) CD_IN (CD In Connector)

You may connect the audio cable that came with your optical drive to the header.

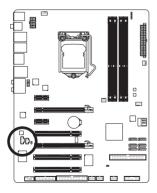




Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

14) SPDIF_I (S/PDIF In Header)

This header supports digital S/PDIF In and can connect to an audio device that supports digital audio out via an optional S/PDIF In cable. For purchasing the optional S/PDIF In cable, please contact the local dealer.

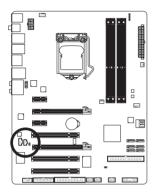


Ē		_
		Ļ
ļ	•	
h	2	٢
	1	

Pin No.	Definition
1	Power
2	SPDIFI
3	GND

15) SPDIF_O (S/PDIF Out Header)

This header supports digital S/PDIF Out and connects a S/PDIF digital audio cable (provided by expansion cards) for digital audio output from your motherboard to certain expansion cards like graphics cards and sound cards. For example, some graphics cards may require you to use a S/PDIF digital audio cable for digital audio output from your motherboard to your graphics card if you wish to connect an HDMI display to the graphics card and have digital audio output from the HDMI display at the same time. For information about connecting the S/PDIF digital audio cable, carefully read the manual for your expansion card.

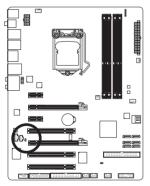

ſ)
С	•)


Pin No.	Definition
1	SPDIFO
2	GND

16) F_USB1/F_USB2/F_USB3 (USB Headers)

The headers conform to USB 2.0/1.1 specification. Each USB header can provide two USB ports via an optional USB bracket. For purchasing the optional USB bracket, please contact the local dealer.

9

10

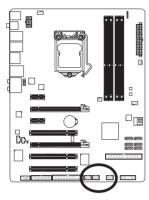

	Pin No.
	1
1	2
••• 1 •• 2	3
	4
	5
	6
	7
	8
	9

Definition

USB DX-

USB DY-

USB DX+

USB DY+

GND

GND

NC

10

No Pin


Power (5V) Power (5V)

When the system is in S4/S5 mode, only the USB ports routed to the F_USB1 header can support the ON/OFF Charge function.

- Do not plug the IEEE 1394 bracket (2x5-pin) cable into the USB header.
- Prior to installing the USB bracket, be sure to turn off your computer and unplug the power cord from the power outlet to prevent damage to the USB bracket.

17) LPT (Parallel Port Header)

The LPT header can provide one parallel port via an optional LPT port cable. For purchasing the optional LPT port cable, please contact the local dealer.

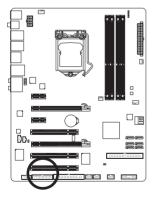


	_		 	 	_	 _	 	 	 =14
25									11
20									12
26									11 -
		_	 	 		 	 	 	

Pin No.	Definition	Pin No.	Definition
1	STB-	14	GND
2	2 AFD-		PD6
3	PD0	16	GND
4	ERR-	17	PD7
5	PD1	18	GND
6	INIT-	19	ACK-
7	PD2	20	GND
8	SLIN-	21	BUSY
9	PD3	22	GND
10	GND	23	PE
11	PD4	24	No Pin
12	GND	25	SLCT
13	PD5	26	GND

18) COMA (Serial Port Header)

The COM header can provide one serial port via an optional COM port cable. For purchasing the optional COM port cable, please contact the local dealer.

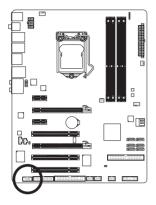


9 10		::	1 2	

Pin No.	Definition	
1	NDCD-	
2	NSIN	
3	NSOUT	
4	NDTR-	
5	GND	
6	NDSR-	
7	NRTS-	
8	NCTS-	
9	NRI-	
10	No Pin	

19) CLR_CMOS (Clearing CMOS Jumper)

Use this jumper to clear the CMOS values (e.g. date information and BIOS configurations) and reset the CMOS values to factory defaults. To clear the CMOS values, place a jumper cap on the two pins to temporarily short the two pins or use a metal object like a screwdriver to touch the two pins for a few seconds.

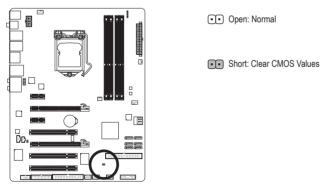




- Always turn off your computer and unplug the power cord from the power outlet before clearing the CMOS values.
- After clearing the CMOS values and before turning on your computer, be sure to remove the jumper cap from the jumper. Failure to do so may cause damage to the motherboard.
- After system restart, go to BIOS Setup to load factory defaults (select Load Optimized Defaults) or manually configure the BIOS settings (refer to Chapter 2, "BIOS Setup," for BIOS configurations).

20) PHASE LED

The number of lighted LEDs indicates the CPU loading. The higher the CPU loading, the more the number of lighted LEDs. To enable the Phase LED display function, please first enable Dynamic Energy Saver^m 2. Refer to Chapter 4, "Dynamic Energy Saver^m 2," for more details.

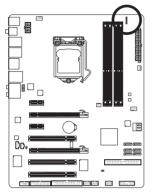

·	

Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) records hardware parameters of the system in the CMOS on the motherboard. Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters and loading operating system, etc. BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features. When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.

To access the BIOS Setup program, press the <Delete> key during the POST when the power is turned on. To see more advanced BIOS Setup menu options, you can press <Ctrl> + <F1> in the main menu of the BIOS Setup program.

To upgrade the BIOS, use either the GIGABYTE Q-Flash or @BIOS utility.

- Q-Flash allows the user to quickly and easily upgrade or back up BIOS without entering the operating system.
- @BIOS is a Windows-based utility that searches and downloads the latest version of BIOS from the Internet and updates the BIOS.

For instructions on using the Q-Flash and @BIOS utilities, refer to Chapter 4, "BIOS Update Utilities."



- Because BIOS flashing is potentially risky, if you do not encounter problems using the current version of BIOS, it is recommended that you not flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction.
- BIOS will emit a beep code during the POST. Refer to Chapter 5, "Troubleshooting," for the beep codes description.
- It is recommended that you not alter the default settings (unless you need to) to prevent system
 instability or other unexpected results. Inadequately altering the settings may result in system's
 failure to boot. If this occurs, try to clear the CMOS values and reset the board to default values.
 (Refer to the "Load Optimized Defaults" section in this chapter or introductions of the battery/
 clearing CMOS jumper in Chapter 1 for how to clear the CMOS values.)

2-1 Startup Screen

The following screens may appear when the computer boots.

A. The LOGO Screen (Default)



B. The POST Screen

Motherboard Model — BIOS Version —	Award Modular BIOS v6.00PG, An Energy Star Ally Copyright (C) 1984-2010, Award Software, Inc. P55A-UD3P F9g	ENERGY WERE REVENSE	
	: BIOS Setup <f9>: XpressRecovery2 <f12>: Boot Menu 04/06/2010-P55-7A89RG0TC-00</f12></f9>	<pre>I <end>: Qflash</end></pre>	

Function Keys:

<TAB>: POST SCREEN

Press the <Tab> key to show the BIOS POST screen. To show the BIOS POST screen at system startup, refer to the instructions on the **Full Screen LOGO Show** item on page 49.

: BIOS SETUP\Q-FLASH

Press the <Delete> key to enter BIOS Setup or to access the Q-Flash utility in BIOS Setup.

<F9>: XPRESS RECOVERY2

If you have ever entered Xpress Recovery2 to back up hard drive data using the driver disk, the <F9> key can be used for subsequent access to Xpress Recovery2 during the POST. For more information, refer to Chapter 4, "Xpress Recovery2."

<F12>: BOOT MENU

Boot Menu allows you to set the first boot device without entering BIOS Setup. In Boot Menu, use the up arrow key <1> or the down arrow key <1> to select the first boot device, then press <Enter> to accept. To exit Boot Menu, press <Esc>. The system will directly boot from the device configured in Boot Menu. Note: The setting in Boot Menu is effective for one time only. After system restart, the device boot order will still be based on BIOS Setup settings. You can access Boot Menu again to change the first boot device setting as needed.

<END>: Q-FLASH

Press the <End> key to access the Q-Flash utility directly without having to enter BIOS Setup first.

2-2 The Main Menu

Once you enter the BIOS Setup program, the Main Menu (as shown below) appears on the screen. Use arrow keys to move among the items and press <Enter> to accept or enter a sub-menu.

(Sample BIOS Version: GA-P55A-UD3P F9g)

_		CMOS Setup	Utility-Copyright	(C) 1	1984-2010 Award Software
	MB Intelligent Tweaker(M.I.T.)		Load Optimized Defaults		
	 Standard CMOS Features 		Set Supervisor Password		
	 Advanced BIOS Features 		Set User Password		
	 Integrated Peripherals 		Save & Exit Setup		
	 Power Management Setup 		Exit Without Saving		
	►	PC Health Status		►	Security Chip Configuration ^①
		Load Fail-Safe Defaults			
	ESC	: Quit	↑↓→←: Select It	lem	F11: Save CMOS to BIOS
	F8: 0	Q-Flash	F10: Save & Exi	t Setu	p F12: Load CMOS from BIOS
	Change CPU's Clock & Voltage				

BIOS Setup Program Function Keys

<↑><↓><←><→	> Move the selection bar to select an item
<enter></enter>	Execute command or enter the submenu
<esc></esc>	Main Menu: Exit the BIOS Setup program
	Submenus: Exit current submenu
<page up=""></page>	Increase the numeric value or make changes
<page down=""></page>	Decrease the numeric value or make changes
<f1></f1>	Show descriptions of the function keys
<f2></f2>	Move cursor to the Item Help block on the right (submenus only)
<f5></f5>	Restore the previous BIOS settings for the current submenus
<f6></f6>	Load the Fail-Safe BIOS default settings for the current submenus
<f7></f7>	Load the Optimized BIOS default settings for the current submenus
<f8></f8>	Access the Q-Flash utility
<f9></f9>	Display system information
<f10></f10>	Save all the changes and exit the BIOS Setup program
<f11></f11>	Save CMOS to BIOS
<f12></f12>	Load CMOS from BIOS

Main Menu Help

The on-screen description of a highlighted setup option is displayed on the bottom line of the Main Menu.

Submenu Help

While in a submenu, press <F1> to display a help screen (General Help) of function keys available for the menu. Press <Esc> to exit the help screen. Help for each item is in the Item Help block on the right side of the submenu.



- If you do not find the settings you want in the Main Menu or a submenu, press <Ctrl>+<F1> to access more advanced options.
- When the system is not stable as usual, select the Load Optimized Defaults item to set your system to its defaults.
- The BIOS Setup menus described in this chapter are for reference only and may differ by BIOS version.
- ① Only for GA-P55A-UD3P.

The Functions of the <F11> and <F12> keys (For the Main Menu Only) F11: Save CMOS to BIOS

This function allows you to save the current BIOS settings to a profile. You can create up to 8 profiles (Profile 1-8) and name each profile. First enter the profile name (to erase the default profile name, use the SPACE key) and then press <Enter> to complete.

F12: Load CMOS from BIOS

If your system becomes unstable and you have loaded the BIOS default settings, you can use this function to load the BIOS settings from a profile created before, without the hassles of reconfiguring the BIOS settings. First select the profile you wish to load, then press <Enter> to complete.

MB Intelligent Tweaker(M.I.T.) Use this menu to configure the clock, frequency and voltages of your CPU, memory, etc.

Standard CMOS Features

Use this menu to configure the system time and date, hard drive types, floppy disk drive types, and the type of errors that stop the system boot, etc.

Advanced BIOS Features

Use this menu to configure the device boot order, advanced features available on the CPU, and the primary display adapter.

Integrated Peripherals

Use this menu to configure all peripheral devices, such as IDE, SATA, USB, integrated audio, and integrated LAN, etc.

Power Management Setup

Use this menu to configure all the power-saving functions.

PC Health Status

Use this menu to see information about autodetected system/CPU temperature, system voltage and fan speed, etc.

Load Fail-Safe Defaults

Fail-Safe defaults are factory settings for the most stable, minimal-performance system operations.

Load Optimized Defaults

Optimized defaults are factory settings for optimal-performance system operations.

Set Supervisor Password

Change, set, or disable password. It allows you to restrict access to the system and BIOS Setup. A supervisor password allows you to make changes in BIOS Setup.

Set User Password

Change, set, or disable password. It allows you to restrict access to the system and BIOS Setup. A user password only allows you to view the BIOS settings but not to make changes.

Save & Exit Setup

Save all the changes made in the BIOS Setup program to the CMOS and exit BIOS Setup. (Pressing <F10> can also carry out this task.)

Exit Without Saving

Abandon all changes and the previous settings remain in effect. Pressing <Y> to the confirmation message will exit BIOS Setup. (Pressing <Esc> can also carry out this task.)

Security Chip Configuration ① Use this menu to configure the TPM function.

0 Only for GA-P55A-UD3P.

2-3 MB Intelligent Tweaker(M.I.T.)

	up Utility-Copyright (C) 1984-2010 Award Softw MB Intelligent Tweaker(M.I.T.)	vare
	č	
M.I.T Current Status	[Press Enter]	Item Help Menu Level 🕨
Advanced Frequency Settings	[Press Enter]	Menu Level
Advanced Memory Settings	[Press Enter]	
Advanced Voltage Settings	[Press Enter]	
 Miscellaneous Settings 	[Press Enter]	
BIOS Version	F9g	
BCLK	136.73 MHz	
CPU Frequency	2324.39 MHz	
Memory Frequency	1367.34 MHz	
Total Memory Size	2048 MB	
CDUT (45°C	
CPU Temperature	45℃ 40°C	
PCH Temperature	40°C	
Vcore	1 168V	
DRAM Voltage	1.584V	
↑↓→←: Move Enter: Select		C: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults F7:	Optimized Defaults

Whether the system will work stably with the overclock/overvoltage settings you made is dependent on your overall system configurations. Incorrectly doing overclock/overvoltage may result in damage to CPU, chipset, or memory and reduce the useful life of these components. This page is for advanced users only and we recommend you not to alter the default settings to prevent system instability or other unexpected results. (Inadequately altering the settings may result in system's failure to boot. If this occurs, clear the CMOS values and reset the board to default values.)

M.I.T. Current Status

This screen provides information on CPU/memory frequencies/parameters.

Advanced Frequency Settings

	CMOS Setu		right (C) 19 Frequency	984-2010 Award Settings	Software	e	
	U Clock Ratio		[16X]				Item Help
	U Frequency		13GHz (13			Menu Le	evel 🕨
	vanced CPU Core Features		[Press Ent	er]			
	I Clock Ratio		[Auto]				
	I Link Speed		4.26GHz				
Unc	core Clock Ratio						
			2000MHz				
	>>> Standard Clock Control						
	e Clock(BCLK) Control		[Disabled]				
	LK Frequency (Mhz)						
	reme Memory Profile (X.M.P.) (Note)		[Disabled]				
	tem Memory Multiplier	(SPD)	[Auto]				
	mory Frequency (Mhz)						
	Express Frequency (Mhz)		[Auto]				
	>>> Advanced Clock Control						
	U Clock Drive		[800mV]				
	l Express Clock Drive		[900mV]				
CPU	U Clock Skew		[0ps]				
1 ↑↓→←	: Move Enter: Select	+/-/PU/PD: Va	lue	F10: Save	ESC: E	Exit	F1: General Help
		F6: Fail-Safe I				timized D	

(Note) This item appears only if you install a memory module that supports this feature.

CPU Clock Ratio

Allows you to alter the clock ratio for the installed CPU. The adjustable range is dependent on the CPU being installed.

☞ CPU Frequency

Displays the current operating CPU frequency.

Advanced CPU Core Features

CMOS Sett	up Utility-Copyright (C) 1984-2010 Award S Advanced CPU Core Features	Software
Intel(R) Turbo Boost Tech. ^(Note) CPU Cores Enabled. ^(Note) CPU Multi-Threading. ^(Note) CPU Enhanced Halt (C1E). ^(Note) C3/C6/C7 State Support. ^(Note) CPU Thermal Monitor. ^(Note) CPU EIST Function. ^(Note) Bi-Directional PROCHOT. ^(Note)	[Auto] [All] [Enabled] [Auto] [Auto] [Auto] [Auto] [Auto]	Item Help Menu Level ≯
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

∽ Intel(R) Turbo Boost Tech.^(Note)

Allows you to determine whether to enable the Intel CPU Turbo Boost technology. Auto lets the BIOS automatically configure this setting. (Default: Auto)

→ CPU Cores Enabled (Note)

Allows you to determine whether to enable all CPU cores.

- ► All Enables all CPU cores. (Default)
- ▶ 1 Enables only one CPU core.
- ▶ 2 Enables only two CPU cores.
- ▶ 3 Enables only three CPU cores.

∽ CPU Multi-Threading ^(Note)

Allows you to determine whether to enable multi-threading technology when using an Intel CPU that supports this function. This feature only works for operating systems that support multi-processor mode. (Default: Enabled)

→ CPU Enhanced Halt (C1E) (Note)

Enables or disables Intel CPU Enhanced Halt (C1E) function, a CPU power-saving function in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

(Note) This item is present only if you install a CPU that supports this feature. For more information about Intel CPUs' unique features, please visit Intel's website.

C3/C6/C7 State Support (Note)

Allows you to determine whether to let the CPU enter C3/C6/C7 mode in system halt state. When enabled, the CPU core frequency and voltage will be reduced during system halt state to decrease power consumption. The C3/C6/C7 state is a more enhanced power-saving state than C1. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

CPU Thermal Monitor (Note)

Enables or disables Intel CPU Thermal Monitor function, a CPU overheating protection function. When enabled, the CPU core frequency and voltage will be reduced when the CPU is overheated. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

∽ CPU EIST Function ^(Note)

Enables or disables Enhanced Intel SpeedStep Technology (EIST). Depending on CPU loading, Intel EIST technology can dynamically and effectively lower the CPU voltage and core frequency to decrease average power consumption and heat production. **Auto** lets the BIOS automatically configure this setting. (Default: Auto)

☞ Bi-Directional PROCHOT (Note)

- ➤ Auto Lets BIOS automatically configure this setting. (Default)
- Enabled When the CPU or chipset detects that an overheating is occurring, PROCHOT signals will be emitted to lower CPU performance to decrease heat production.
- Disabled Only allows the CPU to detect whether an overheating is occurring to emit PROCHOT signals.

∽ QPI Clock Ratio

Allows you to set the QPI clock ratio. Options are: Auto (default), x32, x36. The item is adjustable only if a CPU with unlocked clock ratio is installed.

OPI Link Speed

Displays the current operating QPI link speed.

☞ Uncore Clock Ratio

Displays the Uncore clock ratio.

∽ Uncore Frequency

This value is determined by multiplying the BLCK Frequency value by the Uncore Clock Ratio value.

>>>> Standard Clock Control

∽ Base Clock(BCLK) Control

Enables or disables the control of CPU base clock. **Enabled** will allow the **BCLK Frequency(Mhz)** item below to be configurable. Note: If your system fails to boot after overclocking, please wait for 20 seconds to allow for automated system reboot, or clear the CMOS values to reset the board to default values. (Default: Disabled)

(Note) This item is present only if you install a CPU that supports this feature. For more information about Intel CPUs' unique features, please visit Intel's website.

☞ BCLK Frequency(Mhz)

Allows you to manually set the CPU base clock. The adjustable range is from 100 MHz to 1200 MHz. This item is configurable only if the **Base Clock(BCLK) Control** option is enabled.

Important: It is highly recommended that the CPU frequency be set in accordance with the CPU specifications.

C Extreme Memory Profile (X.M.P.) (Note)

Allows the BIOS to read the SPD data on XMP memory $\mathsf{module}(s)$ to enhance memory performance when enabled.

- ✤ Disabled Disables this function. (Default)
- ▶ Profile1 Uses Profile 1 settings.
- ▶ Profile2^(Note) Uses Profile 2 settings.

∽ System Memory Multiplier (SPD)

Allows you to set the system memory multiplier. Auto sets memory multiplier according to memory SPD data. (Default: Auto)

Memory Frequency(Mhz)

The first memory frequency value is the normal operating frequency of the memory being used; the second is the memory frequency that is automatically adjusted according to the **BCLK Frequency(Mhz)** and **System Memory Multiplier** settings.

∽ PCI Express Frequency(Mhz)

Allows you to manually set the PCIe clock frequency. The adjustable range is from 90 MHz to 150 MHz. **Auto** sets the PCIe clock frequency to standard 100 MHz. (Default: Auto)

>>>> Advanced Clock Control

→ CPU Clock Drive

Allows you to adjust the amplitude of the CPU and Chipset clock. Options are: 700mV, 800mV (default), 900mV, 1000mV.

∽ PCI Express Clock Drive

Allows you to adjust the amplitude of the PCI Express and Chipset clock. Options are: 700mV, 800mV, 900mV (default), 1000mV.

CPU Clock Skew

Allows you to set the CPU clock prior to the Chipset clock. Options are: 0ps~750ps. (Default: 0ps)

(Note) This item appears only if you install a memory module that supports this feature.

Advanced Memory Settings

	CMOS Set		right (C) 19 d Memory (984-2010 Award S Settings	Softwar	e	
x x x	Extreme Memory Profile (X.M.P.) ^(None) System Memory Multiplier Memory Frequency (Mhz) Performance Enhance DRAM Timing Selectable Profile DDR Voltage Profile QPI Voltage Channel Interleaving South Interleaving South A Timing Settings South A Timing Settings Channel B Timing Settings		[Disabled] [Auto] 1333 [Turbo] [Auto] 1.5V 1.1V Auto Auto [Press Ent	er]		h Menu Level	em Help
<u></u>	L→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Va F6: Fail-Safe		F10: Save	ESC: F7: O	Exit F1 ptimized Defa	General Help ults

☞ Extreme Memory Profile (X.M.P.) ^(Note), System Memory Multiplier (SPD),

Memory Frequency(Mhz)

The settings under the three items above are synchronous to those under the same items on the Advanced Frequency Settings menu.

∽ Performance Enhance

Allows the system to operate at three different performance levels.

- ➡ Standard Lets the system operate at its basic performance level.
- >> Turbo Lets the system operate at its good performance level. (Default)
- ➤ Extreme Lets the system operate at its best performance level.

∽ DRAM Timing Selectable (SPD)

Quick and Expert allows the Channel Interleaving and Rank Interleaving items to be configurable. Options are: Auto (default), Quick, Expert.

∽ Profile DDR Voltage

When using a non-XMP memory module or **Extreme Memory Profile (X.M.P.)** is set to **Disabled**, this item will display as **1.5V**. When **Extreme Memory Profile (X.M.P.)** is set to **Profile1** or **Profile2**, this item will display the value based on the SPD data on the XMP memory.

∽ Profile QPI Voltage

The value displayed here is dependent on the CPU being used.

∽ Channel Interleaving

Options are: Auto (default), 1~6.

Options are: Auto (default), 1~4.

(Note) This item appears only if you install a memory module that supports this feature.

>>>> Channel A/B Timing Settings

	CMOS Set		Copyright (C) 1 annel A Timing	984-2010 Award So Settings	oftware	
	>>>>> Channel A Standard Timing	Control				Item Help
x	CAS Latency Time				Menu	Level >>>
x	tRCD					
x	tRP					
x	tRAS					
	>>>>> Channel A Advanced Timing	Control				
x						
x	tRRD					
x	tWTR					
x						
x	tWTP					
x						
x	tRFC					
x	tRTP					
x						
x	Command Rate (CMD)					
	>>>>> Channel A Misc Timing Con					
x	B2B CAS Delay					
x	Round Trip Latency					
<u></u> ↑↓	L→←: Move Enter: Select F5: Previous Values	+/-/PU/P F6: Fail-	D: Value Safe Defaults		ESC: Exit F7: Optimized	F1: General Help Defaults

>>>> Channel A/B Standard Timing Control

∽ CAS Latency Time

Options are: Auto (default), 6~15.

ං tRCD

Options are: Auto (default), 1~15.

∽ tRP

Options are: Auto (default), 1~15.

୍ମ tRAS

Options are: Auto (default), 1~31.

>>>> Channel A/B Advanced Timing Control

ා tRC

Options are: Auto (default), 1~63.

ଙ tRRD

Options are: Auto (default), 1~7.

∽ tWTR

Options are: Auto (default), 1~31.

ு tWR

Options are: Auto (default), 1~15.

∽ tWTP

Options are: Auto (default), 1~31.

∽ tWL

Options are: Auto (default), 1~10

☞ tRFC

Options are: Auto (default), 1~255.

ଙ tRTP

Options are: Auto (default), 1~15.

☞ tFAW

Options are: Auto (default), 1~63.

Command Rate(CMD) Options are: Auto (default), 1~3.

>>>> Channel A/B Misc Timing Control

☞ B2B CAS Delay

Options are: Auto (default), 1~31.

∽ Round Trip Latency

Options are: Auto (default), 1~255.

Advanced Voltage Settings

CMOS S		yright (C) 1 ced Voltage	984-2010 Award Settings	Softwa	re	
***** Mother Board Voltage Cont	rol *****					Item Help
		Current			Menu	Level 🕨
Load-Line Calibration		[Auto]				
CPU Vcore	1.25625V	[Auto]				
x Dynamic Vcore (DVID)						
QPI/Vtt Voltage	1.100V	[Auto]				
>>> MCH/ICH						
PCH Core	1.050V	[Auto]				
CPU PLL	1.800V	[Auto]				
>>> DRAM						
DRAM Voltage	1.500V	[Auto]				
DRAM Termination	0.750V	[Auto]				
Ch-A Data VRef.	0.750V	[Auto]				
Ch-B Data VRef.	0.750V	[Auto]				
Ch-A Address VRef.	0.750V	[Auto]				
Ch-B Address VRef.	0.750V	[Auto]				
$\uparrow \downarrow \rightarrow \leftarrow$: Move Enter: Select	+/-/PU/PD: \	/alue	F10: Save	ESC:	Exit	F1: General Help
F5: Previous Values	F6: Fail-Safe	Defaults		F7: O	ptimized	Defaults

>>> CPU

∽ Load-Line Calibration

Enables or disables Load-Line Calibration. Enabling this feature adjusts Vdroop, keeping the CPU voltage more constant under light and heavy CPU load. **Disabled** sets the CPU voltage following Intel specifications. (Default: Auto)

Note: Enabling Load-Line Calibration may result in damage to your CPU or reduce the useful life of the CPU.

∽ CPU Vcore

The default is Auto.

∽ Dynamic Vcore(DVID)

This option is configurable only when CPU Vcore is set to Normal. The default is Auto.

The default is Auto.

- >>> MCH/ICH
- PCH CoreThe default is Auto.
- CPU PLL
 The default is Auto.

>>> DRAM

- DRAM Voltage The default is Auto.
- DRAM Termination The default is Auto.
- Ch-A Data VRef. The default is Auto.
- Ch-B Data VRef.The default is Auto.
- Ch-A Address VRef. The default is Auto.
- Ch-B Address VRef. The default is Auto.

Miscellaneous Settings

CMOS Sett	p Utility-Copyright (C) 1984-2010 Award Soft Miscellaneous Settings	ware
Isochronous Support	[Enabled]	Item Help
Virtualization Technology ^(Kote)	[Enabled]	Menu Level >>
↑↓→←: Move Enter: Select F5: Previous Values		SC: Exit F1: General Help : Optimized Defaults

∽ Isochronous Support

Determines whether to enable specific streams within the CPU and Chipset. (Default: Enabled)

∽ Virtualization Technology ^(Note)


Enables or disables Intel Virtualization Technology. Virtualization enhanced by Intel Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple virtual systems. (Default: Enabled)

CMOS Set	up Utility-Copyright (C) 1984-2010 Award Soft MB Intelligent Tweaker(M.I.T.)	ware
 M.I.T Current Status Advanced Frequency Settings Advanced Memory Settings Advanced Voltage Settings Miscellaneous Settings 	[Press Enter] [Press Enter] [Press Enter] [Press Enter] [Press Enter]	Item Help Menu Level ►
BIOS Version BCLK CPU Frequency Memory Frequency Total Memory Size	F9g 136.73 MHz 2324.39 MHz 1367.34 MHz 2048 MB	
CPU Temperature PCH Temperature Vcore DRAM Voltage	45℃ 40℃ 1.168V 1.584V	
↑↓→←: Move Enter: Select F5: Previous Values		C: Exit F1: General Help : Optimized Defaults

This section provides information on the BIOS version, CPU base clock, CPU frequency, memory frequency, total memory size , CPU temperature, Chipset temperature, Vcore, and memory voltage.

(Note) This item is present only if you install a CPU that supports this feature. For more information about Intel CPUs' unique features, please visit Intel's website.

2-4 Standard CMOS Features

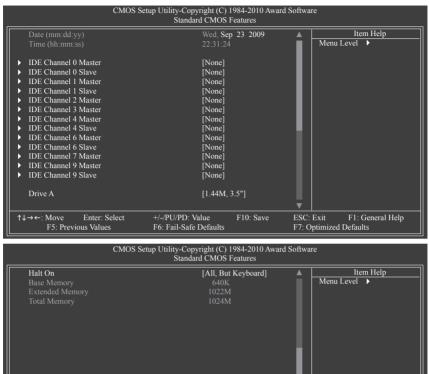

つ Date (mm:dd:yy)

F5: Previous Values

Enter: Select

↑↓→←: Move

Sets the system date. The date format is week (read-only), month, date and year. Select the desired field and use the up arrow or down arrow key to set the date.

F10: Save

+/-/PU/PD: Value

F6: Fail-Safe Defaults

ESC: Exit

F7: Optimized Defaults

F1: General Help

∽ Time (hh:mm:ss)

Sets the system time. For example, 1 p.m. is 13:0:0. Select the desired field and use the up arrow or down arrow key to set the time.

∽ IDE Channel 0, 1 Master/Slave

▶ IDE Channel 0, 1 Master/Slave

Configure your IDE/SATA devices by using one of the three methods below:

- None If no IDE/SATA devices are used, set this item to None so the system will skip the detection of the device during the POST for faster system startup.
- Auto Lets the BIOS automatically detect IDE/SATA devices during the POST. (Default)
- Manual Allows you to manually enter the specifications of the hard drive when the hard drive access mode is set to CHS.
- Access Mode Sets the hard drive access mode. Options are: Auto (default), CHS, LBA, Large.

☞ IDE Channel 2, 3 Master, 4, 6 Master/Slave, 7 Master, 9 Master/Slave

➡ Extended IDE Drive

Configure your IDE/SATA devices by using one of the two methods below:

- Auto Lets the BIOS automatically detect IDE/SATA devices during the POST. (Default)
 None If no IDE/SATA devices are used, set this item to **None** so the system will skip
 - the detection of the device during the POST for faster system startup.

➤ Access Mode Sets the hard drive access mode. Options are: Auto (default), Large.

The following fields display your hard drive specifications. If you wish to enter the parameters manually, refer to the information on the hard drive.

- Capacity Approximate capacity of the currently installed hard drive.
- Cylinder Number of cylinders.

- ► Landing Zone Landing zone.
- ➤ Sector Number of sectors.

っ Drive A

Allows you to select the type of floppy disk drive installed in your system. If you do not install a floppy disk drive, set this item to **None**. Options are: None, 360K/5.25", 1.2M/5.25", 720K/3.5", 1.44M/3.5", 2.88M/3.5".

ං Halt On

Allows you to determine whether the system will stop for an error during the POST.

- ➤ All Errors Whenever the BIOS detects a non-fatal error the system boot will stop.
- ➤ No Errors The system boot will not stop for any error.
- All, But Keyboard The system boot will not stop for a keyboard error but stop for all other errors. (Default)
- ➤ All, But Diskette The system boot will not stop for a floppy disk drive error but stop for all other errors.
- All, But Disk/Key The system boot will not stop for a keyboard or a floppy disk drive error but it will stop for all other errors.

Memory

These fields are read-only and are determined by the BIOS POST.

- Base Memory Also called conventional memory. Typically, 640 KB will be reserved for the MS-DOS operating system.
- ➤ Extended Memory The amount of extended memory.
- ✤ Total Memory The total amount of memory installed on the system.

2-5 Advanced BIOS Features

CMOS Setu	p Utility-Copyright (C) 1984-2010 Award Sc Advanced BIOS Features	oftware
 Hard Disk Boot Priority Quick Boot First Boot Device Second Boot Device Third Boot Device Password Check HDD S.M.A.R.T. Capability Limit CPUID Max. to 3 ^(Note) No-Execute Memory Protect ^(Note) Delay For HDD (Secs) Full Screen LOGO Show Backup BIOS Image to HDD Init Display First 	[Press Enter] [Disabled] [Hard Disk] [CDROM] [Floppy] [Setup] [Disabled] [Disabled] [Enabled] [0] [Enabled] [Disabled] [Disabled] [PCI]	Item Help Menu Level ►
$\uparrow \downarrow \rightarrow \leftarrow: Move \qquad \text{Enter: Select} \\ F5: Previous Values$		ESC: Exit F1: General Help F7: Optimized Defaults

Hard Disk Boot Priority

Specifies the sequence of loading the operating system from the installed hard drives. Use the up or down arrow key to select a hard drive, then press the plus key <+> (or <PageUp>) or the minus key <-> (or <PageDown>) to move it up or down on the list. Press <Esc> to exit this menu when finished.

Quick Boot

Enables or disables the quick boot function to speed up the system boot-up process to shorten the waiting time for entering the operating system and to deliver greater efficiency for daily use. The settings here synchronize with the settings of the SMART QuickBoot of Smart 6™. (Default: Disabled)

First/Second/Third Boot Device

Specifies the boot order from the available devices. Use the up or down arrow key to select a device and press <Enter> to accept. Options are: Floppy, LS120, Hard Disk, CDROM, ZIP, USB-FDD, USB-ZIP, USB-CDROM, USB-HDD, Legacy LAN, Disabled.

Password Check

Specifies whether a password is required every time the system boots, or only when you enter BIOS Setup. After configuring this item, set the password(s) under the **Set Supervisor/User Password** item in the BIOS Main Menu.

- Setup A password is only required for entering the BIOS Setup program. (Default)
- System A password is required for booting the system and for entering the BIOS Setup program.

HDD S.M.A.R.T. Capability

Enables or disables the S.M.A.R.T. (Self Monitoring and Reporting Technology) capability of your hard drive. This feature allows your system to report read/write errors of the hard drive and to issue warnings when a third party hardware monitor utility is installed. (Default: Disabled)

(Note) This item is present only if you install a CPU that supports this feature. For more information about Intel CPUs' unique features, please visit Intel's website.

∽ Limit CPUID Max. to 3^(Note)

Allows you to determine whether to limit CPUID maximum value. Set this item to **Disabled** for Windows XP operating system; set this item to **Enabled** for legacy operating system such as Windows NT4.0. (Default: Disabled)

No-Execute Memory Protect (Note)

Enables or disables Intel Execute Disable Bit function. This function may enhance protection for the computer, reducing exposure to viruses and malicious buffer overflow attacks when working with its supporting software and system. (Default: Enabled)

∽ Delay For HDD (Secs)

Allows you to set a delay time for the BIOS to initialize the hard drive as the system boots up. The adjustable range is from 0 to 15 seconds. (Default: 0)

∽ Full Screen LOGO Show

Allows you to determine whether to display the GIGABYTE Logo at system startup. **Disabled** displays normal POST message. (Default: Enabled)

∽ Backup BIOS Image to HDD

Allows the system to copy the BIOS image file to the hard drive. If the system BIOS is corrupted, it will be recovered from this image file. (Default: Disabled)

∽ Init Display First

Specifies the first initiation of the monitor display from the installed PCI graphics card or the PCI Express graphics card.

- ▶ PCI Sets the PCI graphics card as the first display. (Default)
- ▶ PEG Sets the PCI Express graphics card on the PCIEX16 slot as the first display.
- ▶ PEG2 Sets the PCI Express graphics card on the PCIEX4 slot as the first display.

(Note) This item is present only if you install a CPU that supports this feature. For more information about Intel CPUs' unique features, please visit Intel's website.

2-6 Integrated Peripherals

CMOS Set	up Utility-Copyright (C) 1984-2010 Award Integrated Peripherals	d Software
eXtreme Hard Drive (XHD) PCH SATA Control Mode SATA Port0-3 Native Mode USB Controllers USB Legacy Function USB Storage Function Turbo SATA3/USB 3.0 Azalia Codec Onboard H/W LAN Green LAN SMART LAN Onboard LAN Boot ROM Onboard USB 3.0 Controller Onboard IDE Controller eSATA Controller eSATA Controller eSATA Controller GSATA Controller GSATA Controller GSATA Controller	[Disabled] [IDE] [Enabled] [Enabled] [Enabled] [Disabled] [Disabled] [Disabled] [Disabled] [Press Enter] [Disabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [DE] [Enabled] [DE] [Press Enter]	▲ Item Help Menu Level →
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

CMOS Se	tup Utility-Copyright (C) 1984-2010 Award Integrated Peripherals	Software
Onboard Serial Port 1 Onboard Parallel Port Parallel Port Mode	[3F8/IRQ4] [378/IRQ7] [SPP]	▲ Item Help Menu Level →
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

∽ eXtreme Hard Drive (Intel P55 Chipset)

Enables or disables the X.H.D function for the SATA controllers integrated in the Intel P55 Chipset. When set to **Enabled**, the **PCH SATA Control Mode** item below will be set to **RAID(XHD)** automatically. For details on using the GIGABYTE X.H.D utility, refer to Chaper 4, "eXtreme Hard Drive (X.H.D)." (Default: Disabled)

∽ PCH SATA Control Mode (Intel P55 Chipset)

Enables or disables RAID for the SATA controllers integrated in the Intel P55 Chipset or configures the SATA controllers to AHCI mode.

- ► IDE Disables RAID for the SATA controllers and configures the SATA controllers to IDE mode. (Default)
- ➡ RAID(XHD) Enables RAID for the SATA controllers.

AHCI Configures the SATA controllers to AHCI mode. Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced Serial ATA features such as Native Command Queuing and hot plug.

∽ SATA Port0-3 Native Mode (Intel P55 Chipset)

Specifies the operating mode of the integrated SATA controllers.

➡ Disabled	Allows the SATA controllers to operate in Legacy IDE mode. In Legacy mode the SATA controllers use dedicated IRQs that cannot be shared with other device. Set this option to Disabled if you wish to install operating systems that do not support Native mode.
➡ Enabled	Allows the SATA controllers to operate in Native IDE mode. Enable Native IDE mode if you wish to install operating systems that support Native mode. (Default)

☞ USB Controllers

Enables or disables the integrated USB 1.0 controller. (Default: Enabled) **Disabled** will turn off all of the USB functionalities below.

→ USB Legacy Function

Allows USB keyboard to be used in MS-DOS. (Default: Enabled)

☞ USB Storage Function

Determines whether to detect USB storage devices, including USB flash drives and USB hard drives during the POST. (Default: Enabled)

☞ Turbo SATA3 / USB3.0 (Marvell 9128 / NEC D720200F1 USB 3.0 Controller)

Determines whether to set the PCIe speed of the Marvell 9128 or NEC D720200F1 USB 3.0 controller to PCIe Gen 2. Please note that when only one graphics card is installed on the PCIEX16 slot, it will operate at up to x8 mode if either one of the two controllers is set to PCIe Gen 2.

- Auto Lets the BIOS automatically configure this setting, depending on the device installed. (Default)
- ▶ Turbo SATA3 Sets the PCIe speed of the Marvell 9128 controller to PCIe Gen 2.
- ▶ Turbo USB3.0 Sets the PCIe speed of the NEC D720200F1 USB 3.0 controller to PCIe Gen 2.
- Disabled forces the Marvell 9128 and NEC D720200F1 USB 3.0 controllers to PCIe Gen 1.

Azalia Codec

Enables or disables the onboard audio function. (Default: Auto)

If you wish to install a 3rd party add-in audio card instead of using the onboard audio, set this item to **Disabled**.

Onboard H/W LAN

Enables or disables the onboard LAN function. (Default: Enabled)

If you wish to install a 3rd party add-in network card instead of using the onboard LAN, set this item to **Disabled**.

Green LAN

When the onboard LAN function and **Green LAN** are enabled, the system will dynamically detect if a LAN cable is connected or not. If not, the corresponding LAN controller will be disabled automatically. (Default: Disabled)

C SMART LAN

CMOS Set	up Utility-Copyright (C) 1984-2010 Award SMART LAN	Software
Start detecting at Port Part1-2 Status = Open / Length = Part3-6 Status = Open / Length = Part4-5 Status = Open / Length = Part7-8 Status = Open / Length =	= 0m = 0m	Item Help Menu Level ≯≯
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

This motherboard incorporates cable diagnostic feature designed to detect the status of the attached LAN cable. This feature will detect cabling issue and report the approximate distance to the fault or short. Refer to the following information for diagnosing your LAN cable:

☞ When No LAN Cable Is Attached...

If no LAN cable is attached to the motherboard, the **Status** fields of all four pairs of wires will show **Open** and the **Length** fields show **0m**, as shown in the figure above.

∽ When LAN Cable Is Functioning Normally...

If no cable problem is detected on the LAN cable connected to a Gigabit hub or a 10/100 Mbps hub, the following message will appear:



➤ Link Detected Displays transmission speed.

>> Cable Length Displays the approximate length of the attached LAN cable.

Note: The Gigabit hub will only operate at a speed of 10/100 Mbps in MS-DOS mode; it will operate at a normal speed of 10/100/1000 Mbps in Windows mode or when the LAN Boot ROM is activated.

When a Cable Problem Occurs...

If a cable problem occurs on a specified pair of wires, the **Status** field will show **Short** and then length shown will be the approximate distance to the fault or short.

Example: Part1-2 Status = Short / Length = 2m

Explanation: A fault or short might occur at about 2m on Part 1-2.

Note: Part 4-5 and Part 7-8 are not used in a 10/100 Mbps environment, so their **Status** fields will show **Open**, and the length shown is the approximate length of the attached LAN cable.

Onboard LAN Boot ROM

Allows you to decide whether to activate the boot ROM integrated with the onboard LAN chip. (Default: Disabled)

∽ Onboard USB 3.0 Controller (NEC D720200F1 USB Controller)

Enables or disables the NEC D720200F1 USB controller. (Default: Enabled)

∽ Onboard IDE Controller (iTE IT8213 Chip)

Enables or disables the IDE controller integrated in the iTE IT8213 chip. (Default: Enabled)

☞ eSATA Controller (JMicron JMB362 Chip, eSATA Connectors)

Enables or disables the SATA controller integrated in the JMicron JMB362 chip. (Default: Enabled)

☞ eSATA Ctrl Mode (JMicron JMB362 Chip, eSATA Connectors)

Enables or disables RAID for the SATA controller integrated in the JMicorn JMB362 chip or configures the SATA controller to AHCI mode.

- ▶ IDE Disables RAID for the SATA controller and configures the SATA controller to IDE mode. (Default)
- AHCI Configures the SATA controller to AHCI mode. Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced Serial ATA features such as Native Command Queuing and hot plug.
- ► RAID Enables RAID for the SATA controller.

☞ GSATA Controller (Marvell 9128 Chip, GSATA3_6/7 Connectors)

Enables or disables the SATA controller integrated in the Marvell 9128 chip. (Default: Enabled)

☞ GSATA Ctrl Mode (Marvell 9128 Chip, GSATA3_6/7 Connectors)

Allows you to decide whether to configure the SATA controller integrated in the Marvell 9128 chip to AHCI mode.

► IDE Configures the SATA controller to IDE mode. (Default)

AHCI Configures the SATA controller to AHCI mode. Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced Serial ATA features such as Native Command Queuing and hot plug.

☞ GSATA RAID Configuration (Marvell 9128 Chip, GSATA3_6/7 Connectors)

Allows you to configure RAID for the Marvell 9128 SATA controller. Refer to Chapter 5, "Configuring SATA Hard Drive(s)," for instructions on configuring a RAID array.

∽ Onboard Serial Port 1

Enables or disables the first serial port and specifies its base I/O address and corresponding interrupt. Options are: Auto, 3F8/IRQ4 (default), 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Disabled.

∽ Onboard Parallel Port

Enables or disables the onboard parallel port (LPT) and specifies its base I/O address and corresponding interrupt. Options are: 378/IRQ7 (default), 278/IRQ5, 3BC/IRQ7, Disabled.

☞ Parallel Port Mode

Selects an operating mode for the onboard parallel (LPT) port. Options are: SPP (Standard Parallel Port) (default), EPP (Enhanced Parallel Port), ECP (Extended Capabilities Port), ECP+EPP.

2-7 Power Management Setup

	CMOS S	etup Utility-Copyright (C) 1984-2010 Award Power Management Setup	Software
x x x	ACPI Suspend Type Soft-Off by PWR-BTTN PME Event Wake Up Power On by Ring Resume by Alarm Date (of Month) Alarm Time (hh:mm:ss) Alarm HPET Mode ^(News) Power On By Mouse Power On By Keyboard KB Power ON Password AC Back Function ErP Support	[S3(STR)] [Instant-Off] [Enabled] [Enabled] [Disabled] Everyday 0 : 0 : 0 [Enabled] [32-bit mode] [Disabled] [Disabled] Enter [Soft-Off] [Disabled]	Item Help Menu Level ➤
[↑J	L→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

∽ ACPI Suspend Type

Specifies the ACPI sleep state when the system enters suspend.

- S1(POS) Enables the system to enter the ACPI S1 (Power on Suspend) sleep state. In S1 sleep state, the system appears suspended and stays in a low power mode. The system can be resumed at any time.
- S3(STR) Enables the system to enter the ACPI S3 (Suspend to RAM) sleep state (default). In S3 sleep state, the system appears to be off and consumes less power than in the S1 state. When signaled by a wake-up device or event, the system resumes to its working state exactly where it was left off.

∽ Soft-Off by PWR-BTTN

Configures the way to turn off the computer in MS-DOS mode using the power button.

- > Instant-Off Press the power button and then the system will be turned off instantly. (Default)
- Delay 4 Sec. Press and hold the power button for 4 seconds to turn off the system. If the power button is pressed for less than 4 seconds, the system will enter suspend mode.

☞ PME Event Wake Up

Allows the system to be awakened from an ACPI sleep state by a wake-up signal from a PCI or PCIe device. Note: To use this function, you need an ATX power supply providing at least 1A on the +5VSB lead. (Default: Enabled)

∽ Power On by Ring

Allows the system to be awakened from an ACPI sleep state by a wake-up signal from a modem that supports wake-up function. (Default: Enabled)

(Note) Supported on Windows 7/Vista operating system only.

∽ Resume by Alarm

Determines whether to power on the system at a desired time. (Default: Disabled) If enabled, set the date and time as following:

➤ Date (of Month) Alarm: Turn on the system at a specific time on each day or on a specific day in a month.

>> Time (hh: mm: ss) Alarm: Set the time at which the system will be powered on automatically.

Note: When using this function, avoid inadequate shutdown from the operating system or removal of the AC power, or the settings may not be effective.

→ HPET Support (Note)

Enables or disables High Precision Event Timer (HPET) for Windows 7/Vista operating system. (Default: Enabled)

→ HPET Mode (Note)

Allows you to select the HPET mode for your Windows 7/Vista operating system. Select **32-bit mode** when you install 32-bit Windows 7/Vista; select **64-bit mode** when you install 64-bit Windows 7/Vista. This item is configurable only if the **HPET Support** is set to **Enabled**. (Default: 32-bit mode)

∽ Power On By Mouse

Allows the system to be turned on by a PS/2 mouse wake-up event.

Note: To use this function, you need an ATX power supply providing at least 1A on the +5VSB lead.

- ✤ Disabled Disables this function. (Default)
- >> Double Click Double click on left button on the PS/2 mouse to turn on the system.

∽ Power On By Keyboard

Allows the system to be turned on by a PS/2 keyboard wake-up event.

Note: you need an ATX power supply providing at least 1A on the +5VSB lead.

- Disabled Disables this function. (Default)
- ➤ Password Set a password with 1~5 characters to turn on the system.
- >> Keyboard 98 Press POWER button on the Windows 98 keyboard to turn on the system.

∽ KB Power ON Password

Set the password when **Power On by Keyboard** is set to **Password**. Press <Enter> on this item and set a password with up to 5 characters and then press <Enter> to accept. To turn on the system, enter the password and press <Enter>.

Note: To cancel the password, press <Enter> on this item. When prompted for the password, press <Enter> again without entering the password to clear the password settings.

→ AC Back Function

Determines the state of the system after the return of power from an AC power loss.

- ✤ Soft-Off The system stays off upon the return of the AC power. (Default)
- ➤ Full-On The system is turned on upon the return of the AC power.
- >> Memory The system returns to its last known awake state upon the return of the AC power.

☞ ErP Support

Determines whether to let the system consume less than 1W power in S5 (shutdown) state. (Default: Disabled)

Note: When this item is set to Enabled, the following four functions will become unavailable:

PME event wake up, power on by mouse, power on by keyboard, and wake on LAN.

(Note) Supported on Windows 7/Vista operating system only.

2-8 PC Health Status

CMOS Set	up Utility-Copyright (C) 1984-2010 Award Soft PC Health Status	ware
Reset Case Open Status	[Disabled]	Item Help
Case Opened		Menu Level 🕨
Vcore	1.220V	
DDR15V		
+5V		
+12V		
Current System Temperature	30°C	
Current CPU Temperature		
Current CPU FAN Speed	3375 RPM	
Current SYSTEM FAN2 Speed	0 RPM	
Current POWER FAN Speed	0 RPM	
Current SYSTEM FAN1 Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
SYSTEM FAN2 Fail Warning	[Disabled]	
POWER FAN Fail Warning	[Disabled]	
SYSTEM FAN1 Fail Warning	[Disabled]	
CPU Smart FAN Control	[Enabled]	
CPU Smart FAN Mode	[Auto]	
↑↓→←: Move Enter: Select F5: Previous Values		C: Exit F1: General Help : Optimized Defaults

Reset Case Open Status

Keeps or clears the record of previous chassis intrusion status. **Enabled** clears the record of previous chassis intrusion status and the **Case Opened** field will show "No" at next boot. (Default: Disabled)

∽ Case Opened

Displays the detection status of the chassis intrusion detection device attached to the motherboard CI header. If the system chassis cover is removed, this field will show "Yes", otherwise it will show "No". To clear the chassis intrusion status record, set **Reset Case Open Status** to **Enabled**, save the settings to the CMOS, and then restart your system.

∽ Current Voltage(V) Vcore/DDR15V/+5V/+12V

Displays the current system voltages.

∽ Current System/CPU Temperature

Displays current system/CPU temperature.

∽ Current CPU/SYSTEM/POWER FAN Speed (RPM)

Displays current CPU/system/power fan speed.

∽ CPU Warning Temperature

Sets the warning threshold for CPU temperature. When CPU temperature exceeds the threshold, BIOS will emit warning sound. Options are: Disabled (default), 60°C/140°F, 70°C/158°F, 80°C/176°F, 90°C/194°F.

∽ CPU/SYSTEM/POWER FAN Fail Warning

Allows the system to emit warning sound if the CPU/system/power fan is not connected or fails. Check the fan condition or fan connection when this occurs. (Default: Disabled)

∽ CPU Smart FAN Control

Enables or disables the CPU fan speed control function. **Enabled** allows the CPU fan to run at different speed according to the CPU temperature. You can adjust the fan speed with EasyTune based on system requirements. If disabled, the CPU fan runs at full speed. (Default: Enabled)

∽ CPU Smart FAN Mode

Specifies how to control CPU fan speed. This item is configurable only if **CPU Smart FAN Control** is set to **Enabled**.

- ✤ Auto Lets the BIOS automatically detect the type of CPU fan installed and sets the optimal CPU fan control mode. (Default)
- ✤ Voltage Sets Voltage mode for a 3-pin CPU fan.
- ▶ PWM Sets PWM mode for a 4-pin CPU fan.

Note: The **Voltage** mode can be set for a 3-pin CPU fan or a 4-pin CPU fan. However, for a 4-pin CPU fan that is not designed following Intel PWM fan specifications, selecting **PWM** mode may not effectively reduce the fan speed.


2-9 Load Fail-Safe Defaults

	CMOS Setup	Utility-Copyright	(C) 1984-2010 A	ward Software
►	MB Intelligent Tweaker(M.I.T.)		Load	d Optimized Defaults
►	Standard CMOS Features		Set S	Supervisor Password
►	Advanced BIOS Features		Set I	User Password
►	Integrated Peripherals		Save	e & Exit Setun
•	Power Manageme	Load Fail-Safe D)efaults (Y/N)? N	
	PC Health Status	Loud I all Date D		uration ^①
	Load Fail-Safe Demans			
ESC	: Quit	↑↓→←: Select It	lem	F11: Save CMOS to BIOS
F8: 0	Q-Flash	F10: Save & Exi	t Setup	F12: Load CMOS from BIOS
		Load Fail-S	afe Defaults	

Press <Enter> on this item and then press the <Y> key to load the safest BIOS default settings.

In case system instability occurs, you may try to load Fail-Safe defaults, which are the safest and most stable BIOS settings for the motherboard.

2-10 Load Optimized Defaults

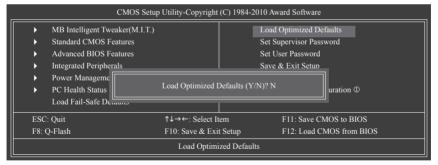

Press <Enter> on this item and then press the <Y> key to load the optimal BIOS default settings.

The BIOS defaults settings help the system to operate in optimum state. Always load the Optimized defaults after updating the BIOS or after clearing the CMOS values.

2-11 Set Supervisor/User Password

_	C	MOS Setup Utility-Copyright	(C) 1984-2010 Award Software
	 MB Intelligent Tweak Standard CMOS Feat Advanced BIOS Feat Integrated Peripherals Power Manageme PC Health Status Load Fail-Safe Derag 	ures ires Enter Password:	Load Optimized Defaults Set Supervisor Password Set User Password Save & Fxit Setup uration ©
	ESC: Quit F8: Q-Flash	↑↓→←: Select It F10: Save & Exi Change/Set/Di	

Press <Enter> on this item and type the password with up to 8 characters and then press <Enter>. You will be requested to confirm the password. Type the password again and press <Enter>.

The BIOS Setup program allows you to specify two separate passwords:

Supervisor Password

When a system password is set and the **Password Check** item in **Advanced BIOS Features** is set to **Setup**, you must enter the supervisor password for entering BIOS Setup and making BIOS changes. When the **Password Check** item is set to **System**, you must enter the supervisor password (or user password) at system startup and when entering BIOS Setup.

User Password

When the **Password Check** item is set to **System**, you must enter the supervisor password (or user password) at system startup to continue system boot. In BIOS Setup, you must enter the supervisor password if you wish to make changes to BIOS settings. The user password only allows you to view the BIOS settings but not to make changes.


To clear the password, press <Enter> on the password item and when requested for the password, press <Enter> again. The message "PASSWORD DISABLED" will appear, indicating the password has been cancelled.

2-12 Save & Exit Setup

		CMOS Setu	p Utility-Copyright	(C) 1984-2	010 Award Software	
[•	MB Intelligent Tweaker(M.I.T.)			Load Optimized De	efaults
	►	Standard CMOS Features			Set Supervisor Pass	word
	►	Advanced BIOS Features			Set User Password	
	►	Integrated Peripherals			Save & Exit Setup	
	►	Power Manageme				ו ו
	►	PC Health Status	Save to CMOS at	nd EXIT (Y	/N)? Y	uration ^①
		Load Fail-Safe D				
	ESC	: Quit	↑↓→←: Select I	tem	F11: Save Cl	MOS to BIOS
	F8: 0	Q-Flash	F10: Save & Exi	t Setup	F12: Load C	MOS from BIOS
			Save Data	to CMOS		

Press <Enter> on this item and press the <Y> key. This saves the changes to the CMOS and exits the BIOS Setup program. Press <N> or <Esc> to return to the BIOS Setup Main Menu.

2-13 Exit Without Saving

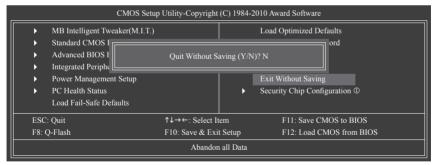

Press <Enter> on this item and press the <Y> key. This exits the BIOS Setup without saving the changes made in BIOS Setup to the CMOS. Press <N> or <Esc> to return to the BIOS Setup Main Menu.

2-14 Security Chip Configuration ^①

CMOS Sett	up Utility-Copyright (C) 1984-2010 Award Softw Security Chip Configuration	are
Security Chip	[Disabled]	Item Help Menu Level ►
Security Chip State	Disabled/Deactivated	
↑↓→←: Move Enter: Select F5: Previous Values		: Exit F1: General Help Optimized Defaults

∽ Security Chip

Enables or disables the security chip. It is recommended that you use this function with the Supervisor/ User password.

- ▶ Enabled/Activate Enables the security chip and initializes the Security Platform.
- ✤ Disabled Disables the security chip. (Default)

∽ Security Chip State

Displays the current settings in the security chip.

Chapter 3 Drivers Installation



Before installing the drivers, first install the operating system.

After installing the operating system, insert the motherboard driver disk into your optical drive. The driver Autorun screen is automatically displayed which looks like that shown in the screen shot below. (If the driver Autorun screen does not appear automatically, go to My Computer, double-click the optical drive and execute the **Run**.exe program.)

3-1 Installing Chipset Drivers



After inserting the driver disk, "Xpress Install" will automatically scan your system and then list all the drivers that are recommended to install. You can click the **Install All** button and "Xpress Install" will install all the recommended drivers. Or click **Install Single Items** to manually select the drivers you wish to install.

ivers V	stall Chipset Drivers for recommend that you install the drivers listed below for your stomatically.	motherboard. Please click "Install AI" to install all t
plication	Xpress Install Install Single	e items
chnical	Install All	
	Browser Configuration Utility	
intact	Version:1.1.11.0	
	Size 3.84MB	
	This utility optimizes the internet browser search experience base	d on your country and language.
stem	V INF Update Utility	
	Version 9.1.1.1015	
	Size 6 21MB	
mter	This utility installs INF files that inform the operating system how t functionality such as PCI-Express or USB interface.	to properly configure the chipset for specific
~	Infineon TPM Driver	
	Version 2 00 0000	
	Size:189.70MB	
	Infineon Trusted Platform Module Driver	
	Realtek HD Audio Driver	
	Version:5.10.0.5924	
	Size:136.58MB	
	Realtek High Definition Audio Driver	



Please ignore the popup dialog box(es) (e.g. the **Found New Hardware Wizard**) displayed when "Xpress Install" is installing the drivers. Failure to do so may affect the driver installation.

- Some device drivers will restart your system automatically during the driver installation. After the system restart, "Xpress Install" will continue to install other drivers.
- After "Xpress Install" installs all of the drivers, a dialog box will appear asking whether to install new GIGABYTE utilities. Click Yes to automatically install the utilities. Or click No if you want to manually select the utilities to install on the Application Software page later.
- For USB 2.0 driver support under the Windows XP operating system, please install the Windows XP Service Pack 1 or later. After installing the SP1 (or later), if a question mark still exists in Universal Serial Bus Controller in Device Manager, please remove the question mark (by right-clicking your mouse and select Uninstall) and restart the system. (The system will then autodetect and install the USB 2.0 driver.)

3-2 Application Software

This page displays all the utilities and applications that GIGABYTE develops and some free software. You can click the **Install** button on the right of an item to install it.

ipset vers	Install Application Programs Click the "Install" button on the right of an application to install it.
plication	Install GIGABYTE Utilities Install Application Software Install New Utilitie
	G.O.M. (Gigabyte Online Manager)
nuals	Size 9.11MB A web-based system management tool that allows client system hardware information such as CPU and memory and graphics card and much more to be monitored or controlled via a host.
ntact	EasyTune 6
_	Size 9.70MB An easy-to-use Windows-based system enhancement utility allowing quick access to a
stem	An easy-to-use Windows-based system enhancement utility allowing quick access to a variety of performance features.
\equiv	DMI Viewer
wnload nter	Size 2 89MB
nter	DMI Viewer provides a management tool for viewing motherboard hardware information.
a	Face Witzard
2	Size 3.02MB
	Face Wizard provides utility for customizing BIOS boot up screen.
	@010S

3-3 Technical Manuals

This page provides GIGABYTE's application guides, content descriptions for this driver disk, and the motherboard manuals.

Technical Manuals		
Application Guides	Driver Disk Contents	User's Manual
ion .		
DES2(Dynamic Energy Save EasyTune 6	H 2)	
 (88)05 		
G.O.M. (GIGABYTE Online I O-Share	Manager)	
G-Share Smart 6		
Smart TPM		
 Xpress Recover 2 		
Easy Energy Saver		
Realtek Ethemet Diagnostic	Utility	
_		
M		

3-4 Contact

For the detailed contact information of the GIGABYTE Taiwan headquarter or worldwide branch offices, click the URL on this page to link to the GIGABYTE website.



3-5 System

This page provides the basic system information.



3-6 Download Center

To update the BIOS, drivers, or applications, click the **Download Center** button to link to the GIGABYTE website. The latest version of the BIOS, drivers, or applications will be displayed.

Chipset Drivers	Install Chipset Drivers We recommed that you install the drivers listed below for your motherboard. Please click "Install All" to install automatically.	all the d
Application Software	Xpress Install Install Single Items	
Technical Manuals	Install All	
	Browser Configuration Utility	
Contact	Version:1.1.11.0	
	Size 3.84MB	
	This utility optimizes the internet browser search experience based on your country and language.	
System	INF Update Utility	
	Version 9.1.1.1015	
	Size 6 21MB	
Download Center	This utility installs INF files that inform the operating system how to properly configure the chipset for specific functionality such as PCI-Express or USB interface.	
Ch	Infineon TPM Driver	
ORT)	Version:2.00.0000	1.1
	Size:189.70MB	1
	Infineon Trusted Platform Module Driver	
	Realtek HD Audio Driver	
	Version 5 10 0 5924	
	Version:5.10.0.5924 Size:136.68MB	-
	Realtek High Definition Audio Driver	

3-7 New Utilities

This page provides a quick link to GIGABYTE's lately developed utilities for users to install. You can click the **Install** button on the right of an item to install it.

Chipset	Install Application Pro Click the "Install" button	grams on the right of an application to install it.	
Application	Install GIGABYT	E Utilities Install Application Software	Install New Utilities
Software	Smart 6		
Technical Manuals	6	Size:13.05MB	
Contact	SMORT	GIGABYTE Smart 6 Program	Install
United	Dynamic Energy Sa	wer 2	
		Size:6.20MB	
Download		GIGABYTE Dynamic Energy Save 2 incorporates a host of intelligent features that use a proprietary hardware and software design to considerably enhance PC system energy efficiency, reduce power consumption and deliver optimized auto-phase-aveiching for the CPU, Memory, Chipsel, VGA, HO and system fans.	Install
Center	Smart TPM		
6	0	Size:71.15MB	
	Smart TPM	The Quick installation version provides a user-friendly interface allowing users to generate TPM keys more quickly and easily.	Install
	Auto Green		
	Auto	Size:7.75MB	Install

1

Chapter 4 Unique Features

4-1 Xpress Recovery2



Xpress Recovery2 is a utility that allows you to quickly compress and back up your system data and perform restoration of it. Supporting NTFS, FAT32, and FAT16 file systems, Xpress Recovery2 can back up data on PATA and SATA hard drives and restore it.

Before You Begin:

- Xpress Recovery2 will check the first physical hard drive^(Note) for the operating system. Xpress Recovery2 can only back up/restore the first physical hard drive that has the operating system installed.
- As Xpress Recovery2 will save the backup file at the end of the hard drive, make sure to leave enough unallocated space in advanced (10 GB or more is recommended; actual size requirements vary, depending on the amount of data).
- It is recommended to back up your system soon after the operating system and drivers are installed.
- The amount of data and hard drive access speed may affect the speed at which the data is backed up/ restored.
- · It takes longer to back up a hard drive than to restore it.

System Requirements:

- · At least 512 MB of system memory
- · VESA compatible graphics card
- · Windows XP with SP1 or later, Windows Vista



- Xpress Recovery and Xpress Recovery2 are different utilities. For example, a backup file created with Xpress Recovery cannot be restored using Xpress Recovery2.
- · USB hard drives are not supported.
- · Hard drives in RAID/AHCI mode are not supported.

Installation and Configuration:

Turn on your system to boot from the Windows Vista setup disk.

A. Installing Windows Vista and Partitioning the Hard Drive

Name	Total Sice	Free Space Type
Disk 0 Unallocated Space	80.0 08	809 08
a Bathach		Drive options (privanced)

		Total Sce	FreeSpace Type
Dation	le catad Space	80.0.08	00.000



Click Drive options.



Click New.

(Note) Xpress Recovery2 checks the first physical hard drive in the following sequence: The first PATA IDE connector, the second PATA IDE connector, the first SATA connector, the second SATA connector and so forth. For example, when hard drives are attached to the first IDE and the first SATA connectors, the hard drive on the first IDE connector is the first physical drive. When hard drives are attached to the first and second SATA connectors, the hard drive on the first SATA connector is the first physical drive.

Nevre		Total Size	Free Space Ty	94
Dat 3 United Sector 5		780.08	70.048 Junary	
		10008	13.098	

Step 3:

When partitioning your hard drive, make sure to leave unallocated space (10 GB or more is recommended; actual size requirements vary, depending on the amount of data) and begin the installation of the operating system.



Step 4:

After the operating system is installed, right-click the **Computer** icon on your desktop and select **Manage**. Go to **Disk Management** to check disk allocation.

Consult timestart Los	interes.	Linear Los Facilitates Salar	A-fam	
a 12 Datest Taxa	10.6	Bright Bass 1/91 Frankly Green Box Pagelila Anna Cast Durne	Dat Hungaran	
- Chan Schebuler	Canada I.	Single Back (EPE Partic Annuel Particit	West Laters	
 g Destrictes Brachessis Brachessis Providence Providence Brachessis Brachessis Brachessis 				
	Rain (B) Online	80 Tato anomi Henry System Boot Papeline active (1)		
	100 ADAS	BRAN Co Stold cott Partie Server Publics		

Step 5:

Xpress Recovery2 will save the backup file to the unallocated space (black stripe along the top). Please note that if there is no enough unallocated space, Xpress Recovery2 cannot save the backup file.

B. Accessing Xpress Recovery2

- Boot from the motherboard driver disk to access Xpress Recovery2 for the first time. When you see the following message: Press any key to startup Xpress Recovery2, press any key to enter Xpress Recovery2.
- After you use the backup function in Xpress Recovery2 for the first time, Xpress Recovery2 will stay
 permanent in your hard drive. If you wish to enter Xpress Recovery2 later, simply press <F9> during the
 POST.

C. Using the Backup Function in Xpress Recovery2



Step 1:

Select **BACKUP** to start backing up your hard drive data.

A Company The appropries	_			1618 K		
Compare The sporter Land B Later Tan Contractor		Loose Soul Participal Sales Longin Bear Participal Stationing of	Fam.	Artista Del Verservert	1	
Bellen Jane Best Jane Best Jahren Best Jahren Best Jahren	Хр	ress Recovery2	will autor	matically c	reate a	
A Deterformer - 20 Temp - 20 Temp - 20 Temperat - 20 Temperat - 20 Temperat	new partition to store the backup image file.					
	\sim		1			
	-					
	Tana Indiana	BUT OF ANY Number And Appendix Statement	110 00 martin, 100- Cardyners			
	Time 1 International D	2010				
	300 ADMR	GGIPTE BI UN DECON				

Step 2:

When finished, go to **Disk Management** to check disk allocation.

D. Using the Restore Function in Xpress Recovery2



Select **RESTORE** to restore the backup to your hard drive in case the system breaks down. The **RESTORE** option will not be present if no backup is created before.

E. Removing the Backup



Step 1: If you wish to remove the backup file, select **REMOVE**.



Step 2:

After the backup file is removed, no backup image file will be present in **Disk Management** and hard drive space will be freed up.



F. Exiting Xpress Recovery2

Select REBOOT to exit Xpress Recovery2.

4-2 BIOS Update Utilities

GIGABYTE motherboards provide two unique BIOS update tools, Q-Flash[™] and @BIOS[™]. GIGABYTE Q-Flash and @BIOS are easy-to-use and allow you to update the BIOS without the need to enter MS-DOS mode. Additionally, this motherboard features the DualBIOS[™] design, which enhances protection for the safety and stability of your computer by adding one more physical BIOS chip.



What is DualBIOS[™]?

Motherboards that support DualBIOS have two BIOS onboard, a main BIOS and a backup BIOS. Normally, the system works on the main BIOS. However, if the

main BIOS is corrupted or damaged, the backup BIOS will take over on the next system boot and copy the BIOS file to the main BIOS to ensure normal system operation. For the sake of system safety, users cannot update the backup BIOS manually.



What is Q-Flash[™]?

With Q-Flash you can update the system BIOS without having to enter operating systems like MS-DOS or Window first. Embedded in the BIOS, the Q-Flash tool

frees you from the hassles of going through complicated BIOS flashing process.



What is @BIOS[™]?

@BIOS allows you to update the system BIOS while in the Windows environment. @BIOS will download the latest BIOS file from the nearest @BIOS server

site and update the BIOS.

4-2-1 Updating the BIOS with the Q-Flash Utility

A. Before You Begin

- From GIGABYTE's website, download the latest compressed BIOS update file that matches your motherboard model.
- Extract the file and save the new BIOS file (e.g. p55aud3p.f1) to your floppy disk, USB flash drive, or hard drive. Note: The USB flash drive or hard drive must use FAT32/16/12 file system.
- 3. Restart the system. During the POST, press the <End> key to enter Q-Flash. Note: You can access Q-Flash by either pressing the <End> key during the POST or pressing the <F8> key in BIOS Setup. However, if the BIOS update file is saved to a hard drive in RAID/AHCI mode or a hard drive attached to an independent IDE/SATA controller, use the <End> key during the POST to access Q-Flash.



Because BIOS flashing is potentially risky, please do it with caution. Inadequate BIOS flashing may result in system malfunction.

B. Updating the BIOS

When updating the BIOS, choose the location where the BIOS file is saved. The following procedure assumes that you save the BIOS file to a floppy disk.

Step 1:


 Insert the floppy disk containing the BIOS file into the floppy disk drive. In the main menu of Q-Flash, use the up or down arrow key to select Update BIOS from Drive and press <Enter>.



- The Save Main BIOS to Drive option allows you to save the current BIOS file.
- Q-Flash only supports USB flash drive or hard drives using FAT32/16/12 file system.
 - If the BIOS update file is saved to a hard drive in RAID/AHCI mode or a hard drive attached to an independent IDE/SATA controller, use the <End> key during the POST to access Q-Flash.
- 2. Select Floppy A and press <Enter>.

Q-H	Flash Utility v2.09	
Flash Type/Size	MXIC 25L1605/1606	2M
(0 file(s) found	.
Floppy A	<drive></drive>	
HDD 1-0	<drive></drive>	
Enter Total size : 0	Free size : 0	Off

3. Select the BIOS update file and press <Enter>.

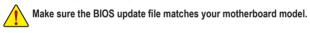

Step 2:


The process of the system reading the BIOS file from the floppy disk is displayed on the screen. When the message "Are you sure to update BIOS?" appears, press <Enter> to begin the BIOS update. The monitor will display the update process.



- Do not turn off or restart the system when the system is reading/updating the BIOS.
- Do not remove the floppy disk, USB flash drive, or hard drive when the system is updating the BIOS.

Step 3:

When the update process is complete, press any key to return to the main menu.



Step 4:

Press <Esc> and then <Enter> to exit Q-Flash and reboot the system. As the system boots, you should see the new BIOS version is present on the POST screen.

Step 5:

During the POST, press <Delete> to enter BIOS Setup. Select Load Optimized Defaults and press <Enter> to load BIOS defaults. System will re-detect all peripheral devices after a BIOS update, so we recommend that you reload BIOS defaults.

	CMOS Setup Utility-Copyright (C) 1984-2010 Award Software								
	 MB Intelligent Tweaker(M.I.T.) Standard CMOS Features Advanced BIOS Features Integrated Peripherals 		Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setun						
	 Power Manageme PC Health Status Load Fail-Safe Desaures 	Load Optimized l	Defaults (Y/N	I)? Y	uration				
11	ESC: Quit F8: Q-Flash	↑↓→←: Select In F10: Save & Exi Load Optimi			4OS to BIOS MOS from BIOS				

Press <Y> to load BIOS defaults

Step 6:

Select **Save & Exit Setup** and then press <Y> to save settings to CMOS and exit BIOS Setup. The procedure is complete after the system restarts.

4-2-2 Updating the BIOS with the @BIOS Utility

A. Before You Begin

- In Windows, close all applications and TSR (Terminate and Stay Resident) programs. This helps prevent 1. unexpected failures when performing a BIOS update.
- 2. During the BIOS update process, ensure the Internet connection is stable and do NOT interrupt the Internet connection (for example, avoid a power loss or switching off the Internet). Failure to do so may result in a corrupted BIOS or a system that is unable to start.
- 3. Do not use the G.O.M. (GIGABYTE Online Management) function when using @BIOS.
- 4. GIGABYTE product warranty does not cover any BIOS damage or system failure resulting from an inadequate BIOS flashing.

B. Using @BIOS

@BIOS		0 000
Flash Memory Type :	MXIC 25L1605/1606	Update BIOS from GIGABYTE Server
Flash Memory Size :	16M bits	Update BIOS from File
BIOS Sign on Message : BIOS Vendor :	P55A-UD3P F9f AWARD BIOS	Save Current BIOS to File
biob vender :	AWAND BIOS	About @BIOS
Load CMOS de	fault after BIOS update 📄 Clear DMI data Pool	GIGABYTE [.]

1. Update BIOS from GIGABYTE Server 1 Update the BIOS Using the Internet Update Function:

Click Update BIOS from GIGABYTE Server, select the @BIOS server site closest to your location and then download the BIOS file that matches your motherboard model. Follow the on-screen instructions to complete.



If the BIOS update file for your motherboard is not present on the @BIOS server site, please manually download the BIOS update file from GIGABYTE's website and follow the instructions in "Update the BIOS without Using the Internet Update Function" below.

2. Update BIOS from File Update the BIOS without Using the Internet Update Function:

Click Update BIOS from File, then select the location where you save the BIOS update file obtained from the Internet or through other source. Follow the on-screen instructions to complete.

3. Save the Current BIOS to File

Click Save Current BIOS to File to save the current BIOS file.

4. S Load CMOS default after BIOS update Load BIOS Defaults after BIOS Update:

Select the Load CMOS default after BIOS update check box and then the system will automatically load BIOS defaults after BIOS update and after the system restarts.

C. After Updating the BIOS

Restart your system after updating the BIOS.



Make sure that the BIOS file to be flashed matches your motherboard model. Updating the BIOS with an incorrect BIOS file could cause your system not to boot.

4-3 EasyTune 6

GIGABYTE's EasyTune 6 is a simple and easy-to-use interface that allows users to fine-tune their system settings or do overclock/overvoltage in Windows environment. The user-friendly EasyTune 6 interface also includes tabbed pages for CPU and memory information, letting users read their system-related information without the need to install additional software.

The EasyTune 6 Interface



Tabs Information

Tab	Function
CPU	The CPU tab provides information on the installed CPU and motherboard.
Memory	The Memory tab provides information on the installed memory module(s). You can select memory
	module on a specific slot to see its information.
O Tuner	The Tuner tab allows you to change system clock settings and voltages.
	 Quick Boost mode provides you with 3 levels of CPU frequency/base clock to choose to achieve desired system performance.^(Note)
	After making changes in Quick Boost mode or clicking Default to restore to default values, be sure to restart your system for these changes to take effect.
	 Easy mode allows you to adjust the CPU base clock only.
	 Advanced mode allows you to individually change system clock settings and voltages settings using the sliders.
	 Save allows you to save the current settings to a new profile (.txt file).
	Load allows you to load previous settings from a profile.
	After making changes in Easy mode/Advanced mode, be sure to click Set for these changes to take effect or click Default to restore to default values.
Graphics	The Graphics tab allows you to change the core clock and memory clock for your ATI or NVIDIA graphics card.
Smart	The Smart tab allows you to specify a Smart Fan mode. Smart Fan Advanced mode allows the CPU fan speed to be changed linearly based on the CPU temperature thresholds you set.
HW Monitor	The HW Monitor tab allows you to monitor hardware temperature, voltage and fan speed and set temperature/fan speed alarm. You can choose the alert sound from the buzzer or use your own sound file (.wav file).

(Note) Due to the hardware limitation, you must install a DDR3 1066 MHz memory module(s) (or above) to enable support for Quick Boost.



Available functions in EasyTune 6 may differ by motherboard model. Grayed-out area(s) indicates that the item is not configurable or the function is not supported.



Incorrectly doing overclock/overvoltage may result in damage to the hardware components such as CPU, chipset, and memory and reduce the useful life of these components. Before you do the overclock/overvoltage, make sure that you fully know each function of EasyTune 6, or system instability or other unexpected results may occur.

4-4 Dynamic Energy Saver[™] 2

GIGABYTE Dynamic Energy Saver[™] 2 ^(Nole 1) is a revolutionary technology that delivers unparalleled power savings with a click of the button. Featuring an advanced proprietary hardware and software design, GIGA-BYTE Dynamic Energy Saver[™] 2 is able to provide exceptional power savings and enhanced power efficiency without sacrificing computing performance.

The Dynamic Energy Saver[™] 2 Interface

A. Meter Mode

In Meter Mode, GIGABYTE Dynamic Energy Saver[™] 2 shows how much power they have saved in a set period of time.



Meter Mode - Button Information Table

	Button Description
1	Dynamic Energy Saver On/Off Switch (Default: Off)
2	Current CPU Power Consumption
3	Power Saving (Calculate power savings based on time)
4	Meter Time
5	Meter/Timer Reset Switch
6	Total Mode Switch
7	Meter Mode Switch
8	Dynamic Power Phase Status
9	Power Saving Status (Icons of the devices currently in power-saving mode will light on)
10	3-Level Power Saving Switch (Default:1) (Note 2)
11	Advanced Settings
12	Close (Application will enter Stealth Mode)
13	Minimize (Application will continue to run in taskbar)
14	INFO/Help
15	Motherboard Phase LED On/Off Switch (Default: On)
16	Live Utility Update (Check for the latest utility version)

• The above data is for reference only. Actual performance may vary depending on motherboard model.

· CPU Power and Power Scores are for reference only. Actual results may vary based on testing method.

B. Total Mode

In Total Mode, users are able to see how much total power savings they have accumulated in a set period of time since activating Dynamic Energy Saver[™] 2 for the first time ^(Note 3).



Total Mode - Button Information Table

	Button Description
1	Dynamic Energy Saver On/Off Switch (Default: Off)
2	Current CPU Power Consumption
3	Total Power Savings (Total power saving with Dynamic Energy Saver enabled) (Note 4)
4	Time/Date Dynamic Energy Saver Enabled
5	Total Mode Switch
6	Meter Mode Switch
7	Dynamic Power Phase Status
8	Power Saving Status (Icons of the devices currently in power-saving mode will light on)
9	3-Level Power Saving Switch (Default:1) (Note 2)
10	Advanced Settings
11	Close (Application will enter Stealth Mode)
12	Minimize (Application will continue to run in taskbar)
13	INFO/Help
14	Motherboard Phase LED On/Off Switch (Default: On)
15	Live Utility Update (Check for the latest utility version)

C. Stealth Mode

In Stealth Mode, the system continues to work with the user-defined power saving settings, even after the system is restarted. Re-enter the application only if you want to make any changes or completely close the application.

- (Note 1) Before using the Dynamic Energy Saver[™] 2 function, make sure the **CPU Enhanced Halt (C1E)** and **CPU EIST Function** items in the BIOS Setup program are set to **Enabled**.
- (Note 2) 1: Smart FAN/CPU (default); 2: Smart FAN/CPU/VGA/HDD; 3: Smart FAN/CPU/VGA/HDD/Chipset/ Memory.
- (Note 3) The total amount of power saved will be recorded until re-activated when only the Dynamic Power Saver is under the enable status, and power savings meter is unable to reset to zero.
- (Note 4) Dynamic Energy Saver Meter will automatically reset when the total power saving reaches 99999999 Watts.

4-5 Q-Share

Q-Share is an easy and convenient data sharing tool. After configuring your LAN connection settings and Q-Share, you are able to share your data with computers on the same network, making full use of Internet resources.



Directions for using Q-Share

After installing Q-Share from the motherboard driver disk, go to Start>All Programs>GIGABYTE>Q-Share. exe to launch the Q-Share tool. Find the **Q-Share** icon **i** in the notification area and right-click on this icon to configure the data sharing settings.

Enable Incoming Folder	Disable Incoming Folder
Open Incoming Folder : C:\Q-ShareFolder	Qpen Incoming Folder : C
Change Incoming Folder : C:\Q-ShareFolder	

Disable Incoming Folder ... Incoming folder ... ▶ Dpen Incoming Folder : CAQ-ShareFolder Update Q-Share ... ↓ About Q-Share ... Exit ...

Figure 1. Data Sharing Disabled

Figure 2. Data Sharing Enabled

Connect

Options Descriptions

Description
Displays the computers with data sharing enabled
Enables data sharing
Disables data sharing
Accesses the shared data folder
Changes the data folder to be shared (Note)
Updates Q-Share online
Displays the current Q-Share version
Exits Q-Share

(Note) This option is available only when data sharing is NOT enabled.

4-6 Smart 6[™]

GIGABYTE Smart 6^{™ (Note 1)} is designed with user-friendliness in mind, and offers a combination of 6 innovative software utilities that provide easier and smarter PC system management. Smart 6[™] allows you to speed up system performance, reduce boot-up time, manage a secure platform and recover specified files easily with a click of the mouse button.





SMART QuickBoot

SMART QuickBoot speeds up the system boot-up process and shortens the waiting time for entering the operating system, delivering greater efficiency for daily use.

mart QuickBoot	
Smart Qu	OS QuickBoot
Enable	P Enable
- Endore	
Save felt	GIGABYT

Instructions:

Select the Enable check box below the BIOS QuickBoot or OS QuickBoot item and then click Save to save the settings.



SMART QuickBoost

SMART QuickBoost features quick and effortless CPU overclocking for novice and experienced users alike; users simply click on one of the three levels of CPU performance enhancement, and SMART QuickBoost automatically adjusts CPU performance.



Instructions:

Select a CPU performance boost level and restart your computer for the changes to take effect.



SMART Recovery

With SMART Recovery, users can quickly create backups of changed data files (Note 2) or copy files from a specific backup on PATA and SATA hard drives (partitioned on NTFS file system) in Windows Vista.

Smart Recovery Preference	
🗹 Enable	
Schedule	
Set the daily schedule for creating a restore point.	
Sturing Time : 12:00:00 AM	
Cepecity	
Set the maximum percentage of disk space on each drive	
for storing restore point. The recommend value is 30 percent.	
0	
152	501 301
OK	Cancel

Instructions:

In the main menu, click the **Config** button to open the **Smart Recovery Preference** dialog box.

The Smart Recovery Preference dialog box:

Button	Function
Enable	Enables automatic daily backup (Note 3)
Schedule	Sets a daily backup schedule
Capacity	Sets the percentage of hard drive space used for
	saving backups (Note 4)

• The hard drive must have more than 1 GB of capacity.

Each partition can accommodate up to 64 backups (the actual limit depends on the size of each partition). When this limit is reached, the oldest backup will be ovewritten.



Instructions for copying files/folders from a backup:

To browse through your backups made at different time, select a backup time using the time scroll bar on the right or at the bottom of the screen. If you want to copy back a file/folder, select the file/folder you wish to copy and click the **Copy** button.



The files/folders listed on the screen are read-only so you cannot edit their contents.



SMART DualBIOS

SMART DualBIOS is a new feature that can record personal passwords and important dates, and remind users of the dates. It also stores the recorded data in the main and backup BIOS simultaneously, which can prevent loss of the data in case the system/hard drive fails.

See.	Smart DualBIOS	
Passw	ord Date	e
Pasaword	Description	
abc12345	ABC Bank	
2 gwe5678	EMAL,	
3		
5		
5		
1		
1		
10		
11		
2		

Instructions:

Enter the Smart 6[™] password to launch the SMART DualBIOS utility. You can record personal passwords and important dates and set reminders of these dates. Click **Save** to save the settings and click **Exit** to exit.



SMART Recorder

SMART Recorder monitors and records the activities in a system such as the time when the computer was turned on/off or even when large data files were moved within the hard drive or copied to an external storage device ^(Note 5).

Smart I	Recorder
ON/OFF Recorder	Rie Montor
On Time	Off Time
18/06/09 10:59	19/06/09 11:00
19/06/09 12:04	19/06/09 13:14
19/06/09 13:15	19/06/09 13:17
19/06/09 11:05	19/06/09 12:02
19/06/09 11:01	19/06/09 11:05

Instructions:

Select the **Enable** check box at the bottom of the **ON/OFF Recorder** or **File Monitor** tab to enable the recording of system on/off time or files copying. Entering the Smart 6^{m} password is required before you make any changes to the previous settings.



SMART TimeLock

SMART TimeLock allows users to effectively manage computer usage time with simple rules and options.

Instructions (Note 6):

Click the lock icon 🕢 on the bottom left corner and enter the Smart 6[™] password. Set the time when a user can or cannot use your computer for weekdays and weekends. Click **Save** to save the settings and click **Exit** to exit.

mart TimeLo	sk	
Sm	art TimeLock	
Passoriti Boba Sirve Tirve Kenaming	15 mm/tas 17 mm/tas 17 dan Jan 17 dar 17 dar 17 dar 19 dar 10 dar	-
ine Groat)	GIGABYTE

The Smart TimeLock Alert:

An alert will appear 15 minutes and 1 minute prior to the default shutdown time. When the alert appears, you can enter the Smart 6[™] password to extend the usage time or click **Cancel** to close the alert. If you respond **Cancel**, you will be requested to enter the password to extend the usage time again when the default shutdown time arrives, or the computer will shutdown right away.

- (Note 1) When launching Smart 6[™] for the first time, the system will request you to set up a password. This password is required when you activate SMART DualBIOS or when you want to make changes to the SMART Recorder or SMART TimeLock settings.
- (Note 2) The changed data refers to the data that has been modified, deleted, or newly added since the last backup.
- (Note 3) The system will make an automatic backup on changed data only once everyday. If the computer is turned on for a long time, the backup will be performed at the scheduled backup time. If the computer is turned off before the scheduled backup time, the backup will be performed on the next boot.
- (Note 4) We recommend that you preserve at least 25 percent of the hard drive space to optimize the storage space for the backups. The backups of the changed data will be stored in the original partition of the data.
- (Note 5) You will not be able to use the "Safely Remove Hardware" feature in the operating system with SMART Recorder enabled. To remove an external storage device, unplug it directly from your computer (please note that doing so may result in damage to the hardware device or loss of data).
- (Note 6) You can set the User Password in the system BIOS Setup program to prevent the system time being changed by other users.

4-7 Smart TPM ①

GIGABYTE's unique Smart TPM (Trusted Platform Module) supports the industry's most advanced hardwarebased data encryption. Smart TPM provides users with an easy-to-use software interface to create a portable user key using a Bluetooth cell phone or USB flash drive. Users can access/close their PSD data by simply connecting to the Bluetooth cell phone or plugging in the USB flash drive, without the hassles of complicated configurations. In addition, users can create more than one Bluetooth cell phone/USB flash drive key, so when they lost a key they still can access data.



- After creating the password(s) and key(s) associated the TPM, be sure to store them in a secure location and back them up. Loss of the password(s) or the key(s) will render the files encrypted via the TPM unable to be cracked or read.
- Though the TPM delivers the latest data security technology, it does not guarantee data integrity or provide hardware protection. GIGABYTE is not liable for loss of encrypted data as a result of hardware damage.

A. Before installing Smart TPM, follow the steps below in sequence:

Step 1:

As the computer starts, enter the BIOS Setup program. Go to the Security Chip Configuration menu and set Security Chip to Enabled/Activate. It's recommended that you use the Clear Security Chip setting (press <Ctrl> + <F1> in the BIOS main menu to display this setting) to clear the TPM chip. Save changes and then restart your computer.



Previously encrypted files will become inaccessible after the TPM chip is cleared. Be sure to back up the encrypted files first. To prevent the TPM settings being cleared by other users, we recommend that you set the User Password

Step 2:

Install the Infineon TPM driver from the motherboard driver disk (select Infineon TPM Driver).

Step 3:

Install the Smart TPM utility from the motherboard driver disk. (Click the tab at the bottom of the left pane of the autorun screen and you'll be directed to the Install New Utilities menu. Click the Install button on the right of Smart TPM to install it.)

B. Instructions for using Smart TPM:

in the BIOS Setup program.

1. After configuring the above settings and restarting your computer, the Infineon Security Platform icon **1**, which indicates that the Infineon Security Platform is not yet initialized, will appear in the notification area. Doubleclick the icon or right-click the Smart TPM icon **2** and select **Initialization Wizard** to access Smart TPM.



You can select Advanced mode to enter the Infineon Security Platform Settings Tool to configure advanced settings. You have to at least set up a Personal Secure Drive (PSD). Refer to the Infineon Security Platform Help file to see how to set up the PSD.)



The easy-to-use Smart TPM interface allows users to easily initialize the TPM chip, set up the TPM User Password, configure a Personal Secure Drive, and create a portable user key.

Set Your TPM Password

A password is automatically provided. You can change it to your own password. Be sure to memorize this password because it allows you to create a portable user key using your Bluetooth cell phone or USB flash drive.

Set up your Personal Secure Drive(PSD)

Configure a Personal Secure Drive (PSD) here. Specify the PSD drive letter, drive label, size, and a local drive on which your PSD will be saved.

Oreate Your Smart TPM Key

Set your Bluetooth cell phone/USB flash drive as the Smart TPM user key. You will be able to access/close your PSD data when connecting to the Bluetooth cell phone or when plugging in the USB flash drive that is configured as the Smart TPM user key. Selecting the **Enable Backup to BIOS** check box will store the encrypted TPM User Password in the system BIOS.

- 3. Click **OK** to complete the settings.
- Only for GA-P55A-UD3P.

4.8 Auto Green

Auto Green is an easy-to-use tool that provides users with simple options to enable system power savings via a Bluetooth cell phone. When the phone is out of the range of the computer's Bluetooth receiver, the system will enter the specified power saving mode.



Enter the passkey for the Bluetooth	h device.
e maso	
Use the same passion that you entered on Passiony: [12340178]	n tre device.
You should sively use a possion, unit woommend using a passing that a Dr more served using a passing that a Dr	isse your device does not support one. We to 15 digts long. The brow the passive, the
nue selue (ville.	
NOT HELP I VIDE	(Box Sec) Cecor
Configuration	
	rha ba) Deor

The Configuration dialog box:

First, you have to set your Bluetooth cell phone as a portable key. On the Auto Green main menu, click Configure and then click Configure BT devices. Select the Bluetooth cell phone that you want to use as the portable key(Note 1). (If the screen doesn't display your Bluetooth cell phone, click Refresh to let Auto Green re-detect the device.)



Before creating a Bluetooth cell phone key, make sure your motherboard has a Bluetooth receiver and you have turned on the search and Bluetooth functions on your phone.

Configuring the Bluetooth cell phone key:

After you select a cell phone, the Add Bluetooth Device Wizard as shown on the left will appear. Enter a passkey (8~16 digits recommended) which will be used for pairing with the cell phone. Then enter the same passkey on your cell phone.

Configuring other Bluetooth settings:

Configure	BT device		Other Settings
Device Scar	Time(sec)	Rescan Te	mes (If the provious
5	•	2	•
fum off HD			
ther 3 min	1 ×		Set

On the Other Settings tab, you can set how much time it takes to scan your Bluetooth cell phone key, how many times to rescan the key to make sure it is in range of your computer, and when to turn off the hard drive if the system energy saving state lasts over the predetermined period of time. After completing the settings, click Set for the settings to take effect and then click Exit to guit.

Device Scan Time (sec.):

Set the length of time Auto Green scans your Bluetooth cell phone key, ranging from 5 to 30 seconds in 5-second increment. Auto Green searches for the key based on the length of time you set.

Rescan Times:

Set how many times Auto Green will rescan your Bluetooth cell phone key if it does not detect it, ranging from 2 to 5 times. Auto Green will keep rescanning according to the times you set. When the times limit is reached and your Bluetooth cell phone key is still not detected, the system will enter the selected energy saving mode.

Turn off HD.

Set when to turn off the hard drive. If the system inactivity time exceeds the specified time limit, the hard drive will be turned off.



Selecting a system energy saving mode:

Depending on your needs, select a system power saving mode on the Auto Green main menu and click Save to save the settings.

Button	Description
Standby	Enters Power on Suspend mode
Suspend	Enters Suspend to RAM mode
Disable	Disables this function

The Bluetooth dongle included in the motherboard package^(Note 2) allows you to wake up the system from Suspend to RAM mode without the need to press the power button first.

- If your cell phone has been configured as the Auto Green key, you'll not be able to use it to connect to other (Note 1) Bluetooth device(s) when Auto Green is enabled.
- (Note 2) Whether the Bluetooth dongle is included depends on the motherboard models. Before installing the Bluetooth dongle, be sure to turn off other Bluetooth receiver on your computer.

4-9 eXtreme Hard Drive (X.H.D)



With GIGABYTE eXtreme Hard Drive (X.H.D)^(Note 1), users can quickly configure a RAIDready system for RAID 0 when a new SATA drive is added. For a RAID 0 array that already exists, users also can use X.H.D to easily add a hard drive into the array to expand its capacity. All with a simple click of a button, X.H.D helps to enhance your hard drive

read/write performance without the need for complex and time-consuming configurations. The following procedure details the steps to set up a RAID-ready system and configure it for RAID 0.

A. Setting Up a RAID-Ready System

Step 1: Configure the system BIOS

Enter the system BIOS Setup program, set **eXtreme Hard Drive (X.H.D)** under the **Integrated Peripherals** menu to **Enabled** to enable RAID for the Intel SATA controllers.

Step 2: Install the RAID driver and operating system

The X.H.D utility supports Windows 7/Vista/XP. Before installing the operating system, you have to load the SATA controller driver first. Without the driver, the hard drive may not be recognized during the Windows setup process. (For more details, refer to Chapter 5, "Installing the SATA RAID/AHCI Driver and Operating System.")

Step 3: Install the motherboard drivers and the X.H.D utiltiy

After installing the operating system, insert the motherboard driver disk. You can click the Xpress Install All button to automatically install all motherboard drivers, including the X.H.D utility. Or you can go to the Application Software screen to individually install the X.H.D utility later.

B. Using GIGABYTE eXtreme Hard Drive (X.H.D)



Instructions: (Note 2)

Before launching X.H.D, make sure the newly added harddrive has equal or greater capacity than the RAID-ready system drive. (To add a new hard drive into a RAID 0 array that's been created earlier, make sure the new drive is greater than or equal to the biggest drive in the array.)

1. To automatically set up a RAID 0 array: Click Auto to automatically and quickly set up a RAID 0 array.

2. Manual To manually set up a RAID array: (Note 3):

Click **Manual** to access the Intel Matrix Storage Console, with which you can build a RAID 0, RAID 1, or other supported RAID array depending on your needs and hardware components.

3. Cancel Exits the X.H.D utility: Click Cancel to exit the X.H.D utility.

(Note 1) The X.H.D utility only supports the SATA controllers integrated in the Intel Chipset.

- (Note 2) It is recommended that before you run the X.H.D utility, back up all of your data to avoid risk of hardware damage or lost of data.
- (Note 3) If you manually build a non-RAID 0 array, you'll not be able to automatically set up a RAID 0 array later using the **Auto** function.

Chapter 5 Appendix

5-1 Configuring SATA Hard Drive(s)

To configure SATA hard drive(s), follow the steps below:

- A. Install SATA hard drive(s) in your computer.
- B. Configure SATA controller mode in BIOS Setup.
- C. Configure a RAID array in RAID BIOS. (Note 1)
- D. Make a floppy disk containing the SATA RAID/AHCI driver for Windows XP. (Note 2)
- E. Install the SATA RAID/AHCI driver and operating system. (Note 2)

Before you begin

Please prepare:

- At least two SATA hard drives (to ensure optimal performance, it is recommended that you use two hard drives with identical model and capacity). If you do not want to create RAID, you may prepare only one hard drive.
- · An empty formatted floppy disk.
- Windows Vista/XP setup disk.
- Motherboard driver disk.

5-1-1 Configuring Intel P55 SATA Controllers

A. Installing SATA hard drive(s) in your computer

Attach one end of the SATA signal cable to the rear of the SATA hard drive and the other end to available SATA port on the motherboard. If there is more than one SATA controller on your motherboard, refer to "Chapter 1," "Hardware Installation," to identify the SATA controller for the SATA port. (For example, on this motherboard, the SATA_0, SATA2_1, SATA2_2, SATA2_3, SATA2_4 and SATA2_5 ports are supported by P55 Chipset.) Then connect the power connector from your power supply to the hard drive.

(Note 1) Skip this step if you do not want to create RAID array.

(Note 2) Required when the SATA controller is set to AHCI or RAID mode.

B. Configuring SATA controller mode in BIOS Setup

Make sure to configure the SATA controller mode correctly in system BIOS Setup.

Step 1:

Turn on your computer and press <Delete> to enter BIOS Setup during the POST (Power-On Self-Test). To create RAID, set PCH SATA Control Mode under the Integrated Peripherals menu to RAID(XHD) (Figure 1) (IDE by default). If you do not want to create RAID, set this item to IDE or AHCI.

CMOS Se	tup Utility-Copyright (C) 1984-2010 Award Integrated Peripherals	l Software	
aVtromo Hard Drivo (VHD)	[Disphlad]		Item Help
PCH SATA Control Mode	[RAID(XHD)]		Menu Level 🕨
SAIA Port0-3 Native Mode	[Enabled]		
USB Controllers	[Enabled]		
USB Legacy Function	[Enabled]		
USB Storage Function	[Enabled]		
Turbo SATA3/USB 3.0	[Disabled]		
Azalia Codec	[Auto]		
Onboard H/W LAN	[Enabled]		
Green LAN	[Disabled]		
► SMART LAN	[Press Enter]		
Onboard LAN Boot ROM	[Disabled]		
Onboard IDE Controller	[Enabled]		
eSATA Controller	[Enabled]		
eSATA Ctrl Mode	[IDE]		
GSATA Controller	[Enabled]		
GSATA Ctrl Mode	[IDE]		
Onboard Serial Port 1	[3F8/IRQ4]		
Onboard Parallel Port	[378/IRQ7]	▼	
$\uparrow \downarrow \rightarrow \leftarrow$: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: E	cit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Opt	imized Defaults

Figure 1

Step 2: Save changes and exit BIOS Setup.



The BIOS Setup menus described in this section may differ from the exact settings for your motherboard. The actual BIOS Setup menu options you will see shall depend on the motherboard you have and the BIOS version.

C. Configuring a RAID array in RAID BIOS

Enter the RAID BIOS setup utility to configure a RAID array. Skip this step and proceed with the installation of Windows operating system for a non-RAID configuration.

Step 1:

After the POST memory test begins and before the operating system boot begins, look for a message which says "Press <Ctrl-I> to enter Configuration Utility" (Figure 2). Press <Ctrl> + <I> to enter the P55 RAID Configuration Utility.




Figure 2

Step 2:

After you press <Ctrl> + <l>, the MAIN MENU screen will appear (Figure 3).

Create RAID Volume

If you want to create a RAID array, select Create RAID Volume in MAIN MENU and press < Enter>.

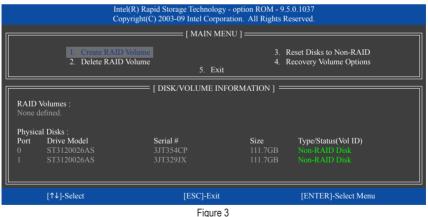

Step 3:

After entering the **CREATE VOLUME MENU** screen, enter a volume name with 1~16 letters (letters cannot be special characters) under the **Name** item and press <Enter>. Then, select a RAID level (Figure 4). RAID levels supported include RAID 0, RAID 1, Recovery, RAID 10, and RAID 5 (the selections available depend on the number of the hard drives being installed). Press <Enter> to proceed.

		echnology - option ROM - 9.5.0.103 tel Corporation. All Rights Reserved		
	Na RAID Le Di Strip S Capac	E VOLUME MENU] ime : Volume0 evel : RAID0(Stripe) isks : Select Disks size : 128KB city : 111.7 GB ync : N/A Create Volume		
[HELP]				
Choose the RAID level: RAID0: Stripes data (performance). RAID1: Mirrors data (redundancy). Recovery: Copies data between a master and a recovery disk. RAID10: Mirrors data and stripes the mirror. RAID5: Stripes data and parity.				
[↑↓]-Change			[ENTER]-Select	

Figure 4

Step 4:

Under **Disks** item, select the hard drives to be included in the RAID array. If only two hard drives are installed, they will be automatically assigned to the array. Set the stripe block size (Figure 5) if necessary. The stripe block size can be set from 4 KB to 128 KB. Once you have selected the stripe block size, press <Enter>.

		echnology - option ROM - 9.5.0.1037 tel Corporation. All Rights Reserved.	
	Νε RAID Le Di Strip S Capa	E VOLUME MENU] ime : Volume0 evel : RAID0(Stripe) isks : Select Disks Size : 128KB city : 111.7 GB ync : N/A Create Volume	
[HELP] The following are typical values: RAID0 - 128KB RAID10 - 64KB RAID5 - 64KB			
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select
Figure 5			

Step 5:

Enter the array capacity and press <Enter>. Finally press <Enter> on the Create Volume item to begin creating the RAID array. When prompted to confirm whether to create this volume, press <Y> to confirm or <N> to cancel (Figure 6).

			ogy - option ROM - 9.5.0.1037 poration. All Rights Reserved.	
		Name : RAID Level :		
	WAR		LECTED DISKS WILL BE LOST. create this volume? (Y/N) :	
		Press ENTER to creat	te the specified volume.	
[↑	↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select
		L'ann		

Figure 6

When completed, you can see detailed information about the RAID array in the DISK/VOLUME INFORMA-TION section, including the RAID level, stripe block size, array name, and array capacity, etc. (Figure 7)

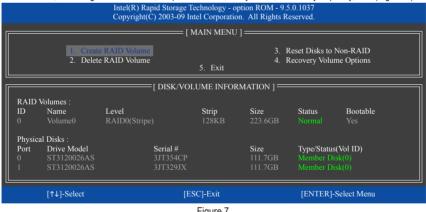


Figure 7

To exit the RAID BIOS utility, press < Esc> or select 5. Exit in MAIN MENU.

Now, you can proceed to create the SATA RAID/AHCI driver diskette and install the SATA RAID/AHCI driver and operating system.

Recovery Volume Options


Intel Rapid Recover Technology provides data protection by allowing users to easily restore data and system operation using a designated recovery drive. With the Rapid Recovery Technology, which employs RAID 1 functionality, users can copy the data from the master drive to the recovery drive; if needed, the data on the recovery drive can be restored back to the master drive.

Before you begin:

- The recovery drive must have equal or greater capacity than the master drive.
- A recovery volume can be created with two hard drives only. A recovery volume and a RAID array cannot co-exist in the system at the same time, that is, if you have already created a recovery volume, you are unable to create a RAID array.
- By default, only the master drive can be viewed in the operating system; the recovery drive is hidden.

Step 1:

select Create RAID Volume in MAIN MENU and press <Enter> (Figure 8).

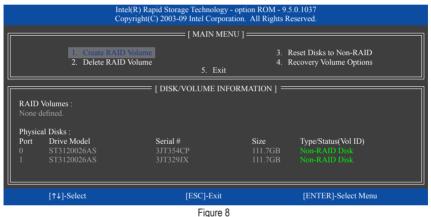

Step 2:

After entering the volume name, select Recovery under the RAID Level item and press <Enter> (Figure 9).

Intel(R) Rapid Storage Technology - option ROM - 9.5.0.1037 Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.				
[CREATE VOLUME MENU] Name : Volume0 RAID Level : Recovery Disks : Select Disks Strip Size : N/A Capacity : 0.0 GB Syn : Continuous Create Volume				
	[HELP] Choose the RAID level: RAID0: Stripes data (performance). RAID1: Mirrors data (redundancy). Recovery: Copies data between a master and a recovery disk. RAID10: Mirrors data and stripes the mirror. RAID5: Stripes data and parity.			
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select	
Figure 9				

Step 3:

Press <Enter> under the **Select Disks** item. In the **SELECT DISKS** box, press <Tab> on the hard drive you want to use for the master drive and press <Space> on the hard drive you want to use for the recovery drive. (Make sure the recovery drive has equal or larger capacity than the master drive.) Then press <Enter> to confirm. (Figure 10)

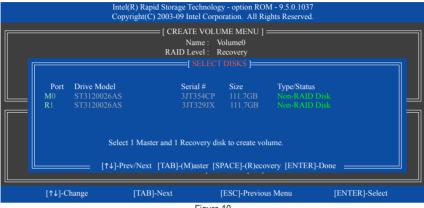


Figure 10

Step 4:

Under **Sync**, select **Continuous** or **On Request** (Figure 11). When set to **Continuous**, changes made to the data on the master drive will be automatically and continuously copied to the recovery drive when both hard drives are installed in the system. **On Request** allows users to update data from the master drive to the recovery drive manually using the Intel Rapid Storage Technology in the operating system. **On Request** allow allows users to restore the master drive to a previous state.

		chnology - option ROM - 9.5.0.1037 el Corporation. All Rights Reserved.		
[CREATE VOLUME MENU] Name : Volume0 RAID Level : Recovery Disks : Select Disks Strip Size : N/A Capacity : 0.0 GB Syne : Continuous Create Volume				
[]				
Select a sync option: On Request: volume is updated manually Continuous: volume is updated automatically				
[↑↓]-Change	[TAB]-Next	[ESC]-Previous Menu	[ENTER]-Select	
Figure 11				

Step 5:

Finally press <Enter> on the **Create Volume** item to begin creating the Recovery Volume and follow the onscreen instructions to complete.

Delete RAID Volume

To delete a RAID array, select **Delete RAID Volume** in **MAIN MENU** and press <Enter>. In the **DELETE VOLUME MENU** section, use the up or down arrow key to select the array to be deleted and press <Delete>. When prompted to confirm your selection (Figure 12), press <Y> to confirm or <N> to abort.

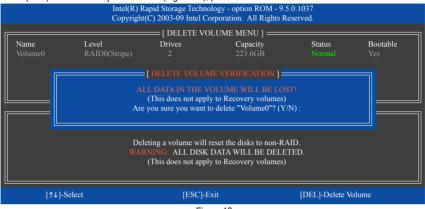


Figure 12

5-1-2 Configuring JMicron JMB362 SATA Controller

A. Installing SATA hard drive(s) in your computer

Attach one end of the SATA signal cable to the rear of the SATA hard drive and the other end to available SATA port on the motherboard. The JMB362 SATA controller controls the eSATA ports on the back panel. Then connect the power connector from your power supply to the hard drive.

B. Configuring SATA controller mode in BIOS Setup

Make sure to configure the SATA controller mode correctly in system BIOS Setup.

Step 1:

Turn on your computer and press <Delete> to enter BIOS Setup during the POST (Power-On Self-Test). Make sure **eSATA Controller** under the **Integrated Peripherals** menu is enabled (Figure 1). To create RAID, set **eSATA Ctrl Mode** to RAID.

CMOS Set	up Utility-Copyright (C) 1984-2010 Award Integrated Peripherals	Softwa	are
eXtreme Hard Drive (XHD) PCH SATA Control Mode SATA Port0-3 Native Mode USB Controllers USB Legacy Function USB Storage Function Turbo SATA3/USB 3.0 Azalia Codee Onboard H/W LAN Green LAN SMART LAN Onboard LAN Boot ROM Oploard IDE Controller eSATA Controller eSATA Controller GSATA Controller GSATA Ctrl Mode Onboard Serial Port 1 Onboard Parallel Port	[Disabled] [IDE] [Enabled] [Enabled] [Enabled] [Enabled] [Disabled] [Disabled] [Disabled] [Disabled] [Press Enter] [Disabled] [Enabled] [Enabled] [RAID] [Enabled] [IDE] 3F8/IRQ4] [378/IRQ4] [378/IRQ7]		Item Help Menu Level ►
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults		Exit F1: General Help Dptimized Defaults

Figure 1

Step 2: Save changes and exit BIOS Setup.



The BIOS Setup menus described in this section may differ from the exact settings for your motherboard. The actual BIOS Setup menu options you will see shall depend on the motherboard you have and the BIOS version.

C. Configuring a RAID array in RAID BIOS


Enter the RAID BIOS setup utility to configure a RAID array. Skip this step and proceed to the installation of Windows operating system for a non-RAID configuration.

After the POST memory test begins and before the operating system boot begins, look for a message which says "Press <Ctrl-G> to enter RAID Setup Utility" (Figure 2). Press <Ctrl> + <G> to enter the RAID setup utility.



Figure 2

In the main screen of the RAID setup utility (Figure 3), use the up or down arrow key to highlight through choices in the **Main Menu** block. Highlight the item that you wish to execute and press <Enter>.

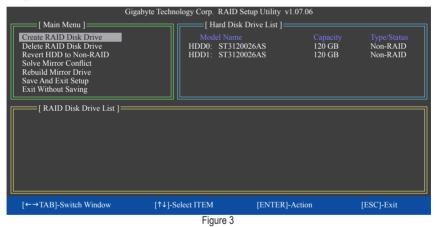

Note: In the main screen, you can select a hard drive in the **Hard Disk Drive List** block and press <Enter> to see detailed information about the selected hard drive.

Create a RAID Array:


In the main screen, press <Enter> on the Create RAID Disk Drive item. Then the Create New RAID screen appears (Figure 4).

Gigabyte Techn	ology Corp. RAID Setup Utility	v1.07.06	
[Create New RAID]	[Hard Disk Drive List] =]
Name: GRAID_	Model Name	Available	Type/Status
Level: 0-Stripe Disks: Select Disk	HDD0: ST3120026AS HDD1: ST3120026AS	120 GB 120 GB	Non-RAID Non-RAID
Block: 128 KB			
Size: 240 GB			
Confirm Creation			
[RAID Disk Drive List]	[[Help]		
	Enter RA	ID Nome	
	LINCI KA	ID Name	
	Enter a string betwee	n 1 to 16 characters	
		n 1 to 16 characters ted RAID drive to be	
	Enter a string betwee in length for the creat	n 1 to 16 characters ted RAID drive to be	
	Enter a string betwee in length for the creat	n 1 to 16 characters ted RAID drive to be	
	Enter a string betwee in length for the creat identified by system l	n 1 to 16 characters led RAID drive to be BIOS or OS.	
[←→]-Move Cursor [DEL,BS]-Delete	Enter a string betwee in length for the creat identified by system l	n 1 to 16 characters led RAID drive to be BIOS or OS.	[ESC]-Abort

The Create New RAID block displays all the items that need to be set for creating an array (Figure 5).

Steps:


- 1. Enter Array Name: Under the Name item, enter an array name with 1~16 letters (letters cannot be special characters) and press <Enter>.
- Select RAID Mode: Under the Level item, use up or down arrow key to select RAID 0 (Stripe), RAID 1 (Mirror) or JBOD (Figure 5). Then press <Enter> to move onto the next step.

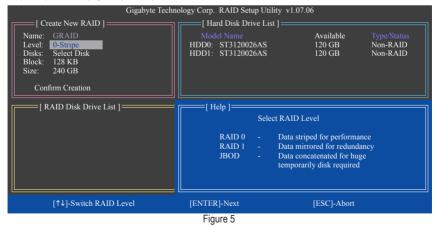

- Assign Array Disks: After a RAID mode is selected, RAID BIOS automatically assigns the two hard drives installed as the RAID drives.
- Set Block Size (RAID 0 only): Under the Block item, use the up or down arrow key to select the stripe block size (Figure 6), ranging from 4 KB to 128 KB. Press <Enter>.


Gigabyte Tech	nology Corp. RAID Setup Utility v1.0	7.06
[Create New RAID]	[Hard Disk Drive List]	
Name: GRAID	Model Name	Available Type/Status
Level: 0-Stripe Disks: Select Disk	 HDD0: ST3120026AS HDD1: ST3120026AS 	120 GB Non-RAID 120 GB Non-RAID
Block: 128 KB		
Size: 240 GB		
Confirm Creation		
[RAID Disk Drive List]	[[Help]	
[Setting Stripe	e Block
	Select a stripe size which divide data from/to seper	
	The following are typical	
	RAID 0-128	V D
	KAID 0-1261	XD
[↑↓]-Switch RAID Block Size	[ENTER]-Next	[ESC]-Abort
	Figure 6	

- 5. Set Array Size: Under the Size item, enter the size of the array and press <Enter>.
- Confirm Creation: After all of the items above are configured, the selection bar automatically jumps to the Confirm Creation item. Press <Enter>. When prompted to confirm your selection (Figure 7), press <Y> to confirm or <N> to abort.

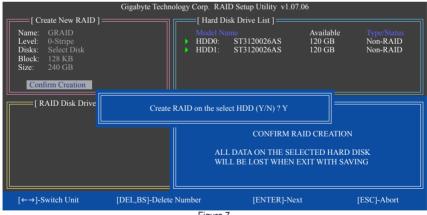



When finished, the new RAID array will be displayed in the RAID Disk Drive List block (Figure 8).

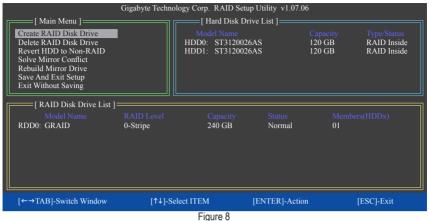

To check more detailed information about the array, use the <Tab> key while in the **Main Menu** block to move the selection bar to the **RAID Disk Drive List** block. Select the array and press <Enter>. A small window displaying the array information will appear in the center of the screen (Figure 9).


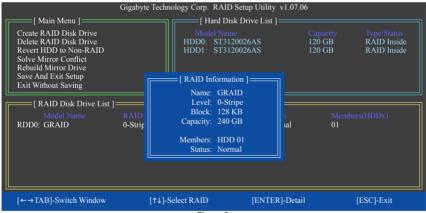


Figure 9


 Save and Exit Setup: After configuring the RAID array, select the Save And Exit Setup item in the main screen to save your settings before exiting the RAID BIOS utility, then press <Y> (Figure 10).

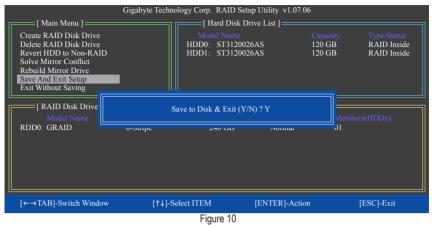

Now, you may proceed to create the SATA RAID/AHCI driver diskette and the installation of the SATA RAID/ AHCI driver and operating system.

Delete the RAID Array:

To delete the array, select **Delete RAID Disk Drive** in the main menu and press <Enter>. The selection bar will move to the **RAID Disk Drive List** block. Press the space bar on the array to be deleted; a small triangle will appear to mark the selected array. Press <Delete>. When prompted to confirm your selection (Figure 11), press <Y> to confirm or <N> to cancel.

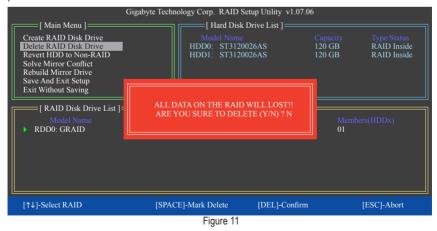

5-1-3 Configuring Marvell 9128 SATA Controller

A. Installing SATA hard drive(s) in your computer

Attach one end of the SATA signal cable to the rear of the SATA hard drive and the other end to available SATA port on the motherboard. The Marvell 9128 SATA controller controls the GSATA3_6/7 ports on the motherboard. Then connect the power connector from your power supply to the hard drive.

B. Configuring SATA controller and RAID mode in BIOS Setup

Make sure to configure the SATA controller mode correctly in system BIOS Setup.

Step 1:

Turn on your computer and press <Delete> to enter BIOS Setup during the POST (Power-On Self-Test). Make sure **GSATA Controller** under the **Integrated Peripherals** menu is enabled. Then set **GSATA Ctrl Mode** to **IDE** or **AHCI**, depending on your requirements (Figure 1). (In AHCI mode, installation of the SATA AHCI driver is required during Windows XP installation. Refer to section, "5-1-4" for more information.)

Step 2:

To create a RAID array, press <Enter> on the **GSATA RAID Configuration** item (Figure 1) to enter the RAID configuration menu. Skip this step if you do not want to create RAID.

CMOS Set	tup Utility-Copyright (C) 1984-2010 Award Integrated Peripherals	Softwa	ıre
eXtreme Hard Drive (XHD) PCH SATA Control Mode SATA Port0-3 Native Mode USB Controllers USB Legacy Function USB Storage Function Turbo SATA3/USB 3.0 Azalia Codee Onboard H/W LAN Green LAN SMART LAN Onboard IDE Controller eSATA Controller eSATA Controller GSATA Controller GSATA Ctrl Mode	[Disabled] [IDE] [Enabled] [Enabled] [Enabled] [Enabled] [Disabled] [Disabled] [Disabled] [Disabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [IDE] [Press Enter]		Item Help Menu Level ►
Onboard Serial Port 1	[3F8/IRQ4]	<u> </u>	<u> </u>
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: F7: C	Exit F1: General Help Optimized Defaults

Figure 1



The BIOS Setup menus described in this section may differ from the exact settings for your motherboard. The actual BIOS Setup menu options you will see shall depend on the motherboard you have and the BIOS version.

C. Configuring a RAID array

Create a RAID Array:

Move the selection bar to HBA 0: Marvell 0 and press <Enter>.

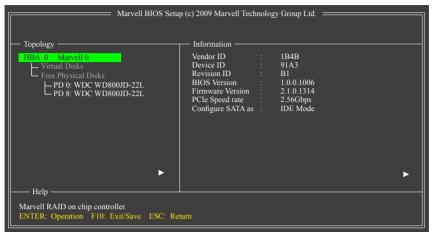


Figure 2

Under **Free Physical Disks**, use the <Space> key to select the hard drives to be included in the RAID array. The selected hard drive will be marked with an asterisk (*). After selecting the hard drives, press <Enter> to proceed (Figure 3).

Marvell BIOS Setu - Topology HBA 0 : Marvell 0 Virtual Disks Free Physical Disks * PD 0: WDC WD800JD-22L * PD 8: WDC WD800JD-22L	p (c) 2009 Marvell Technology Group Ltd. Information Vendor ID : IB4B Device ID : 91A3 Revision ID : B1 BIOS Version : 1.0.0.1006 Firmware Version : 2.1.0.1314 PCIe Speed rate : 2.56Gbps Configure SATA as : IDE Mode
	►
Use space bar to select the free disks to be used in	the array
ENTER: Operation SPACE: Select F10: Exi	

Figure 3

To further configure the RAID array, use the up or down arrow key to move the selection bar to select an item in the right block of the screen and press <Enter> (Figure 4). Set the required items in sequence and press <Enter> after each step.

Steps:

1. RAID Level: Select a RAID level. Options include RAID 0 (Stripe) and RAID 1 (Mirror).

- 2. Stripe Size: Select the stripe block size. Options include 32 KB and 64 KB.
- 3. **Gigabyte Rounding:** Select whether to permit the installation of a replacement drive that is smaller than the failed drive when performing a RAID 1 rebuild. Options include None, 1G, and 10G.
- 4. Quick Init: Select whether to quickly erase old data on the hard drives when creating the array.
- 5. VD Name: Enter an array name with 1~10 letters (letters cannot be special characters).

Ĩ	Marvell BIOS Setup (c) 2009 Marvell Technology G	roup Ltd.
	Virtual Disks Max Size (MB) : 15	s efault
	Virtual disk configurations. ENTER: Operation F10: Exit/Save ESC: Return	

Figure 4

 Next: After completing the settings above, move to Next and press <Enter> to begin creating the array. When prompted to confirm whether to create this array, press <Y> to confirm or <N> to cancel (Figure 5).

Configure -> Select free disksCreate Virt	Setup (c) 2009 Marvell Techno	ogy Group Ltd. ======	
HBA 0 : Marvell 0 Virtual Disks Free Physical Disks PD 0: WDC WD800JD-22L PD 8: WDC WD800JD-22L			
Create Virtual Disk	reate this virtual disk?		
Help Virtual disk configurations. ENTER: Operation F10: Exit/Save ESC	: Return		

When completed, you can see the new array under Topology\Virtual Disks (Figure 6).

Marvell BIOS Setur - Topology	p (c) 2009 Marvell Technology Group Ltd. — Information Vendor ID : 1B4B Device ID : 91A3 Revision ID : B1 BIOS Version : 1.0.0.1006 Firmware Version : 2.1.0.1314 PCIe Speed rate : 2.56Gbps Configure SATA as : IDE Mode
Help — Marvell RAID on chip controller. ENTER: Operation F10: Exit/Save ESC: Ret	

Figure 6

7. Save the Settings and Exit. After you complete the RAID configuration and before you exit the configuration screen, be sure to press <F10> in the main screen. Press <Y> to confirm or <N> to cancel (Figure 7).

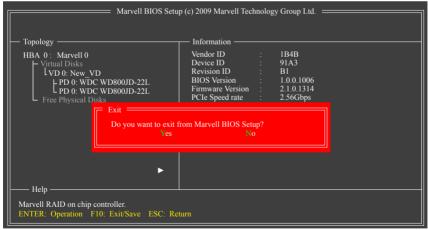


Figure 7

Now, you may proceed to create the SATA driver diskette (for AHCI mode) and the installation of the SATA driver and operating system.

Delete the RAID Array:

To deleted the existing array, select the array on the main menu (example: VD 0: New_VD) and press <Enter> to display the **Delete** option. Press <Enter>. When prompted, press <Y> to confirm or <N> to cancel (Figure 8).

Marvell BIOS Setup	o (c) 2009 Marvell Technology Group Ltd
HBA 0 : Marvell 0 Virtual Disks VD 0: New VD LPD 0: WDC WD800JD-22L PD 0: WDC WD800JD-22L Free Physical Disks	Vendor ID : 1B4B Device ID : 91A3 Revision ID : B1 BIOS Version : 1.0.0.1006 Firmware Version : 2.1.0.1314 PCIe Speed rate : 2.56Gbps
Delete Virtual Disk = Do you want to delete Yes	
► Help Marvell RAID on chip controller. ENTER: Operation F10: Exit/Save ESC: Ret	um

Figure 8

Use the Marvell RAID Utility in the Operating System:

With the Marvell RAID utility, you can set up an array or view the current array status in the operating system. To install the utility, insert the motherboard driver disk, then go to **Application Software\Install GIGABYTE Utilities** and select **Marvell Raid Utility** to install. Note: After the installation, you must login the utility with the same account name and password that you use to login the operating system. If you did not set the account password before, click **Login** to enter the Marvell RAID Utility directly.

5-1-4 Making a SATA RAID/AHCI Driver Diskette

(Required for AHCI and RAID Mode)

To successfully install operating system onto SATA hard drive(s) that is/are configured to RAID/AHCI mode, you need to install the SATA controller driver during the OS installation. Without the driver, the hard drive may not be recognized during the Windows setup process. First of all, copy the driver for the SATA controller from the motherboard driver disk to a floppy disk. For installing Windows Vista, you also can copy the SATA controller driver from the motherboard driver disk to a USB flash drive. See the instructions below about how to copy the driver in MS-DOS and Windows mode.

In MS-DOS mode:

Prepare a startup disk that has CD-ROM support and a blank formatted floppy disk. Steps:

- 1: Boot from the startup disk.
- 2: Remove the startup disk and insert the prepared floppy disk and the motherboard driver disk (here we assume that the drive letter for your optical drive is D:\).
- 3: At the A:\> prompt, type the following command. Press <Enter> after the command:
 - For the Intel P55, type (Figure 1): (Note 1)
 A: \>copy d: \bootdrv\irst\32bit*.*
 - For the JMicron JMB362, type (Figure 2): (Note 1) A: >copy d: bootdrv\gsata\32bit*.*
 - For the Marvell 9128, type (Figure 3): (Note 2) A: >copy d: bootdrv/Marvell/win32/*.*

Athlife Delows in dejow A in CICABYTE Delows Eerial Nonder in 1000-2259 Directory of Ath Delows Delows Athlife Devoted Athlife Athlife Athlife Athlife Devoted Athlife Athlife Athlife Athlife Athlife Athlife Devoted Athlife Athli	At\\dis Ublows in drive A is GLOBYTE Ublow:Exrisl Number is 1000-2259 Pirectory of At\ Distributions At\Second drivpasta\22bit\=
Figure 1	Figure 2
BixMir Wolmen in desem fi is GEORDFEL University of fix Distance for the state of the state of the state of the state Distance of the state of t	
Figure 3	

(Note 1) Change the directory from \32bit to \64bit for copying the Windows 64-bit driver.

(Note 2) Change the directory from \win32 to \win64 for copying the Windows 64-bit driver.

In Windows mode:

Steps:

- 1: Use an alternative system and insert the motherboard driver disk.
- 2: From your optical drive folder, double click the Menu.exe file in the BootDrv folder (Figure 4). A Command Prompt window will open similar to that in Figure 5.
- 3: Insert the blank formatted disk. Depending on the operating system to be installed, select the controller driver by pressing the corresponding letter from the menu and press <Enter>. For example, from the menu in Figure 5.
 - For the Intel P55, select 7) Intel Rapid Storage driver for 32bit system for Windows 32-bit operating system.
 - · For the JMicron JMB362, select 3) GIGABYTE GSATA driver for 32bit system for Windows 32-bit operating system.
 - For the Marvell 9128, select 5) Marvell AHCI driver for 32bit system for Windows 32-bit operating system (Windows XP only).

Your system will then automatically copy the driver files to the floppy disk. Press any key to exit when finished.



Figure 4




Figure 5


5-1-5 Installing the SATA RAID/AHCI Driver and Operating System

With the SATA RAID/AHCI driver diskette and correct BIOS settings, you are ready to install Windows Vista/ XP onto your hard drive(s). The followings are examples of Windows XP and Vista installation.

A. Installing Windows XP

Step 1:

Restart your system to boot from the Windows XP setup disk and press <F6> as soon as you see the message "Press F6 if you need to install a 3rd party SCSI or RAID driver" (Figure 1). A screen will then appear asking you to specify additional device.

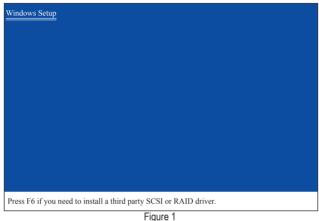

Step 2:

For the Intel P55:

Insert the floppy disk containing the SATA RAID/AHCI driver and press <S>. Then a controller menu similar to Figure 2 below will appear. Select Intel(R) ICH8R/ICH9R/ICH10R/DO/5 Series/3400 Series SATA RAID Controller and press <Enter>.

Windows Setup
You have chosen to configure a SCSI Adapter for use with Windows, using a device support disk provided by an adapter manufacturer.
Select the SCSI Adapter you want from the following list, or press ESC to return to the previous screen.
Intel(R) ICH7R/DH SATA RAID Controller Intel(R) ICH7MDH SATA RAID Controller Intel(R) ICH8R/ICH9R/ICH10R/DO/5 Series/3400 Series SATA RAID Controller Intel(R) ICH8M-E/ICH9M-E/PCHM SATA RAID Controller
ENTER=Select F3=Exit
Figure 2

Step 3:

On the next screen, press <Enter> to continue the driver installation. After the driver installation, you can proceed with the Windows XP installation.

For the JMicron JMB362


Insert the floppy disk containing the SATA RAID/AHCI driver and press <S>. Then a controller menu similar to Figure 3 below will appear. Select RAID/AHCI Driver for GIGABYTE GBB36X Controller (x32) and press <Enter>

Windows Setup
You have chosen to configure a SCSI Adapter for use with Windows, using a device support disk provided by an adapter manufacturer.
Select the SCSI Adapter you want from the following list, or press ESC to return to the previous screen.
RAID/AHCI Driver for GIGABYTE GBB36X Controller (x32)
ENTER=Select F3=Exit

Figure 3

For the Marvell 9128:

Insert the floppy disk containing the SATA AHCI driver and press <S>. The screen will display two drivers, both of which need to be installed (Figure 4). First select Marvell shared library (install first) and press <Enter>. On the next screen, press <S> to return to the screen in Figure 4. Then select Marvell 91xx SATA Controller 32bit Driver and press <Enter>. When both of the two drivers appear on the confirmation screen, press <Enter> to continue the driver installation.

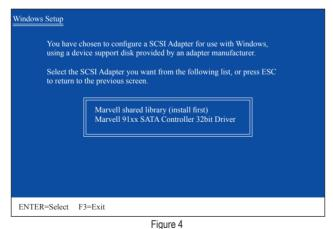

Step 3:

On the next screen, press <Enter> to continue the driver installation. After the driver installation, you can proceed with the Windows XP installation.

B. Installing Windows Vista

The procedure below assumes that only one RAID array exists in your system. Note: You are not required to load the SATA AHCI driver first when installing Windows Vista onto the RAID drives attached to the Marvell 9128 controller.

For the Intel P55:

Step 1:

Restart your system to boot from the Windows Vista setup disk and perform standard OS installation steps. When a screen similar to that below appears (RAID hard drive will not be detected at this stage), select **Load Driver** (Figure 5).

Nar	me	Total Size Free Space	Туре
Befresh		Drive option	s (advanced)

Figure 5

Step 2:

Insert the motherboard driver disk (Method A) or the floppy disk/USB flash drive that contains the driver (Method B), then specify the location of the driver (Figure 5). Note: For users using a SATA optical drive, be sure to copy the driver files from the motherboard driver disk to a USB flash drive before installing Windows Vista (go to the **BootDrv** folder and save the whole **iRST** folder to the USB flash drive). Then use Method B to load the driver.

Method A:

Insert the motherboard driver disk into your system and browse to the following directory:

\BootDrv\iRST\32Bit

For Windows Vista 64-bit, browse to the **64Bit** folder.

Method B:

Insert the USB flash drive containing the driver files and browse to \iRST\32Bit (for Windows Vista 32-bit) or \ iRST\64Bit (for Windows Vista 64-bit).



Step 3:

When a screen as shown in Figure 7 appears, select Intel(R) ICH8R/ICH9R/ICH10R/DO/5 Series/3400 Series SATA RAID Controller and click Next.


Select the driver to be installed.	
Intelity ICH8R/ICH9R/ICH10R/D0/5 Series/3400 Series	s SATA RAID Controller
₩ Hole drives that are not compatible with hardware on the	is computer.

Step 4:

After the driver is loaded, select the RAID/AHCI drive(s) where you want to install the operating system and then click **Next** to continue the OS installation (Figure 8).

	Name	Total Size	Free Space Type
30	Disk 0 Unallocated Space	80.0 GB	80.0 G8
e Befr	esh 1 Driver		Drive options (gdvanced)

Figure 8



For the JMicron JMB362:

Step 1:

Restart your system to boot from the Windows Vista setup disk and perform standard OS installation steps. When a screen similar to that below appears (RAID/AHCI hard drive(s) will not be detected at this stage), select Load Driver (Figure 9).

Name	Total Size Free Space Type
Befresh	Drive options (gdvanced)

Figure 9

Step 2:

Insert the motherboard driver disk (Method A) or the floppy disk/USB flash drive that contains the SATA RAID/ AHCI driver (Method B), then specify the location of the driver (Figure 10). Note: For users using a SATA optical drive, be sure to copy the driver files from the motherboard driver disk to a USB flash drive before installing Windows Vista (go to the **BootDrv** folder and save the whole **GSATA** folder to the USB flash drive). Then use Method B to load the driver.

Method A:

Insert the motherboard driver disk into your system and browse to the following directory:

\BootDrv\GSATA\32Bit

For Windows Vista 64-bit, browse to the 64Bit folder.

Method B:

Insert the USB flash drive containing the driver files and browse to \GSATA\32Bit (for Windows Vista 32-bit) or \GSATA\64Bit (for Windows Vista 64-bit).



Figure 10

Step 3:

When a screen as shown in Figure 11 appears, select GIGABYTE GBB36X Controller and click Next.

Select the driver to be installed.	
GIGABYTE GBB36X Controller (A:\xraid_f.inf)	
$\overline{\mathbf{r}}$ Hide drivers that are not compatible with hardware on this co	mputer.


Figure 11

Step 4:

After the driver is loaded, select the RAID/AHCI drive(s) where you want to install the operating system and then click **Next** to continue the OS installation (Figure 12).

	Name	Total Size	Free Space Type
3	Disk 0 Unallocated Space	80.0 GB	80.0 G8
e Bef	resh Id Driver		Drive options (gdvanced)

Figure 12

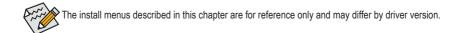

C. Rebuilding an Array

Rebuilding is the process of restoring data to a hard drive from other drives in the array. Rebuilding applies only to fault-tolerant arrays such as RAID 1, RAID 5 or RAID 10 arrays. The procedures below assume a new drive is added to replace a failed drive to rebuild a RAID 1 array. (Note: The new drive must have equal or greater capacity than the old one.)

For the Intel P55:

Turn off your computer and replace the failed hard drive with a new one. Restart your computer.

Enabling Automatic Rebuild


Step 1:

When the message "Press <Ctrl-I> to enter Configuration Utility" appears, press <Ctrl> + <I> to enter the RAID Configuration Utility. The following screen appears after you enter the RAID Configuration Utility.

	Intel(R) Rapid Storage Technology - option ROM - 9.5.0.1037 Copyright(C) 2003-09 Intel Corporation. All Rights Reserved.							
1	[MAIN MENU]							
	[DEGRADED VOLUME DETECTED]							
	"Degraded volume and disk available for rebuilding detected. Selecting a disk initiates a rebuild. Rebuild completes in the operating system.							
	Select the port of the destination disk for rebuilding (ESC to exit):							
R/	Port Drive Model	Serial #		Size				
	1 WDC WD800JD-22	2LS WD-WMAN	A9W736333	111.7GB				
	[↑↓]-Previous/	/Next [ENTER]-Sel	ect	[ESC]-Exit				
0	ST3120026AS WDC WD800JD-22LS	3JT354CP WD-WMAM9W736333	111.7GB 111.7GB					
	[↑↓]-Select	[ESC]-Exit		[ENTER]-Select Menu				

Step 2:

Select the new hard drive to add into the array to be rebuilt and press <Enter>. The following screen appears, indicating that an automatic rebuild will be performed after you enter the operating system (look for the **Intel Rapid Storage Technology** icon are in the notification area, which will show that a RAID volume is being rebuilt). If you do not enable automatic rebuild on this stage, you have to manually rebuild the array in the operating system (see the next page for more details).

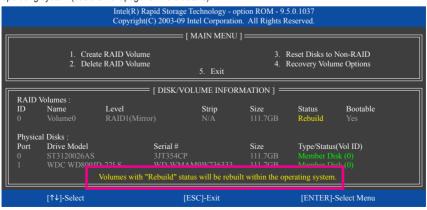

• Performing the Rebuild in the Operating System

While in the operating system, make sure the chipset driver has been installed from the motherboard driver disk. Then launch the Intel Rapid Stroage Technology utility from **All Programs** in the **Start** menu.

See	2	(intel)
Manage Volume and Stand Data Stand Tark Stand St		

Step 1:

Go to the Manage menu and click Rebuild to another disk in Manage Volume.



The **Status** item on the left of the screen displays the rebuild progress.



Step 2:

Select a new drive to rebuild the RAID and click **Rebuild**.



Step 3:


After the RAID 1 volume rebuilding, the **Status** will display as **Normal**.

· Restoring the Master Drive to a Previous State (for Recovery Volume only)

When two hard drives are set to Recovery Volume in Update on Request mode, you can restore the master drive data to the last backup state when needed. For example, in case the master drive detects a virus, you can restore the recovery drive data to the master drive.

Step 1:

Select 4. Recovery Volume Options in the MAIN MENU of the RAID Configuration Utility. On the RECOV-ERY OPTIONS menu, select Enable Only Recovery Disk to show the recovery drive in the operating system. Follow the on-screen instructions to complete and exit the RAID Configuration Utility.

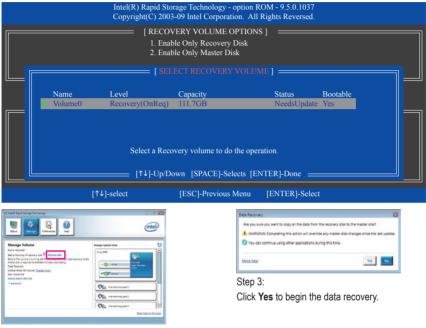

Step 2:

Go to the **Manage** menu of the Intel Rapid Storage Technology utility and click **Recover data** in **Manage Volume**.



The **Status** item on the left of the screen displays the rebuild progress.





After the recovery volume is completed, the **Status** will display as **Normal**.

For the JMicron JMB362:

Turn off your computer and replace the failed hard drive with a new one. Use either the RAID setup utility or the GIGABYTE RAID CONFIGURER utility in the operating system to perform the rebuild.

· Rebuilding with the RAID setup utility

Step 1:

When the message "Press <Ctrl-G> to enter RAID Setup Utility" appears, press <Ctrl> + <G> to enter the utility. In the **Main Menu** block, select **Rebuild Mirror Drive** and press <Enter>. The selection bar will move to the degraded array. Press <Enter> again.

Gigabyte Technology Corp. RAID Setup Utility v1.07.06							
[Main Menu]		[Hard Disk Driv	ve List]				
Create RAID Disk Drive Delete RAID Disk Drive Revert HDD to Non-RAID Solve Wirror Conflict Rebuild Mirror Drive Save And Exit Setup Exit Without Saving		Model Name HDD0: ST3120026, HDD1: ST3120026,		Capacity 120 GB 120 GB	Type/Status RAID Inside Non-RAID		
[RAID Disk Drive List]							
Model Name RDD0: GRAID					(HDDx)		
[←→TAB]-Switch Window	[↑↓]-Sele	ect RAID	[ENTER]-Actior	n []	ESC]-Exit		


Step 2:

The selection bar will then move to new hard drive in the **Hard Disk Drive List** block. Press <Enter> to start the RAID rebuilding process. The rebuilding progress is displayed at the bottom of the screen. When done, the status of the array will display as **Normal**.

Gigabyte Technology Corp. RAID Setup Utility v1.07.06							
[Main Menu] Create RAID Disk Drive Delete RAID Disk Drive Revert HDD to Non-RAID Solve Mirror Conflict Rebuild Mirror Drive Save And Exit Setup Exit Without Saving		[Hard Disk Drive L Model Name HDD0: ST3120026AS HDD1: ST3120026AS		Capacity 120 GB 120 GB	Type/Status RAID Inside Non-RAID		
[RAID Disk Drive List]=]		
Model Name RDD0: GRAID					(HDDx)		
Rebuilding35%, please wait							

· Rebuilding in the operating system

Make sure the JMB362 SATA controller driver has been installed from the motherboard driver disk. Launch the GIGABYTE RAID CONFIGURER from **All Programs** in the **Start** menu.

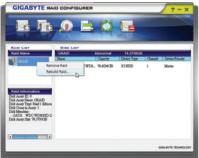

Step 1:

In the GIGABYTE RAID CONFIGURER screen, right-click on the array to be rebuilt in the **RAID** LIST block. Select **Rebuild Raid**. (Or click the **Rebuild** icon 2 in the tool bar.)



Step 3:

Select a drive to rebuild the array and click Next.



Step 5:

The rebuilding progress is displayed at the bottom of the screen.



Step 2:

When the Rebuilding RAID Wizard appears, click **Next**.



Step 4:

Click Finish to start the RAID rebuilding process.



Step 6: When finished, restart your system.

For the Marvell 9128:

Turn off your computer and replace the failed hard drive with a new one. Please note to perform the rebuild, you must enter the **GSATA RAID Configuration** menu in BIOS Setup.

Step 1:

After the system starts, enter the BIOS Setup program and go to **Integrated Peripherals**. Press <Enter> on **GSATA RAID Configuration** to access the RAID configuration menu. Move the selection bar to the array to be rebuilt (for example, VD 0: New_VD) and press <Enter> and then select **Rebuild**. Press <Enter> again.

Marvell BIOS Setu	p (c) 2009 Marvell Tec	hnology Group Ltd. 🛛 🚃	
Topology HBA 0 : Marvell 0 Virtual Disks VD 0: New VD PD 8: WDC W Free Physical Disks LPD 0: WDC WD8 [Rebuild] PD 0: WDC WD8	Information ID Name Status Stripe Size RAID Mode Size BGA Status Number of PDs Numbers	: 0 : New_VD Degrade : 64K : RAIDI : 75776MB : N/A : 1 : 8	Þ
Rebuilding with selected physical disk on this arra ENTER: Operation F10: Exit/Save ESC: Re			

Step 2:

The selection bar will move to the new drive. Press the $\langle Space \rangle$ key to select it and then press $\langle Enter \rangle$. When prompted to confirm, press $\langle Y \rangle$ to begin the rebuild or $\langle N \rangle$ to cancel.

Topology HBA 0 : Marvell 0 Virtual Disks LVD 0: New VD LPD 8: WDC WD800JD-22L Free Physical Disks * LPD 0: WDC WD800JD-22L Rebuild Do you want to rebu	up (c) 2009 Marvell Technology Group Ltd. : Information ID : 0 Name : New_VD Status : Degrade Stripe Size : 64K RAID Mode : RAID1 Size : 75776MB BGA Status : N/A ild with selected physical disk on this vd?	
Help — Use space bar to select the free disks to be used i ENTER: Operation SPACE: Select F10: Ex		•


Step 3:

The **BGA Rebuild** item in the **Information** block will display the current rebuild progress. After the rebuild is complete, the **Status** will display as **Functional**. Please note the rebuild will be stopped if you exit the rebuild screen before the rebuild is complete.

	p (c) 2009 Marvell Tech Information — ID Name Status Stripe Size RAID Mode Size BGA Status BGA Rebuild Numbers Numbers	:	o New_VD Degrade 64K RAIDI 75776MB Running 27% 2	
 Help Virtual Disk: A set of disk blocks presented to an a a range of consecutively numbered logical blocks ENTER: Operation F10: Exit/Save ESC: Ref 	with disk-like storage.	IS		

Resume the Stopped Rebuild Process

To resume the stopped rebuild process, enter the **GSATA RAID Configuration** menu in BIOS Setup again. Move the selection bar to the array to be rebuilt (for example, VD 0: New_VD). Press <Enter> on this array and select **Resume**. Press <Enter> again to continue the rebuild process. Note that the percentage of the last rebuild progress will be rounded down to the nearest multiple of 10 percent (as shown in the **BGA Rebuild** item). For example, if you stopped the rebuild at 27%, the rebuild will continue at 20%.

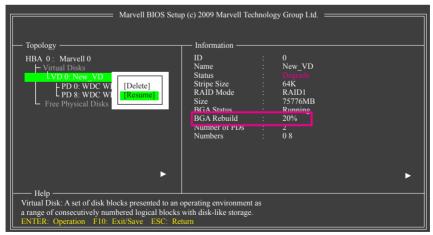

5-2 Configuring Audio Input and Output

5-2-1 Configuring 2/4/5.1/7.1-Channel Audio

The motherboard provides six audio jacks on the back panel which support 2/4/5.1/7.1-channel ^(Note) audio. The picture to the right shows the default audio jack assignments.

The integrated HD (High Definition) audio provides jack retasking capability that allows the user to change the function for each jack through the audio driver.



For example, in a 4-channel audio configuration, if a Side speaker is plugged into the default Center/Subwoofer speaker out jack, you can retask the Center/Subwoofer speaker out jack to be Side speaker out.



To install a microphone, connect your microphone to the Mic in jack and manually configure the jack for microphone functionality.

Audio signals will be present on both of the front and back panel audio connections simultaneously. If you want to mute the back panel audio (only supported when using an HD front panel audio module), refer to instructions on the next page.

High Definition Audio (HD Audio)

HD Audio includes multiple high quality digital-to-analog converters (DACs) that support 44.1KHz/48KHz/ 96KHz/192KHz sampling rate. HD Audio features multistreaming capabilities that allow multiple audio streams (in and out) to be simultaneously processed. For example, users can listen to MP3 music, have an Internet chat, make a telephone call over the Internet, and etc. all at the same time.

A. Configuring Speakers

(The following instructions use Windows Vista as the example operating system.)

Step 1:

After installing the audio driver, the **HD Audio Manager** icon **a** will appear in the notification area. Double-click the icon to access the **HD Audio Manager**.



(Note) 2/4/5.1/7.1-Channel Audio Configurations:

Refer to the following for multi-channel speaker configurations.

- 2-channel audio: Headphone or Line out.
- 4-channel audio: Front speaker out and Side speaker out.
- 5.1-channel audio: Front speaker out, Side speaker out, and Center/Subwoofer speaker out.
- 7.1-channel audio: Front speaker out, Rear speaker out, Center/Subwoofer speaker out, and Side speaker out.

Step 2:

Connect an audio device to an audio jack. The **The cur**rent connected device is dialog box appears. Select the device according to the type of device you connect. Then click **OK**.

Step 3:

On the **Speakers** screen, click the **Speaker Configuration** tab. In the **Speaker Configuration** list, select **Stereo**, **Quadraphonic**, **5.1 Speaker**, or **7.1 Speaker** according to the type of speaker configuration you wish to set up. Then the speaker setup is completed.



You may configure an audio environment on the Sound Effects tab.

C. Activating an AC'97 Front Panel Audio Module

If your chassis provides an AC'97 front panel audio module, to activate the AC'97 functionality, click the tool icon on the **Speaker Configuration** tab. On the **Connector Settings** dialog box, select the **Disable front panel jack detection** check box. Click **OK** to complete.





GIGABYTE

•

C OK

D. Muting the Back Panel Audio (For HD Audio Only)

Click Device advanced settings on the top right corner on the Speaker Configuration tab to open the Device advanced settings dialog box. Select the Mute the rear output device, when a front headphone plugged in check box. Click OK to complete.








5-2-2 Configuring S/PDIF In/Out

A. S/PDIF In

The S/PDIF In cable (optional) allows you to input digital audio signals to the computer for audio processing.

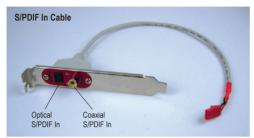


1. Installing the S/PDIF In Cable:



Step 1:

First, attach the connector at the end of the cable to the SPDIF_I header on your motherboard.





2. Configuring S/PDIF In:

On the Digital Input screen, click the Default Format tab to select the default format. Click OK to complete.

Date Order Cherry	Dates Crant	Directions -			Deska advanced
L		0	*0	fet belait beier	ANNUOS East Panel
Date Auto Inst. Do fast Pare					
	format exit in (2) Quille (2011 In: (2) Quille		. 6	2	Furthere
141	excerce (2-0 Gasta) Martin Profession (Casta) Martin Profession (Casta)	to be used when running to			ENJEAL
-					•
GIGABYTE					

(Note) The actual locations of the S/PDIF In and S/PDIF Out connectors may differ by model.

B. S/PDIF Out

The S/PDIF Out jacks can transmit audio signals to an external decoder for decoding to get the best audio quality.

1. Connecting a S/PDIF Out Cable:





S/PDIF Coaxial Cable

S/PDIF Optical Cable

Connect a S/PDIF coaxial cable or a S/PDIF optical cable (either one) to an external decoder for transmitting the S/PDIF digital audio signals.

2. Configuring S/PDIF Out:

On the **Digital Output(Optical)** screen ^(Note), click the **Default Format** tab and then select the sample rate and bit depth. Click **OK** to complete.



(Note) Enter the **Digital Output(Optical)** screen to configure further settings if you use the S/PDIF Out connector(s) on the back panel for digital audio output or enter the **Digital Output** screen if you use the internal S/PDIF Out connector (SPDIF_O) for digital audio output.

5-2-3 Enabling the Dolby Home Theater Function



Before Dolby Home Theater is enabled, you get only 2-channel playback output (from the front speakers) when playing 2-channel stereo sources. You must play 4-, 5.1-, or 7.1- channel content to get 4-, 5.1-, or 7.1- channel audio effects. With Dolby Home Theater enabled, 2-channel stereo content will be transformed into multi-channel audio, creating a virtual surround sound environment^(Note).

Install the **Dolby GUI Software** driver from the motherboard driver disk. Click the **Start** icon (20). Point to **All Programs**, **Dolby Control Center** to access the utility.

(The following illustration demonstrates a 7.1-speaker configuration as an example.)



1. Dolby Pro Logic IIx

Click Dolby Pro Logic IIx. The system will expand 2-channel audio for a 7.1-channel surround sound playback.

2. Natural Bass


Click Natural Bass to enable speaker bass effect.


(Note) When Dolby Digital Live is enabled, only digital audio output (S/PDIF) is working, and you will not hear any sound from analog speakers or headphone.

5-2-4 Configuring Microphone Recording

Step 1:

After installing the audio driver, the **HD Audio Manager** icon **and** will appear in the notification area. Double-click the icon to access the **HD Audio Manager**.



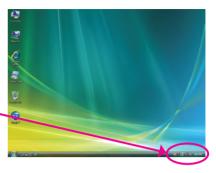

Step 2:

Connect your microphone to the Mic in jack (pink) on the back panel or the Mic in jack (pink) on the front panel. Then configure the jack for microphone functionality.

Note: The microphone functions on the front panel and back panel cannot be used at the same time.



Step 3:

Go to the **Microphone** screen. Do not mute the recording volume, or you'll not be able to record the sound. To hear the sound being recorded during the recording process, do not mute the playback volume. It is recommended that you set the volumes at a middle level.





If you want to change the current sound input default device to microphone, right-click on Microphone and select Set Default Device. Step 4:

To raise the recording and playback volume for the microphone, click the Microphone Boost icon 📳 on the right of the Recording Volume slider and set the Microphone Boost level.





Step 5:

After completing the settings above, click Start, point to All Programs, point to Accessories, and then click Sound Recorder to begin the sound recording.





* Enabling Stereo Mix

If the HD Audio Manager does not display the recording device you wish to use, refer to the steps below. The following steps explain how to enable Stereo Mix (which may be needed when you want to record sound from your computer).

4

Step 1:

Locate the Volume icon 🚺 in the notification area and right-click on this icon. Select Recording Devices.

👽 🤫 📑 🌒 🛛 🙀 🕩 5:45 PM



and select Show Disabled Devices.



Step 3:

When the **Stereo Mix** item appears, right-click on this item and select **Enable**. Then set it as the default device.



Step 4:

Now you can access the HD Audio Manager to configure Stereo Mix and use Sound Recorder to record the sound.

Callon Craine	Const I	арманы 👘 с	designed with the second	n Ha	entire advanced
Annotag yanata L k	Default formal (1998, 4900 m) (2005 Salest for sample of math.		0/www.	jelādadītena	MALCO Institute Institute Part frue Institute
GIGABYTE					

5-2-5 Using the Sound Recorder



A. Recording Sound

- 1. Make sure you have connected the sound input device (e.g. microphone) to the computer.
- 2. To record the audio, click the **Start Recording** button sun Recording.
- 3. To stop recording audio, click the Stop Recording button Stop Recording.

Be sure to save the recorded audio file upon completion.

B. Playing the Recorded Sound

You can play your recording in a digital media player program that supports your audio file format.

5-3 Troubleshooting

5-3-1 Frequently Asked Questions

To read more FAQs for your motherboard, please go to the Support&Downloads\Motherboard\FAQ page on GIGABYTE's website.

- Q: In the BIOS Setup program, why are some BIOS options missing?
- A: Some advanced options are hidden in the BIOS Setup program. Press <Delete> to enter BIOS Setup during the POST. In the Main Menu, press <Ctrl>+<F1> to show the advanced options.
- Q: Why is the light of my keyboard/optical mouse still on after the computer shuts down?
- A: Some motherboards provide a small amount of standby power after the computer shuts down and that's why the light is still on.
- Q: How do I clear the CMOS values?
- A: For motherboards that have a CMOS_SW button, press this button to clear the CMOS values (before doing this, please turn off the computer and unplug the power cord). For motherboards that have a clearing CMOS jumper, refer to the instructions on the CLR_CMOS jumper in Chapter 1 to short the jumper to clear the CMOS values. If your board doesn't have this jumper, refer to the instructions on the motherboard battery in Chapter 1. You can temporarily remove the battery from the battery holder to stop supplying power to the CMOS, which will clear the CMOS values after about one minute.
- Q: Why do I still get a weak sound even though I have turned my speaker to the maximum volume?
- A: Make sure your speaker is equipped with an internal amplifier. If not, try a speaker with power/amplifier.
- Q: Why cannot I install the onboard HD audio driver successfully? (For Windows XP only)
- A: Step 1: First, make sure Service Pack 1 or Service Pack 2 has been installed (check in My Computer > Properties > General > System). If not, please update it from Microsoft's website. Then make sure the Microsoft UAA Bus Driver for High Definition Audio has been installed successfully (check in My Computer > Properties > Hardware > Device Manager > System Devices).
 - Step 2: Check if Audio Device on High Definition Audio Bus or Unknown device is present in Device Manager or Sound, video, and game controllers. If yes, please disable this device. (If not, skip this step.)
 - Step 3: Then go back to My Computer > Properties > Hardware > Device Manager > System devices and right-click on Microsoft UAA Bus Driver for High Definition Audio and select Disable and Uninstall.
 - Step 4: In Device Manager, right-click on the computer name and select Scan for hardware changes. When the Add New Hardware Wizard appears, click Cancel. Then install the onboard HD audio driver from the motherboard driver disk or download the audio driver from GIGABYTE's website to install.


For more details, go to the Support&Downloads\Motherboards\FAQ page on our website and search for "onboard HD audio driver."


- Q: What do the beeps emitted during the POST mean?
- A: The following Award BIOS beep code descriptions may help you identify possible computer problems.

(FOI TEIEFEICE OTII).)	
1 short: System boots successfully	1 long, 3 short: Keyboard error
2 short: CMOS setting error	1 long, 9 short: BIOS ROM error
1 long, 1 short: Memory or motherboard error	Continuous long beeps: Graphics card not inserted properly
1 long, 2 short: Monitor or graphics card error	Continuous short beeps: Power error

5-3-2 Troubleshooting Procedure

If you encounter any troubles during system startup, follow the troubleshooting procedure below to solve the problem.

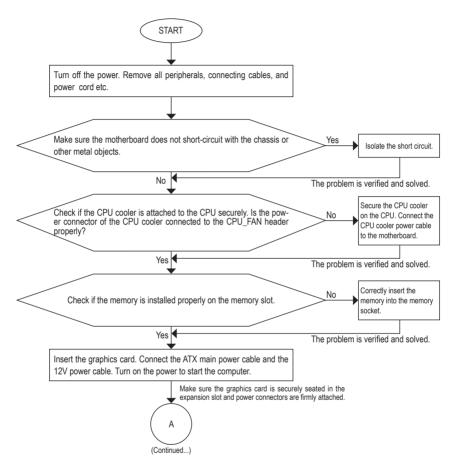

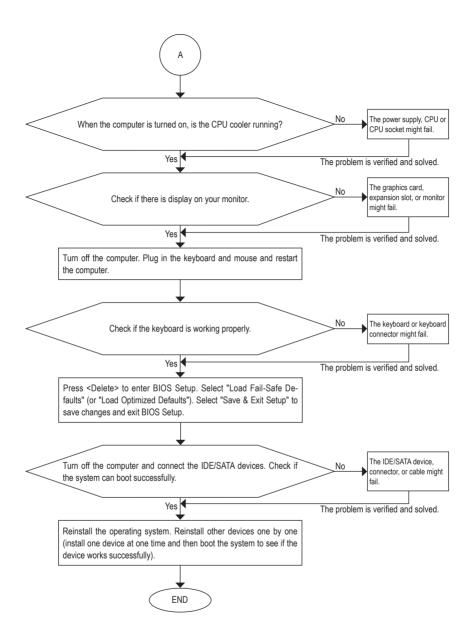



If the procedure above is unable to solve your problem, contact the place of purchase or local dealer for help. Or go to the **Support&Downloads\Technical Service Zone** page to submit your question. Our customer service staff will reply you as soon as possible.

5-4 Regulatory Statements

Regulatory Notices

This document must not be copied without our written permission, and the contents there of must not be imparted to a third party nor be used for any unauthorized purpose. Contravention will be prosecuted. We believe that the information contained herein was accurate in all respects at the time of printing. GIGABYTE cannot, however, assume any responsibility for errors or omissions in this text. Also note that the information in this document is subject to change without notice and should not be construed as a commitment by GIGABYTE.

Our Commitment to Preserving the Environment

In addition to high-efficiency performance, all GIGABYTE motherboards fulfill European Union regulations for RoHS (Restriction of Certain Hazardous Substances in Electrical and Electronic Equipment) and WEEE (Waste Electrical and Electronic Equipment) environmental directives, as well as most major worldwide safety requirements. To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, GIGABYTE provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

Restriction of Hazardous Substances (RoHS) Directive Statement

GIGABYTE products have not intended to add and safe from hazardous substances (Cd, Pb, Hg, Cr+6, PBDE and PBB). The parts and components have been carefully selected to meet RoHS requirement. Moreover, we at GIGABYTE are continuing our efforts to develop products that do not use internationally banned toxic chemicals.

Waste Electrical & Electronic Equipment (WEEE) Directive Statement

GIGABYTE will fulfill the national laws as interpreted from the 2002/96/EC WEEE (Waste Electrical and Electronic Equipment) directive. The WEEE Directive specifies the treatment, collection, recycling and disposal of electric and electronic devices and their components. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.

WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health

and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local or regional waste collection administration for recycling.
- If you need further assistance in recycling, reusing in your "end of life" product, you may contact us at the Customer Care number listed in your product's user's manual and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly. With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

China Restriction of Hazardous Substances Table

The following table is supplied in compliance with China's Restriction of Hazardous Substances (China RoHS) requirements:



关于符合中国《电子信息产品污染控制管理办法》的声明 Management Methods on Control of Pollution from Electronic Information Products (China RoHS Declaration) 产品中有毒有害物质或元素的名称及含量

	Hazardous	s Substand				
				赘(Hazardou:		
部件名称(Parts)	铅(Pb)	汞(Hg)	镐(Cd)	六价络 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB板 PCB	0	0	0	0	0	0
结构件及风扇 Mechanical parts and Fan	×	0	0	0	0	0
芯片及其他主动零件 Chip and other Active components	×	0	0	0	0	0
连接器 Connectors	×	0	0	0	0	0
被动电子元器件 Passive Components	×	0	0	0	0	0
线材 Cables	0	0	0	0	0	0
焊接金属 Soldering metal	0	0	0	0	0	0
助焊剂, 散热膏, 标签及其他耗材 Flux,Solder Paste,Label and other Consumable Materials	0	0	0	0	0	0
〇:表示该有毒有害物质在该部件所有 Indicates that this hazardous sub below the limit requirement SJ/T 1	stance co	ntained i				
×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。 Indicates that this hazardous substance contained in at least one of the homogenous materials of this part is above the limit requirement in SJ/T 11363-2006						
对销售之日的所受售产品,本表显示我公司供应链的电子信息产品可能包含这些物质。注意:在所售产品中 可能会也可能不会含有所有所列的部件。 This table shows where these substances may be found in the supply chain of our electronic information products, as of the date of the sale of the enclosed products. Note that some of the component types listed above may or may not be a part of the enclosed product.						



GIGA-BYTE TECHNOLOGY CO., LTD.
Address: No.6, Bau Chiang Road, Hsin-Tien,
Taipei 231, Taiwan
TEL: +886-2-8912-4000
FAX: +886-2-8912-4003
Tech. and Non-Tech. Support (Sales/Marketing) :
http://ggts.gigabyte.com.tw
WEB address (English): http://www.gigabyte.com.tw
WEB address (Chinese): http://www.gigabyte.tw
 G.B.T. INC. - U.S.A.

TEL: +1-626-854-9338

FAX: +1-626-854-9339 Tech. Support: http://rma.gigabyte.us Web address: http://www.gigabyte.us

• G.B.T. INC (USA) - Mexico

Tel: +1-626-854-9338 x 215 (Soporte de habla hispano) FAX: +1-626-854-9339 Correo: soporte@gigabyte-usa.com Tech. Support:

http://rma.gigabyte.us

Web address: http://latam.giga-byte.com

Giga-Byte SINGAPORE PTE. LTD. - Singapore

WEB address : http://www.gigabyte.sg

Thailand

WEB address : http://th.giga-byte.com

Vietnam

WEB address : http://www.gigabyte.vn

 NINGBO G.B.T. TECH. TRADING CO., LTD. - China WEB address : http://www.gigabyte.cn Shanghai TEL:+86-21-63410999 FAX: +86-21-63410100 Beiiina TEL: +86-10-62102838 FAX: +86-10-62102848 Wuhan TEL: +86-27-87851061 FAX: +86-27-87851330 GuangZhou TEL:+86-20-87540700 FAX: +86-20-87544306 Chenadu TEL: +86-28-85236930 FAX: +86-28-85256822 Xian TEL: +86-29-85531943 FAX: +86-29-85510930 Shenvang TEL: +86-24-83992901 FAX: +86-24-83992909 GIGABYTE TECHNOLOGY (INDIA) LIMITED - India WEB address : http://www.gigabyte.in Saudi Arabia WEB address : http://www.gigabyte.com.sa · Gigabyte Technology Pty. Ltd. - Australia

WEB address : http://www.gigabyte.com.au

G.B.T. TECHNOLOGY TRADING GMBH - Germany	Hungary
WEB address : http://www.gigabyte.de	WEB address : http://www.giga-byte.hu
• G.B.T. TECH. CO., LTD U.K.	Turkey
WEB address : http://www.giga-byte.co.uk	WEB address : http://www.gigabyte.com.tr
Giga-Byte Technology B.V The Netherlands	Russia
WEB address : http://www.giga-byte.nl	WEB address : http://www.gigabyte.ru
GIGABYTE TECHNOLOGY FRANCE - France	Poland
WEB address : http://www.gigabyte.fr	WEB address : http://www.gigabyte.pl
Sweden	Ukraine
WEB address : http://www.gigabyte.se	WEB address : http://www.gigabyte.ua
• Italy	Romania
WEB address : http://www.giga-byte.it	WEB address : http://www.gigabyte.com.ro
• Spain	Serbia
WEB address : http://www.giga-byte.es	WEB address : http://www.gigabyte.co.rs
• Greece	Kazakhstan
WEB address : http://www.gigabyte.com.gr	WEB address : http://www.gigabyte.kz
Czech Republic	You may go to the GIGABYTE website, select your language
WEB address : http://www.gigabyte.cz	in the language list on the top right corner of the website.

GIGABYTE Global Service System



To submit a technical or non-technical (Sales/Marketing) question, please link to: http://ggts.gigabyte.com.tw Then select your language to enter the system.