

# **GA-8I915P Duo (Pro)-A**

Intel® Pentium® 4 LGA775 Processor Motherboard

## **User's Manual**

Rev. 1001

12ME-8I915PUPA-1001

## 2.2. Main results and implications

**Q.B.T. Technology Trading GmbH**  
Auenlager Weg 41, 1F 20537 Hamburg, Germany

(description of the apparatus, system, installation to which it refers

## Motherboard

GIA-81915P Duo (Pro)

(Reference to the specific act under which conformity is declared in accordance with 2002/96/EC EEC EMC Directive)

[illegible]

(b) *consistency* marking.

The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 73/23 EEC

[illegible]

**Manufacturer/Importer**

Signature: *Timothy J. Huang*

151

Date Jun. 11, 2004

### Nome :

## DECLARATION OF CONFORMITY

Per HCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

**Address:** 17358 Railroad Street

City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

herby declares that the product

**Product Name: Motherboard**

**Model Number:** GA-8I9I5P Duo (Pro)-A

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(2), Class B Digital Device

### Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any interference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: *Eric Lu*

Date: Jun. 11, 2004

**DECLARATION OF CONFORMITY**

Per FCC Part 2 Section 2.107(a)



**Responsible Party Name:** G.B.T., INC. (U.S.A.)

**Address:** 17358 Railroad Street  
City of Industry, CA 91748

**Phone/Fax No:** (818) 854-9338/(818) 854-9339

herby declares that the product

**Product Name:** Motherboard

**Model Number:** GA-81915P Duo (Pro)-A

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109  
(a) Class B Digital Device

**Supplementary Information:**

This device complies with part 15 of the FCC Rules. Operation is  
subject to the following two conditions: (1) This device may not  
cause harmful and (2) this device must accept any interference received,  
including that may cause undesired operation.

**Representative Person's Name:** ERIC LIU

**Signature:** *Eric Liu*

**Date:** Jun. 11, 2004

## **Copyright**

© 2004 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved.

The trademarks mentioned in the manual are legally registered to their respective companies.

## **Notice**

The written content provided with this product is the property of Gigabyte.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without Gigabyte's prior written permission. Specifications and features are subject to change without prior notice.

## **Product Manual Classification**

In order to assist in the use of this product, Gigabyte has categorized the user manual in the following:

- For quick installation, please refer to the "Hardware Installation Guide" included with the product.
- For detailed product information and specifications, please carefully read the "Product User Manual".
- For detailed information related to Gigabyte's unique features, please go to Gigabyte's website under "Technology Guide" where information can be downloaded in .pdf format.

For more product details, please click onto Gigabyte's website at [www.gigabyte.com.tw](http://www.gigabyte.com.tw)

# Table of Contents


GA-8I915P Duo (Pro)-A Motherboard Layout .....	6
Block Diagram .....	7
Chapter 1 Hardware Installation .....	9
1-1 Considerations Prior to Installation .....	9
1-2 Feature Summary .....	10
1-3 Installation of the CPU and Heatsink .....	12
1-3-1 Installation of the CPU .....	12
1-3-2 Installation of the Heatsink .....	13
1-4 Installation of Memory .....	14
1-5 Installation of Expansion Cards .....	16
1-5-1 What is G.E.A.R.? .....	17
1-5-2 Graphics Card Support List .....	17
1-6 I/O Back Panel Introduction .....	19
1-7 Connectors Introduction .....	20
Chapter 2 BIOS Setup .....	31
The Main Menu (For example: BIOS Ver. : E11) .....	32
2-1 Standard CMOS Features .....	34
2-2 Advanced BIOS Features .....	36
2-3 Integrated Peripherals .....	38
2-4 Power Management Setup .....	42
2-5 PnP/PCI Configurations .....	44
2-6 PC Health Status .....	45
2-7 MB Intelligent Tweaker (M.I.T.) .....	46
2-8 Load Fail-Safe Defaults .....	48
2-9 Load Optimized Defaults .....	48
2-10 Set Supervisor/User Password .....	49
2-11 Save & Exit Setup .....	50
2-12 Exit Without Saving .....	50



Chapter 3	Install Drivers .....	51
3-1	Install Chipset Drivers .....	51
3-2	Software Applications .....	52
3-3	Driver CD Information .....	52
3-4	Hardware Information .....	53
3-5	Contact Us .....	53
Chapter 4	Appendix .....	55
4-1	Unique Software Utilities .....	55
4-1-1	Xpress Recovery Introduction .....	56
4-1-2	Flash BIOS Method Introduction .....	59
4-1-3	Serial ATA BIOS Setting Utility Introduction ⓘ .....	70
4-1-4	2 / 4 / 5.1 / 7.1 Channel Audio Function Introduction .....	77
4-2	Troubleshooting .....	83

ⓘ Only for GA-8I915P Duo Pro-A.


# GA-8I915P Duo (Pro)-A Motherboard Layout

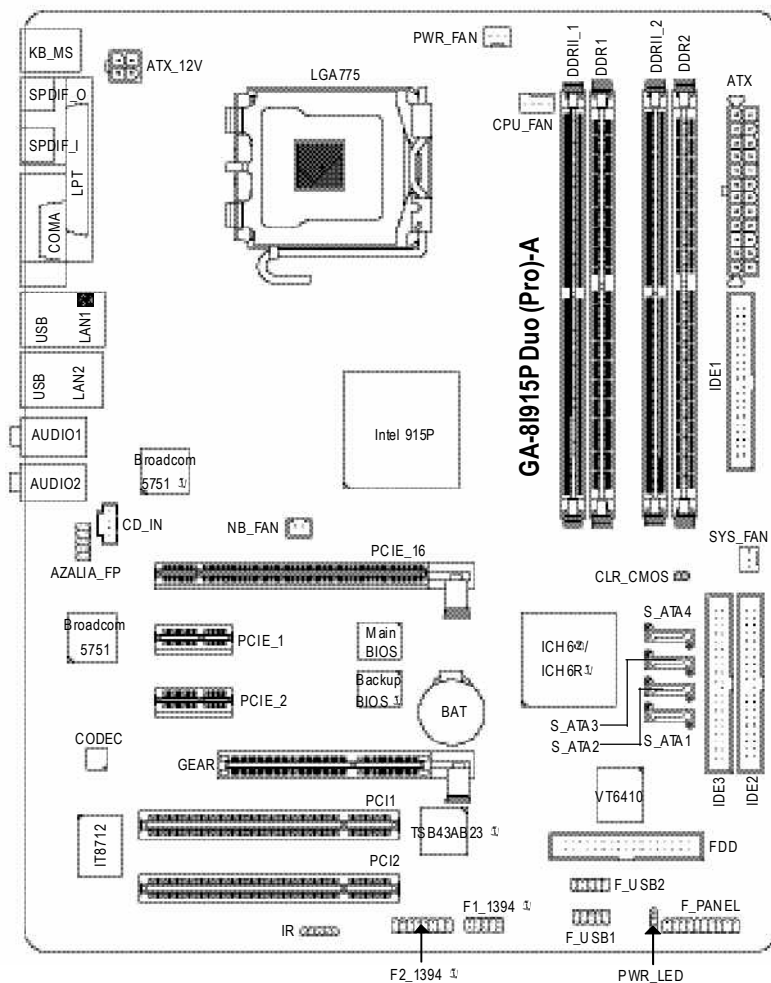

① Only for GA-8I915P Duo Pro-A.

② Only for GA-8I915P Duo-A.

## Block Diagram

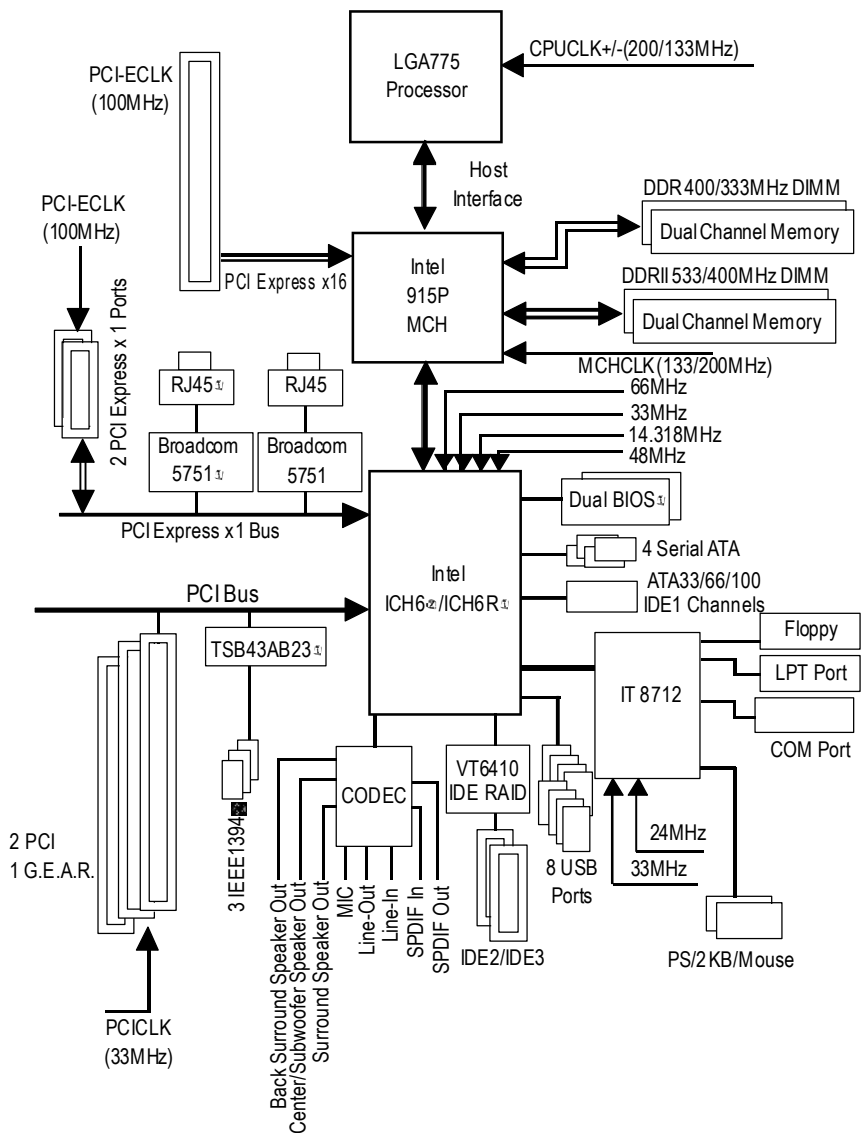

 Only for GA-8I915P Duo Pro-A.

② Only for GA-8I915P Duo-A.

[illegible]

# Chapter 1 Hardware Installation

## 1-1 Considerations Prior to Installation

### Preparing Your Computer

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Thus, prior to installation, please follow the instructions below:

1. Please turn off the computer and unplug its power cord.
2. When handling the motherboard, avoid touching any metal leads or connectors.
3. It is best to wear an electrostatic discharge (ESD) cuff when handling electronic components (CPU, RAM).
4. Prior to installing the electronic components, please have these items on top of an antistatic pad or within a electrostatic shielding container.
5. Please verify that you the power supply is switched off before unplugging the power supply connector from the motherboard.

### Installation Notices

1. Prior to installation, please do not remove the stickers on the motherboard. These stickers are required for warranty validation.
2. Prior to the installation of the motherboard or any hardware, please first carefully read the information in the provided manual.
3. Before using the product, please verify that all cables and power connectors are connected.
4. To prevent damage to the motherboard, please do not allow screws to come in contact with the motherboard circuit or its components.
5. Please make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
6. Please do not place the computer system on an uneven surface.
7. Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
8. If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

### Instances of Non-Warranty

1. Damage due to natural disaster, accident or human cause.
2. Damage as a result of violating the conditions recommended in the user manual.
3. Damage due to improper installation.
4. Damage due to use of uncertified components.
5. Damage due to use exceeding the permitted parameters.
6. Product determined to be an unofficial Gigabyte product.

## 1-2 Feature Summary

CPU	<ul style="list-style-type: none"> <li>Supports the latest Intel® Pentium® 4 LGA775 CPU</li> <li>Supports 800/533MHz FSB</li> <li>L2 cache varies with CPU</li> </ul>
Chipset	<ul style="list-style-type: none"> <li>Northbridge: Intel® 915P Express Chipset</li> <li>Southbridge: Intel® ICH6 ②/ICH6R ①</li> </ul>
Memory	<ul style="list-style-type: none"> <li>2 DDR DIMM memory slots (supports up to 2GB memory)</li> <li>Supports 2.5V DDR DIMM</li> <li>Supports dual channel DDR 400/333 DIMM</li> <li>2 DDR II DIMM memory slots (supports up to 2GB memory)</li> <li>Supports 1.8V DDR II DIMM</li> <li>Supports dual channel DDR II 533/400 DIMM (Note: Mixed mode, populating DDR and DDR II memory modules simultaneously is not supported.)</li> </ul>
Slots	<ul style="list-style-type: none"> <li>1 PCI Express x 16 slot</li> <li>2 PCI Express x 1 slots</li> <li>2 PCI slots</li> <li>1 G.E.A.R. slot</li> </ul>
IDE Connections	<ul style="list-style-type: none"> <li>1 IDE connection (UDMA 33/ATA 66/ATA 100), allows connection of 2 IDE devices(IDE1)</li> <li>2 IDE connection (UDMA 33/ATA 66/ATA 100/ATA 133), compatible with RAID, allows connection of 4 IDE devices(IDE2,IDE3)<sup>(Note)</sup></li> </ul>
FDD Connections	<ul style="list-style-type: none"> <li>1 FDD connection, allows connection of 2 FDD devices</li> </ul>
Onboard SATA	<ul style="list-style-type: none"> <li>4 Serial ATA connections</li> </ul>
Peripherals	<ul style="list-style-type: none"> <li>1 parallel port supporting Normal/EPP/ECP mode</li> <li>1 Serial port (COMA)</li> <li>8 USB 2.0/1.1 ports (rear x 4, front x 4 via cable)</li> <li>3 IEEE1394 ports (requires cable) ①</li> <li>1 front audio connector</li> <li>1 IR connector</li> <li>1 PS/2 keyboard port</li> <li>1 PS/2 mouse port</li> </ul>
Onboard LAN	<ul style="list-style-type: none"> <li>Onboard Broadcom 5751 chip (10/100/1000 Mbit)</li> <li>2 RJ 45 port--LAN1 ① / LAN2</li> </ul>

(Note) Only support ATAPI mode for HDD.

① Only for GA-8I915P Duo Pro-A.

② Only for GA-8I915P Duo-A.

Onboard Audio	<ul style="list-style-type: none"> <li>◆ C-Media 9880 CODEC (UAJ)</li> <li>◆ Supports Jack Sensing function</li> <li>◆ Supports 2 / 4 / 5.1 / 7.1 channel audio</li> <li>◆ Supports Line In ; Line Out ; MIC ; Back Surround Speaker Out ; Center/Subwoofer Speaker Out ; Surround Speaker Out connection</li> <li>◆ Supports SPDIF In/Out connection</li> <li>◆ CD In</li> </ul>
On-Board SATA RAID ①	<ul style="list-style-type: none"> <li>◆ Onboard ICH6R chipset</li> <li>◆ supports data striping (RAID 0) or mirroring (RAID 1) function</li> <li>◆ supports JBOD function</li> <li>◆ supports data transfer rate of up 150 MB</li> <li>◆ supports hot plugging function</li> <li>◆ supports a maximum of 4 SATA connections</li> <li>◆ supported on the Win 2000/XP operating systems</li> </ul>
On-Board IDE RAID (IDE2, IDE3)	<ul style="list-style-type: none"> <li>◆ Built-in VT6410 chipset</li> <li>◆ Supports disk striping (RAID 0) or disk mirroring (RAID 1) or striping + mirroring (RAID 0 + RAID 1)</li> <li>◆ Supports JBOD function</li> <li>◆ Supports concurrent dual ATA133 IDE controller operation</li> <li>◆ Supports ATAPI mode for HDD</li> <li>◆ Supports IDE bus master operation</li> <li>◆ Supports ATA133/RAID mode switch by BIOS</li> <li>◆ Displays status and error checking messages during boot-up</li> <li>◆ Mirroring supports automatic background rebuilds</li> <li>◆ Features LBA and Extended Interrupt 13 drive translation in controller onboard BIOS</li> </ul>
I/O Control	<ul style="list-style-type: none"> <li>◆ IT8712</li> </ul>
Hardware Monitor	<ul style="list-style-type: none"> <li>◆ System voltage detection</li> <li>◆ CPU temperature detection</li> <li>◆ CPU / System / Power fan speed detection</li> <li>◆ CPU warning temperature</li> <li>◆ CPU / System / Power fan failure warning</li> <li>◆ CPU smart fan control</li> </ul>
BIOS	<ul style="list-style-type: none"> <li>◆ Use of licensed AWARD BIOS</li> <li>◆ Supports Dual BIOS①/Q-Flash</li> </ul>
Additional Features	<ul style="list-style-type: none"> <li>◆ Supports @BIOS</li> <li>◆ Supports EasyTune</li> </ul>
Overclocking	<ul style="list-style-type: none"> <li>◆ Over Voltage via BIOS (CPU/DDR/PCI-E)</li> <li>◆ Over Clock via BIOS (CPU/DDR)</li> </ul>
Form Factor	<ul style="list-style-type: none"> <li>◆ ATX form factor; 30.5cm x 24.4cm</li> </ul>

① Only for GA-8I915P Duo Pro-A.

## 1-3 Installation of the CPU and Heatsink



Before installing the CPU, please comply with the following conditions:

1. Please make sure that the motherboard supports the CPU.
2. Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
3. Please add an even layer of heat sink paste between the CPU and heatsink.
4. Please make sure the heatsink is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.



### HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:

- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology

### 1-3-1 Installation of the CPU

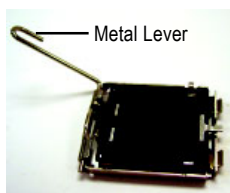


Fig. 1  
Gently lift the metal lever located on the CPU socket to the upright position.

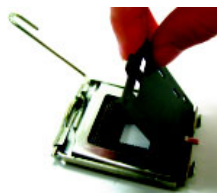


Fig. 2  
Remove the plastic covering on the CPU socket.

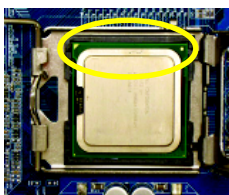


Fig. 3  
Notice the small gold colored triangle located on the edge of the CPU socket. Align the indented corner of the



Fig. 4  
Once the CPU is properly inserted, please replace the plastic covering and push the metal lever back into its original position.

CPU with the triangle and gently insert the CPU into position. (Grasping the CPU firmly between your thumb and forefinger, carefully place it into the socket in a straight and downwards motion. Avoid twisting or bending motions that might cause damage to the CPU during installation.)



### 1-3-2 Installation of the Heatsink



Fig. 1

Please apply an even layer of heatsink paste on the surface of the installed CPU.

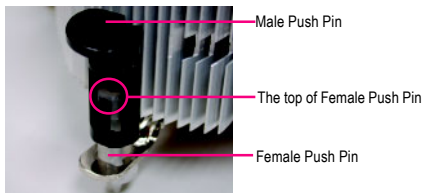


Fig. 2

(Turning the push pin along the direction of arrow is to remove the heatsink, on the contrary, is to install.) Please note the direction of arrow sign on the male push pin doesn't face inwards before installation. (This instruction is only for Intel boxed fan)

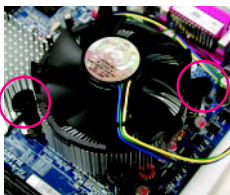


Fig. 3

Place the heatsink atop the CPU and make sure the push pins aim to the pin hole on the motherboard. Pressing down the push pins diagonally.

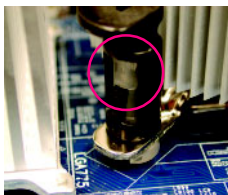


Fig. 4

Please make sure the Male and Female push pin are joined closely. (for detailed installation instructions, please refer to the heatsink installation section of the user manual)

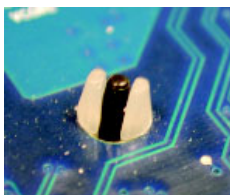


Fig. 5

Please check the back of motherboard after installing. If the push pin is inserted as the picture, the installation is complete.

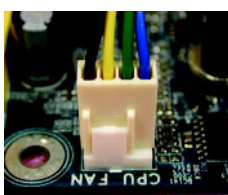


Fig. 6

Finally, please attach the power connector of the heatsink to the CPU fan header located on the motherboard.



The heatsink may adhere to the CPU as a result of hardening of the heatsink paste. To prevent such an occurrence, it is suggested that either thermal tape rather than heat sink paste be used for heat dissipation or using extreme care when removing the heatsink.

## 1-4 Installation of Memory



Before installing the memory modules, please comply with the following conditions:

1. Please make sure that the memory used is supported by the motherboard. It is recommended that memory of similar capacity, specifications and brand be used.
2. Before installing or removing memory modules, please make sure that the computer power is switched off to prevent hardware damage.
3. Memory modules have a foolproof insertion design. A memory module can be installed in only one direction. If you are unable to insert the module, please switch the direction.

The motherboard supports DDR II & DDR memory modules, whereby BIOS will automatically detect memory capacity and specifications. Memory modules are designed so that they can be inserted only in one direction. The memory capacity used can differ with each slot.

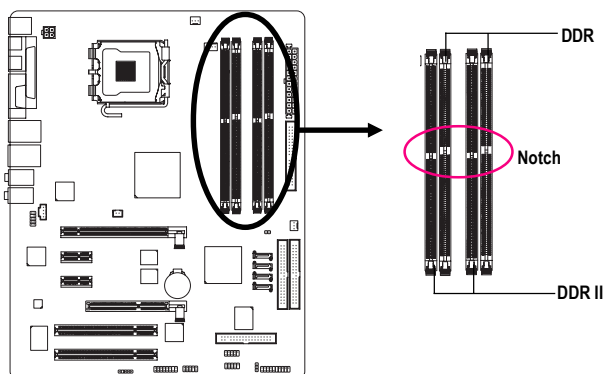


Fig.1

The DIMM socket has a notch, so the DIMM memory module can only fit in one direction. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.


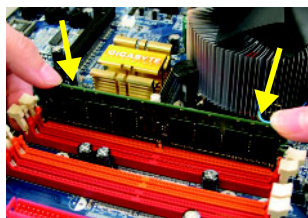


Fig.2

Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.

Reverse the installation steps when you wish to remove the DIMM module.

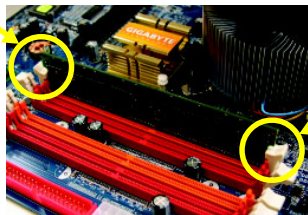

## Dual Channel DDR/DDR II

GA-8I915P Duo (Pro)-A supports the Dual Channel Technology. After operating the Dual Channel Technology, the bandwidth of Memory Bus will add double up to 6.4GB/s(DDR) ; 8.5GB(DDRII)

GA-8I915P Duo (Pro)-A includes 4 DIMM sockets, and each Channel has two DIMM sockets as following:

- ▶▶ Channel A : DDR 1                      or                      ▶▶ Channel A : DDR II 1,  
 ▶▶ Channel B : DDR 2                      ▶▶ Channel B : DDR II 2

If you want to operate the Dual Channel Technology, please note the following explanations due to the limitation of Intel chipset specifications.

1. One DDR/DDR II memory module is installed: The Dual Channel Technology can't operate when only one DDR/DDR II memory module is installed.
2. Two DDR/DDR II memory modules are installed (the same memory size and type): The Dual Channel Technology will operate when two memory modules are inserted individually into Channel A and B. If you install two memory modules in the same channel, the Dual Channel Technology will not operate.

We'll strongly recommend our user to slot two DDR/DDR II memory modules into the DIMMs with the same color in order for Dual Channel Technology to work.

The following table is for Dual Channel Technology combination: (DS: Double Side, SS: Single Side)

	DDR 1	DDR 2
2 memory modules	DS/SS	DS/SS

OR

	DDR II 1	DDR II 2
2 memory modules	DS/SS	DS/SS


Note: Mixed mode, populating DDR and DDR II memory modules simultaneously is not supported.

## 1-5 Installation of Expansion Cards

You can install your expansion card by following the steps outlined below:

1. Read the related expansion card's instruction document before install the expansion card into the computer.
2. Remove your computer's chassis cover, screws and slot bracket from the computer.
3. Press the expansion card firmly into expansion slot in motherboard.
4. Be sure the metal contacts on the card are indeed seated in the slot.
5. Replace the screw to secure the slot bracket of the expansion card.
6. Replace your computer's chassis cover.
7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
8. Install related driver from the operating system.

Installing a PCI Express x 16/G.E.A.R. expansion card:

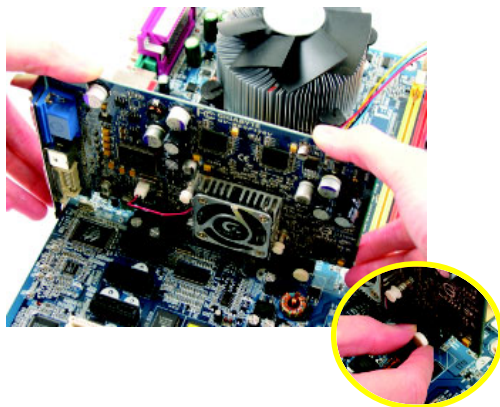

Please carefully pull out the small white-drawable bar at the end of the PCI Express x 16/G.E.A.R. slot when you try to install/Uninstall the VGA card. Please align the VGA card to the onboard PCI Express x 16/G.E.A.R. slot and press firmly down on the slot. Make sure your VGA card is locked by the small white-drawable bar.

### 1-5-1 What is G.E.A.R.?

The revolutionary and innovative G.E.A.R. (GIGABYTE Enhance AGP Riser) interface provides an additional interface for traditional AGP Graphics card on Intel chipset based PCI Express solution motherboard. It supports most of the AGP Graphics card available in the market from AGP 4X to AGP 8X graphics card.

Note:

1. Please remove the sticker on the G.E.A.R. slot before inserting your AGP graphics card.
2. G.E.A.R. interface is designed to provide a temporary AGP solution before the mass availability of PCI Express graphics card. It is suggested to use PCI Express X 16 interface graphics card to avoid the damage of your AGP graphics card.
3. G.E.A.R. interface is created through PCI interface signal and voltage switching to AGP interface, due to this technical specification difference, it might cause AGP graphics card life-span shortens.
4. Please view the graphics cards support list currently validated by GIGABYTE engineers. For more updated information, please logon to GIGABYTE website at <http://www.gigabyte.com.tw>

### 1-5-2 Graphics Card Support List

(The items below are all supported under the Windows XP operating system. When using an add-on graphics card, please first delete the onboard graphics driver before installing the driver for the add-on graphics card.)

Figure 1-1. 4X AGP Card

Graphics Chip	Maker	Model Name
Nvidia	Gigabyte	GA-620
	Gigabyte	GA-622
	Gigabyte	GA-660 Plus
	Gigabyte	GA-GF2560
	Gigabyte	GA-GF2000
	Gigabyte	GA-GF1280
	Gigabyte	GV-GF2010D
	Gigabyte	GA-GF3000D
	Gigabyte	GV-GF1280-32E
	Gigabyte	GV-GF1280T-32P
	Gigabyte	GV-GF3200TF
	Gigabyte	GV-GF3500TF-GH
	ELSA	Gladiac Ultra
	ELSA	Gladiac 517
	ELSA	Gladiac 517vivo
	ELSA	Gladiac 525 A128
	Leadtek	WinFast A170 TH
	Leadtek	WinFast A250 TO
	Leadtek	WinFast A250 Ultra

To be continued...


Figure 1-2. 4X AGP Card

Graphics Chip	Maker	Model Name
ATi	Gigabyte	GV-AR64DL-T-SI
	Gigabyte	GV-AR64S-H
	Gigabyte	GV-AP64D
	Gigabyte	GV-AP64DH
	Gigabyte	GV-AP128DG-H
	Gigabyte	GV-AF128D-GH
SiS	Prolink	SiS315 64MB
Savage	ASUS	V3500

Figure 2. 8X AGP Card

Graphics Chip	Maker	Model Name
Nvidia	Gigabyte	GV-N57L128D
	Gigabyte	GV-N59X128D
	ASUS	V9180TD
	ASUS	V9480-TVD
	ASUS	V9520
	MSI	MX440-VTD8X MS-8888
	MSI	Ti4600-TD-8X
	Leadtek	WinFast A280LE TD
	Leadtek	WinFast A310 TD
	Albatron	NVIDIA 5950
ATi	Gigabyte	GV-R9700 Pro
	Gigabyte	GV-R9700
	Gigabyte	GV-R9500
	Gigabyte	GV-R9200C3
	Gigabyte	GV-R98P128D
	Gigabyte	GV-R92P128VH
SiS	Triplex	Xabre Pro
	Power Color	Xabre 600 Pro

## 1-6 I/O Back Panel Introduction

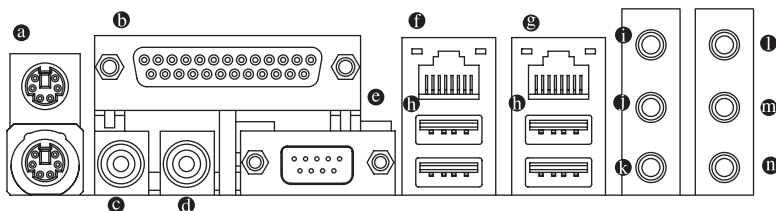

### ❶ PS/2 Keyboard and PS/2 Mouse Connector

To install a PS/2 port keyboard and mouse, plug the mouse to the upper port (green) and the keyboard to the lower port (purple).

### ❷ Parallel Port

The parallel port allows connection of a printer, scanner and other peripheral devices.

### ❸ SPDIF\_O (SPDIF Out)

The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder.

### ❹ SPDIF\_I (SPDIF In)

Use SPDIF In feature only when your device has digital output function.

### ❺ COM A (Serial Port)

Connects to serial-based mouse or data processing devices.

### ❻ LAN Port 1 ①

The provided Internet connection is Gigabit Ethernet, providing data transfer speeds of 10/100/1000Mbps.

### ❼ LAN Port 2

The provided Internet connection is Gigabit Ethernet(PCI-E Gigabit), providing data transfer speeds of 10/100/1000Mbps.

### ❽ USB port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

### ❾ Line In

Devices like CD-ROM, walkman etc. can be connected to Line In jack.

### ❿ Line Out (Front Speaker Out)

Connect the stereo speakers, earphone or front surround channels to this connector.

### ⓫ MIC In

Microphone can be connected to MIC In jack.

① Only for GA-8I915P Duo Pro-A.

### ④ Back Surround Speaker Out

Connect the back surround channels to this connector.

### ⑩ Center/Subwoofer Speaker Out

Connect the Center/Subwoofer channels to this connector.


### ④ Surround Speaker Out

Connect the surround channels to this connector.



You can use audio software to configure 2-/4-/5.1-/7.1-channel audio functioning.

## 1-7 Connectors Introduction

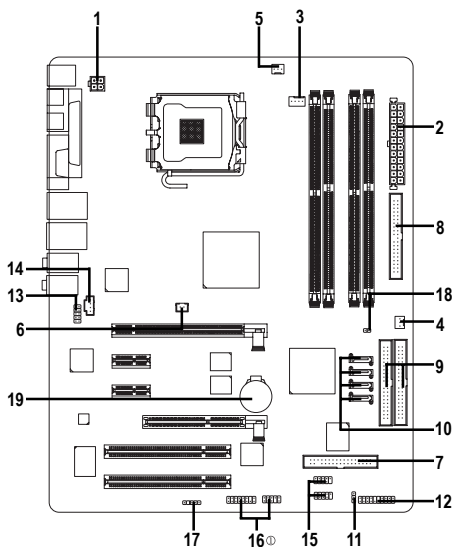

1) ATX_12V	11) PWR_LED
2) ATX (Power Connector)	12) F_PANEL
3) CPU_FAN	13) AZALIA_FP
4) SYS_FAN	14) CD_IN
5) PWR_FAN	15) F_USB1 / F_USB2
6) NB_FAN	16) F1_1394 / F2_1394 ①
7) FDD	17) IR
8) IDE1	18) CLR_CMOS
9) IDE2/IDE3	19) BAT
10) S_ATA1 / S_ATA2 / S_ATA3 / S_ATA4	

① Only for GA-8I915P Duo Pro-A.



1/2) **ATX\_12V/ATX (Power Connector)**

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, please make sure that all components and devices are properly installed. Align the power connector with its proper location on the motherboard and connect tightly.

The ATX\_12V power connector mainly supplies power to the CPU. If the ATX\_12V power connector is not connected, the system will not start.

Caution!

Please use a power supply that is able to handle the system voltage requirements. It is recommended that a power supply that can withstand high power consumption be used (300W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable system or a system that is unable to start.

Please remove the sticker on the motherboard before plugging in while the ATX power supplier is 24 pins; Otherwise, please do not remove it.

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

Pin No.	Definition
1	3.3V
2	3.3V
3	GND
4	VCC
5	GND
6	VCC
7	GND
8	Power Good
9	5V SB(stand by +5V)
10	+12V
11	+12V
12	3.3V(Only for 24pins ATX)
13	3.3V
14	-12V
15	GND
16	PS_ON(soft On/Off)
17	GND
18	GND
19	GND
20	-5V
21	VCC
22	VCC
23	VCC
24	GND

### 3/4/5) CPU\_FAN / SYS\_FAN / PWR\_FAN (Cooler Fan Power Connector)


The cooler fan power connector supplies a +12V power voltage via a 3-pin/4-pin (only for CPU\_FAN) power connector and possesses a foolproof connection design.

Most coolers are designed with color-coded power connector wires. A red power connector wire indicates a positive connection and requires a +12V power voltage. The black connector wire is the ground wire (GND).

Please remember to connect the power to the cooler to prevent system overheating and failure.

Caution!


Please remember to connect the power to the CPU fan to prevent CPU overheating and failure.

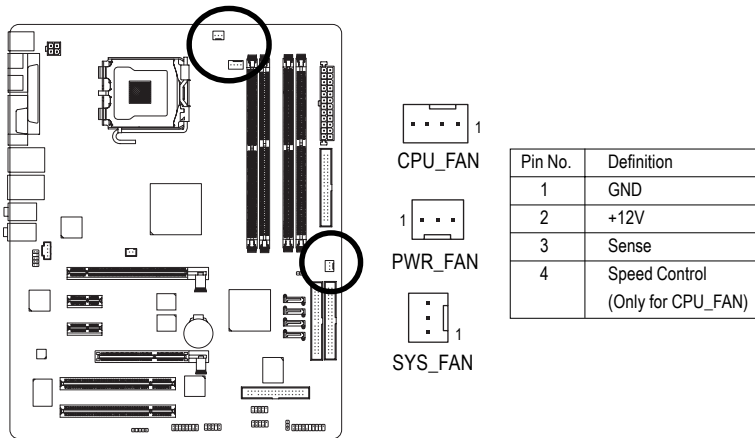

### 6) NB\_FAN (Chip Fan Connector)



If you installed wrong direction, the chip fan will not work. Sometimes will damage the chip fan.

(Usually black cable is GND)

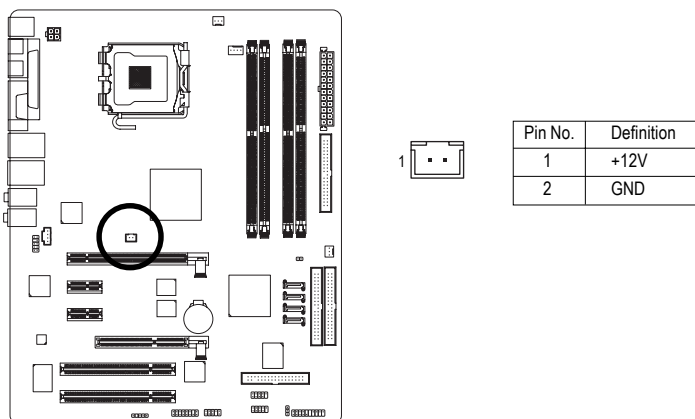



## 7) FDD (Floppy Connector)

The FDD connector is used to connect the FDD cable while the other end of the cable connects to the FDD drive. The types of FDD drives supported are: 360KB, 720KB, 1.2MB, 1.44MB and 2.88MB. Please connect the red power connector wire to the pin1 position.

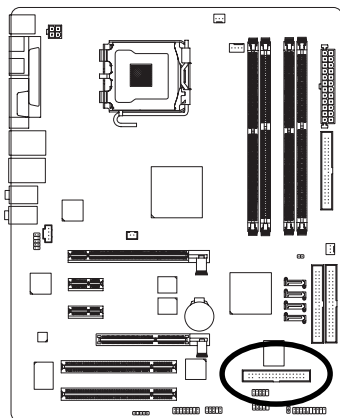



## 8/9) IDE1/IDE2/IDE3 (IDE Connector)

An IDE device connects to the computer via an IDE connector. One IDE connector can connect to one IDE cable, and the single IDE cable can then connect to two IDE devices (hard drive or optical drive). If you wish to connect two IDE devices, please set the jumper on one IDE device as Master and the other as Slave (for information on settings, please refer to the instructions located on the IDE device). To ensure that an IDE CD-ROM drive can work properly, please attach it to the IDE 1 connector.

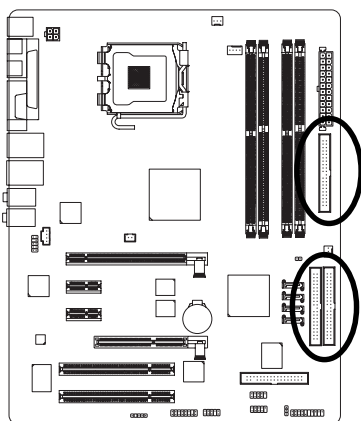

## 10) S\_ATA1/S\_ATA2/S\_ATA3/S\_ATA4 (Serial ATA Connector)


Serial ATA can provide 150MB/s transfer rate. Please refer to the BIOS setting for the Serial ATA and install the proper driver in order to work properly.

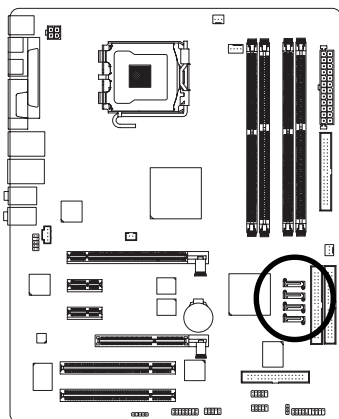

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

## 11) PWR\_LED


PWR\_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode.

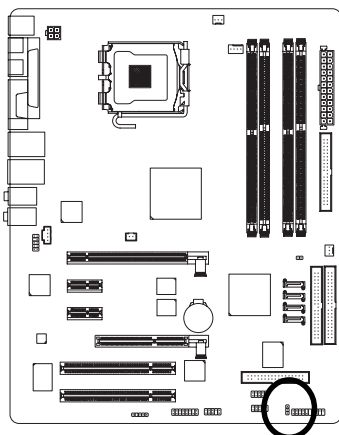

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

## 12) F\_PANEL (Front Panel Jumper)


Please connect the power LED, PC peaker, reset switch and power switch etc of your chassis front panel to the F\_PANEL connector according to the pin assignment below.

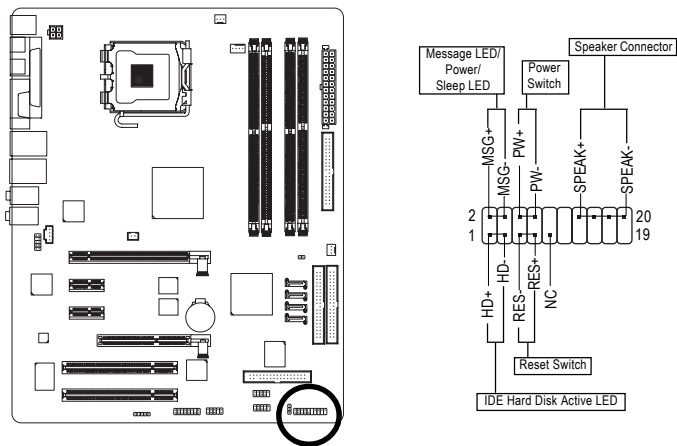

HD (IDE Hard Disk Active LED) (Blue)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPEAK (Speaker Connector) (Amber)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
RES (Reset Switch) (Green)	Open: Normal Operation Close: Reset Hardware System
PW (Power Switch) (Red)	Open: Normal Operation Close: Power On/Off
MSG(Message LED/Power/Sleep LED) (Yellow)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC( Purple)	NC

### 13) AZALIA\_FP (Front Audio Connector)


Please make sure the pin assignment on the cable is the same as the pin assignment on the motherboard header. To find out if the chassis you are buying support front audio panel connector, please contact your dealer.

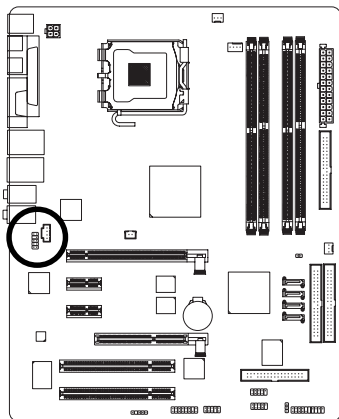

Pin No.	Definition
1	MIC2_L
2	GND
3	MIC2_R
4	-ACZ_DET
5	Line2_R
6	FSENSE1
7	FAUDIO_JD
8	No Pin
9	LINE2_L
10	FSENSE2

### 14) CD\_IN (CD IN)


Connect CD-ROM or DVD-ROM audio out to the connector.

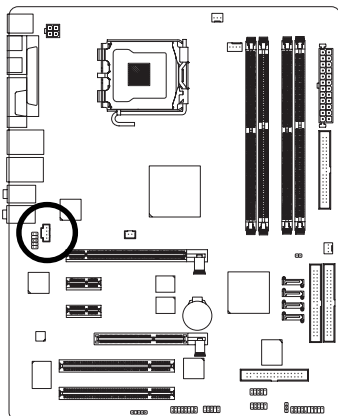

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

### 15) F\_USB1 / F\_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer. The "USB Device Wake up From S3" is only supported by rear USB ports.


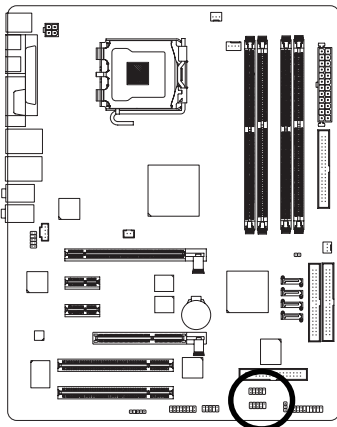


Pin No.	Definition
1	Power
2	Power
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

### 16) F1\_1394/F2\_1394 (IEEE 1394 Connector) ①

Serial interface standard set by Institute of Electrical and Electronics Engineers, which has features like high speed, high bandwidth and hot plug.

Be careful with the polarity of the IEEE1394 connector. Check the pin assignment carefully while you connect the IEEE1394 cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IEEE1394 cable, please contact your local dealer.

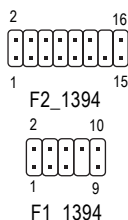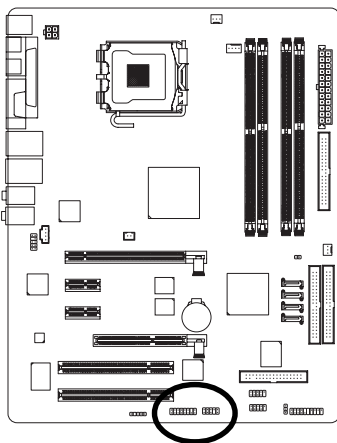


Pin No.	Definition
1	TPA2+
2	TPA2-
3	GND
4	GND
5	TPB2+
6	TPB2-
7	No Pin
8	Power
9	Power
10	GND

Pin No.	Definition
1	Power
2	Power
3	TPA0+
4	TPA0-
5	GND
6	GND
7	TPB0+
8	TPB0-
9	Power
10	Power
11	TPA1+
12	TPA1-
13	GND
14	No Pin
15	TPB1+
16	TPB1-

① Only for GA-8I915P Duo Pro-A.

## 17) IR

Be careful with the polarity of the IR connector while you connect the IR. Please contact your nearest dealer for optional IR device.

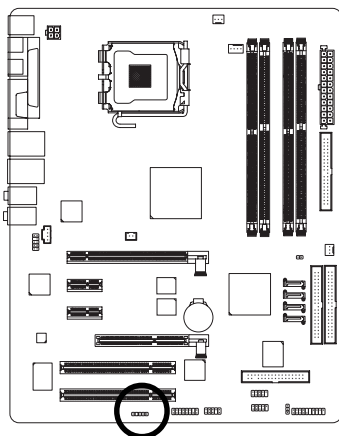


1

Pin No.	Definition
1	VCC
2	No Pin
3	IR RX
4	GND
5	IR TX

## 18) CLR\_CMOS (Clear CMOS)

You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

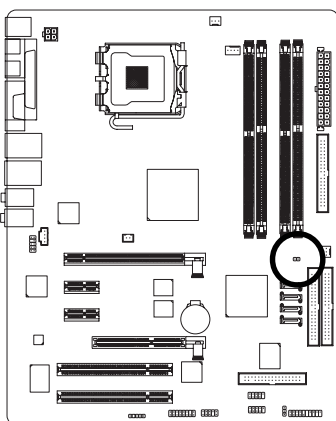


1 Open: Normal

1 Short: Clear CMOS



## 19) BAT(Battery)

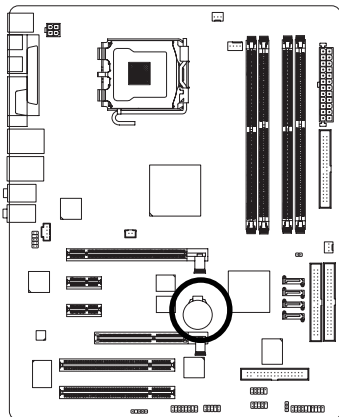

- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery, wait for 30 second.
3. Re-install the battery.
4. Plug the power cord and turn ON the computer.



## Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) includes a CMOS SETUP utility which allows user to configure required settings or to activate certain system features.

The CMOS SETUP saves the configuration in the CMOS SRAM of the motherboard.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS SRAM.

When the power is turned on, pushing the <Del> button during the BIOS POST (Power-On Self Test) will take you to the CMOS SETUP screen. You can enter the BIOS setup screen by pressing "Ctrl + F1".

When setting up BIOS for the first time, it is recommended that you save the current BIOS to a disk in the event that BIOS needs to be reset to its original settings. If you wish to upgrade to a new BIOS, either Gigabyte's Q-Flash or @BIOS utility can be used.

Q-Flash allows the user to quickly and easily update or backup BIOS without entering the operating system.

@BIOS is a Windows-based utility that does not require users to boot to DOS before upgrading BIOS but directly download and update BIOS from the Internet.

### CONTROL KEYS


<↑><↓><←><→>	Move to select item
<Enter>	Select Item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<Page Up>	Increase the numeric value or make changes
<Page Down>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the file-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F8>	Dual BIOS 2/Q-Flash utility
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

### Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.


### Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

 Only for GA-8I915P Duo Pro-A.

## The Main Menu (For example: BIOS Ver. : E11)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

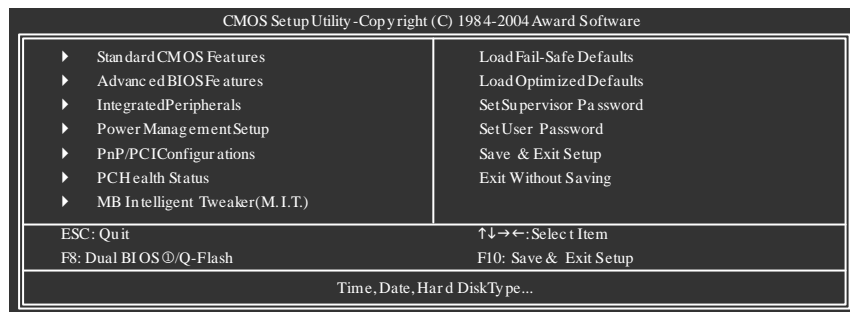

If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option hidden.

### ■ Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

### ■ Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

### ■ Integrated Peripherals

This setup page includes all onboard peripherals.

### ■ Power Management Setup

This setup page includes all the items of Green function features.

### ■ PnP/PCI Configuration

This setup page includes all the configurations of PCI & PnP ISA resources.

### ■ PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

### ■ MB Intelligent Tweaker(M.I.T.)

This setup page is control CPU clock and frequency ratio.

### ■ Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

### ■ Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

Only for GA-8I915P Duo Pro-A.

- **Set Supervisor Password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

- **Set User Password**

Change, set, or disable password. It allows you to limit access to the system.

- **Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

- **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

## 2-1 Standard CMOS Features

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software  
Standard CMOS Features

Date(mm:dd:yy)	Thu, Apr 29 2004	Item Help
Time(hh:mm:ss)	22:31:24	Menu Level▶
▶ IDE Channel 0 Master	[None]	Change the day, month, year
▶ IDE Channel 0 Slave	[None]	
Drive A	[1.44M, 3.5"]	<Week>
Drive B	[None]	Sun. to Sat.
Floppy 3 Mode Support	[Disabled]	<Month>
Holt On	[All, But Keyboard]	Jan. to Dec.
Base Memory	640K	<Day>
Extended Memory	127M	1 to 31 (or maximum allowed in the month)
Total Memory	128M	<Year>
		1999 to 2098

↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults

### ☛ Date

The date format is <week>, <month>, <day>, <year>.

- ▶ Week      The week, from Sun to Sat, determined by the BIOS and is display only
- ▶ Month      The month, Jan. Through Dec.
- ▶ Day      The day, from 1 to 31 (or the maximum allowed in the month)
- ▶ Year      The year, from 1999 through 2098

### ☛ Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

### ☛ IDE Channel 0 Master, Slave

- ▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.
- ▶ IDE Channel 0 Master(Slave) IDE Device Setup. You can use one of three methods:
  - Auto      Allow s BIOS to automatically detect IDE devices during POST(default)
  - None      Select this if no IDE devices are used and the system will skip the automatic detection step and allow for faster system start up.
  - Manual    User can manually input the correct settings
- ▶ Access Mode Use this to set the access mode for the hard drive. The four options are:
  - CHS/LBA/Large/Auto(default:Auto)

Hard drive information should be labeled on the outside drive casing. Enter the appropriate option based on this information.

- ▶ Cylinder      Number of cylinders
- ▶ Head      Number of heads
- ▶ Precomp      Write precomp
- ▶ Landing Zone    Landing zone
- ▶ Sector      Number of sectors

If a hard disk has not been installed, select NONE and press <Enter>.

## ☛ Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

- ▶▶ None No floppy drive installed
- ▶▶ 360K, 5.25" 5.25 inch PC-type standard drive; 360K byte capacity.
- ▶▶ 1.2M, 5.25" 5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
- ▶▶ 720K, 3.5" 3.5 inch double-sided drive; 720K byte capacity
- ▶▶ 1.44M, 3.5" 3.5 inch double-sided drive; 1.44M byte capacity.
- ▶▶ 2.88M, 3.5" 3.5 inch double-sided drive; 2.88M byte capacity.

## ☛ Floppy 3 Mode Support (for Japan Area)

- ▶▶ Disabled Normal Floppy Drive. (Default value)
- ▶▶ Drive A Drive A is 3 mode Floppy Drive.
- ▶▶ Drive B Drive B is 3 mode Floppy Drive.
- ▶▶ Both Drive A & B are 3 mode Floppy Drives.

## ☛ Halt on

The category determines whether the computer will stop if an error is detected during power up.

- ▶▶ No Errors The system boot will not stop for any error that may be detected and you will be prompted.
- ▶▶ All Errors Whenever the BIOS detects a non-fatal error the system will be stopped.
- ▶▶ All, But Keyboard The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- ▶▶ All, But Diskette The system boot will not stop for a disk error; it will stop for all other errors.
- ▶▶ All, But Disk/Key The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

## ☛ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

### ▶▶ Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

### ▶▶ Extended Memory


The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

### ▶▶ Total Memory

This item displays the memory size that used.

## 2-2 Advanced BIOS Features

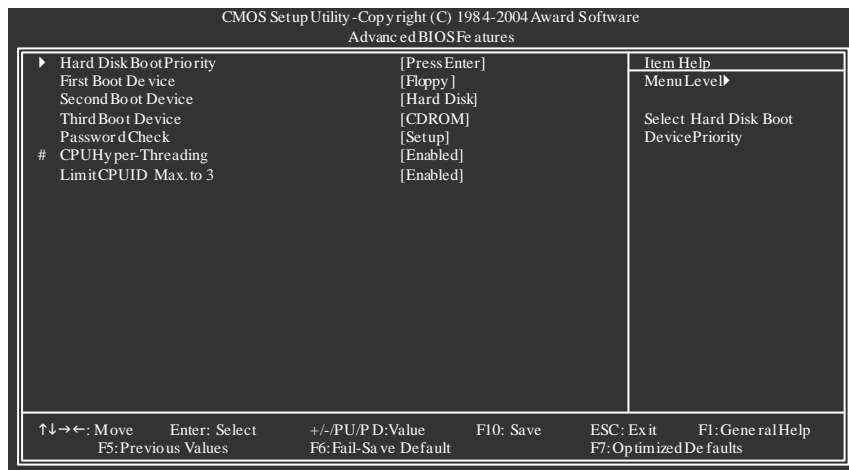

"# " System will detect automatically and show up when you install the Intel® Pentium®4 processor with HT Technology.

### ▶ Hard Disk Boot Priority

Select boot sequence for onboard (or add-on cards) SCSI, RAID, etc.

Use <→> or <↓> to select a device, then press <+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

### ▶ First / Second / Third Boot Device

- ▶ Floppy      Select your boot device priority by Floppy.
- ▶ LS120      Select your boot device priority by LS120.
- ▶ Hard Disk      Select your boot device priority by Hard Disk.
- ▶ CDROM      Select your boot device priority by CDROM.
- ▶ ZIP      Select your boot device priority by ZIP.
- ▶ USB-FDD      Select your boot device priority by USB-FDD.
- ▶ USB-ZIP      Select your boot device priority by USB-ZIP.
- ▶ USB-CDROM      Select your boot device priority by USB-CDROM.
- ▶ USB-HDD      Select your boot device priority by USB-HDD.
- ▶ LAN      Select your boot device priority by LAN.
- ▶ Disabled      Select your boot device priority by Disabled.

### ▶ Password Check

- ▶ Setup      The system will boot but will not access to Setup page if the correct password is not entered at the prompt. (Default value)
- ▶ System      The system will not boot and will not access to Setup page if the correct password is not entered at the prompt.

If you want to cancel the setting of password, please just press ENTER to make [SETUP] empty.



➤ **CPU Hyper-Threading**

- Enabled Enables CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)
- Disabled Disables CPU Hyper Threading.

➤ **Limit CPUID Max. to 3**

- Enabled Limit CPUID Maximum value to 3 when use older OS like NT4. (Default value)
- Disabled Disables CPUID Limit for windows XP.

## 2-3 Integrated Peripherals

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software  
Integrated Peripherals

On-Chip Primary PCI IDE	[Enabled]	<div>▲</div> <div>▼</div>	Item Help Menu Level▶
SATA RAID/AHCI Mode①	[RAID]		
x On-Chip SATA Mode	Auto		
x PATA IDE Set to	Ch.1 Master/Slave		
SATA Port 0/2 Set to	Ch.2 Master/Slave		
SATA Port 1/3 Set to	Ch.3 Master/Slave		
USB Controller	[Enabled]		
USB 2.0 Controller	[Enabled]		
USB Keyboard Support	[Disabled]		
USB Mouse Support	[Disabled]		
Azalia Codec	[Auto]		
Onboard H/W RAID	[Enabled]		
Onboard H/W 1394	[Enabled]		
Onboard H/W LAN ①	[Enabled]		
Onboard H/W LAN2	[Enabled]		
Onboard LAN1 Boot ROM ①	[Disabled]		
Onboard LAN2 Boot ROM	[Disabled]		
Onboard Serial Port1	[3F8/IRQ4]		
Onboard IrDA Port	[2F8/IRQ]		

↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software  
Integrated Peripherals

UART Mode Select	[IrDA]	<div>▲</div> <div>▼</div>	Item Help Menu Level▶
UR2 Duplex Mode	[Half]		
Onboard Parallel Port	[378/IRQ7]		
Parallel Port Mode	[SPP]		
x ECP Mode Use DMA	3		

↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help  
 F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults

### ➤ On-Chip Primary PCI IDE

- Enabled      Enable onboard 1st channel IDE port. (Default value)
- Disabled      Disable onboard 1st channel IDE port.

### ➤ SATA RAID / AHCI Mode ①

- RAID      Select onboard Serial ATA function as RAID. (Default value)
- AHCI      Support hotplug function under OS. WinXP, 2000 only.
- Disabled      Select onboard Serial ATA function as ATA.

① Only for GA-8I915P Duo Pro-A.

### ☛ On-Chip SATA Mode

- ☛ Disabled                      Disable this function.
- ☛ Auto                          BIOS will auto detect. (Default value)
- ☛ Combined                    Set On-Chip SATA mode to Combined, you can use up to 4 HDDs on the motherboard; 2 for SATA and the other for PATA IDE.
- ☛ Enhanced                    Set On-Chip SATA mode to Enhanced, the motherboard allows up to 6 HDDs to use.
- ☛ Non-Combined              Set On-Chip SATA mode to Non-Combined, SATA will be simulated to PATA mode.

### ☛ PATA IDE Set to

- ☛ Ch.1 Master/Slave            Set PATA IDE to Ch. 1 Master/Slave. (Default value)
- ☛ Ch.0 Master/Slave            Set PATA IDE to Ch. 0 Master/Slave.

### ☛ SATA Port 0/2 Set to

- ☛ This value will auto make by the setting "On-Chip SATA Mode" and "PATA IDE Set to".
- ☛ If PATA IDE were set to Ch. 1 Master/Slave, this function will auto set to Ch. 0 Master/Slave.

### ☛ SATA Port 1/3 Set to

- ☛ This value will auto make by the setting "On-Chip SATA Mode" and "PATA IDE Set to".
- ☛ If PATA IDE were set to Ch. 0 Master/Slave, this function will auto set to Ch. 1 Master/Slave.

### ☛ USB Controller

- ☛ Enabled                      Enable USB Controller. (Default value)
- ☛ Disabled                      Disable USB Controller.

### ☛ USB 2.0 Controller

- ☛ Disable this function if you are not using onboard USB 2.0 feature.
- ☛ Enabled                      Enable USB 2.0 Controller. (Default value)
- ☛ Disabled                      Disable USB 2.0 Controller.

### ☛ USB Keyboard Support

- ☛ Enabled                      Enable USB Keyboard Support.
- ☛ Disabled                      Disable USB Keyboard Support. (Default value)

### ☛ USB Mouse Support

- ☛ Enabled                      Enable USB Mouse Support.
- ☛ Disabled                      Disable USB Mouse Support. (Default value)

### ☛ Azalia Codec


- ☛ Auto                          Auto detect Azalia audio function. (Default value)
- ☛ Disabled                      Disable Azalia audio function.

### ☛ Onboard H/W RAID

- ☛ Enabled                      Enable Onboard H/W RAID function. (Default value)
- ☛ Disabled                      Disable this function.

### ☛ Onboard H/W 1394

- ☛ Enabled                      Enable onboard IEEE 1394 function. (Default value)
- ☛ Disabled                      Disable this function.

 Only for GA-8I915P Duo Pro-A.

### ➤ Onboard H/W LAN

- Enabled Enable Onboard H/W LAN function. (Default value)
- Disabled Disable this function.

### ➤ Onboard H/W LAN2

- Enabled Enable Onboard H/W LAN2 function. (Default value)
- Disabled Disable this function.

### ➤ Onboard LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- Enabled Enable this function.
- Disabled Disable this function. (Default value)

### ➤ Onboard LAN2 Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN2 chip.

- Enabled Enable this function.
- Disabled Disable this function. (Default value)

### ➤ Onboard Serial Port 1

- Auto BIOS will automatically setup the port 1 address.
- 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default value)
- 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
- 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
- 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.
- Disabled Disable onboard Serial port 1.

### ➤ Onboard IrDA Port

- Auto BIOS will automatically setup the port 1 address.
- 3F8/IRQ4 Enable onboard IrDA port and address is 3F8.
- 2F8/IRQ3 Enable onboard IrDA port and address is 2F8. (Default value)
- 3E8/IRQ4 Enable onboard IrDA port and address is 3E8.
- 2E8/IRQ3 Enable onboard IrDA port and address is 2E8.
- Disabled Disable onboard IrDA port.

### ➤ UART Mode Select

This item allows you to determine which Infra Red(IR) function of Onboard I/O chip.


- ASKIR Set onboard I/O chip UART to ASKIR Mode.
- IrDA Set onboard I/O chip UART to IrDA Mode. (Default value)

### ➤ UR2 Duplex Mode

This feature allows you to select IR mode.

This function will available when "UART Mode Select" doesn't set at Normal.

- Half IR Function Duplex Half. (Default value)
- Full IR Function Duplex Full.

 Only for GA-8I915P Duo Pro-A.

➤ **Onboard Parallel port**

- Disabled      Disable onboard LPT port.
- 378/IRQ7      Enable onboard LPT port and address is 378/IRQ7. (Default value)
- 278/IRQ5      Enable onboard LPT port and address is 278/IRQ5.
- 3BC/IRQ7      Enable onboard LPT port and address is 3BC/IRQ7.

➤ **Parallel Port Mode**

- SPP      Using Parallel port as Standard Parallel Port. (Default value)
- EPP      Using Parallel port as Enhanced Parallel Port.
- ECP      Using Parallel port as Extended Capabilities Port.
- ECP+EPP      Using Parallel port as ECP & EPP mode.

➤ **ECP Mode Use DMA**

- 3      Set ECP Mode Use DMA to 3. (Default value)
- 1      Set ECP Mode Use DMA to 1.

## 2-4 Power Management Setup

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software		
Power Management Setup		
ACPI Suspend Type	[S1(POS)]	Item Help
Soft-Off by PWR-BTTN	[Instant-off]	Menu Level▶
PME Event Wake Up	[Enabled]	
Power On by Ring	[Enabled]	
Resume by Alarm	[Disabled]	
x Date (of Month) Alarm	Every day	
x Time (hh:mm:ss) Alarm	0 : 0 : 0	
Power On By Mouse	[Disabled]	
Power On By Keyboard	[Disabled]	
x KB Power ON Password	Enter	
AC Back Function	[Soft-Off]	

↑↓←→: Move	Enter: Select	+/-/PU/PD: Value	F10: Save	ESC: Exit	F1: General Help
F5: Previous Values	F6: Fail-Save Default	F7: Optimized Defaults			

### ACPI Suspend Type

- ▶ S1(POS) Set ACPI suspend type to S1/POS(Power On Suspend). (Default value)
- ▶ S3(STR) Set ACPI suspend type to S3/STR(Suspend To RAM).

### Soft-off by PWR-BTTN

- ▶ Instant-off Press power button then Power off instantly. (Default value)
- ▶ Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

### PME Event Wake Up

- ▶ Disabled Disable this function.
- ▶ Enabled Enable PME Event Wake up. (Default value)

### Power On by Ring

- ▶ Disabled Disable Power on by Ring function.
- ▶ Enabled Enable Power on by Ring function. (Default value)

### Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Data/time to power on system.

- ▶ Disabled Disable this function. (Default value)
- ▶ Enabled Enable alarm function to POWER ON system.

If RTC Alarm Lead To Power On is Enabled.

- ▶ Date (of Month) Alarm : Every day, 1~31
- ▶ Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

### Power On By Mouse

- ▶ Disabled Disable this function. (Default value)
- ▶ Double Click Double click on PS/2 mouse left button to power on the system.

### ➤ **Power On By Keyboard**

- Password Enter from 1 to 5 characters to set the Keyboard Power On Password.
- Disabled Disabled this function. (Default value)
- Keyboard 98 If your keyboard have "POWER Key" button, you can press the key to power on the system.

### ➤ **KB Power ON Password**


When "Power On by Keyboard" set at Password, you can set the password here.

- Enter Input password (from 1 to 5 characters) and press Enter to set the Keyboard Power On password.

### ➤ **AC Back Function**

- Soft-Off When AC-power back to the system, the system will be in "Off" state.  
(Default value)
- Full-On When AC-power back to the system, the system always in "On" state.
- Memory When AC-power back to the system, the system will return to the Last state before AC-power off.

## 2-5 PnP/PCI Configurations

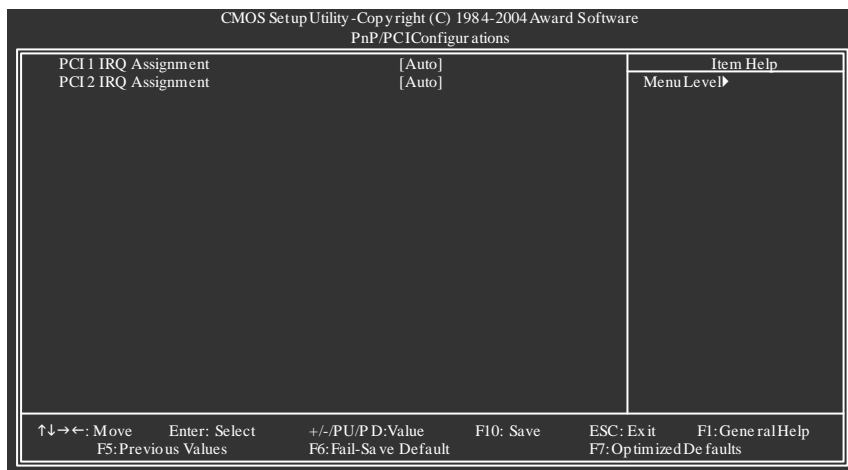

### ▶ PCI 1 IRQ Assignment

- ▶ Auto                      Auto assign IRQ to PCI 1. (Default value)
- ▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

### ▶ PCI 2 IRQ Assignment

- ▶ Auto                      Auto assign IRQ to PCI 2. (Default value)
- ▶ 3,4,5,7,9,10,11,12,14,15    Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.



## 2-6 PC Health Status

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software PC Health Status		
Vcore	OK	Item Help Menu Level▶
DDR V	OK	
+3.3V	OK	
+12V	OK	
Current CPU Temperature	33°C	
Current CPU FAN Speed	4687 RPM	
Current POWER FAN Speed	0 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
POWER FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	
CPU Smart FAN Control	[Enabled]	
CPU FAN PIN Type	[3 PIN]	
↑↓←→: Move    Enter: Select    +/-/PU/PD: Value    F10: Save    ESC: Exit    F1: General Help F5: Previous Values    F6: Fail-Save Default    F7: Optimized Defaults		

### ➤ **Current Voltage(V) Vcore / DDR V / +3.3V / +12V**

▶▶ Detect system's voltage status automatically.

### ➤ **Current CPU Temperature**

▶▶ Detect CPU temperature automatically.

### ➤ **Current CPU/POWER/SYSTEM FAN Speed (RPM)**

▶▶ Detect CPU/POWER/SYSTEM Fan speed status automatically.

### ➤ **CPU Warning Temperature**

- ▶▶ 60°C / 140°F      Monitor CPU temperature at 60°C / 140°F.
- ▶▶ 70°C / 158°F      Monitor CPU temperature at 70°C / 158°F.
- ▶▶ 80°C / 176°F      Monitor CPU temperature at 80°C / 176°F.
- ▶▶ 90°C / 194°F      Monitor CPU temperature at 90°C / 194°F.
- ▶▶ Disabled          Disable this function. (Default value)

### ➤ **CPU/POWER/SYSTEM FAN Fail Warning**

- ▶▶ Disabled          Fan warning function disable. (Default value)
- ▶▶ Enabled           Fan warning function enable.

### ➤ **CPU Smart FAN Control**


- ▶▶ Disabled          Disable this function.
- ▶▶ Enabled           Enable CPU Smart Fan control function. (Default value)
  - a. When the CPU temperature is higher than 65 degrees Celsius, CPU fan will run at full speed.
  - b. The speed of CPU fan will increase linearly depend on the temperature if the temperature is more than 41 degree and less than 65 degree.
  - c. When the CPU temperature is lower than 40 degrees Celsius, CPU fan will be disable.

### ➤ CPU FAN PIN Type

In order to make "CPU SmartFAN Control" function work properly, please set the pin number according to the CPU FAN that you used.

- 3 PIN                      Set CPU FAN PIN Type to 3 pin. (Default value)
- 4 PIN                      Set CPU FAN PIN Type to 4 pin.

## 2-7 MB Intelligent Tweaker(M.I.T.)

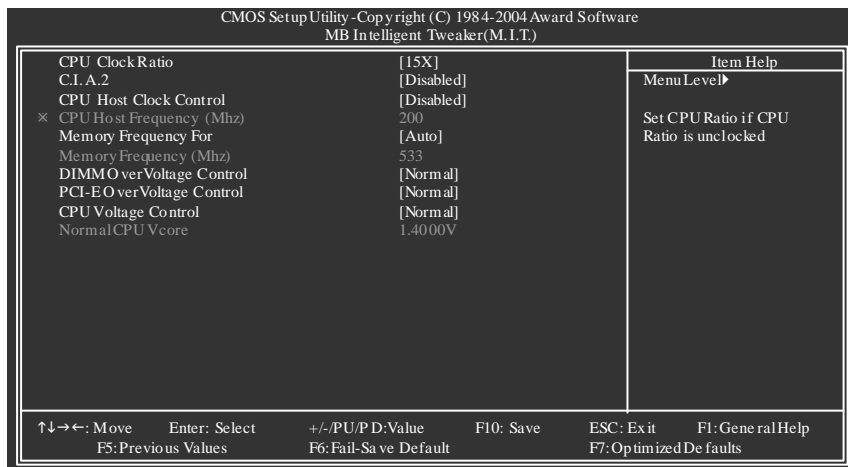

CAUTION

Incorrect using these features may cause your system broken. For power end-user use only.

### ➤ CPU Clock Ratio

This setup option will automatically assign by CPU detection.

The option will display "Locked" and read only if the CPU ratio is not changeable.

### ➤ C.I.A.2

C.I.A.2 (CPU Intelligent Accelerator 2) is designed to detect CPU loading during software program executing, and automatically adjust CPU computing power to maximize system performance.

- Disabled                      Disable this function. (Default value)
- Cruise                        Set C.I.A.2 to Cruise. (Automatically increase CPU frequency(3%,5%,7%) by CPU loading.
- Sports                        Set C.I.A.2 to Sports. (Automatically increase CPU frequency(5%,7%,9%) by CPU loading.
- Racing                        Set C.I.A.2 to Racing. (Automatically increase CPU frequency(7%,9%,11%) by CPU loading.
- Turbo                        Set C.I.A.2 to Turbo. (Automatically increase CPU frequency(13%,15%,17%) by CPU loading.
- Full Thrust                    Set C.I.A.2 to Full Thrust. (Automatically increase CPU frequency(15%,17%,19%) by CPU loading.

Warning: Stability is highly dependent on system components.

### ☛ CPU Host Clock Control

Please note that if your system is overclocked and cannot restart, please wait 20secs. for automatic system restart or clear the CMOS setup data and perform a safe restart.

- ☛ Disabled                      Disable CPU Host Clock Control. (Default value)
- ☛ Enabled                      Enable CPU Host Clock Control.

### ☛ CPU Host Frequency (Mhz)

This item will be available when "CPU Host Clock Control" is set to Enabled.

- ☛ 100MHz ~ 355MHz              Set CPU Host Clock from 100MHz to 355MHz.

If you use FSB800 Pentium 4 processor, please set "CPU Host Frequency" to 200MHz. Incorrect using it may cause your system broken. For power End-User use only!

### ☛ Memory Frequency For

Wrong frequency may make system can't boot, clear CMOS to overcome wrong frequency issue.

for FSB(Front Side Bus) frequency=533MHz,

- ☛ 3.0                              Memory Frequency = Host clock X 3.0.
- ☛ 4.0                              Memory Frequency = Host clock X 4.0.
- ☛ Auto                          Set Memory frequency by DRAM SPD data. (Default value)

for FSB(Front Side Bus) frequency=800MHz,

- ☛ 2.0                              Memory Frequency = Host clock X 2.0.
- ☛ 2.66                          Memory Frequency = Host clock X 2.66.
- ☛ Auto                          Set Memory frequency by DRAM SPD data. (Default value)

### ☛ Memory Frequency (Mhz)

The values depend on "Memory Frequency For" item.

### ☛ DIMM OverVoltage Control

Please note that by overclocking your system through the increase of the DIMM voltage, damage to the memory may occur.

- ☛ Normal                      Set DIMM OverVoltage Control to Normal. (Default value)
- ☛ +0.1V                      Set DIMM OverVoltage Control to +0.1V.
- ☛ +0.2V                      Set DIMM OverVoltage Control to +0.2V.
- ☛ +0.3V                      Set DIMM OverVoltage Control to +0.3V.

Incorrect using it may cause your system broken. For power End-User use only!

### ☛ PCI-E OverVoltage Control

- ☛ Normal                      Set PCI-E OverVoltage Control to Normal. (Default value)
- ☛ +0.1V                      Set PCI-E OverVoltage Control to +0.1V.
- ☛ +0.2V                      Set PCI-E OverVoltage Control to +0.2V.
- ☛ +0.3V                      Set PCI-E OverVoltage Control to +0.3V.

### ☛ CPU Voltage Control


- ☛ Supports adjustable CPU Vcore from 0.8375V to 1.6000V. (Default value: Normal)

Warning: CPU may be damaged or reduce CPU life-cycle when CPU is over-voltage.

### ☛ Normal CPU Vcore


Display your CPU Vcore Voltage.

## 2-8 Load Fail-Safe Defaults

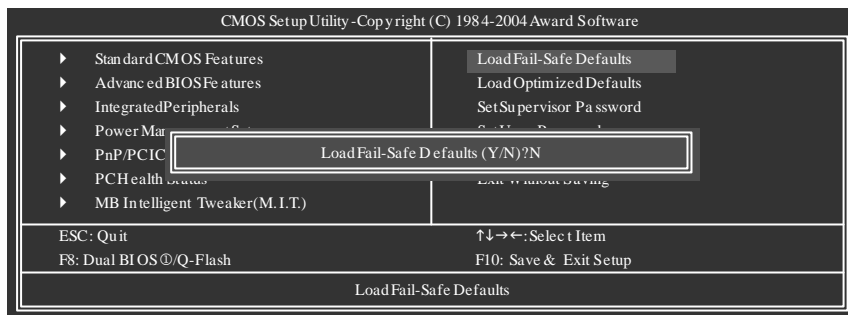


Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.


## 2-9 Load Optimized Defaults

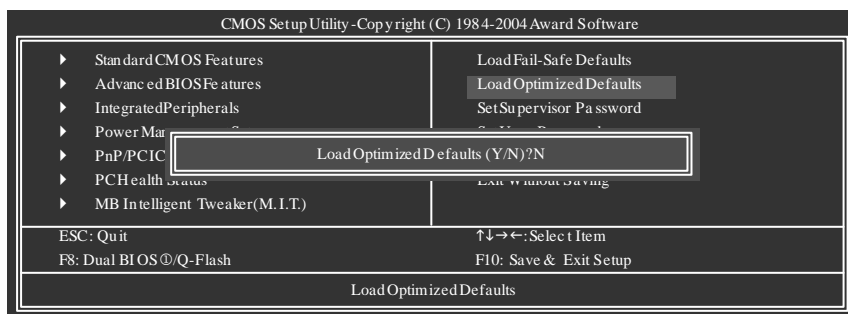

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

 Only for GA-8I915P Duo Pro-A.

## 2-10 Set Supervisor/User Password

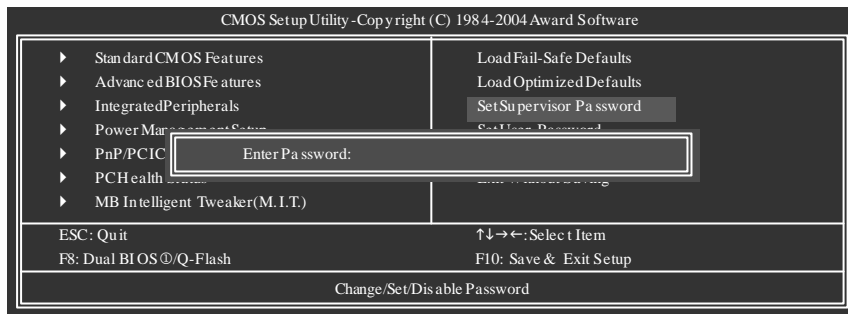

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:


SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.


Only for GA-8I915P Duo Pro-A.

## 2-11 Save & Exit Setup

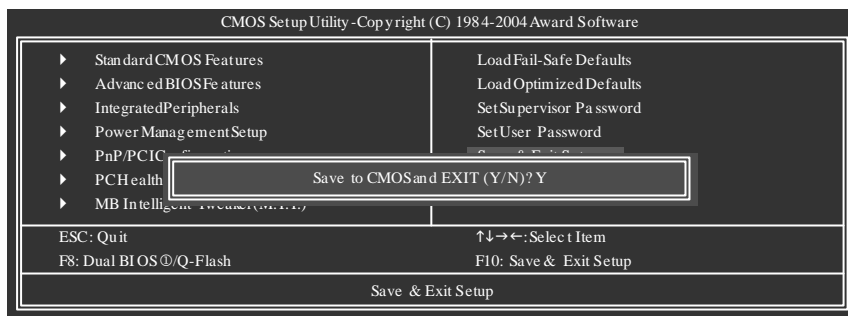

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.  
Type "N" will return to Setup Utility.

## 2-12 Exit Without Saving

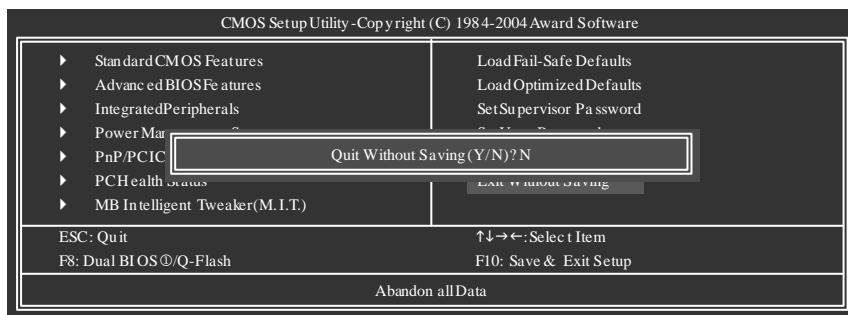

Type "Y" will quit the Setup Utility without saving to RTC CMOS.  
Type "N" will return to Setup Utility.

Only for GA-8I915P Duo Pro-A.

## Chapter 3 Install Drivers




Pictures below are shown in Windows XP.

Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the Run.exe.

### 3-1 Install Chipset Drivers

"Xpress Install " is now analyzing your computer...99%

After insert the driver CD, "Xpress Install" will scan automatically the system and then list all the drivers that recommended to install. Please pick the item that you want and press "install" followed the item; or you can press "Xpress Install" to install all items defaulted.

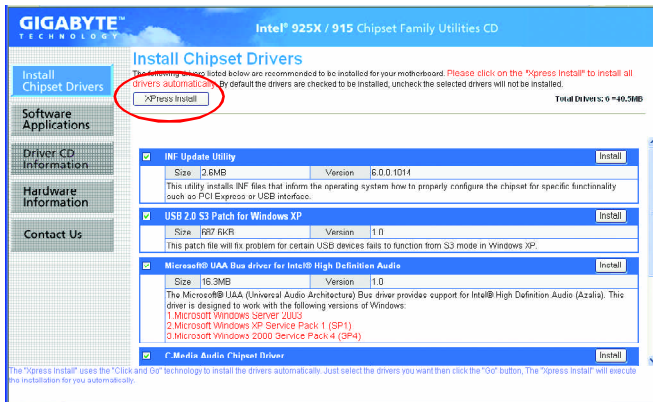

Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers. System will reboot automatically after install the drivers, afterward you can install others application.



For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).


## 3-2 Software Applications

This page displays all the tools that Gigabyte developed and some free software, you can choose anyone you want and press "install" to install them.



## 3-3 Driver CD Information

This page lists the contents of software and drivers in this CD-title.

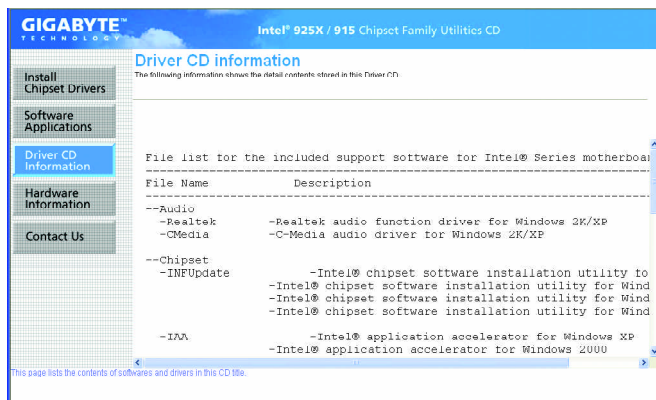



## 3-4 Hardware Information

This page lists all device you have for this motherboard.



## 3-5 Contact Us

Please see the last page for details.





## Chapter 4 Appendix

### 4-1 Unique Software Utilities

(Not all model support these Unique Software Utilities, please check your MB features.)



#### U-PLUS D.P.S. (Universal Plus Dual Power System)

The U-Plus Dual Power System (U-Plus DPS) is a revolutionary eight-phase power circuit built for ultimate system protection. Designed to withstand varying current levels and changes, the U-Plus D.P.S. provides an immensely durable and stable power circuit to the CPU for solid system stability. These characteristics make it the ideal companion with the latest LGA775 Intel® Pentium® 4 Processor as well as future Intel® processors. As well, 4 blue LED's are mounted on the U-Plus D.P.S. for intelligent indication of system loading.



#### M.I.T. (Motherboard Intelligent Tweaker)

Motherboard Intelligent Tweaker (M.I.T.) allows user to access and change BIOS feature settings with relative speed and ease. Through GIGABYTE M.I.T. feature the user is no longer required to switch into different modes within BIOS setup in order to change system settings such as the CPU system bus, memory timings or to enabled Gigabyte's unique C.I.A. 2 and M.I.B. 2 features. M.I.T.'s integration of all platform performance settings into a single mode now gives any user the ability to control and enhance their computer system to the desired level.



#### C.I.A.2 (CPU Intelligent Accelerator 2)

GIGABYTE CPU Intelligent Accelerator 2 (C.I.A. 2) is designed to automatically adjust CPU computing power to maximize system performance. When enabled, the program detects the current CPU loading and automatically accelerates the CPU computing performance to allow for a faster and smoother execution of programs. When the function is disabled, the CPU is returned to its initial status.



#### M.I.B.2 (Memory Intelligent Booster 2)

Built on the original M.I.B., the new Memory Intelligent Booster 2 (M.I.B. 2) is designed especially to maximize memory performance and boost memory bandwidth up to 10%. With added branded memory module information, users are able to optimize memory performance by selecting from a recommended memory module list.



#### S.O.S. (System Overclock Saver)

System Overclock Saver (S.O.S.) is a unique feature that eliminates system boot-up errors resulting from system over-enhancement by the user. With GIGABYTE's proprietary S.O.S. feature, users no longer need to open up the PC chassis and short-circuit the "Clear CMOS" pins or the battery on the motherboard to reset the system back to factory default settings. Instead, S.O.S. automatically resets the overclocked system settings back to their factory defaults to provide a more user-friendly and reliable platform for users.



#### Download Center

Download Center allows users to quickly download and update their BIOS as well as the latest drivers for their system. Download Center automatically runs a system check of the user PC and provides the user with the current system information as well as displaying a detailed list of all new drivers with the option for download.



#### C.O.M. (Corporate Online Management)

A web-based system management tool that allows system hardware information such as CPU, memory, graphics card, etc. to be monitored and controlled via the Internet, C.O.M. allows corporate MIS engineers to easily maintain corporate computers such as providing the most up-to-date drivers and BIOS.

## 4-1-1 Xpress Recovery Introduction



### What is Xpress Recovery ?

Xpress Recovery is a utility used to back up and restore an OS partition. If the hard drive is not working properly, the user can restore the drive to its original state.



1. Supports FAT16, FAT32, and NTFS formats
2. Must be connected to the IDE1 Master
3. Allows installation of only one OS
4. Must be used with an IDE hard disk supporting HPA
5. The first partition must be set as the boot partition. When the boot partition is backed up, please do not alter its size.
6. Xpress Recovery is recommended when using Ghost to return boot manager to NTFS format.

### How to use the Xpress Recovery


#### 1. Boot from CD-ROM (BMP Mode)

Enter the BIOS menu, select "Advanced BIOS Feature" and set to boot from CD-ROM. Insert the provided driver CD into your CD drive, then save and exit the BIOS menu. Once the computer has restarted, the phrase "Boot from CD:" will appear at the bottom left-hand corner of the screen. When "Boot from CD:" appears, press any key to enter Xpress Recovery.


Once you have completed this step, subsequent access to Xpress Recovery can also function by pressing the F9 key during computer power on.




**Boot from CD:**

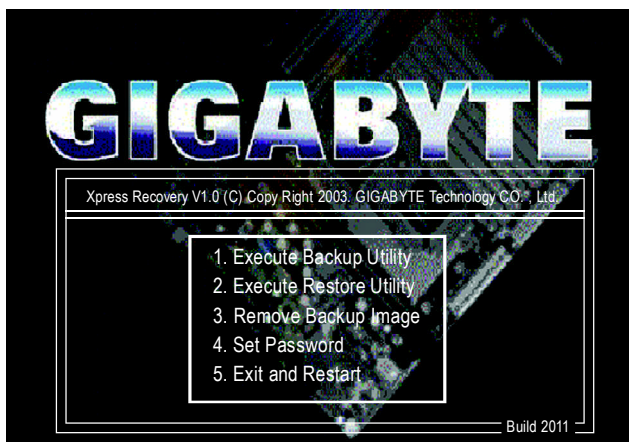

2. Press F9 during powering on the computer. (Text Mode)  
Press F9 during powering on the computer .

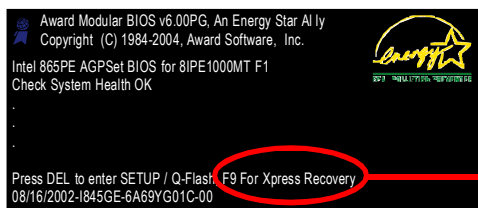

**F9 For Xpress Recovery**

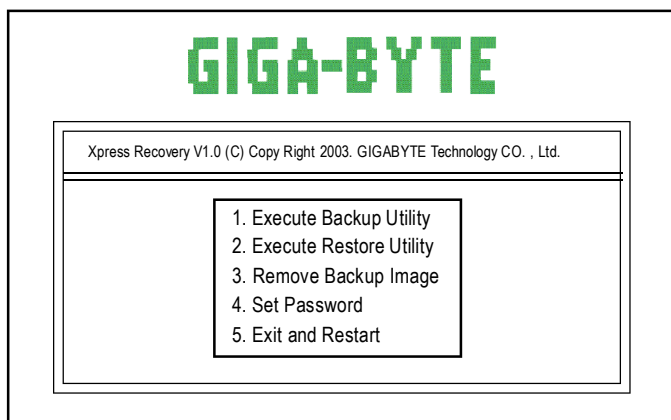

1. If you have already entered Xpress Recovery by booting from the CD-ROM, you can enter Xpress Recovery in the future by pressing the F9 key.
2. System storage capacity as well as drive reading/writing speed will affect backup speed.
3. It is recommended that Xpress Recovery be immediately installed after OS and all required driver and software installations are complete.

### 1. Execute Backup Utility:

#### **Press B to Backup your System or Esc to Exit**

The backup utility will automatically scan your system and back up data as a backup image in your hard drive.



Not all systems support access to Xpress Recovery by pressing the F9 key during computer power on. If this is the case, please use the boot from CD-ROM method to enter Xpress Recovery.

### 2. Execute Restore Utility:

#### **This program will recover your system to factory default.**

**Press R to restore your system back to factory default or press Esc to exit**

Restores backup image to original state.

### 3. Remove Backup Image:

#### **Remove backup image. Are you sure? (Y/N)**

Remove the backup image.

### 4. Set Password:

#### **Please input a 4-16 character long password (a-z or 0-9) or press Esc to exit**

You can set a password to enter Xpress Recovery to protect your hard disk data. Once this is done, password input will be required to enter Xpress Recovery during the next as well as subsequent system restarts. If you wish to remove the need for password entry, please select "Set Password" and under "New Password/Confirm Password", make sure there is no entry and then press "Enter" to remove password requirement.

### 5. Exit and Restart:

Exit and restart your computer.

## 4-1-2 Flash BIOS Method Introduction




### A. What is Dual BIOS Technology ⓘ ?

Dual BIOS means that there are two system BIOS (ROM) on the motherboard, one is the Main BIOS and the other is Backup BIOS.

Under the normal circumstances, the system works on the Main BIOS. If the Main BIOS is corrupted or damaged, the Backup BIOS can take over while the system is powered on. This means that your PC will still be able to run stably as if nothing has happened in your BIOS.

### B. How to use Dual BIOS ⓘ and Q-Flash Utility?

a. After power on the computer, pressing <Del> immediately during POST (Power On Self Test) it will allow you to enter Award BIOS CMOS SETUP, then press <F8> to enter Flash utility.

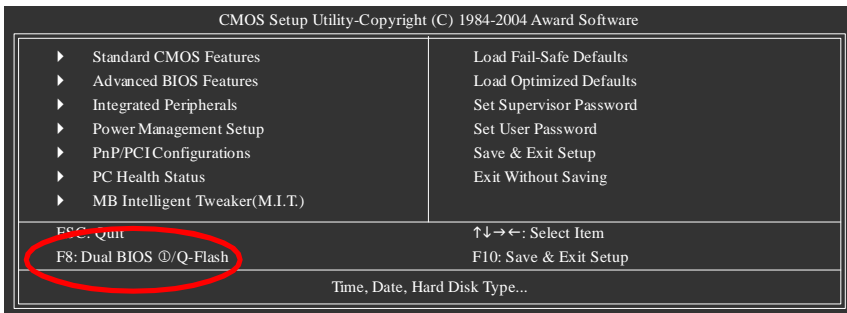

#### b. Dual BIOS / Q-Flash Programming Utility

Dual BIOS Utility V1.33		
Boot From.....	Main Bios	
Main ROM Type/Size.....	SST 49LF004A	512K
Backup ROM Type/Size.....	SST 49LF004A	512K
Wide Range Protection	Disable	
Boot From	Main Bios	
Auto Recovery	Enable	
Halt On Error	Disable	
Keep DMI Data	Enable	
Copy Main ROM Data to Backup		
Load Default Settings		
Save Settings to CMOS		
Q-Flash Utility		
Update Main BIOS from Floppy		
Update Backup BIOS from Floppy		
Save Main BIOS to Floppy		
Save Backup BIOS to Floppy		
PgDn/PgUp: Modify	↑↓: Move	ESC: Reset
		F10: Power Off

ⓘ Only for GA-8I915P Duo Pro-A.

c. Dual BIOS Item explanation:

### **Wide Range Protection: Disable(Default), Enable**

Status 1:

If any failure (ex. Update ESCD failure, checksum error or reset? occurs in the Main BIOS, just before the Operating System is loaded and after the power is on, and that the Wide Range Protection is set to "Enable", the PC will boot from Backup BIOS automatically.

Status 2:

If the ROM BIOS on peripherals cards(ex. SCSI Cards, LAN Cards,...) emits signals to request restart of the system after the user make any alteration on it, the boot up BIOS will not be changed to the Backup BIOS.

### **Boot From : Main BIOS(Default), Backup BIOS**

Status 1:

The user can set to boot from main BIOS or Backup BIOS.

Status 2:

If one of the main BIOS or the Backup BIOS fails, this item "Boot From : Main BIOS(Default)" will become gray and will not be changed by user.

### **Auto Recovery : Enable(Default), Disable**

When one of the Main BIOS or Backup BIOS occurs checksum failure, the working BIOS will automatically recover the BIOS of checksum failure.

(In the Power Management Setup of the BIOS Setting, if ACPI Suspend Type is set to Suspend to RAM, the Auto Recovery will be set to Enable automatically.)

(If you want to enter the BIOS setting, please press "Del" key when the boot screen appears.)

### **Halt On Error : Disable(Default), Enable**

If the BIOS occurs a checksum error or the Main BIOS occurs a WIDE RANGE PROTECTION error and Halt On Error set to Enable, the PC will show messages on the boot screen, and the system will pause and wait for the user's instruction.

If Auto Recovery :Disable, it will show <or the other key to continue.>

If Auto Recovery :Enable, it will show <or the other key to Auto Recover.>

### **Keep DMI Data : Enable(Default), Disable**

Enable: The DMI data won't be replaced by flashing new BIOS.(recommend)

Disable: The DMI data will be replaced by flashing new BIOS.

### **Copy Main ROM Data to Backup**

(If you boot from Backup ROM, this item will change to Copy Backup ROM Data to Main)

Auto recovery message:

#### **BIOS Recovery: Main to Backup**

The means that the Main BIOS works normally and could automatically recover the Backup BIOS.

#### **BIOS Recovery: Backup to Main**

The means that the Backup BIOS works normally and could automatically recover the Main BIOS.

(This auto recovery utility is set by system automatically and can't be changed by user.)

### **Load Default Settings**

Load dual BIOS default value.

### **Save Settings to CMOS**

Save revised setting.





## Method 1 : Q-Flash™ Utility

Q-Flash™ is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash allows users to flash BIOS without any utility in DOS or

Windows. Using Q-Flash™ indicating no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.



Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

### Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

1. Download the latest BIOS for your motherboard from Gigabyte's website.
2. Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 8KNXP.U.Fba) to a floppy disk.
3. Reboot your PC and press **Del** to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts.

If your motherboard has dual-BIOS, please refer to **Part One**.

If your motherboard has single-BIOS, please refer to **Part Two**.


### Part One:

#### Updating BIOS with Q-Flash™ Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash and Dual BIOS, the Q-Flash utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash utility.


**In the following sections, we take GA-8KNXP Ultra as the example to guide you how to flash BIOS from an older version to the latest version. For example, from Fa3 to Fba.**

The BIOS file is Fa3  
before updating

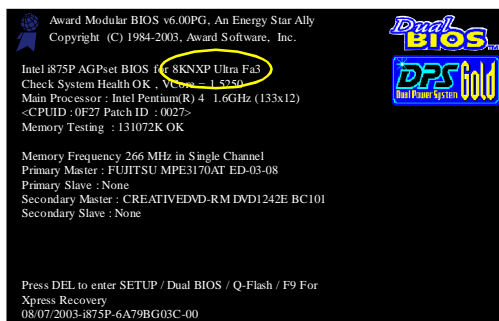

## Entering the Q-Flash™ utility:


Step1: To use Q-Flash utility, you must press **Del** in the boot screen to enter BIOS menu.

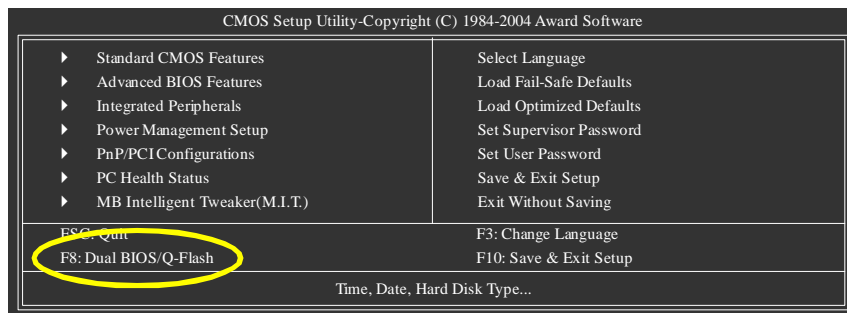

Step 2: Press **F8** button on your keyboard and then **Y** button to enter the Dual BIOS/Q-Flash utility.

## Exploring the Q-Flash™ / Dual BIOS utility screen

The Q-Flash / Dual BIOS utility screen consists of the following key components.

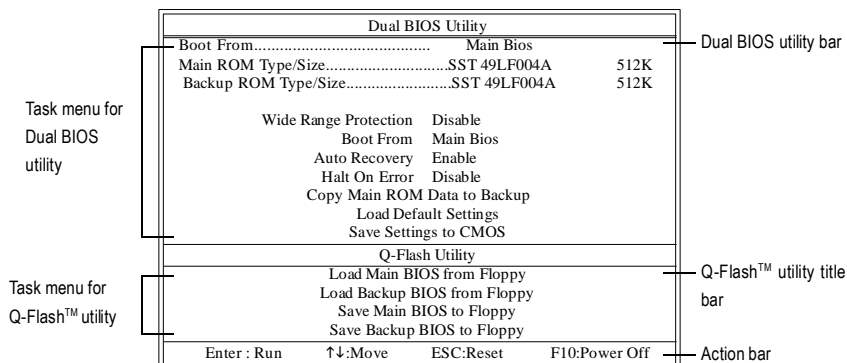

### Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

### Task menu for Q-Flash utility:

Contains the names of four tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

### Action bar:

Contains the names of four actions needed to operate the Q-Flash/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.




3. Press Y button on your keyboard after you are sure to update BIOS.

Then it will begin to update BIOS. The progress of updating BIOS will be displayed.




Please do not take out the floppy disk when it begins flashing BIOS.

4. Press any keys to return to the Q-Flash menu when the BIOS updating procedure is completed.

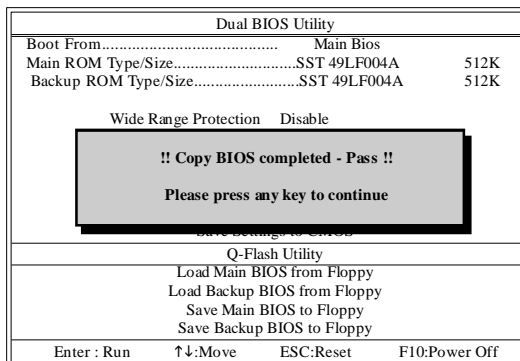


You can repeat Step 1 to 4 to flash the backup BIOS, too.

5. Press Esc and then Y button to exit the Q-Flash utility. The computer will restart automatically after you exit Q-Flash.

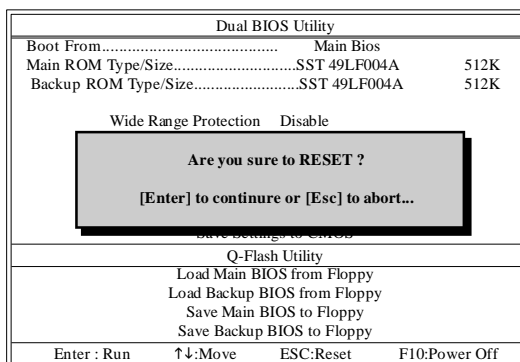


After system reboots, you may find the BIOS version on your boot screen becomes the one you flashed.

The BIOS file becomes Fab after updating.

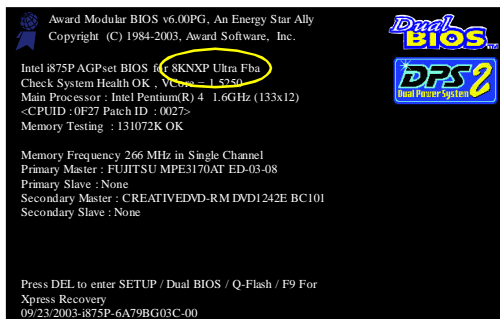


6. Press **Del** to enter BIOS menu after system reboots. When you are in BIOS menu, move to **Load Fail-Safe Defaults** item and press **Enter** to load BIOS Fail-Safe Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

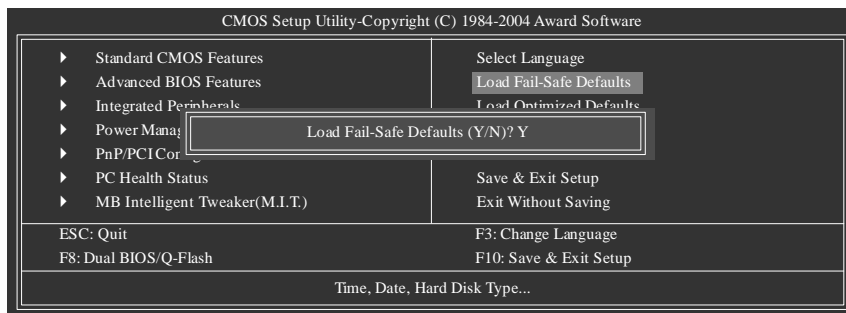

Press **Y** on your keyboard to load defaults.

7. Select **Save & Exit Setup** item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

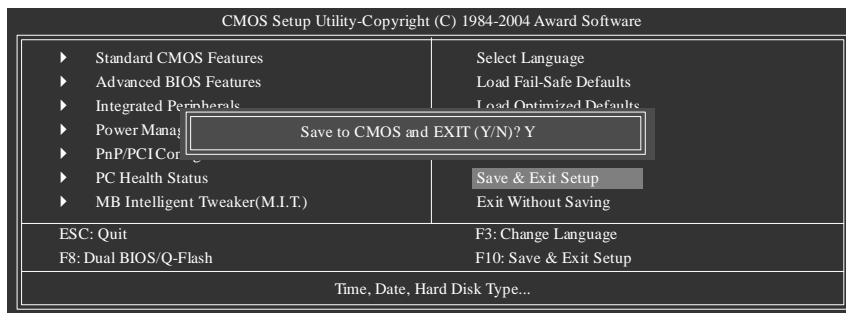


Press **Y** on your keyboard to save and exit.

## Part Two:


### Updating BIOS with Q-Flash™ Utility on Single-BIOS Motherboards.

This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™ utility.

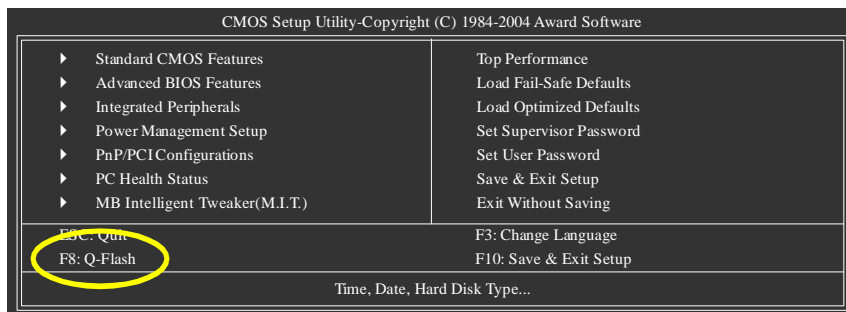

## Exploring the Q-Flash™ utility screen

The Q-FlashBIOS utility screen consists of the following key components.

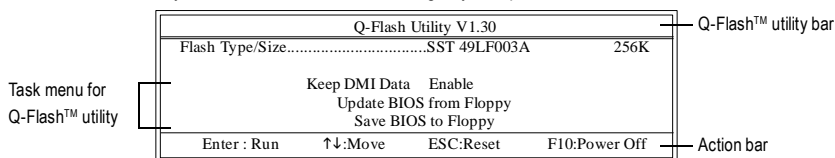

### Task menu for Q-Flash utility:

Contains the names of three tasks. Blocking a task and pressing Enter key on your keyboard to enable execution of the task.

### Action bar:

Contains the names of four actions needed to operate the Q-Flash utility. Pressing the buttons mentioned on your keyboards to perform these actions.

### Using the Q-Flash™ utility:

This section tells you how to update BIOS using the Q-Flash utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash utility, please follow the steps below to flash BIOS.

#### Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Update BIOS from Floppy" item in the Q-Flash menu and press Enter button.  
Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.




If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save BIOS to Floppy" item.

2. Move to the BIOS file you want to flash and press Enter.

**In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 8GE800.F4, is listed.**



Please confirm again you have the correct BIOS file for your motherboard.

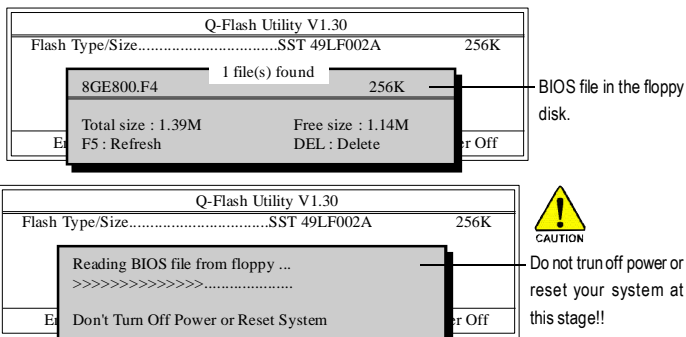

After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"



Please do not take out the floppy disk when it begins flashing BIOS.





## Method 2 : @BIOS™ Utility

If you do not have a DOS startup disk, we recommend that you use the new @BIOS utility. @BIOS allows users to update their BIOS under Windows. Just select the desired @BIOS server to download the latest version of BIOS.

Fig 1. Installing the @BIOS utility

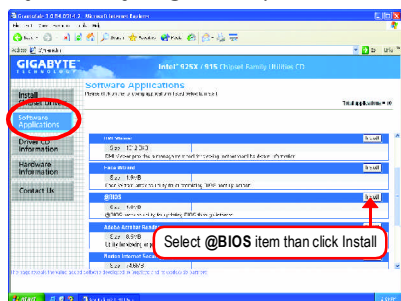


Fig 2. Installation Complete and Run @BIOS

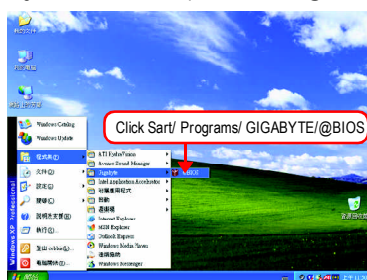


Fig 3. The @BIOS Utility

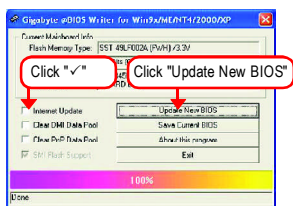


Fig 4. Select the desired @BIOS server



## 1. Methods and steps:

### I. Update BIOS through Internet

- Click "Internet Update" icon
- Click "Update New BIOS" icon
- Select @BIOS™ sever
- Select the exact model name on your motherboard
- System will automatically download and update the BIOS.

### II. Update BIOS NOT through Internet:

- Do not click "Internet Update" icon
- Click "Update New BIOS"
- Please select "All Files" in dialog box while opening the old file.
- Please search for BIOS unzip file, downloading from internet or any other methods (such as: 8I915P Duo Pro-A.E11).
- Complete update process following the instruction.



### III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

### IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

## 2. Note:

- I. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- II. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- III. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- IV. Please note that any interruption during updating will cause system unbooted

## 4-1-3 Serial ATA BIOS Setting Utility Introduction ⓘ

### RAID Levels

RAID (Redundant Array of Independent Disks) is a method of combining two hard disk drives into one logical unit. The advantage of an Array is to provide better performance or data fault tolerance. Fault tolerance is achieved through data redundant operation, where if one drives fails, a mirrored copy of the data can be found on another drive. This can prevent data loss if the operating system fails or hangs. The individual disk drives in an array are called members. The configuration information of each member is recorded in the reserved sector that identifies the drive as a member. All disk members in a formed disk array are recognized as a single physical drive to the operating system.

Hard disk drives can be combined together through a few different methods. The different methods are referred to as different RAID levels. Different RAID levels represent different performance levels, security levels and implementation costs. The RAID levels which the Intel® ICH6R chipset supports are RAID 0 and RAID 1.

#### RAID 0 (Striping)

RAID 0 reads and writes sectors of data interleaved between multiple drives. If any disk member fails, it affects the entire array. The disk array data capacity is equal to the number of drive members times the capacity of the smallest member. The striping block size can be set from 4KB to 64KB. RAID 0 does not support fault tolerance.

#### RAID 1 (Mirroring)

RAID 1 writes duplicate data onto a pair of drives and reads both sets of data in parallel. If one of the mirrored drives suffers a mechanical failure or does not respond, the remaining drive will continue to function. Due to redundancy, the drive capacity of the array is the capacity of the smallest drive. Under a RAID 1 setup, an extra drive called the spare drive can be attached. Such a drive will be activated to replace a failed drive that is part of a mirrored array. Due to the fault tolerance, if any RAID 1 drive fails, data access will not be affected as long as there are other working drives in the array.

ⓘ Only for GA-8I915P Duo Pro-A.

Please follow the steps below to construct a complete RAID array:

- 1) Have ready your hard drives for RAID construction.  
Note: To achieve best performance, it is recommended that the hard drives used are of similar make and storage capacity.
- 2) Please attach the hard drive connectors to their appropriate location on the motherboard ie. IDE, SCSI, or SATA.
- 3) Enter the motherboard BIOS and locate RAID setup (Please refer to the section on Integrated Peripherals).
- 4) Enter RAID setup in the BIOS and select the RAID type (For instance, enter Ctrl + I to select Intel RAID; Ctrl + S to select Silicon Image).
- 5) Complete driver installation.
- 6) Complete RAID utility installation.


More information on steps 4 and 5 is provided.

## Configuring the Intel RAID BIOS


The Intel RAID BIOS setup lets you choose the RAID array type and which hard drives you want to make part of the array.

Entering the RAID BIOS Setup

1. After rebooting your computer, wait until you see the RAID software prompting you to press Ctrl + I. The RAID prompt appears as part of the system POST and boot process prior to loading the OS. You have a few seconds to press Ctrl + I before the window disappears.

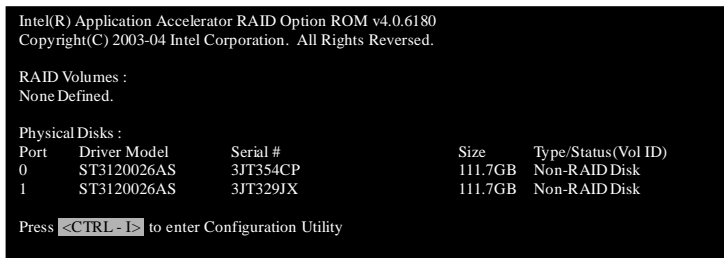


Press Ctrl + I. The Intel RAID Utility - Create RAID Volume window appears (as Figure below).

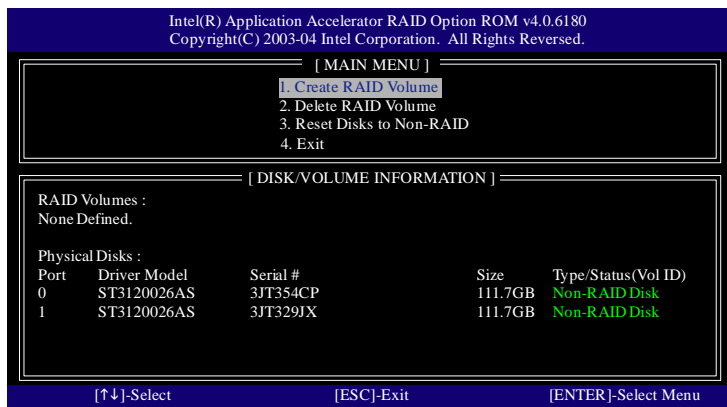


## Create RAID Volume

Press **Enter** under **Create RAID Volume** to set up RAID.

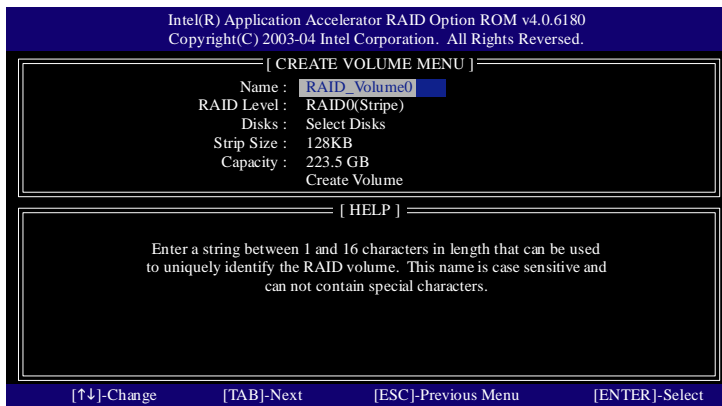

After entering the Create Volume Menu, you can set disk name with 1~16 letters (letters cannot be special characters) under **Name** item.

After setting disk name, press **Enter** to select **RAID Level**.

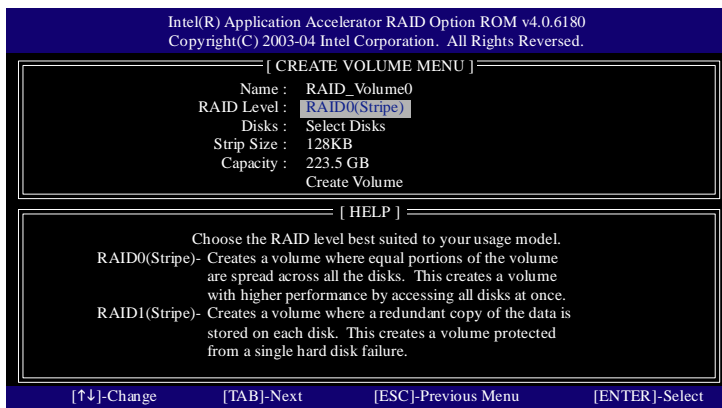

There are two RAID levels: RAID0(Stripe) and RAID1(Mirror). After selecting the RAID level, press **Enter** to select **Strip Size**.

The KB is a unit of Strip Size. You can set disk block size with this item.

The disk block size can be set from 4KB to 128KB. After you set disk block size, press **Enter** to set disk **Capacity**.

```

Intel(R) Application Accelerator RAID Option ROM v4.0.6180
Copyright(C) 2003-04 Intel Corporation. All Rights Reserved.

[ CREATE VOLUME MENU ]

Name : RAID_Volume0
RAID Level : RAID0(Stripe)
Disks : Select Disks
Strip Size : 128KB
Capacity : 223.5 GB
Create Volume

[ HELP ]

Choose the RAID level best suited to your usage model.
The following are typical values:
16KB - Best for sequential transfers
64KB - Good general purpose strip size
128KB - Best performance for most desktops and workstations

[↑↓]-Change [TAB]-Next [ESC]-Previous Menu [ENTER]-Select

```

```

Intel(R) Application Accelerator RAID Option ROM v4.0.6180
Copyright(C) 2003-04 Intel Corporation. All Rights Reserved.

[ CREATE VOLUME MENU ]

Name : RAID_Volume0
RAID Level : RAID0(Stripe)
Disks : Select Disks
Strip Size : 128KB
Capacity : 223.5 GB
Create Volume

[ HELP ]


Enter the volume capacity. The default value indicates the
maximum volume capacity using the selected disks. If less
than the maximum capacity is chosen, creation of a second
volume is needed to utilize the remaining space.

[↑↓]-Change [TAB]-Next [ESC]-Previous Menu [ENTER]-Select


```

Press **Enter** to enter **Create Volume** after setting disk capacity.


Press **Enter** under the **Create Volume** item.

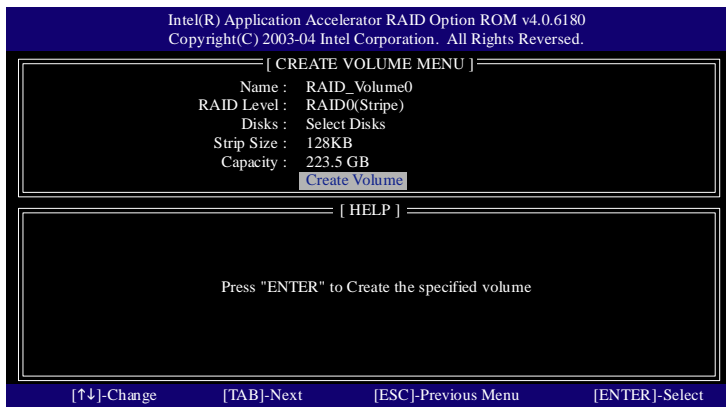

An alert bar will be displayed warning you that all data on selected disks will be lost. Please press **Y** to complete the set-up of RAID.

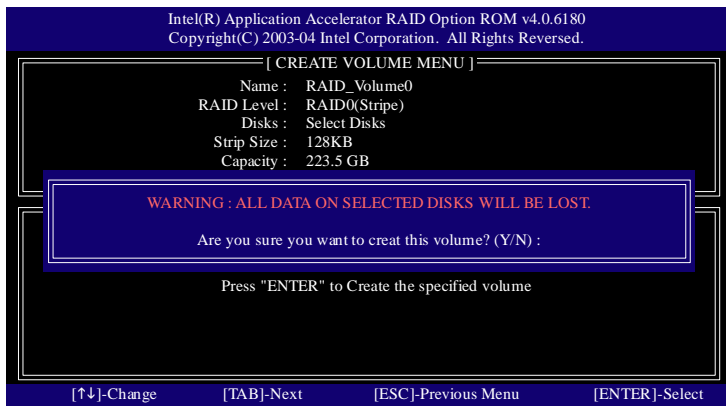


After the completion, you will see the detailed information about the RAID, such as RAID level, disk block size, disk name and disk capacity, etc.

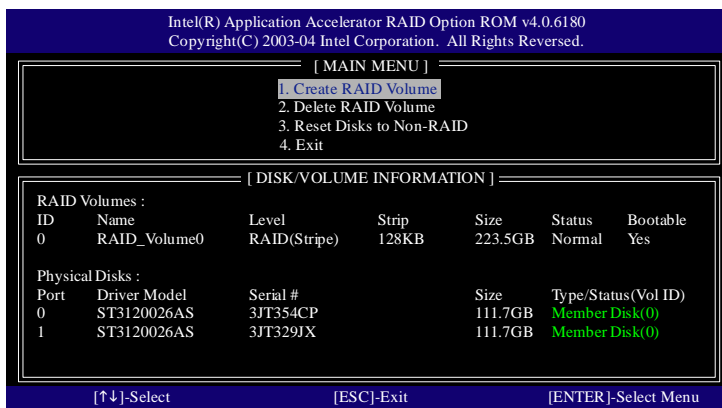

## Delete RAID Volume

If you want to delete a RAID volume, please select the **Delete RAID Volume** option. Press **Enter** key and follow the instructions on the screen.

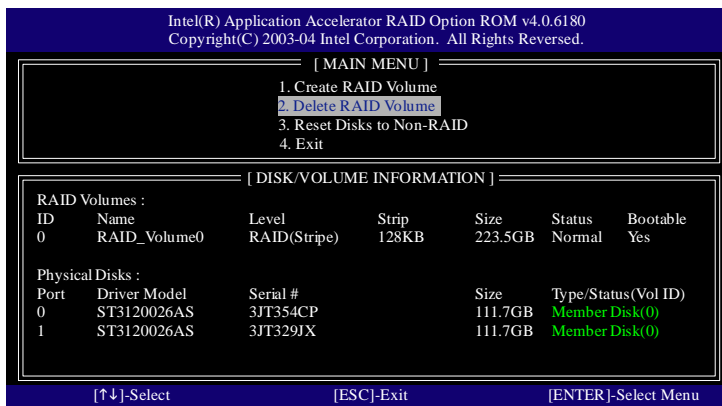

## Installing the RAID drivers

For the Windows operating system (Win NT, WinXP, Win2000 ), for IDE RAID/SCSI/Serial ATA functioning, the driver must first be transferred to a floppy disk. Please follow the steps below to complete driver transfer to a floppy disk:

- 1) Please insert the provided driver CD into the hard disk drive eg. Drive D:
- 2) Insert a blank formatted floppy disk into the floppy disk drive.
- 3) Either from "Command Prompt" or DOS, please type in "D:\BootDrv\menu.exe"(Refer to Fig.1)
- 4) Information on all chipsets should be listed on the screen (Refer to Fig.2), please select the proper chipset model.

Fig.1


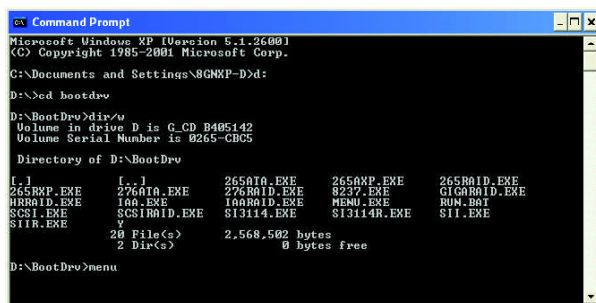


Fig.2

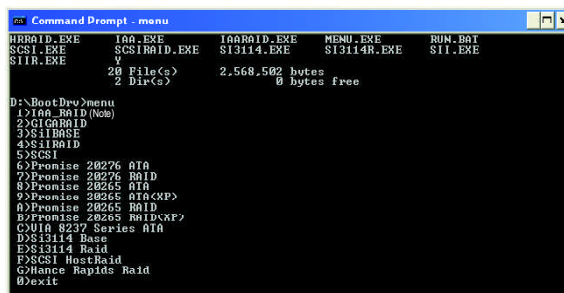

Your system will then automatically zip and transfer this driver file to the floppy disk.


After you complete the steps, boot from the Windows CD to install the RAID drivers.


When install Windows 2000 or Windows XP from HDDs in serial ATA controller, press F6 as Win2000 or XP boots up, then supply serial ATA controller driver by this floppy disk. Follow on-screen instructions to complete installation.

(Each time you add a new hard drive to a RAID array, the RAID driver will have to be installed under Windows once for that hard drive. After that, the driver will not have to be installed.)


Note: In the menu list, IAA\_RAID is Intel ICH6R chipset.



After installation of the audio driver, you'll find an  icon in the system area. Double click the icon to select the function.

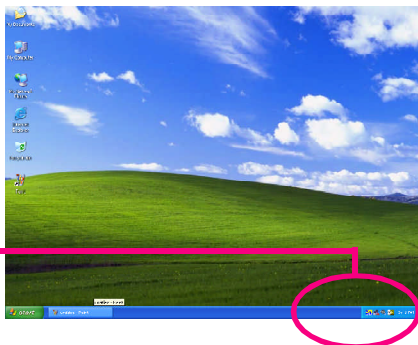

If the icon can not be found, go to the control panel from the system menu and double click the C-Media CPL icon. Open "CMI Audio Config" and then go to "Information" tab. Make sure "Show the audio configuration icon in the system tray" is checked.

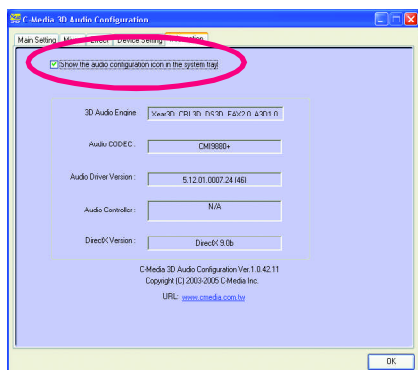

There are 5 kinds of output mode: Earphone Output Mode, 2 / 4 / 5.1 / 7.1 Channel Output Mode.

- Earphone Output Mode -- Only earphone output is configured on the system.
- 2 Channel Output Mode -- Front speakers are configured on the system.
- 4 Channel Output Mode -- Front speakers and surround speakers are configured on the system.
- 5.1 Channel Output Mode -- Front speakers, surround speakers and center/subwoofer speakers are configured on the system.
- 7.1 Channel Output Mode -- Front speakers, surround speakers, center/subwoofer speakers and back surround speakers are configured on the system.


The output mode is decided by the sequence with high priority in the front: back surround speakers, center/subwoofer speakers, surround speakers, front speakers and earphone. (e.g. if back surround speakers are configured, then the system will be in 7.1 channel output mode no matter what other output devices are configured.)

## 2 Channel Audio Setup:

We recommend that you use speakers with amplifier to acquire the best sound effect if the stereo output is applied.


### STEP 1:

Connect the stereo speakers or earphone to "Line Out".

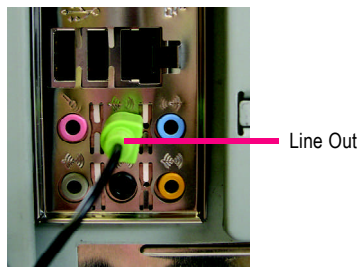

### STEP 2:


After installation of the audio driver, you'll find an icon in the system area. Double click the icon to select the function.

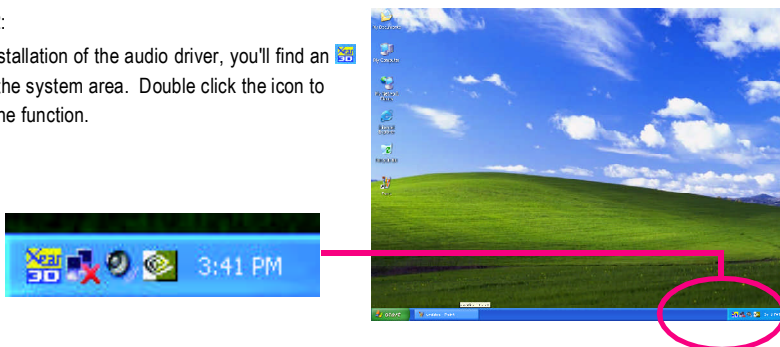


### STEP 3:

Click "C-Media 3D Audio Configuration" and then select "Main Setting". The current audio mode is displayed in "Audio System Status". "Smart Jack" would auto-detect the speaker type you connect and gives you the functions to manually modify the speaker settings.

The function to manually modify speaker settings.

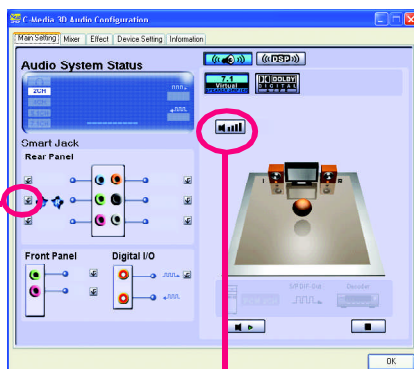


The function to adjust speaker volume.



## 4 Channel Audio Setup


### STEP 1 :

Connect the front speaker to "Front Speaker Out" and the surround speaker to "Surround speaker out".

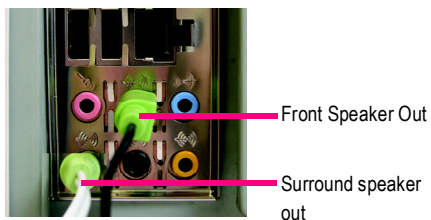

### STEP 2:


After installation of the audio driver, you'll find an icon in the system area. Double click the icon to select the function.

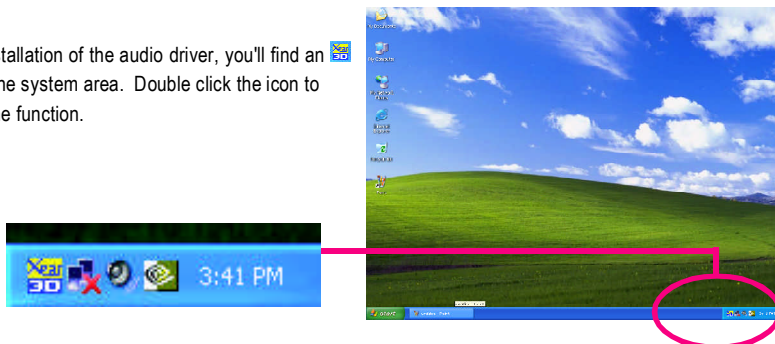


### STEP 3:

Click "C-Media 3D Audio Configuration" and then select "Main Setting". The current audio mode is display in "Audio System Status". "Smart Jack" would auto-detect the speaker type you connect and gives you the functions to manually modify speaker the settings.

The function to manually modify speaker setting.

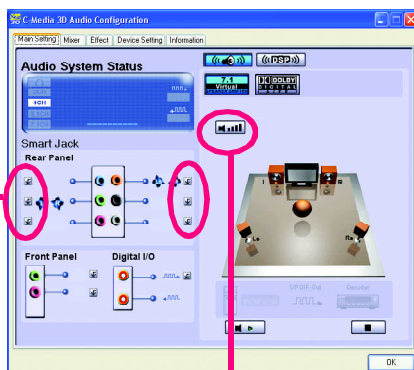


The function to adjust speaker volume.

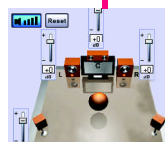

## 5.1 Channel Audio Setup

### STEP 1 :

Connect the front speaker to "Front Speaker Out", the surround speaker to "Surround speaker out", and the center/subwoofer speaker to "Center/Subwoofer Speaker Out".

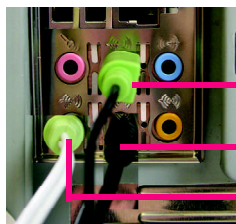


Front Speaker Out

Center/Subwoofer  
Speaker Out

Surround speaker  
out

### STEP 2:


After installation of the audio driver, you find an icon in the system area. Double click the icon to select the function.

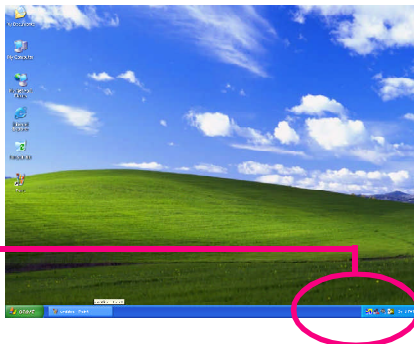


### STEP 3:

Click "C-Media 3D Audio Configuration" and then select "Main Setting". The current audio mode is display in "Audio System Status". "Smart Jack" would auto-detect the speaker type you connect and gives you the functions to manually modify speaker the settings.

The function to manually modify speaker setting.

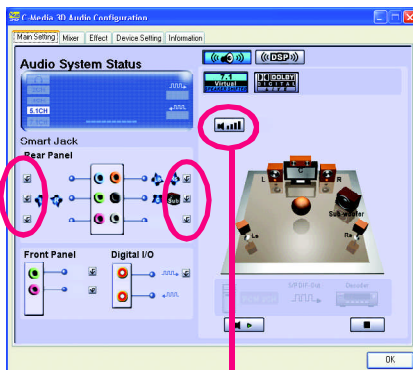


The function to adjust speaker volume.

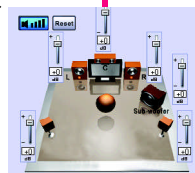

## 7.1 Channel Audio Setup


### STEP 1 :

Connect the front speaker to "Front Speaker Out", the surround speaker to "Surround speaker out", and the center/subwoofer speaker to "Center/Subwoofer Speaker Out", and the back surround speaker to "Back surround speaker out".

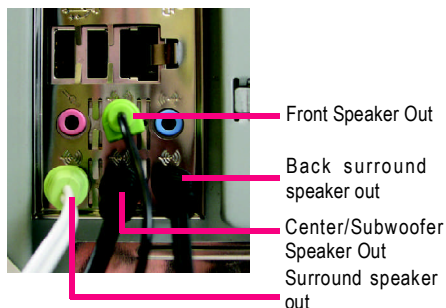

### STEP 2:


After installation of the audio driver, you find an icon in the system area. Double click the icon to select the function.

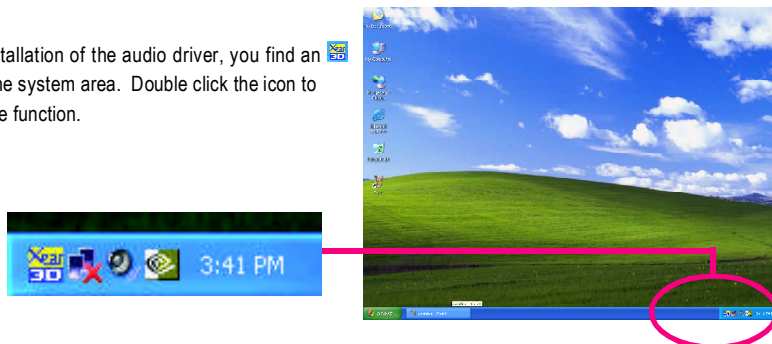


### STEP 3:

Click "C-Media 3D Audio Configuration" and then select "Main Setting". The current audio mode is display in "Audio System Status". "Smart Jack" would auto-detect the speaker type you connect and gives you the functions to manually modify speaker the settings.

The function to manually modify speaker setting.

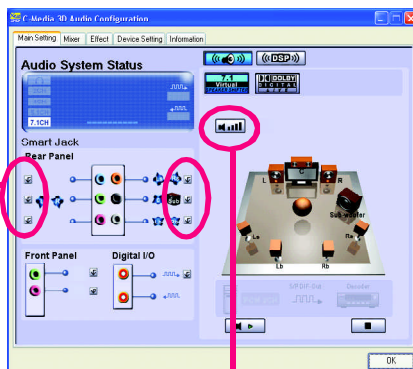

The function to adjust speaker volume.

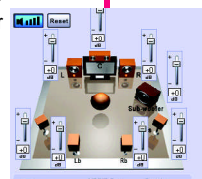

## Digital I/O Status:


Digital Output Status--

(1) For stereo PCM output: sampling rate is shown here.

(2) For Dolby Digital Live! output: AC3 is shown here.

Digital Input Status--


(1) For stereo PCM input: sampling rate is shown here.

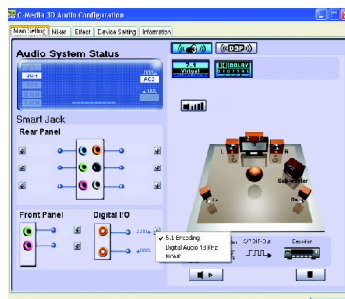

## Mixer


The built-in mixer allows user to control volume / panning / recording / monitoring.

Monitoring of recording source is enabled here

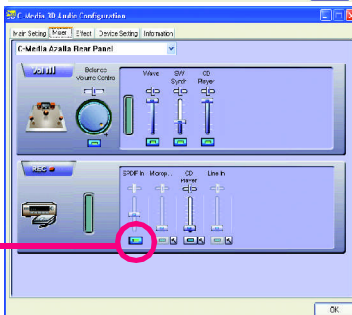

## Effect

Users can control Environment emulation, Environment size, and parameters of Equalizer here.

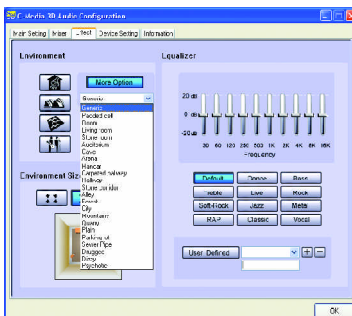


## Device Setting

Check "Enable Multiple Streaming" and restart the system to enable support for multiple audio output function.

Defaults:

The defaults for both "Sound Playback" and "Sound Recording" are "C-Media Azalia Rear Panel". After you check the "Enable Multiple Streaming" item and restart the system, another "C-Media Azalia Front Panel" option will show up for you to use the multiple audio output function.

Note: The function can be used only when you connect the audio device to front panel.

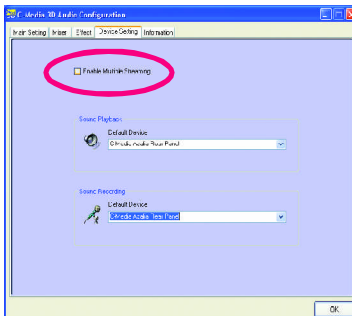

## 4-2 Troubleshooting

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to <http://tw.giga-byte.com/faq/faq.htm>

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why?

Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down?

Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: Why cannot I use all functions in EasyTune 4?

Answer: The availability of the listed functions in EasyTune 4 depends on the MB chipset. If the chipset doesn't support certain functions in EasyTune 4, these functions will be locked automatically and you will not be able to use them.

Question 4: Why do I fail to install RAID and ATA drivers under Win 2000 and XP on boards that support RAID function after I connect the boot HDD to IDE3 or IDE4 ?

Answer: First of all, you need to save some files in the CD-ROM to a floppy disk before installing drivers. You also need to go through some rather different steps in the installation process. Therefore, we suggest that you refer to the installation steps in the RAID manual at our website.

(Please download it at [http://tw.giga-byte.com/support/user\\_pdf/raid\\_manual.pdf](http://tw.giga-byte.com/support/user_pdf/raid_manual.pdf))

Question 5: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

1. Turn off power.
2. Disconnect the power cord from MB.
3. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for one minute).
4. Re-insert the battery to the battery holder.
5. Connect power cord to MB again and turn on power.
6. Press Del to enter BIOS and load Fail-Safe Defaults.
7. Save changes and reboot the system.

Question 6: Why does system seem unstable after updating BIOS?

Answer: Please remember to load Fail-Safe Defaults (Or Load BIOS Defaults) after flashing BIOS. However, if the system instability still remains, please clear CMOS to solve the problem.

Question 7: Why do I still get a weak sound after turning up the speaker to the maximum volume?

Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 8: How do I disable onboard VGA card in order to add an external VGA card?

Answer: Gigabyte motherboards will auto-detect the external VGA card after it is plugged in, so you don't need to change any setting manually to disable the onboard VGA.

Question 9: Why cannot I use the IDE 2?

Answer: Please refer to the user manual and check whether you have connected any cable that is not provided with the motherboard package to the USB Over Current pin in the Front USB Panel. If the cable is your own cable, please remove it from this pin and do not connect any of your own cables to it.

Question 10: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

→ AMI BIOS Beep Codes

\*Computer gives 1 short beep when system boots successfully.

\*Except for beep code 8, these codes are always fatal.

- 1 beep Refresh failure
- 2 beeps Parity error
- 3 beeps Base 64K memory failure
- 4 beeps Timer not operational
- 5 beeps Processor error
- 6 beeps 8042 - gate A20 failure
- 7 beeps Processor exception interrupt error
- 8 beeps Display memory read/write failure
- 9 beeps ROM checksum error
- 10 beeps CMOS shutdown register read/write error
- 11 beeps Cache memory bad

→ AWARD BIOS Beep Codes

- 1 short: System boots successfully
- 2 short: CMOS setting error
- 1 long 1 short: DRAM or M/B error
- 1 long 2 short: Monitor or display card error
- 1 long 3 short: Keyboard error
- 1 long 9 short: BIOS ROM error
- Continuous long beeps: DRAM error
- Continuous short beeps: Power error

Question 11: For the M/B which have RAID function, how to set in the BIOS in order to bootup from IDE3, 4 by either RAID or ATA mode?

Answer: Please set in the BIOS as follow:

1. Advanced BIOS features-->(SATA)/RAID/SCSI boot order: "SATA"
2. Advanced BIOS features--> First boot device: "SCSI"
3. Integrated Peripherals--> Onboard H/W ATA/RAID: "enable"

Then it depends on the RAID mode that you need to set "RAID" to RAID mode or "ATA" to normal ATA mode in the item named RAID controller function.

Question 12: How to set in the BIOS to bootup from the IDE/ SCSI/ RAID card ?

Answer: Please set in the BIOS as follow:

1. Advanced BIOS features-->(SATA)/RAID/SCSI boot order: "SCSI"
2. Advanced BIOS features--> First boot device: "SCSI"

Then it depends on the mode(RAID or ATA) that you need to set in RAID/ SCSI BIOS.



This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper appears to be a standard notebook page or a sheet of stationery. There is no handwriting or other markings on the page.





## Contact Us

---

### • Taiwan (Headquarters)

GIGA-BYTE TECHNOLOGY CO., LTD.

Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien, Taiwan, R.O.C.

TEL: +886 (2) 8912-4888

FAX: +886 (2) 8912-4003

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address (English): <http://www.gigabyte.com.tw>

WEB address (Chinese): <http://chinese.giga-byte.com>

---

### • U.S.A.

G.B.T. INC.

Address: 17358 Railroad St, City of Industry, CA 91748.

TEL: +1 (626) 854-9338

FAX: +1 (626) 854-9339

Tech. Support :

<http://www.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.com>

---

### • Germany

G.B.T. TECHNOLOGY TRADING GMBH

Address: Friedrich-Ebert-Damm 112 22047 Hamburg

TEL: +49-40-2533040 (Sales)

+49-1803-428468 (Tech.)

TEL: +49-40-25492343 (Sales)

+49-1803-428329 (Tech.)

Tech. Support :

<http://de.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.de>

---



---

### • Japan

NIPPON GIGA-BYTE CORPORATION

WEB address : <http://www.gigabyte.co.jp>

---

### • Singapore

GIGA-BYTE SINGAPORE PTE. LTD.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

---

### • U.K.

G.B.T. TECH. CO., LTD.

Address: GUnit 13 Avant Business Centre 3 Third Avenue, Denbigh West Bletchley Milton Keynes, MK1 1DR, UK, England

TEL: +44-1908-362700

FAX: +44-1908-362709

Tech. Support :

<http://uk.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://uk.giga-byte.com>

---

### • The Netherlands

GIGA-BYTE TECHNOLOGY B.V.

TEL: +31 40 290 2088

NL Tech.Support: 0900-GIGABYTE (0900-44422983)

BE Tech.Support: 0900-84034

FAX: +31 40 290 2089

Tech. Support :

<http://nz.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.nl>

---

---

**• China**

NINGBO G.B.T. TECH. TRADING CO., LTD.

Tech. Support :

<http://cn.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.com.cn>

**Shanghai**

TEL: +86-021-63410999

FAX: +86-021-63410100

**Beijing**

TEL: +86-010-82886651

FAX: +86-010-82888013

**Wuhan**

TEL: +86-027-87851061

FAX: +86-027-87851330

**GuangZhou**

TEL: +86-020-87586074

FAX: +86-020-85517843

**Chengdu**

TEL: +86-028-85236930

FAX: +86-028-85256822

**Xian**

TEL: +86-029-85531943

FAX: +86-029-85539821

**Shenyang**

TEL: +86-024-23960918

FAX: +86-024-23960918-809

---



---

**• Australia**

GIGABYTE TECHNOLOGY PTY. LTD.

Address: 3/6 Garden Road, Clayton, VIC 3168 Australia

TEL: +61 3 85616288

FAX: +61 3 85616222

Tech. Support :

<http://www.giga-byte.com.au/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.giga-byte.com.au>

---

**• France**

GIGABYTE TECHNOLOGY FRANCES S.A.R.L.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.fr>

---

**• Russia**

Moscow Representative Office Of Giga-Byte Technology Co., Ltd.

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.ru>

---

**• Poland**

Representative Office Of Giga-Byte Technology Co., Ltd.

POLAND

Tech. Support :

<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>

Non-Tech. Support(Sales/Marketing) :

<http://ggts.gigabyte.com.tw/nontech.asp>

WEB address : <http://www.gigabyte.pl>

---