



When you installing AGP card, please make sure the following notice is fully understood and practiced. If your AGP card has "AGP 4X/8X (1.5V) notch"(show below), please make sure your AGP card is AGP 4X/8X.



Caution: AGP 2X card is not supported by Intel® 845(GE/PE) / 845(E/G) / 850(E) / E7205 / 865(G/PE/P) / 875P. You might experience system unable to boot up normally. Please insert an AGP Pro 4X/8X card.



Example 1: Diamond Vipper V770 golden finger is compatible with 2X/4X mode AGP slot. It can be switched between AGP 2X(3.3V) or 4X(1.5V) mode by adjusting the jumper. The factory default for this card is 2X(3.3V). The GA-8KNXP Ultra-64 (or any AGP Pro 4X/8X only) motherboards might not function properly, if you install this card without switching the jumper to 4X (1.5V) mode in it.

Example 2: Some ATi Rage 128 Pro graphics cards made by "Power Color", the graphics card manufacturer & some SiS 305 cards, their golden finger is compatible with 2X(3.3V) / 4X(1.5V) mode AGP slot, but they support 2X(3.3V) only. The GA-8KNXP Ultra-64 (or any AGP Pro 4X/8X only) motherboards might not function properly, If you install this card in it.

Note : Although Gigabyte's AG32S(G) graphics card is based on ATi Rage 128 Pro chip, the design of AG32S(G) is compliance with AGP 4X(1.5V) specification. Therefore, AG32S(G) will work fine with Intel® 845(GE/PE) / 845(E/G) / 850(E) / E7205 / 865(G/PE/P) / 875P based motherboards.



Before you install PCI cards, please remove the Dual BIOS label from PCI slots if there is one.



- 💣 The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.
- 💣 Third-party brands and names are the property of their respective owners.
- 💣 Please do not remove any labels on motherboard, this may void the warranty of this motherboard.
- 💣 Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.



WARNING: *Never run the processor without the heatsink properly and firmly attached. PERMANENT DAMAGE WILL RESULT!*

Mise en garde : *Ne faites jamais tourner le processeur sans que le dissipateur de chaleur soit fixé correctement et fermement. UN DOMMAGE PERMANENT EN RÉSULTERA !*

Achtung: *Der Prozessor darf nur in Betrieb genommen werden, wenn der Wärmeableiter ordnungsgemäß und fest angebracht ist. DIES HAT EINEN PERMANENTEN SCHADEN ZUR FOLGE!*

Advertencia: *Nunca haga funcionar el procesador sin el dissipador de calor instalado correcta y firmemente. ¡SE PRODUCIRÁ UN DAÑO PERMANENTE!*

Aviso: *Nunca execute o processador sem o dissipador de calor estar adequado e firmemente conectado. O RESULTADO SERÁ UM DANO PERMANENTE!*

警告: 將散熱板牢固地安裝到處理器上之前，不要運行處理器。過熱將永遠損壞處理器！

警告: 將散熱器牢固地安裝到處理器上之前，不要運行處理器。過熱將永遠損壞處理器！

경고: 히트싱크를 제대로 또 단단히 부착시키지 않은 채 프로세서를 구동시키지 마십시오. 영구적 고장이 발생할 수 있습니다!

警告: 永久的な損傷を防ぐため、ヒートシンクを正しくしっかりと取り付けのまでは、プロセッサを動作させないようにしてください。

Declaration of Conformity

We, Manufacturer/Importer
(full address)

G.B.T. Technology Trading GmbH
Ausschlagler Weg 41, 1F, 20537 Hamburg, Germany

declare that the product
(description of the apparatus, system, installation to which it refers)

Mother Board

GA-8KNXP Ultra-64
is in conformity with

(reference to the specification under which conformity is declared)

in accordance with 89/336 EEC-EMC Directive

<input type="checkbox"/> EN 55011	Limits and methods of measurement of radio disturbance characteristics of industrial, scientific and medical (ISM) high frequency equipment	<input type="checkbox"/> EN 61000-3-2*	Disturbances in supply systems cause by household appliances and similar electrical equipment "Harmonics"
		<input checked="" type="checkbox"/> EN 60555-2	
<input type="checkbox"/> EN 55013	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	<input type="checkbox"/> EN 61000-3-3*	Disturbances in supply systems cause by household appliances and similar electrical equipment "Voltage fluctuations"
		<input checked="" type="checkbox"/> EN 60555-3	
<input type="checkbox"/> EN 55014	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances, portable tools and similar electrical apparatus	<input checked="" type="checkbox"/> EN 50081-1	Generic emission standard Part 1: Residual commercial and light industry
		<input checked="" type="checkbox"/> EN 50082-1	Generic immunity standard Part 1: Residual commercial and light industry
<input type="checkbox"/> EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	<input type="checkbox"/> EN 55081-2	Generic emission standard Part 2: Industrial environment
<input type="checkbox"/> EN 55020	Immunity from radio interference of broadcast receivers and associated equipment	<input type="checkbox"/> EN 55082-2	Generic emission standard Part 2: Industrial environment
<input checked="" type="checkbox"/> EN 55022	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	<input type="checkbox"/> EN 55104	Immunity requirements for household appliances tools and similar apparatus
<input type="checkbox"/> DIN VDE 0855	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals	<input type="checkbox"/> EN 50091-2	EMC requirements for uninterruptible power systems (UPS)
<input type="checkbox"/> part 10			
<input type="checkbox"/> part 12			

☒ CE marking



(EC conformity marking)

**The manufacturer also declares the conformity of above mentioned product
with the actual required safety standards in accordance with LVD 73/23 EEC**

<input type="checkbox"/> EN 60065	Safety requirements for mains operated electronic and related apparatus for household and similar general use	<input type="checkbox"/> EN 60950	Safety for information technology equipment including electrical business equipment
<input type="checkbox"/> EN 60335	Safety of household and similar electrical appliances	<input type="checkbox"/> EN 50091-1	General and Safety requirements for uninterruptible power systems (UPS)

Manufacturer/Importer

(Stamp)

Date : Mar. 12, 2004

Signature:

Name:

Timmy Huang

Timmy Huang

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: Motherboard

Model Number: GA-8KNXP Ultra-64

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109(a),
Class B Digital Device

Supplementary Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any interference received, including that may cause undesired operation.

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Mar. 12, 2004

GA-8KNXP Ultra-64
P4 Titan Series Motherboard

USER'S MANUAL

Pentium® 4 Processor Motherboard

Rev. 1001

12ME-8KNXPU64-1001

Table of Content

Warning	4
Chapter 1 Introduction	5
Features Summary	5
GA-8KNXP Ultra-64 Motherboard Layout	8
Block Diagram	9
Chapter 2 Hardware Installation Process	11
Step 1: Install the Central Processing Unit (CPU)	12
Step 1-1: CPU Installation	12
Step 1-2: CPU Cooling Fan Installation	13
Step 2: Install Memory Modules	14
Step 3: Install expansion cards	17
Step 4: Install I/O Peripherals Cables	18
Step 4-1: I/O Back Panel Introduction	18
Step 4-2: Connectors Introduction	20
Chapter 3 BIOS Setup	37
The Main Menu (For example: BIOS Ver. : D4)	38
Standard CMOS Features	40
Advanced BIOS Features	43
Integrated Peripherals	44
Power Management Setup	49
PnP/PCI Configurations	51
PC Health Status	52
Frequency/Voltage Control	54
Load Fail-Safe Defaults	56

Load Optimized Defaults	57
Set Supervisor/User Password	57
Save & Exit Setup	58
Exit Without Saving	58
 Chapter 4 Technical Reference	 59
@ BIOS™ Introduction	59
Easy Tune™ 4 Introduction	60
Dual Power System-Gold (DPS-Gold) Introduction	61
Flash BIOS Method Introduction	62
2- / 4- / 6- / 8- Channel Audio Function Introduction	83
Jack-Sensing and UAJ Introduction	89
Xpress Recovery Introduction	91
 Chapter 5 Appendix	 95

Warning



Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

Installing the motherboard to the chassis...

If the motherboard has mounting holes, but they don't line up with the holes on the base and there are no slots to attach the spacers, do not become alarmed you can still attach the spacers to the mounting holes. Just cut the bottom portion of the spacers (the spacer may be a little hard to cut off, so be careful of your hands). In this way you can still attach the motherboard to the base without worrying about short circuits. Sometimes you may need to use the plastic springs to isolate the screw from the motherboard PCB surface, because the circuit wire may be near by the hole. Be careful, don't let the screw contact any printed circuit write or parts on the PCB that are near the fixing hole, otherwise it may damage the board or cause board malfunctioning.

Chapter 1 Introduction

Features Summary

CPU	<ul style="list-style-type: none"> • Socket 478 for Intel® Pentium® 4 (Northwood, Prescott) with HT Technology • Intel® Pentium® 4 800/533/400MHz FSB • 2nd cache depends on CPU
Chipset	<ul style="list-style-type: none"> • North Bridge: Intel® 875P • South Bridge: Intel® HR
Memory	<ul style="list-style-type: none"> • 6 184-pin DDR DIMM sockets • Supports Dual Channel DDR400/DDR333/DDR266 DIMM • Supports 128MB/256MB/512MB/1GB unbuffered DRAM • Supports up to 4GB DRAM (Max) ^(Note 1) • Supports only 2.5V DDR DIMM • Supports 64bit ECC/non-ECC type DRAM integrity mode
Slots	<ul style="list-style-type: none"> • 1 AGP slot supports 8X/4X(1.5V) mode • 3 PCI slots support • 2 64-Bit PCI-X slots
On-Board IDE	<ul style="list-style-type: none"> • 2 IDE bus master (UDMA33/ATA66/ATA100) IDE ports for up to 4 ATAPI devices • Can connect up to 4 IDE devices
On-Board Floppy	<ul style="list-style-type: none"> • 1 Floppy port supports 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88M bytes
On-Board Peripherals	<ul style="list-style-type: none"> • 1 Parallel port supports Normal/EPP/ECP mode • 2 Serial ports (COMA & COMB) • 8 USB 2.0/1.1 ports (4 x Rear, 4 x Front by cable) • 1 IrDA connector for IR/CIR • 1 Front Audio connector

to be continued.....



Due to chipset (Intel 875P) architecture limitation, a FSB 800 Pentium 4 processor will support DDR400/DDR333/DDR266 memory module. A FSB 533 Pentium 4 processor will support DDR 333 and DDR 266 memory module. A FSB 400 Pentium 4 processor will only support DDR 266 memory module.

(Note 1) Due to standard PC architecture, a certain amount of memory is reserved for system usage and therefore the actual memory size is less than the stated amount. For example, 4 GB of memory size will instead be shown as 3.x GB memory during system startup.

On-Board LAN	<ul style="list-style-type: none"> • Built in Intel® 82547 (KENAI II CSA) Chipset Data transfer rate 10/100/1000 supported • 1 RJ45 port
On-Board Sound	<ul style="list-style-type: none"> • Realtek ALC850 UAJ CODEC • Support Jack-Sensing • Line Out / 2 front speaker • Line In / 2 rear speaker(by s/w switch) • Mic In / center& subwoofer(by s/w switch) • SPDIF Out/SPDIF In • CD_In • Surround Back speaker (by optional Surround-Kit)
Serial ATA	<ul style="list-style-type: none"> • Controlled by HR <ul style="list-style-type: none"> - 2 Serial ATA connectors (SATA0_SB/SATA1_SB) in 150 MB/s operation mode • Controlled by SiI3114 <ul style="list-style-type: none"> - 4 Serial ATA connectors (SATA0_SII/SATA1_SII/SATA2_SII/SATA3_SII) in 150 MB/s operation mode
On-Board SCSI	<ul style="list-style-type: none"> • 2 SCSI connectors in 320 MB/s per channel • Controlled by Adaptec AIC-7902W
Hardware Monitor	<ul style="list-style-type: none"> • CPU/System/Power fan revolution detect • CPU temperature detect • CPU warning temperature • System voltage detect • CPU/System/Power fan fail warning • CPU smart fan control
On-Board SATA RAID	<ul style="list-style-type: none"> • Built in HR <ul style="list-style-type: none"> - Supports Disk striping (RAID0) or mirroring (RAID 1) - Supports UDMA up to 150 MB/sec - Up to 2 SATA devices - Only supports Windows 2000/XP • Built in Silicon Image SiI3114 <ul style="list-style-type: none"> - Supports Disk striping (RAID0) or DISK Mirroring (RAID1) or striping+mirroring (RAID10) - Supports UDMA up to 150 MB/sec - Up to 4 SATA Device - supports Win 2000/XP/NT/98/Me

to be continued.....

On-Board SCSI RAID	<ul style="list-style-type: none"> • Onboard Adaptec AIC-7902W chip • Supports Disk striping (RAID0) or DISK Mirroring (RAID1) • Supports Ultra 320 (320 MB/sec per channel) • Supports 4 hard disk drives and 2 arrays per channel
I/O Control	<ul style="list-style-type: none"> • ITE8712
PS/2 Connector	<ul style="list-style-type: none"> • PS/2 Keyboard interface and PS/2 Mouse interface
BIOS	<ul style="list-style-type: none"> • Licensed AWARD BIOS • Supports Dual BIOS • Supports Q-Flash
Additional Features	<ul style="list-style-type: none"> • Supports CPU Dual Power System • PS/2 Keyboard power on by password • PS/2 Mouse power on • External Modem wake up • STR(Suspend-To-RAM) • Wake on LAN (WOL) • AC Recovery • Poly fuse for key board over-current protection • USB KB/Mouse wake up from S3 • Supports @BIOS • Supports Easy Tune 4
Overclocking	<ul style="list-style-type: none"> • Over Clock (CPU/DDR/AGP) by BIOS • Over Voltage (CPU/DDR/AGP) by BIOS
Form Factor	<ul style="list-style-type: none"> • 30.5cm x 24.4cm ATX size form factor, 6 layers PCB



*** HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:


- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology




Please set the CPU host frequency in accordance with your processor's specifications.

We don't recommend you to set the system bus frequency over the CPU's specification because these specific bus frequencies are not the standard specifications for CPU, chipset and most of the peripherals. Whether your system can run under these specific bus frequencies properly will depend on your hardware configurations, including CPU, Chipsets, Memory, Cards...etc.

GA-8KNXP Ultra-64 Motherboard Layout

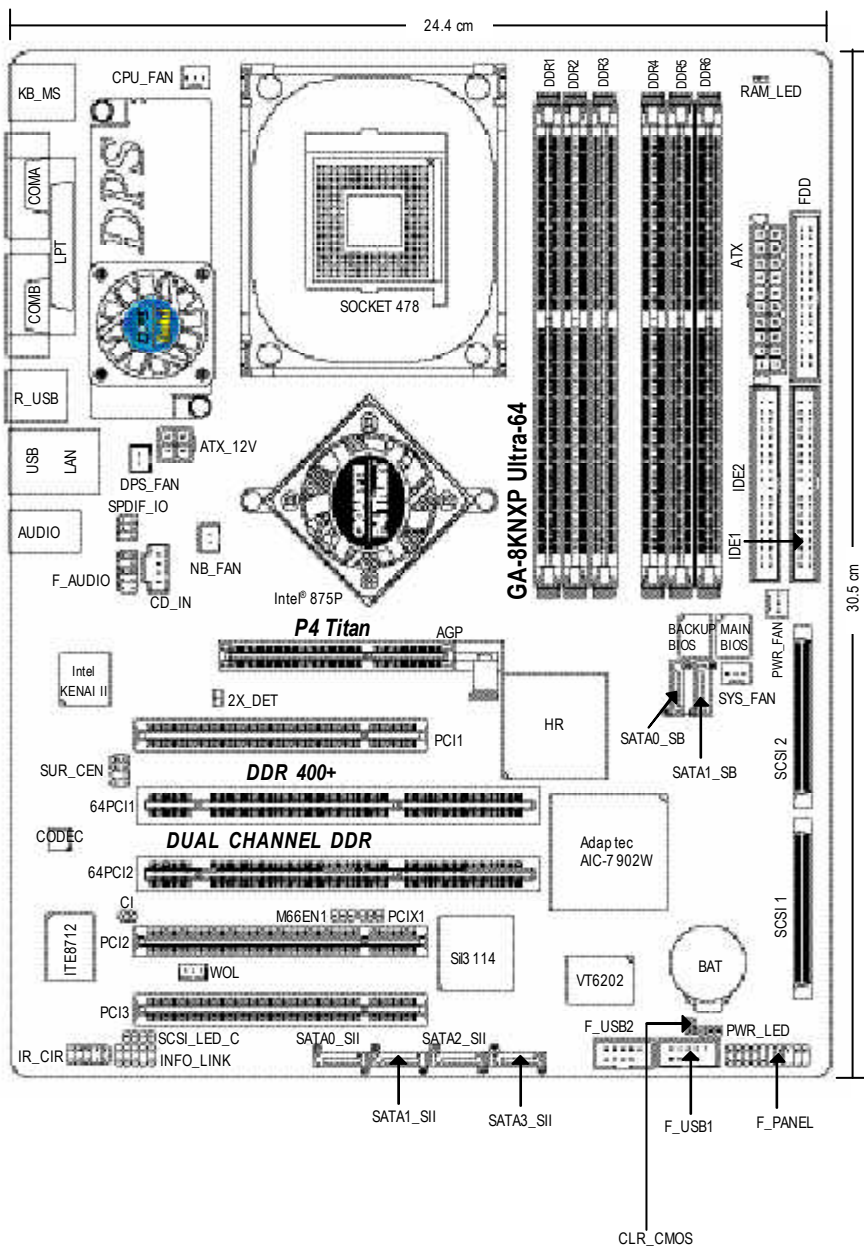

Block Diagram

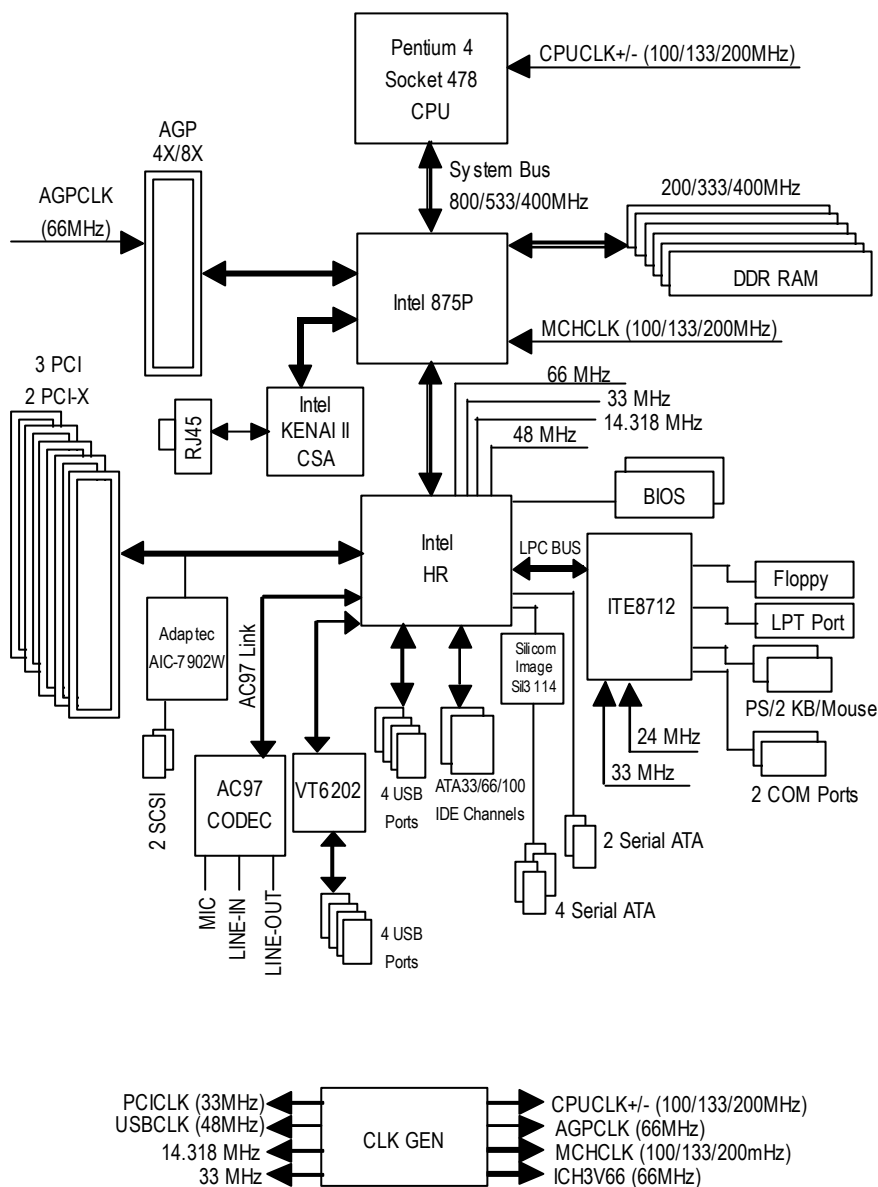

Chapter 2 Hardware Installation Process


To set up your computer, you must complete the following steps:

Step 1- Install the Central Processing Unit (CPU)

Step 2- Install memory modules

Step 3- Install expansion cards

Step 4- Install I/O Peripherals Cables

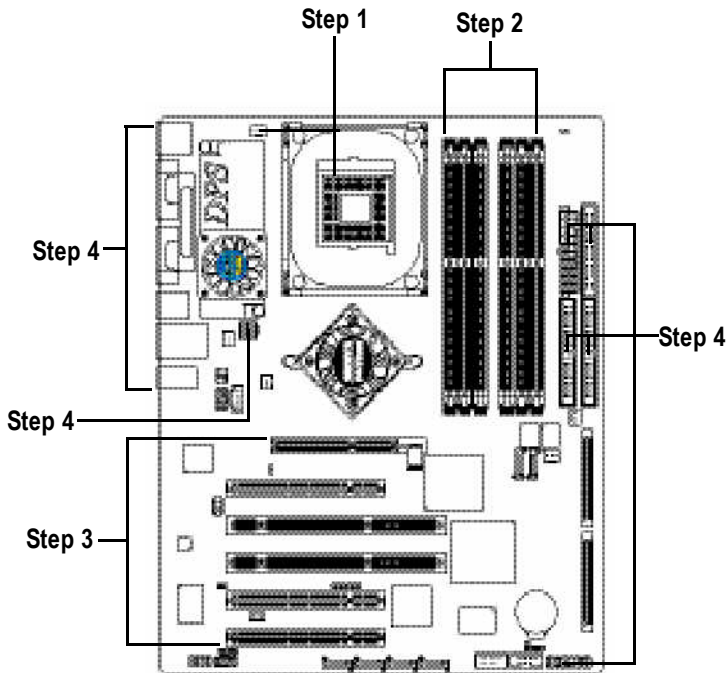

Congratulations! You have accomplished the hardware installation!

Turn on the power supply or connect the power cable to the power outlet. Continue with the BIOS/software installation.


Step 1: Install the Central Processing Unit (CPU)




Before installing the processor, adhere to the following warning:

1. Please make sure the CPU type is supported by the motherboard.
2. If you do not match the CPU socket Pin 1 and CPU cut edge well, it will cause improper installation. Please change the insert orientation.

Step 1-1: CPU Installation

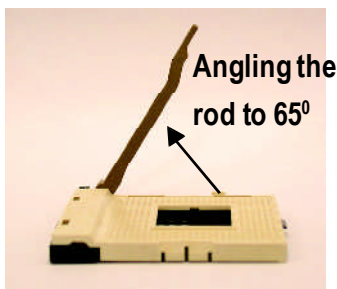


1. Angling the rod to 65-degree maybe feel a kind of tight, and then continue pull the rod to 90-degree when anoise "cough" made.

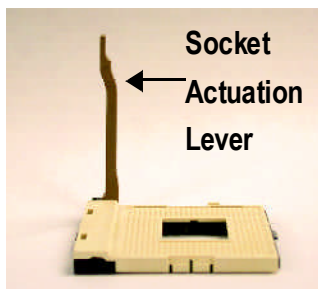

2. Pull the rod to the 90-degree directly.



3. CPU Top View

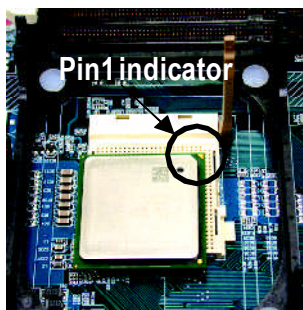

4. Locate Pin 1 in the socket and look for a (golden) cut edge on the CPU upper corner. Then insert the CPU into the socket.


Step 1-2: CPU Cooling Fan Installation




Before installing the CPU cooling fan, adhere to the following warning:

1. Please use Intel approved cooling fan.
2. We recommend you to apply the thermal tape to provide better heat conduction between your CPU and cooling fan.
(The CPU cooling fan might stick to the CPU due to the hardening of the thermal paste. During this condition if you try to remove the cooling fan, you might pull the processor out of the CPU socket along with the cooling fan, and might damage the processor. To avoid this from happening, we suggest you to either use thermal tape instead of thermal paste, or remove the cooling fan with extreme caution.)
3. Make sure the CPU fan power cable is plugged in to the CPU fan connector, this completes the installation.

Please refer to CPU cooling fan user's manual for more detail installation procedure.

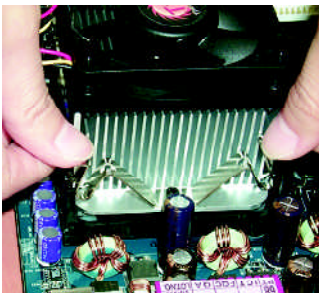

1. Fasten the cooling fan supporting-base onto the CPU socket on the motherboard.

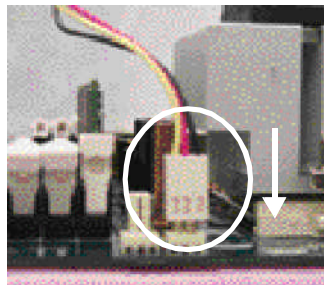

2. Make sure the CPU fan is plugged to the CPU fan connector, than install complete.


Step 2: Install Memory Modules



Before installing the memory modules, adhere to the following warning:

1. When RAM_LED is ON, do not install / remove DIMM from socket.
2. Please note that the DIMM module can only fit in one direction due to the one notch. Wrong orientation will cause improper installation. Please change the insert orientation.

The motherboard has 6 dual inline memory module (DIMM) sockets. The BIOS will automatically detects memory type and size. To install the memory module, just push it vertically into the DIMM socket. The DIMM module can only fit in one direction due to the notch. Memory size can vary between sockets.

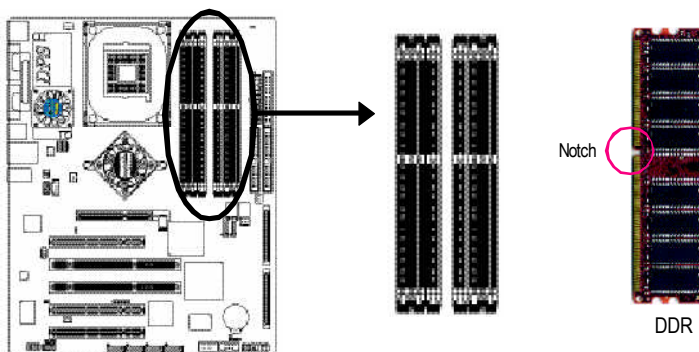

1. The DIMM socket has a notch, so the DIMM memory module can only fit in one direction.



2. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.



3. Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.
Reverse the installation steps when you wish to remove the DIMM module.

DDR Introduction

Established on the existing SDRAM infrastructure, DDR (Double Data Rate) memory is a high performance and cost-effective solution that allows easy adoption for memory vendors, OEMs, and system integrators.

DDR memory is a great evolutionary solution for the PC industry that builds on the existing SDRAM architecture, yet make the awesome advances in solving the system performance bottleneck by doubling the memory bandwidth. Nowadays, with the highest bandwidth of 3.2GB/s of DDR400 memory and complete line of DDR400/333/266/200 memory solutions, DDR memory is the best choice for building high performance and low latency DRAM subsystem that are suitable for servers, workstations, and full range of desktop PCs.

Dual Channel DDR:

GA-8KNXP Ultra-64 supports Dual Channel Technology.

When Dual Channel Technology is activated, the bandwidth of memory bus will be double the original one, with the fastest speed at 6.4GB/s DDR400.

GA-8KNXP Ultra-64 includes six DIMM slots, and each Channel has 3 DIMMs as following:

- ▶▶ Channel A : DIMM 1, 2, 3
- ▶▶ Channel B : DIMM 4, 5, 6

Below are the explanations:



1. One, three, or five DDR memory modules are installed: The Dual Channel Technology will not operate when one, three, or five DDR memory modules are installed and they will only work as Single Channel.
2. Two DDR memory modules are installed (the same memory size and type): The Dual Channel Technology will operate when two DDR memory modules are inserted individually into Channel A and Channel B (DIMM 1 pairs up with DIMM 4, DIMM 2, 5 and DIMM 3, 6). However, if the two DDR memory modules are inserted into the same Channel (DIMM 1,2,3 or DIMM 4,5,6) then Dual Channel Technology will not operate.
3. Three or five DDR memory modules are installed: Please note that The Dual Channel Technology will not operate when three or five DDR memory modules are installed; part of them will not be detected.
4. If four DDR memory modules are installed (two pairs of DDR memory modules with the same memory size and type): The Dual Channel Technology will operate when a pair of DDR memory modules are inserted into DIMM 1, 4 and another pair into DIMM 2, 5.

5. If six DDR memory modules are installed: To activate the Dual Channel Technology and to make the size of each DDR memory module detected, please use six DDR memory modules with identical size and type and insert them into the six DIMMs following the sequence below:

DIMM 1: Double or Single Side

DIMM 2: Single Side

DIMM 3: Single Side

DIMM 4: Double or Single Side (if DIMM1 is inserted a double-side module, then DIMM4 must also be inserted a double-side one.)

DIMM 5: Single Side

DIMM 6: Single Side

The following tables include all memory-installed combination types:

(Please note that those types not in the tables will not boot up.)

● Figure 1: Dual Channel Technology (DS: Double Side, SS: Single Side)


	DIMM 1	DIMM 2	DIMM 3	DIMM 4	DIMM 5	DIMM 6
2memory modules	DS/SS	X	X	DS/SS	X	X
	X	DS/SS	X	X	DS/SS	X
	X	X	DS/SS	X	X	DS/SS
4memory modules	DS/SS	DS/SS	X	DS/SS	DS/SS	X
6memory modules	DS/SS	SS	SS	DS/SS	SS	SS

● Figure 2: Don't operate Dual Channel Technology (DS: Double Side, SS: Single Side)

	DIMM 1	DIMM 3	DIMM 5
1 memory module	DS/SS	X	X
	X	DS/SS	X
	X	X	DS/SS
2memory modules	DS/SS	DS/SS	X
3memory modules	DS/SS	SS	SS

Step 3: Install expansion cards

1. Read the related expansion card's instruction document before install the expansion card into the computer.
2. Remove your computer's chassis cover, screws and slot bracket from the computer.
3. Press the expansion card firmly into expansion slot in motherboard.
4. Be sure the metal contacts on the card are indeed seated in the slot.
5. Replace the screw to secure the slot bracket of the expansion card.
6. Replace your computer's chassis cover.
7. Power on the computer, if necessary, setup BIOS utility of expansion card from BIOS.
8. Install related driver from the operating system.

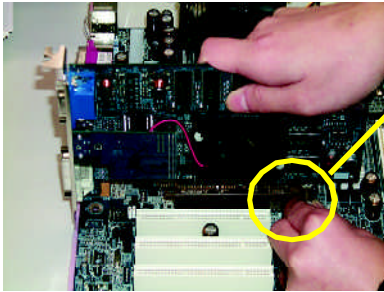

AGP Card




Please carefully pull out the small white- drawable bar at the end of the AGP slot when you try to install/ Uninstall the AGP card. Please align the AGP card to the onboard AGP slot and press firmly down on the slot .Make sure your AGP card is locked by the small white- drawable bar.



When an AGP 2x (3.3V) card is installed the 2X_DET will light up, indicating a non-supported graphics card is inserted. Informing users that system might not boot up normally due to AGP 2x (3.3V) is not supported by the chipset.

Step 4: Install I/O Peripheral Cables

Step 4-1: I/O Back Panel Introduction

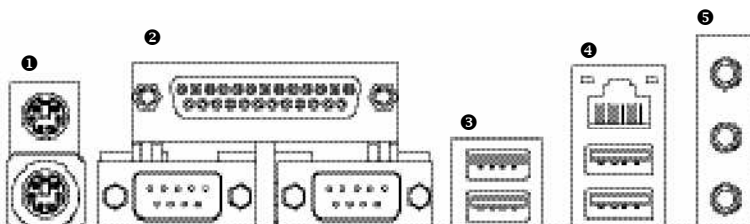

❶ PS/2 Keyboard and PS/2 Mouse Connector




PS/2 Mouse Connector
(6 pin Female)

PS/2 Keyboard Connector
(6 pin Female)

➤ This connector supports standard PS/2 keyboard and PS/2 mouse.

❷ Parallel Port, Serial Port and VGA Port (LPT/COMA/COMB)

Parallel Port
(25 pin Female)

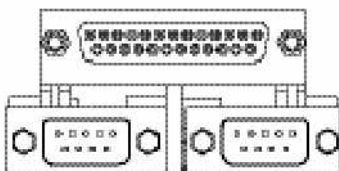


COMA

COMB

Serial Port (9 pin Male)

➤ This connector supports 2 standard COM ports and 1 Parallel port. Device like printer can be connected to Parallel port; mouse and modem etc can be connected to Serial ports.

④ USB / LAN Connector

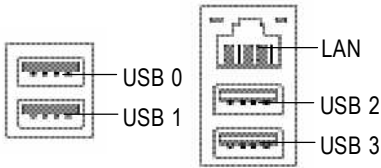


➤ LAN is fast Ethernet with 10/100/1000 Mbps speed.

➤ Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker, etc. Have a standard USB interface. Also make sure your OS supports USB controller.

If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

⑤ Audio Connectors

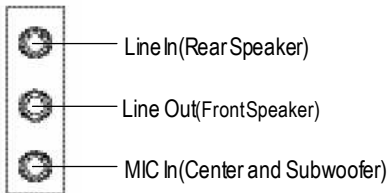

➤ After install onboard audio driver, you may connect speaker to Line Out jack, microphone to MIC In jack. Devices like CD-ROM, walkman etc. can be connected to Line-In jack.

Please note:


You are able to use 2-/4-/6-/8-channel audio feature by S/W selection.

If you want to enable 8-channel function you can refer to page 30, and contact your nearest dealer for optional SUR_CEN cable.



If you want the detail information for 2-/4-/6-/8-channel audio setup installation, please refer to page 83.



Step 4-2: Connectors Introduction

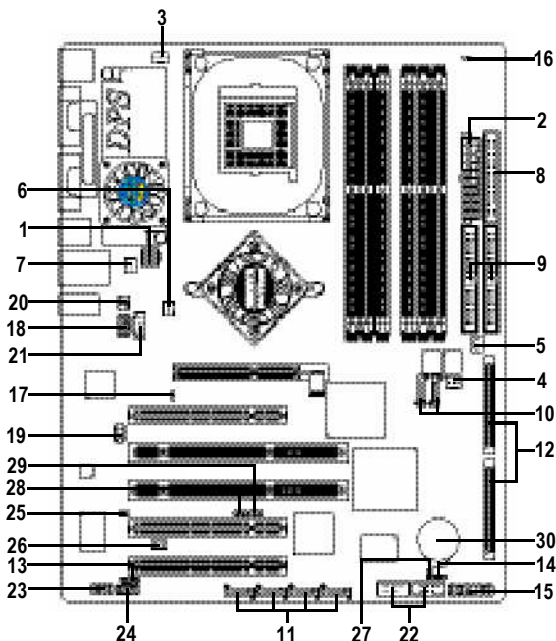

1) ATX_12V	16) RAM_LED
2) ATX	17) 2X_DET
3) CPU_FAN	18) F_AUDIO
4) SYS_FAN	19) SUR_CEN
5) PWR_FAN	20) SPDIF_IO
6) NB_FAN	21) CD_IN
7) DPS_FAN	22) F_USB1 / F_USB2
8) FDD	23) IR_CIR
9) IDE1 / IDE2	24) INFO_LINK
10) SATA0_SB / SATA1_SB	25) C_I
11) SATA0_SII/SATA1_SII/SATA2_SII/SATA3_SII	26) WOL
12) SCSI 1 / SCSI 2	27) CLR_CMOS
13) SCSI_LED_C	28) M66EN1
14) PWR_LED	29) PCIX1
15) F_PANEL	30) BAT

1) ATX_12V (+12V Power Connector)



This connector (ATX_12V) supplies the CPU operation voltage (Vcore).
If this "ATX_12V connector" is not connected, system cannot boot

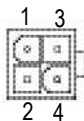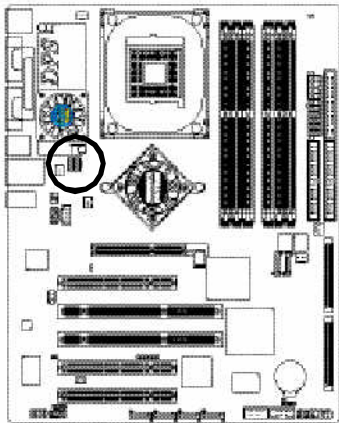

Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

2) ATX(ATX Power)


AC power cord should only be connected to your power supply unit after ATX power cable and other related devices are firmly connected to the mainboard.

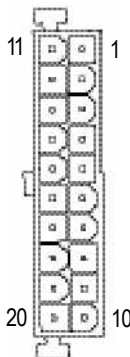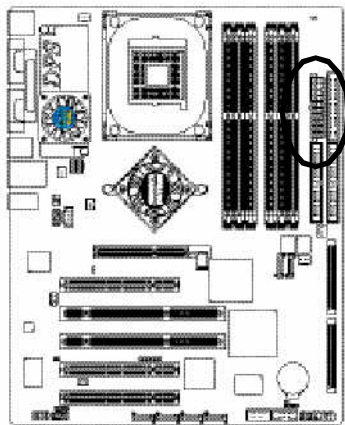

Pin No.	Definition
1	3.3V
2	3.3V
3	GND
4	VCC
5	GND
6	VCC
7	GND
8	Power Good
9	5V SB (stand by +5V)
10	+12V
11	3.3V
12	-12V
13	GND
14	PS_ON (soft on/off)
15	GND
16	GND
17	GND
18	-5V
19	VCC
20	VCC

3) CPU_FAN (CPU Fan Connector)


Please note, a proper installation of the CPU cooler is essential to prevent the CPU from running under abnormal condition or damaged by overheating. The CPU fan connector supports Max. current up to 600 m.A.

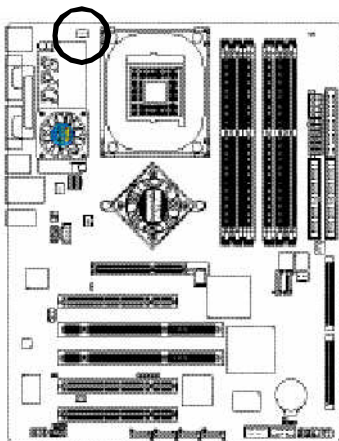

Pin No.	Definition
1	GND
2	+12V
3	Sense

4) SYS_FAN (System Fan Connector)


This connector allows you to link with the cooling fan on the system case to lower the system temperature.

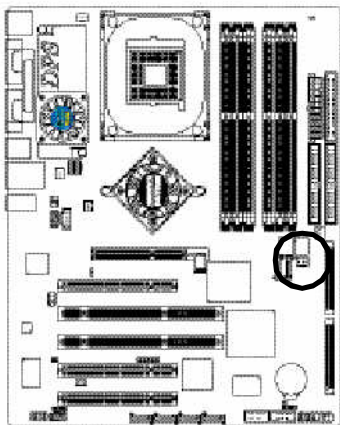

Pin No.	Definition
1	GND
2	+12V
3	Sense


5) PWR_FAN (Power Fan Connector)

This connector allows you to link with the cooling fan on the system case to lower the system temperature.

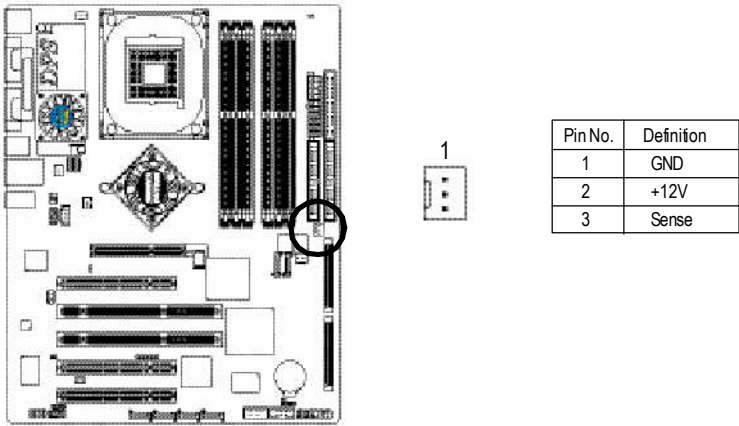


6) NB_FAN (Chip Fan Connector)

If you installed wrong direction, the chip fan will not work. Sometimes will damage the chip fan.
(Usually black cable is GND)

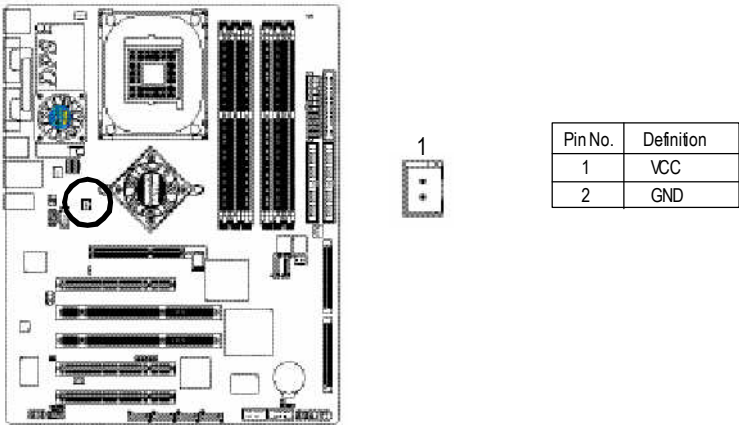

7) DPS_FAN (DPS Fan Connector)

If you installed wrong direction, the DPS fan will not work. Sometimes will damage the DPS fan.
(Usually black cable is GND)


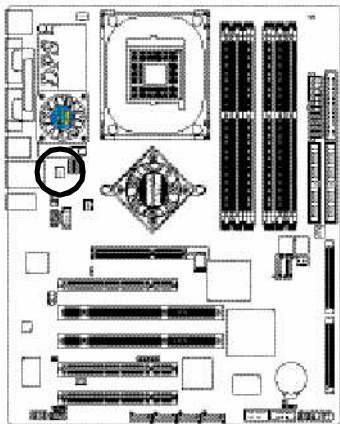


Pin.No.	Definition
1	VCC
2	GND

8) FDD (Floppy Connector)


Please connect the floppy drive ribbon cables to FDD. It supports 360K, 1.2M, 720K, 1.44M and 2.88M bytes floppy disk types.

The red stripe of the ribbon cable must be the same side with the Pin1.

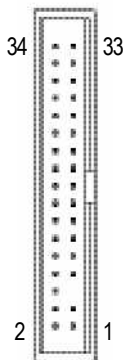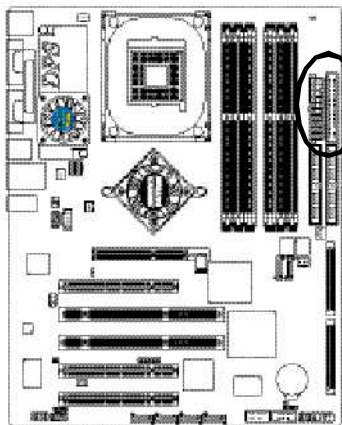


9) IDE1 / IDE2 (IDE1 / IDE2 Connector)

Important Notice:
Please connect first hard disk to IDE1 and connect CD-ROM to IDE2.
The red stripe of the ribbon cable must be the same side with the Pin1.

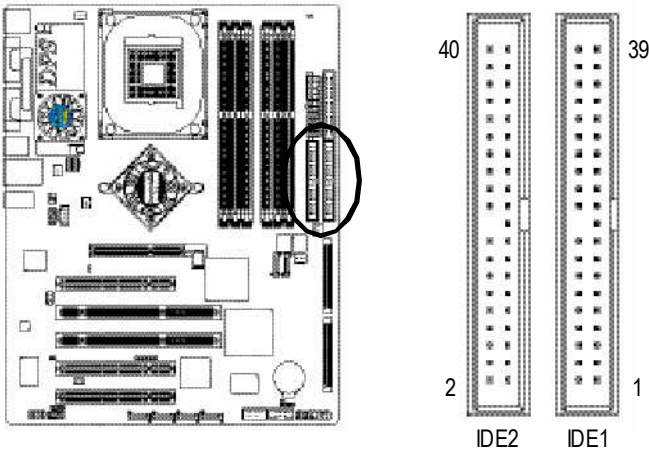



10) SATA0_SB / SATA1_SB (Serial ATA Connector)

You can connect the Serial ATA device to this connector, it provides you high speed transfer rates (150MB/sec). If you wish to use RAID function, please note that these two Serial ATA connectors just support RAID 0 or RAID 1 and only compatible with Win 2000/XP.

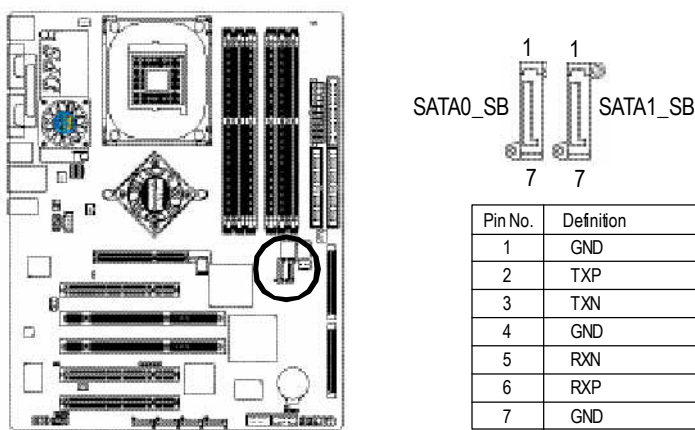

11) SATA0_SII / SATA1_SII / SATA2_SII / SATA3_SII (Serial ATA Connector)


You can connect the Serial ATA device to this connector, it provides you high speed transfer rates (150MB/sec). If you wish to use RAID function, please note that these two Serial ATA connectors just support RAID 0 or RAID 1 and RAID 10.

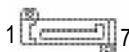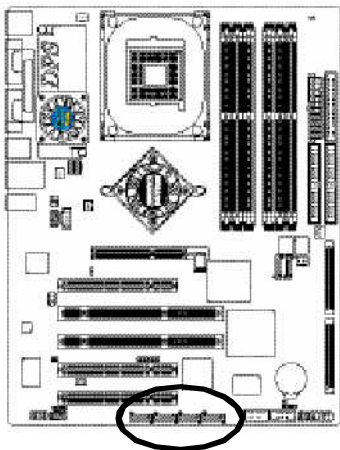

Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

12) SCSI 1 / SCSI 2 (RAID / SCSI Connector)

You can connect all major SCSI peripherals to this connector. Ultra320 SCSI technology is compatible with Ultra160, Ultra2, Ultra Wide and all other previous-generation SCSI devices. The data transfer rate is up to 320 MB/sec per channel. Only compatible with Win 2000/XP/NT.

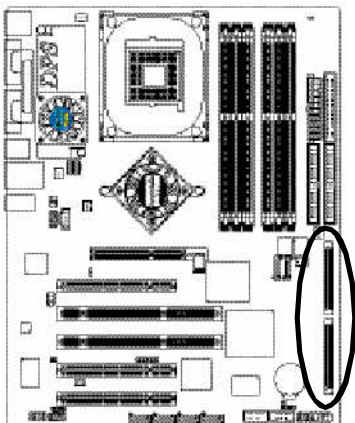



SCSI 2

SCSI 1

13) SCSI_LED_C (SCSI Indicative LED Connector)

You can connect the SCSI indicative LED of your chassis to this connector, which can indicate whether the SCSI device is active or not

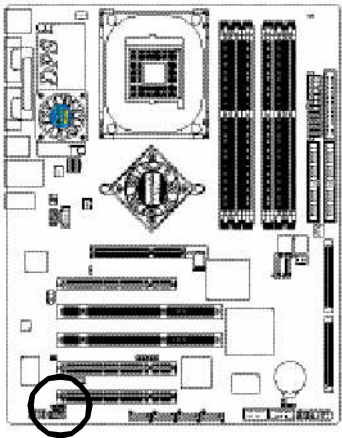
A detailed diagram of a motherboard layout. A small 4-pin connector is circled in the bottom-left area of the board, near the front panel headers.


1 

Pin No.	Definition
1	LED+
2	LED-
3	LED-
4	LED+

14) PWR_LED

PWR_LED is connect with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode. If you use dual color LED, power LED will turn to another color.


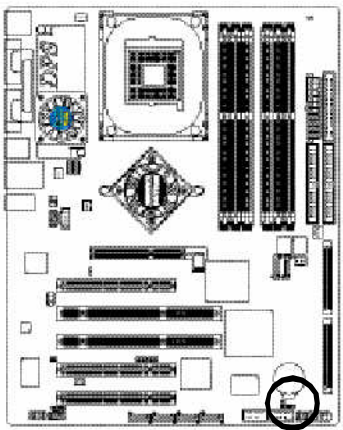
A detailed diagram of a motherboard layout. A small 3-pin connector is circled in the bottom-right area of the board, near the front panel headers.

1 

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

15) F_PANEL (2 x 10 pins Connector)


Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignment below.

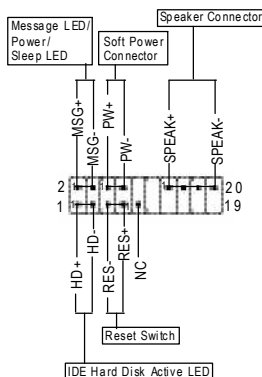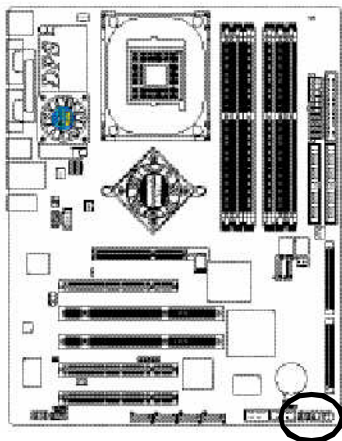

HD (IDE Hard Disk Active LED) (Blue)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
SPEAK (Speaker Connector) (Amber)	Pin 1: VCC(+) Pin 2- Pin 3: NC Pin 4: Data(-)
RES (Reset Switch) (Green)	Open: Normal Operation Close: Reset Hardware System
PW (Soft Power Connector) (Red)	Open: Normal Operation Close: Power On/Off
MSG (Message LED/ Power/ Sleep LED) (Yellow)	Pin 1: LED anode(+) Pin 2: LED cathode(-)
NC (Purple)	NC

16) RAM_LED


Do not remove memory modules while RAM_LED is on. It might cause short or other unexpected damages due to the stand by voltage. Remove memory modules only when AC power cord is disconnected.

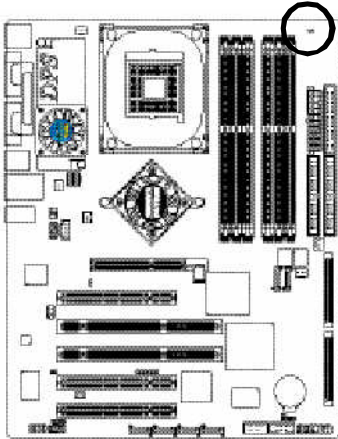

-  +

17) 2X_DET

When an AGP 2X (3.3V) card is installed the 2X_DET will light up, indicating a non-supported graphics card is inserted. Informing users that system might not boot up normally due to AGP 2X (3.3V) is not supported by the chipset.

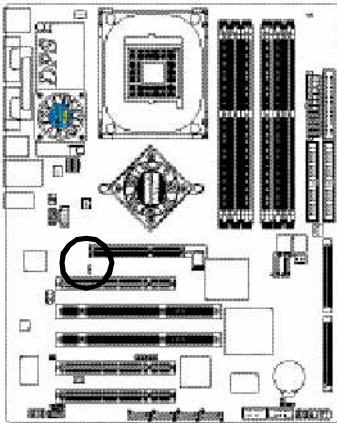


+  -

18) F_AUDIO (Front Audio Connector)

If you want to use Front Audio connector, you must remove 5-6, 9-10 Jumper.


In order to utilize the front audio header, your chassis must have front audio connector. Also please make sure the pin assignment on the cable is the same as the pin assignment on the MB header. To find out if the chassis you are buying support front audio connector, please contact your dealer. Please note, you can have the alternative of using front audio connector or of using rear audio connector to play sound.

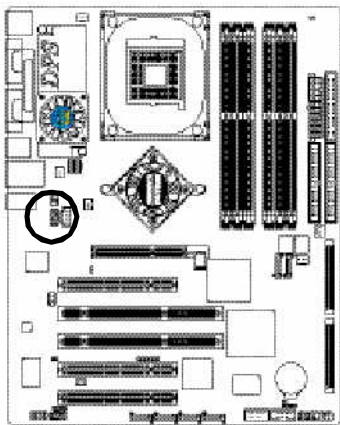

Pin No.	Definition
1	MIC
2	GND
3	REF
4	Power
5	FrontAudio (R)
6	RearAudio (R)
7	Reserved
8	No Pin
9	FrontAudio (L)
10	RearAudio (L)

19) SUR_CEN (Surround Center Connector)


Please contact your nearest dealer for optional SUR_CEN cable.

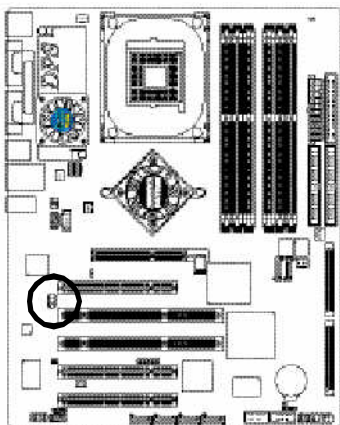

Pin No.	Definition
1	SUROUTL
2	SUROUTR
3	GND
4	No Pin
5	CENTER_OUT
6	BASS_OUT
7	AUX_L
8	AUX_R

20) SPDIF_IO (SPDIF In/Out Connector)


The SPDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Be careful with the polarity of the SPDIF_IO connector. Check the pin assignment carefully while you connect the SPDIF cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional SPDIF cable, please contact your local dealer.

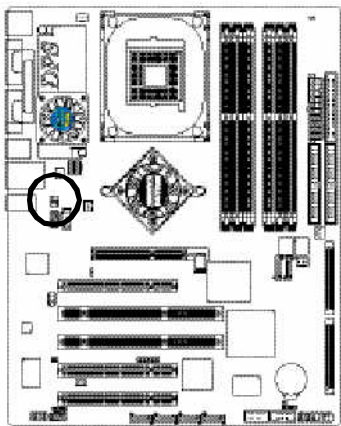

Pin No.	Definition
1	VCC
2	No Pin
3	SPDIF
4	SPDIFI
5	GND
6	GND

21) CD_IN (CD In Connector)



Connect CD-ROM or DVD-ROM audio out to the connector.

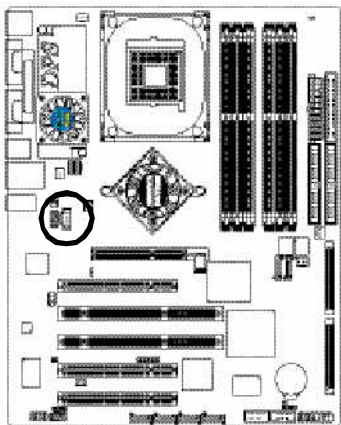

Pin No.	Definition
1	CD-L
2	GND
3	GND
4	CD-R

22) F_USB1 / F_USB2 (Front USB Connector, Yellow)


Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

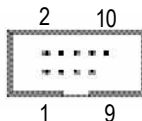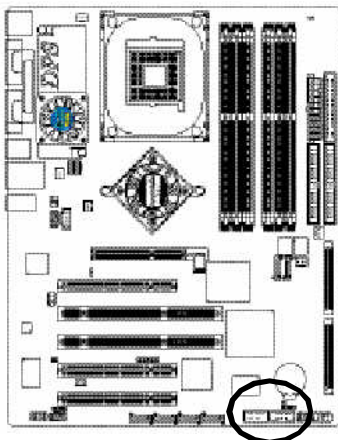

Pin No.	Definition
1	Power
2	Power
3	USB Dx-
4	USB Dy-
5	USB Dx+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

23) IR_CIR



Make sure the pin 1 on the IR device is aligning with pin one the connector. To enable the IR/CIR function on the board, you are required to purchase an option IR/CIR module. To use IR function only, please connect IR module to Pin1 to Pin5. Be careful with the polarity of the IR/CIR connector. Check the pin assignment carefully while you connect the IR/CIR cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional IR/CIR cable, please contact your local dealer.

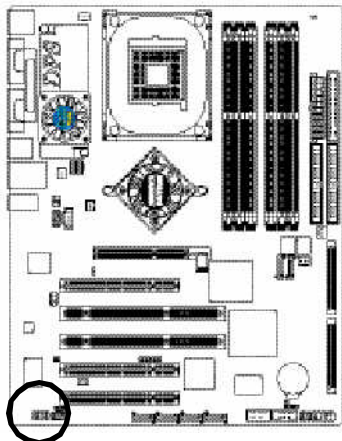

Pin No.	Definition
1	VCC
2	NC
3	IRRX
4	GND
5	IRTX
6	NC
7	CIRRX
8	+5VSB
9	CIRTX
10	NC

24) INFO_LINK


This connector allows you to connect some external devices to provide you extra function. Check the pin assignment while you connect the external device cable. Please contact your nearest dealer for optional external device cable.

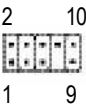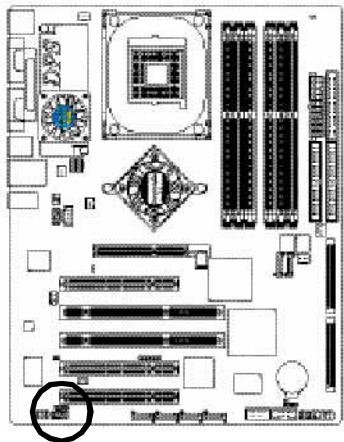

Pin No.	Definition
1	SMBCLK
2	VCC
3	SMBDATA
4	GPIO
5	GND
6	GND
7	No Pin
8	NC
9	+12V
10	+12V

25) CI (CASE OPEN)


This 2-pin connector allows your system to enable or disable the "Case Open" item in BIOS, if the system case begin remove.

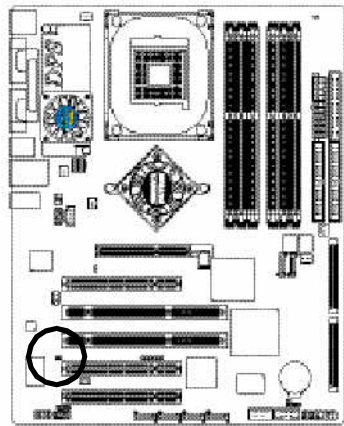

Pin No.	Definition
1	Signal
2	GND

26) WOL (Wake On LAN)


This connector allows the remote servers to manage this system via your network adapter which supports WOL. Be careful with the polarity of the WOL connector. Check the pin assignment carefully while you connect the WOL cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional WOL cable, please contact your local dealer.

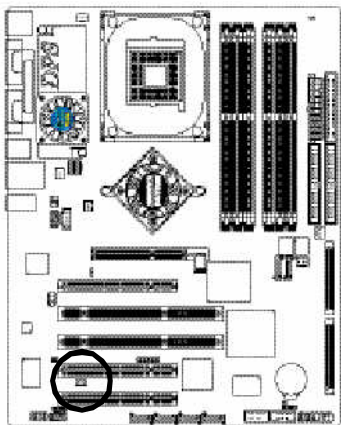


Pin No.	Definition
1	+5V SB
2	GND
3	Signal

27) CLR_CMOS (Clear CMOS)


You may clear the CMOS data to its default values by this jumper. To clear CMOS, temporarily short 1-2 pin. Default doesn't include the "Shunter" to prevent from improper use this jumper.

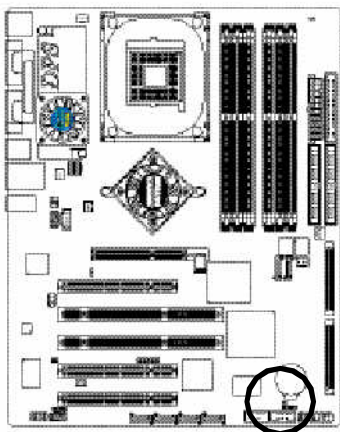

1  Open: Normal

1  Short: Clear CMOS

28/29) M66EN1/PCIX1

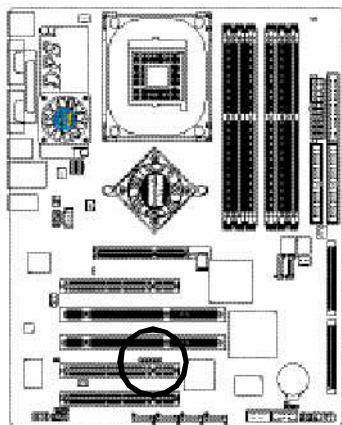

M66EN1 1 1 PCIX1

M66EN1	PCIX1	Function
1-2close	1-2 close	PCI+XMode(Default)



M66EN1 1 1 PCIX1

M66EN1	PCIX1	Function
1-2close	2-3 close	PCI64Mode

M66EN1 1 1 PCIX1

M66EN1	PCIX1	Function
2-3 close	2-3 close	PCI32Mode

30) BATTERY

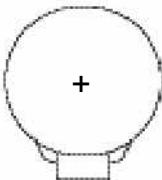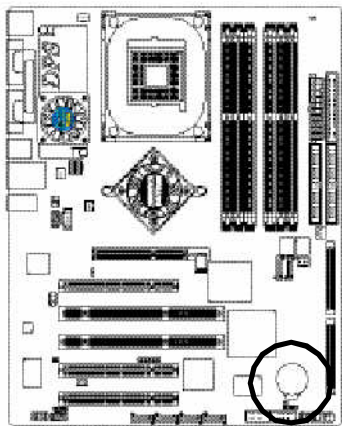

CAUTION

- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.

If you want to erase CMOS...

1. Turn OFF the computer and unplug the power cord.
2. Remove the battery, wait for 30 second.
3. Re-install the battery.
4. Plug the power cord and turn ON the computer.

Chapter 3 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Powering ON the computer and pressing immediately will allow you to enter Setup. If you require more advanced BIOS settings, please go to "Advanced BIOS" setting menu. To enter Advanced BIOS setting menu, press "Ctrl+F1" key on the BIOS screen.

CONTROL KEYS

<↑>	Move to previous item
<↓>	Move to next item
<←>	Move to the item in the left hand
<→>	Move to the item in the right hand
Enter	Select item
<Esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu
<+/PgUp>	Increase the numeric value or make changes
<-/PgDn>	Decrease the numeric value or make changes
<F1>	General help, only for Status Page Setup Menu and Option Page Setup Menu
<F2>	Item Help
<F3>	Reserved
<F4>	Reserved
<F5>	Restore the previous CMOS value from CMOS, only for Option Page Setup Menu
<F6>	Load the file-safe default CMOS value from BIOS default table
<F7>	Load the Optimized Defaults
<F8>	Dual BIOS/Q-Flash function
<F9>	System Information
<F10>	Save all the CMOS changes, only for Main Menu

GETTING HELP

Main Menu


The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

The Main Menu (For example: BIOS Ver. : D4)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from eight setup functions and two exit choices. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

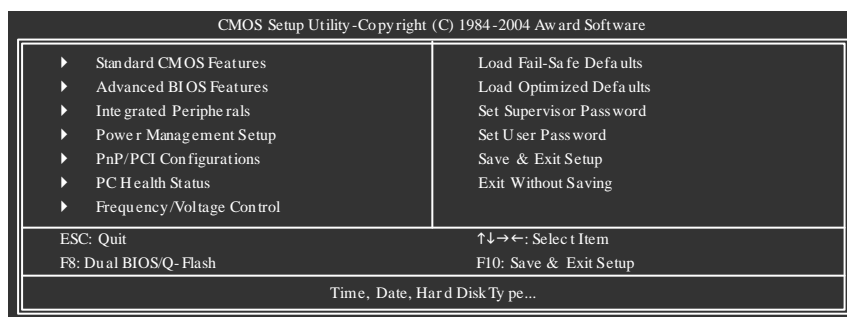

If you can't find the setting you want, please press "Ctrl+F1" to search the advanced option widden.

- **Standard CMOS Features**

This setup page includes all the items in standard compatible BIOS.

- **Advanced BIOS Features**

This setup page includes all the items of Award special enhanced features.

- **Integrated Peripherals**

This setup page includes all onboard peripherals.

- **Power Management Setup**

This setup page includes all the items of Green function features.

- **PnP/PCI Configurations**

This setup page includes all the configurations of PCI & PnP ISA resources.

- **PC Health Status**

This setup page is the System auto detect Temperature, voltage, fan, speed.

- **Frequency/Voltage Control**

This setup page is control CPU's clock and frequency ratio.

- **Load Fail-Safe Defaults**

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

- **Load Optimized Defaults**

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

- **Set Supervisor password**

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

- **Set User password**

Change, set, or disable password. It allows you to limit access to the system.

- **Save & Exit Setup**

Save CMOS value settings to CMOS and exit setup.

- **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

Standard CMOS Features

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software		
Standard CMOS Features		
Date (mm:dd:yy)	Tue, Jan 27 2004	Item Help
Time (hh:mm:ss)	22:31:24	Menu Level▶
▶ IDE Channel 0 Master	[None]	Change the day, month, year
▶ IDE Channel 0 Slave	[None]	<Week>
▶ IDE Channel 1 Master	[None]	Sun. to Sat.
▶ IDE Channel 1 Slave	[None]	<Month>
Drive A	[1.44M, 3.5"]	Jan. to Dec.
Drive B	[None]	<Day>
Floppy 3 Mode Support	[Disabled]	1 to 31 (or maximum allowed in the month)
Holt On	[All, But Keyboard]	<Year>
Base Memory	640K	1999 to 2098
Extended Memory	127M	
Total Memory	128M	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults		

☛ Date

The date format is <week>, <month>, <day>, <year>.

- ▶ Week The week, from Sun to Sat, determined by the BIOS and is display only
- ▶ Month The month, Jan. Through Dec.
- ▶ Day The day, from 1 to 31 (or the maximum allowed in the month)
- ▶ Year The year, from 1999 through 2098

☛ Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

IDE Channel 0 Master, Slave / IDE Channel 1 Master, Slave

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation from your hard disk vendor or the system manufacturer.

» CYLS.	Number of cylinders
» HEADS	Number of heads
» PRECOMP	Write precomp
» LANDZONE	Landing zone
» SECTORS	Number of sectors

If a hard disk has not been installed select NONE and press <Enter>.

Drive A / Drive B

The category identifies the types of floppy disk drive A or drive B that has been installed in the computer.

» None	No floppy drive installed
» 360K, 5.25"	5.25 inch PC-type standard drive; 360K byte capacity.
» 1.2M, 5.25"	5.25 inch AT-type high-density drive; 1.2M byte capacity (3.5 inch when 3 Mode is Enabled).
» 720K, 3.5"	3.5 inch double-sided drive; 720K byte capacity
» 1.44M, 3.5"	3.5 inch double-sided drive; 1.44M byte capacity.
» 2.88M, 3.5"	3.5 inch double-sided drive; 2.88M byte capacity.

❏ Floppy 3 Mode Support (for Japan Area)

- » Disabled Normal Floppy Drive. (Default value)
- » Drive A Drive A is 3 mode Floppy Drive.
- » Drive B Drive B is 3 mode Floppy Drive.
- » Both Drive A & B are 3 mode Floppy Drives.

❏ Halt on

The category determines whether the computer will stop if an error is detected during power up.

- » NO Errors The system boot will not stop for any error that may be detected and you will be prompted.
- » All Errors Whenever the BIOS detects a non-fatal error the system boot will be stopped.
- » All, But Keyboard The system boot will not stop for all errors except a keyboard error. (Default value)
- » All, But Diskette The system boot will not stop for all errors except a disk error.
- » All, But Disk/Key The system boot will not stop for all errors except keyboard and disk errors.

❏ Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.


The value of the base memory is typically 512 K for systems with 512K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1MB in the CPU's memory address map.

Advanced BIOS Features

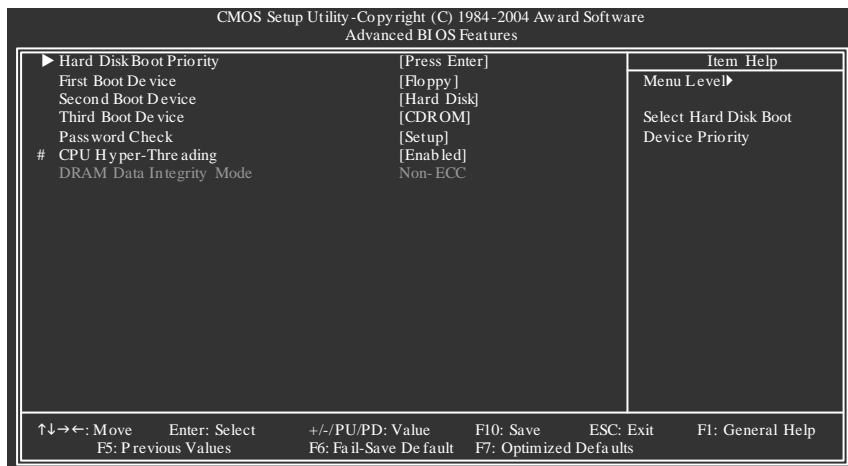

"#" System will detect automatically and show up when you install the Intel® Pentium® 4 processor with HT Technology.

Hard Disk Boot Priority

- ▶ Press Enter Select Hard Disk Boot Device priority.

First / Second / Third Boot Device

- This feature allows you to select the boot device priority.
- ▶ Floppy Select your boot device priority by Floppy.
- ▶ LS120 Select your boot device priority by LS120.
- ▶ Hard Disk Select your boot device priority by Hard Disk.
- ▶ CDROM Select your boot device priority by CDROM.
- ▶ ZIP Select your boot device priority by ZIP.
- ▶ USB-FDD Select your boot device priority by USB-FDD.
- ▶ USB-ZIP Select your boot device priority by USB-ZIP.
- ▶ USB-CDROM Select your boot device priority by USB-CDROM.
- ▶ USB-HDD Select your boot device priority by USB-HDD.
- ▶ LAN Select your boot device priority by LAN.
- ▶ Disabled Select your boot device priority by Disabled.

Password Check

- ▶ Setup The system will boot but will not access to Setup page if the correct password is not entered at the prompt. (Default value)
- ▶ System The system will not boot and will not access to Setup page if the correct password is not entered at the prompt.

CPU Hyper-Threading

- » Enabled Enables CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)
- » Disabled Disables CPU Hyper Threading.

DRAM Data Integrity Mode

If you are using the Non-ECC DRAM, the mode will show "Non-ECC" and this function is disabled.

- » ECC Set DRAM mode at ECC.
- » Non-ECC Set DRAM mode at Non-ECC.

Integrated Peripherals

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software
Integrated Peripherals

On-Chip Primary PCI IDE	[Enabled]	<div>Item Help</div> <div>Menu Level▶</div> <div>If a hard disk controller card is used, set at Disabled</div> <div>[Enabled] Enable on-chip IDE Port</div> <div>[Disabled] Disable on-chip IDE Port</div>
On-Chip Secondary PCI IDE	[Enabled]	
On-Chip SATA	[Auto]	
x SATA Port0 Configure as	SATA Port0	
SATA Port1 Configure as	SATA Port1	
SATA RAID Function	[Enabled]	
USB Controller	[Enabled]	
USB 2.0 Controller	[Enabled]	
USB Keyboard Support	[Disabled]	
USB Mouse Support	[Disabled]	
AC97 Audio	[Auto]	
Onboard PCI64 SCSI	[Enabled]	
Onboard H/W SATA	[Enabled]	
Serial ATA Function	[RAID]	
Onboard H/W USB2.0	[Enabled]	
Onboard H/W LAN	[Enabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[Normal]	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software
Integrated Peripherals

x UR2 Duplex Mode	Half	<div>Item Help</div> <div>Menu Level▶</div>
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
x ECP Mode Use DMA	3	
Game Port Address	[201]	
Midi Port Address	[Disabled]	
x Midi Port IRQ	10	
CIR Port Address	[Disabled]	
x CIR Port IRQ	11	

↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

On-Chip Primary PCI IDE

- » Enabled Enable onboard 1st channel IDE port. (Default value)
- » Disabled Disable onboard 1st channel IDE port.

On-Chip Secondary PCI IDE

- » Enabled Enable onboard 2nd channel IDE port. (Default value)
- » Disabled Disable onboard 2nd channel IDE port.

On-chip SATA

- » Disabled Disable SATA controller.
- » Auto When there is no device to be plugged in IDE 1 or IDE2, SATA controller will remap to IDE controller. (Default value)
- » Manual Set SATA Mode manually.

SATA Port0 Configure as

- » IDE Pri. Master Remap SATA Port 0 to IDE Pri. Master.
- » IDE Pri. Slave Remap SATA Port 0 to IDE Pri. Slave.
- » IDE Sec. Master Remap SATA Port 0 to IDE Sec. Master.
- » IDE Sec. Slave Remap SATA Port 0 to IDE Sec. Slave.
- » SATA Port0 SATA controller set to SATA port0. As this mode, it support by WinXP or later OS only. (Default value)
- » SATA Port1 SATA controller set to SATA port1. As this mode, it support by WinXP or later OS only.

SATA Port1 Configure as

- » The values depend on SATA Port0.

SATA RAID Function

- » Enabled Enable SATA Raid function when SATA Mode set to SATA Port 0 & SATA Port 1 only. (Default value)
- » Disabled Disable SATA Raid function.

USB Controller

- » Enabled Enable USB Controller. (Default value)
- » Disabled Disable USB Controller.

USB 2.0 Controller

Disable this function if you are not using onboard USB 2.0 feature.

- » Enabled Enable USB 2.0 Controller. (Default value)
- » Disabled Disable USB 2.0 Controller.

USB Keyboard Support

- » Enabled Enable USB Key board Support.
- » Disabled Disable USB Keyboard Support. (Default v alue)

USB Mouse Support

- » Enabled Enable USB Mouse Support.
- » Disabled Disable USB Mouse Support. (Default v alue)

AC97 Audio

- » Auto Auto detect AC'97 audio function. (Default v alue)
- » Disabled Disable AC'97 audio function.

Onboard PCI66 SCSI

- » Enabled Enable onboard PCI64 SCSI function. (Default v alue)
- » Disabled Disable this function.

Onboard H/W SATA

- ◆ Disable this option if y ou are not using the onboard H/W Serial ATA feature.
- » Enabled Enable onboard H/W Serial ATA s support. (Default v alue)
- » Disabled Disable onboard H/W Serial ATA.

Serial ATA Function

- » RAID Select Serial ATA chip function as RAID. (Default v alue)
- » BASE Select Serial ATA chip function as BASE.

Onboard H/W USB2.0

- » Enabled Enable onboard H/W USB2.0 support. (Default v alue)
- » Disabled Disable onboard H/W USB2.0.

Onboard H/W LAN

- » Enabled Enable Onboard H/W LAN function. (Default v alue)
- » Disabled Disable this function.

Onboard Serial Port 1

- » Auto BIOS will automatically setup the port 1 address.
- » 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8. (Default v alue)
- » 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8.
- » 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8.
- » 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8.
- » Disabled Disable onboard Serial port 1.

Onboard Serial Port 2

- » Auto BIOS will automatically setup the port 2 address.
- » 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8.
- » 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8. (Default value)
- » 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8.
- » 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8.
- » Disabled Disable onboard Serial port 2.

UART Mode Select

This item allows you to determine which Infra Red(IR) function of Onboard I/O chip.

- » ASKIR Set onboard I/O chip UART to ASKIR Mode.
- » IrDA Set onboard I/O chip UART to IrDA Mode.
- » Normal Set onboard I/O chip UART to Normal Mode. (Default Value)

UR2 Duplex Mode

This feature allows you to select IR mode.

This function will be available when "UART Mode Select" doesn't set at Normal.

- » Half IR Function Duplex Half. (Default value)
- » Full IR Function Duplex Full.

Onboard Parallel port

This feature allows you to select from a given set of parameters if the parallel port uses the onboard I/O controller.

- » Disabled Disable onboard LPT port.
- » 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default value)
- » 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.
- » 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

Parallel Port Mode

This feature allows you to connect with an advanced printer via the port mode it supports.

- » SPP Using Parallel port as Standard Parallel Port. (Default value)
- » EPP Using Parallel port as Enhanced Parallel Port.
- » ECP Using Parallel port as Extended Capabilities Port.
- » ECP+EPP Using Parallel port as ECP & EPP mode.

ECP Mode Use DMA

This feature allows you to select Direct Memory Access(DMA) channel if the ECP mode is selected.

This function will be available when "Parallel Port Mode" set at ECP or ECP+EPP.

- » 3 Set ECP Mode Use DMA to 3. (Default value)
- » 1 Set ECP Mode Use DMA to 1.

Game Port Address

- » 201 Set Game Port Address to 201. (Default v alue)
- » 209 Set Game Port Address to 209.
- » Disabled Disable this function.

Midi Port Address

- » 300 Set Midi Port Address to 300.
- » 330 Set Midi Port Address to 330.
- » Disabled Disable this function. (Default v alue)

Midi Port IRQ

- » 5 Set Midi Port IRQ to 5.
- » 10 Set Midi Port IRQ to 10. (Default v alue)

CIR Port Address

- » 310 Set C IR Port Address to 310.
- » 320 Set C IR Port Address to 320.
- » Disabled Disable this function. (Default v alue)

CIR Port IRQ

- » 5 Set CIR Port IRQ to 5.
- » 11 Set C IR Port IRQ to 11. (Default v alue)

Power Management Setup

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software		
Power Management Setup		
ACPI Suspend Type	[S1(POS)]	Item Help
Power LED in S1 state	[Blinking]	Menu Level▶
Off by Power button	[Instant-off]	
PME Event Wake Up	[Enabled]	[S1]
ModemRingOn/WakeOnLan	[Enabled]	Set suspend type to
Resume by Alarm	[Disabled]	Power On Suspend under
x Date (of Month) Alarm	Every day	ACPI OS
x Time (hh:mm:ss) Alarm	0 : 0 : 0	
Power On by Mouse	[Disabled]	[S3]
Power On by Keyboard	[Disabled]	Set suspend type to
x KB Power ON Password	Enter	Suspend to RAM under
AC BackFunction	[Soft-Off]	ACPI OS

↑↓→←: Move	Enter: Select	+/-/PU/PD: Value	F10: Save	ESC: Exit	F1: General Help
F5: Previous Values	F6: Fail-Save Default	F7: Optimized Defaults			

ACPI Suspend Type

- » S1(POS) Set ACPI suspend type to S1. (Default value)
- » S3(STR) Set ACPI suspend type to S3.

Power LED in S1 state

- » Blinking In standby mode(S1), power LED will blink. (Default value)
- » Dual/OFF In standby mode(S1):
 - a. If use single color LED, power LED will turn off.
 - b. If use dual color LED, power LED will turn to another color.

Off by Power button

- » Instant-off Press power button then Power off instantly. (Default value)
- » Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

PME Event Wake Up

- » Disabled Disable this function.
- » Enabled Enable PME Event Wake up. (Default value)

ModemRingOn/WakeOnLAN

An incoming call via modem can awake the system from any suspend state or an input signal comes from the other client server on the LAN can awake the system from any suspend state.

- » Disabled Disable Modem Ring on/wake on Lan function.
- » Enabled Enable Modem Ring on/wake on Lan. (Default value)

Resume by Alarm

You can set "Resume by Alarm" item to enabled and key in Date/time to power on system.

- » Disabled Disable this function. (Default value)
- » Enabled Enable alarm function to POWER ON system.
If RTC Alarm Lead To Power On is Enabled.
Date (of Month) Alarm : Every day, 1~31
Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

Power On By Mouse

- » Disabled Disabled this function. (Default value)
- » Mouse Click Double click on PS/2 mouse left button to power on the system.

Power On By Keyboard

This feature allows you to set the method for powering-on the system.

The option "Password" allows you to set up to 5 alphanumeric characters to power-on the system.

The option "Keyboard 98" allows you to use the standard key board 98 to power on the system.

- » Password Enter from 1 to 5 characters to set the Key board Power On Password.
- » Disabled Disabled this function. (Default value)
- » Keyboard 98 If your keyboard have "POWER Key" button, you can press the key to power on the system.

KB Power ON Password

When "Power On by Keyboard" set at Password, you can set the password here.

- » Enter Input password (from 1 to 5 characters) and press Enter to set the Keyboard Power On password.

AC BACK Function

- » Soft-Off When AC-power back to the system, the system will be in "Off" state. (Default value)
- » Full-On When AC-power back to the system, the system always in "On" state.
- » Memory When AC-power back to the system, the system will return to the Last state before AC-power off.

PnP/PCI Configurations

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software	
PnP/PCI Configurations	
PCI 1 IRQ Assignment	[Auto]
PCI 2 IRQ Assignment	[Auto]
PCI 3 IRQ Assignment	[Auto]
<div>Item Help</div> <div>Menu Level▶</div> <div>Device(s) using this INT:</div> <div>RAID Cntrlr</div> <div>- Bus 0 Dev31 Func 2</div> <div>Network Cntrlr</div> <div>- Bus 2 Dev 1 Func 0</div>	
<div>↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help</div> <div>F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults</div>	

PCI 1 IRQ Assignment

- » Auto Auto assign IRQ to PCI 1. (Default value)
- » 3,4,5,7,9,10,11,12,14,15 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

PCI 2 IRQ Assignment

- » Auto Auto assign IRQ to PCI 2. (Default value)
- » 3,4,5,7,9,10,11,12,14,15 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

PCI 3 IRQ Assignment

- » Auto Auto assign IRQ to PCI 3. (Default value)
- » 3,4,5,7,9,10,11,12,14,15 Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

PC Health Status

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software PC Health Status		
Reset Case Open Status	[Disabled]	Item Help
Case Opened	Yes	Menu Level▶
Vcore	OK	[Disabled]
DDR25V	OK	Don't monitor
+3.3V	OK	current fan speed
+5V	OK	[Enabled]
+12V	OK	Clear case open status
Current CPU Temperature	33°C	and set to be Disabled
Current CPU FAN Speed	4687 RPM	at next boot
Current POWER FAN Speed	0 RPM	
Current SYSTEM FAN Speed	0 RPM	
CPU Warning Temperature	[Disabled]	
CPU FAN Fail Warning	[Disabled]	
POWER FAN Fail Warning	[Disabled]	
SYSTEM FAN Fail Warning	[Disabled]	
CPU Smart FAN Control	[Enabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults		

❶ Reset Case Open Status

❶ Case Opened

If the case is closed, "Case Opened" will show "No".

If the case have been opened, "Case Opened" will show "Yes".

If you want to reset "Case Opened" value, set "Reset Case Open Status" to "Enabled" and save CMOS, your computer will restart.

❷ Current Voltage (V) Vcore / DDR25V / +3.3V / +5V / +12V

▶ Detect system's voltage status automatically.

❸ Current CPU Temperature

▶ Detect CPU Temp. automatically.

❹ Current CPU/POWER/SYSTEM FAN Speed (RPM)

▶ Detect CPU/POWER/SYSTEM Fan speed status automatically.

❺ CPU Warning Temperature

▶ 60°C / 140°F Monitor CPU Temp. at 60°C / 140°F.

▶ 70°C / 158°F Monitor CPU Temp. at 70°C / 158°F.

▶ 80°C / 176°F Monitor CPU Temp. at 80°C / 176°F.

▶ 90°C / 194°F Monitor CPU Temp. at 90°C / 194°F.

▶ Disabled Disable this function. (Default value)

CPU FAN Fail Warning

- » Disabled Fan Warning Function Disable. (Default value)
- » Enabled Fan Warning Function Enable.

POWER FAN Fail Warning

- » Disabled Fan Warning Function Disable. (Default value)
- » Enabled Fan Warning Function Enable.

SYSTEM FAN Fail Warning

- » Disabled Fan Warning Function Disable. (Default value)
- » Enabled Fan Warning Function Enable.

CPU Smart FAN Control

- » Disabled Disable this function.
- » Enabled Enable CPU Smart Fan control function.(Default value)
 - a. When the CPU temperature is higher than 60 degrees Celsius, CPU fan will run at full speed.
 - b. When the CPU temperature is between 50 and 60 degrees Celsius, CPU fan will run at high speed.
 - c. When the CPU temperature is between 40 and 50 degrees Celsius, CPU fan will run at medium speed.
 - d. When the CPU temperature is lower than 40 degrees Celsius, CPU fan will run at low speed.

Frequency/Voltage Control

CMOS Setup Utility - Copyright (C) 1984-2004 Award Software
Frequency/Voltage Control

		Item Help
CPU Clock Ratio	[15X]	Menu Level▶
CPU Host Clock Control	[Disabled]	
✖ CPU Host Frequency (Mhz)	100	
✖ AGP/PCI/SRC Fixed	66/33/100	
Memory Frequency For	[Auto]	
Memory Frequency (Mhz)	266	
AGP/PCI/SRC Frequency (Mhz)	66/33/100	
DIMM OverVoltage Control	[Normal]	
AGP OverVoltage Control	[Normal]	
CPU Voltage Control	[Normal]	
Normal CPU V core	1.750V	

↑↓←→: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Save Default F7: Optimized Defaults

✖ Those items will be available when "CPU Host Clock Control" is set to Enabled.

⚙ CPU Clock Ratio

This option will not be shown or not be available if you are using a CPU with the locked ratio.

➤ 15X~21X It depends on CPU Clock Ratio.

This setup option will automatically assign by CPU detection.

For C-Stepping P4: 8X, 10X~24X default: 15X

For Northwood CPU: 12X~24X default: 16X

The option will display "Locked" and read only if the CPU ratio is not changeable.

⚙ CPU Host Clock Control

Note: If system hangs up before enter CMOS setup utility, wait for 20 sec for times out reboot.

When time out occur, system will reset and run at CPU default Host clock at next boot.

➤ Disabled Disable CPU Host Clock Control. (Default value)

➤ Enabled Enable CPU Host Clock Control.

⚙ CPU Host Frequency (Mhz)

➤ 100MHz ~ 355MHz Set CPU Host Clock from 100MHz to 355MHz.

If you use FSB400 Pentium 4 processor, please set "CPU Clock" to 100MHz. If you use FSB533 Pentium 4 processor, please set "CPU Clock" to 133MHz. If you use FSB800 Pentium 4 processor, please set "CPU Clock" to 200MHz.

Incorrect using it may cause your system broken. For power End-User use only!

AGP/PCI/SRC Fixed

Serial ATA device is very sensitive to SRC clock. SRC over clock may make Serial ATA device function can't work properly.

- » Adjust AGP/PCI/SRC clock asy chro hous with CPU.

Memory Frequency For

for FSB(Front Side Bus) frequency=400MHz,

- » 2.66 Memory Frequency = Host clock X 2.66.
- » Auto Set Memory frequency by DRAM SPD data. (Default v alue)

for FSB(Front Side Bus) frequency=533MHz,

- » 2.0 Memory Frequency = Host clock X 2.0.
- » 2.5 Memory Frequency = Host clock X 2.5.
- » Auto Set Memory frequency by DRAM SPD data. (Default v alue)

for FSB(Front Side Bus) frequency=800MHz,

- » 2.0 Memory Frequency = Host clock X 2.0.
- » 1.6 Memory Frequency = Host clock X 1.6.
- » 1.33 Memory Frequency = Host clock X 1.33.
- » Auto Set Memory frequency by DRAM SPD data. (Default v alue)

Memory Frequency (Mhz)

- » The v alues depend on CPU Host Frequency (Mhz).

AGP/PCI/SRC Frequency (Mhz)

- » The v alues depend on Fixed AGP/PCI/SRC Frequency.

DIMM OverVoltage Control

- » Normal Set DIMM OverVoltage Control to Normal. (Default v alue)
- » +0.1V Set DIMM OverVoltage Control to +0.1V.
- » +0.2V Set DIMM OverVoltage Control to +0.2V.
- » +0.3V Set DIMM OverVoltage Control to +0.3V.

⚠ Incorrect using it may cause your system broken. For power End-User use only!

AGP OverVoltage Control

- » Normal Set AGP OverVoltage Control to Normal. (Default v alue)
- » +0.1V Set AGP OverVoltage Control to +0.1V.
- » +0.2V Set AGP OverVoltage Control to +0.2V.
- » +0.3V Set AGP OverVoltage Control to +0.3V.

⚠ Incorrect using it may cause your system broken. For power End-User use only!

❏ CPU OverVoltage Control


- » Supports adjustable CPU Vcore from 0.8375V to 1.7600V.

(Default value: Normal)

❏ Normal CPU Vcore


- » Display your CPU Vcore Voltage.

Load Fail-Safe Defaults

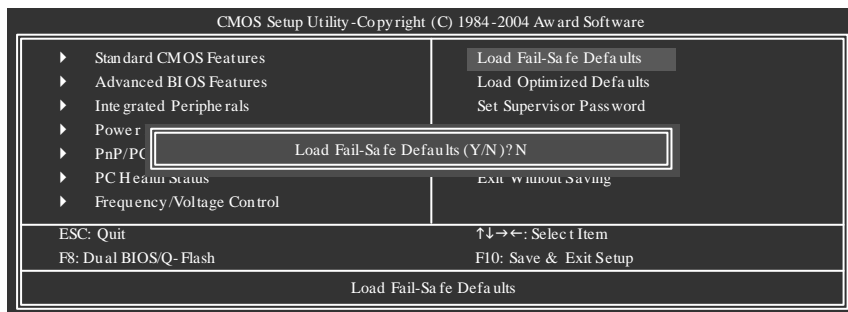


Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

Load Optimized Defaults

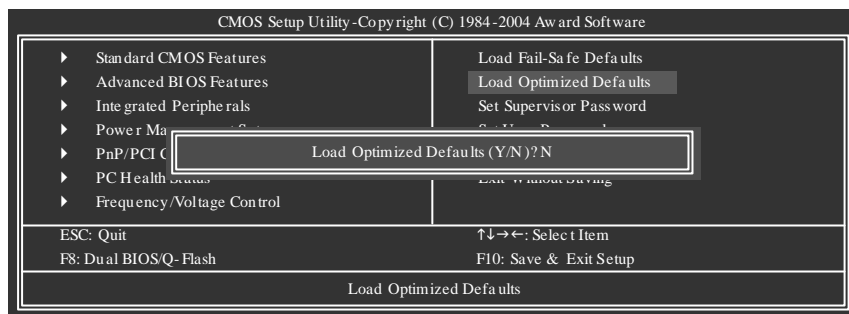

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

Set Supervisor/User Password

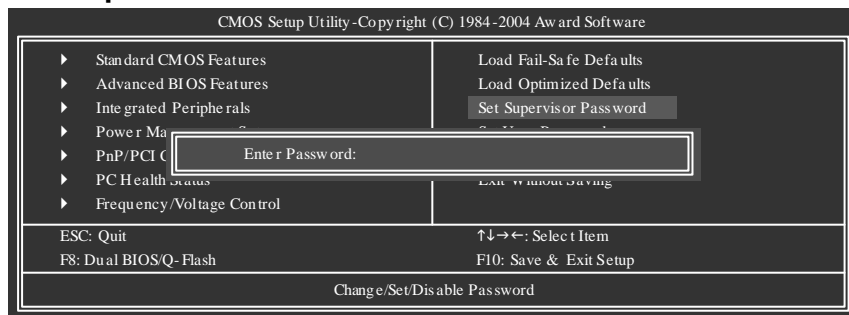

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.


The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.


Save & Exit Setup

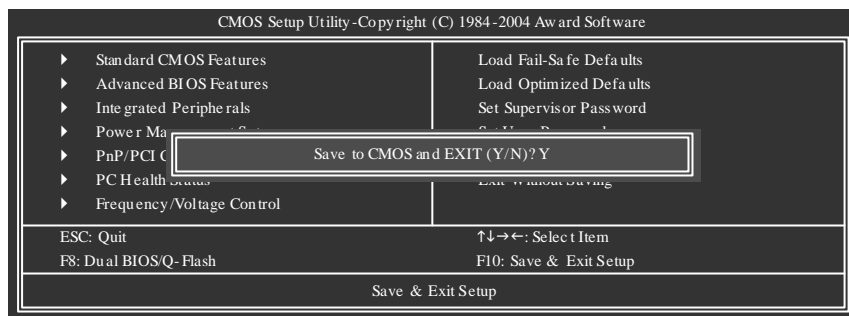

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS.

Type "N" will return to Setup Utility.

Exit Without Saving

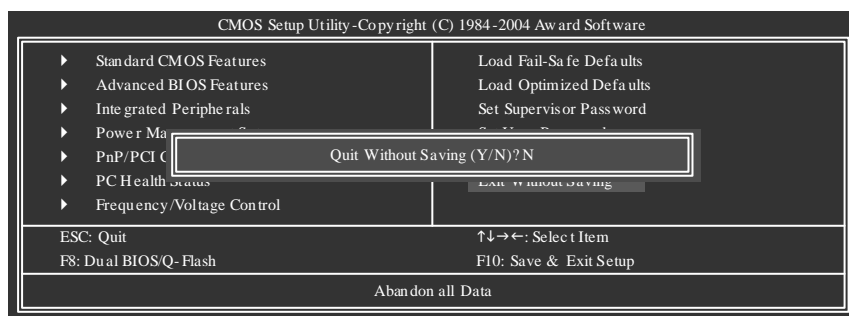

Type "Y" will quit the Setup Utility without saving to RTC CMOS.

Type "N" will return to Setup Utility.

Chapter 4 Technical Reference

@ BIOS™ Introduction

Gigabyte announces @ BIOS

Windows BIOS live update utility



Have you ever updated BIOS by yourself? Or like many other people, you just know what BIOS is, but always hesitate to update it? Because you think updating newest BIOS is unnecessary and actually you don't know how to update it.

Maybe not like others, you are very experienced in BIOS updating and spend quite a lot of time to do it. But of course you don't like to do it too much. First, download different BIOS from website and then switch the operating system to DOS mode. Secondly, use different flash utility to update BIOS. The above process is not a interesting job. Besides, always be carefully to store the BIOS source code correctly in your disks as if you update the wrong BIOS, it will be a nightmare.

Certainly, you wonder why motherboard vendors could not just do something right to save your time and effort and save you from the lousy BIOS updating work? Here it comes! Now Gigabyte announces @BIOS—the first Windows BIOS live update utility. This is a smart BIOS update software. It could help you to download the BIOS from internet and update it. Not like the other BIOS update software, it's a Windows utility. With the help of "@BIOS", BIOS updating is no more than a click.

Besides, no matter which mainboard you are using, if it's a Gigabyte's product*, @BIOS help you to maintain the BIOS. This utility could detect your correct mainboard model and help you to choose the BIOS accordingly. It then downloads the BIOS from the nearest Gigabyte ftp site automatically. There are several different choices; you could use "Internet Update" to download and update your BIOS directly. Or you may want to keep a backup for your current BIOS, just choose "Save Current BIOS" to save it first. You make a wise choice to use Gigabyte, and @BIOS update your BIOS smartly. You are now worry free from updating wrong BIOS, and capable to maintain and manage your BIOS easily. Again, Gigabyte's innovative product erects a milestone in mainboard industries.

For such a wonderful software, how much it costs? Impossible! It's free! Now, if you buy a Gigabyte's motherboard, you could find this amazing software in the attached driver CD. But please remember, connected to internet at first, then you could have a internet BIOS update from your Gigabyte @BIOS.

Easy Tune™ 4 Introduction

Gigabyte announces EasyTune™ 4

Windows based Overclocking utility

EasyTune 4 carries on the heritage so as to pave the way for future generations.



Overclock" might be one of the most common issues in computer field. But have many users ever tried it? The answer is probably "no". Because "Overclock" is thought to be very difficult and includes a lot of technical know-how, sometimes "Overclock" is even considered as special skills found only in some enthusiasts. But as to the experts in "Overclock", what's the truth? They may spend quite a lot of time and money to study, try and use many different hard-

ware or BIOS tools to do "Overclock". And even with these technologies, they still learn that it's quite a risk because the safety and stability of an "Overclock" system is unknown. Now everything is different because of a Windows based overclocking utility "EasyTune 4" --announced by Gigabyte. This windows based utility has totally changed the gaming rule of "Overclock". This is the first windows based overclocking utility is suitable for both normal and power users. Users can choose either "Easy Mode" or "Advanced Mode" for overclocking at their convenience. For users who choose "Easy Mode", they just need to click "Auto Optimize" to have autoed and immediate CPU overclocking. This software will then overdrive CPU speed automatically with the result being shown in the control panel. If users prefer "Overclock" by them, there is also another choice. Click "Advanced Mode" to enjoy "sport drive" class Overclocking user interface. "Advanced Mode", allows users to change the system bus / AGP / Memory working frequency in small increments to get ultimate system performance. It operates in coordination with Gigabyte motherboards. Besides, it is different from other traditional over-clocking methods, EasyTune 4 doesn't require users to change neither BIOS nor hardware switch/jumper setting; on the other hand, they can do "Overclock" at easy step. Therefore, this is a safer way for "Overclock" as nothing is changed on software or hardware. If user runs EasyTune 4 over system's limitation, the biggest loss is only to restart the computer again and the side effect is then well controlled. Moreover, if one well-performed system speed has been tested in EasyTune 4, user can "Save" this setting and "Load" it in next time. Obviously, Gigabyte EasyTune 4 has already turned the "Overclock" technology toward to a newer generation. This wonderful software is now free bundled in Gigabyte motherboard attached in driver CD. Users may make a test drive of "EasyTune 4" to find out more amazing features by themselves.

*Some Gigabyte products are not fully supported by EasyTune 4. Please find the products supported list in the web site.

*Any "Overclocking action" is at user's risk, Gigabyte Technology will not be responsible for any damage or instability to your processor, motherboard, or any other components.

Dual Power System-Gold (DPS-Gold) Introduction




DPS Gold - The Dual Power System-Gold (DPS-Gold) is an onboard six-phase power circuit aimed at providing a more durable and stable power circuit to the CPU for increased system stability. With an additional 3-phase power circuit DPVRM (Dual Power Voltage

Regulator Module), a platform is able to effectively sustain a larger electric current of up to 150A. The new generation DPS-Gold is designed based on the VRM10 specification and is able to support the latest Intel P4 Prescott processor.

Working mode in a Dual Power System-Gold:

Parallel Mode:

Both DPS-Gold and onboard power circuit working simultaneously, providing a total of 6-phase power circuit. If any power circuit fails, the remaining power circuit will keep working as main power circuit.

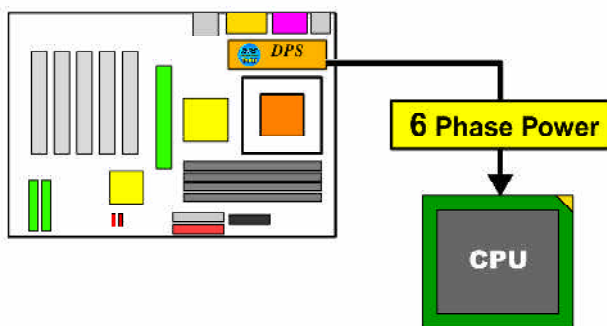

Flash BIOS Method Introduction


Method 1: Dual BIOS /Q-Flash

A. What is Dual BIOS Technology?

Dual BIOS means that there are two system BIOS (ROM) on the motherboard, one is the Main BIOS and the other is Backup BIOS. Under the normal circumstances, the system works on the Main BIOS. If the Main BIOS is corrupted or damaged, the Backup BIOS can take over while the system is powered on. This means that your PC will still be able to run stably as if nothing has happened in your BIOS.

B. How to use Dual BIOS and Q-Flash Utility?

a. After power on the computer, pressing immediately during POST (Power On Self Test) it will allow you to enter Award BIOS CMOS SETUP, then press <F8> to enter Flash utility.

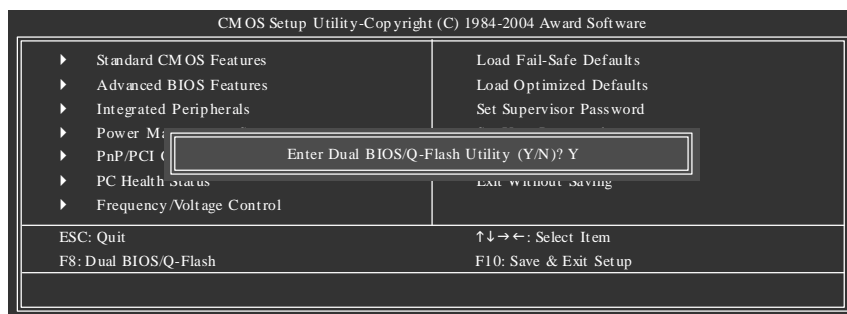

b. Award Dual BIOS Flash ROM Programming Utility

Dual BIOS Utility V1.30		
Boot From.....	Main Bios	
Main ROM Type/Size.....	SST49LF003A	512K
Backup ROM Type/Size.....	SST49LF003A	512K
WideRangeProtection	Disable	
BootFrom	Main Bios	
Auto Recovery	Enable	
Halt On Error	Disable	
Keep DMI Data	Enable	
Copy Main ROM Data to Backup		
Load Default Settings		
Save Settings to CMOS		
Q-Flash Utility		
Update Main BIOS from Floppy		
Update Backup BIOS from Floppy		
Save Main BIOS to Floppy		
Save Backup BIOS to Floppy		
PgDn/PgUp: Modify	↑↓: Move	ESC: Reset F10: Power Off

c. Dual BIOS Item explanation:

Wide Range Protection: Disable(Default), Enable

Status 1:

If any failure (ex. Update ESCD failure, checksum error or reset ...) occurs in the Main BIOS, just before the Operating System is loaded and after the power is on, and that the Wide Range Protection is set to "Enable", the PC will boot from Backup BIOS automatically.

Status 2:

If the ROM BIOS on peripherals cards(ex. SCSI Cards, LAN Cards,...) emits signals to request restart of the system after the user make any alteration on it, the bootup BIOS will not be changed to the Backup BIOS.

Boot From : Main BIOS(Default), Backup BIOS

Status 1:

The user can set to boot from main BIOS or Backup BIOS.

Status 2:

If one of the main BIOS or the Backup BIOS fails, this item "Boot From : Main BIOS(Default)" will become gray and will not be changed by user.

Auto Recovery : Enable(Default), Disable

When one of the Main BIOS or Backup BIOS occurs checksum failure, the working BIOS will automatically recover the BIOS of checksum failure.

(In the Power Management Setup of the BIOS Setting, if ACPI Suspend Type is set to Suspend to RAM, the Auto Recovery will be set to Enable automatically.)

(If you want to enter the BIOS setting, please press "**Del**" key when the boot screen appears.)

Halt On Error : Disable(Default), Enable

If the BIOS occurs a checksum error or the Main BIOS occurs a WIDE RANGE PROTECTION error and Halt On Error set to Enable, the PC will show messages on the boot screen, and the system will pause and wait for the user's instruction.

If Auto Recovery : **Disable**, it will show *<or the other key to continue.>*

If Auto Recovery : **Enable**, it will show *<or the other key to Auto Recover.>*

Keep DMI Data : Enable(Default), Disable

Enable: The DMI data won't be replaced by flashing new BIOS. (recommend)

Disable: The DMI data will be replaced by flashing new BIOS.

Copy Main ROM Data to Backup

(If you boot from Backup ROM, this item will change to Copy Backup ROM Data to Main)

Auto recovery message:

BIOS Recovery: Main to Backup

The means that the Main BIOS works normally and could automatically recover the Backup BIOS.

BIOS Recovery: Backup to Main

The means that the Backup BIOS works normally and could automatically recover the Main BIOS.

(This auto recovery utility is set by system automatically and can't be changed by user.)

Load Default Settings

Load dual BIOS default value.

Save Settings to CMOS

Save revised setting.



DualBIOS™ Technology FAQ

GIGABYTE Technology is pleased to introduce DualBIOS technology, a hot spare for your system BIOS. This newest "Value-added" feature, in a long series of innovations from GIGABYTE, is available on this motherboard. Future GIGABYTE motherboards will also incorporate this innovation.

What's DualBIOS™?

On GIGABYTE motherboards with DualBIOS there are physically two BIOS chips. For simplicity we'll call one your "Main BIOS" and the other we'll call your "Backup" BIOS (your "hot spare"). If your Main BIOS fails, the Backup BIOS almost automatically takes over on your next system boot. Almost automatically and with virtually zero down time! Whether the problem is a failure in flashing your BIOS or a virus or a catastrophic failure of the Main BIOS chip, the result is the same - the Backup BIOS backs you up, almost automatically.

I. Q: What is DualBIOS™ technology?

Answer:

DualBIOS technology is a patented technology from Giga-Byte Technology. The concept of this technology is based on the redundancy and fault tolerance theory. DualBIOS™ technology simply means there are two system BIOSes (ROM) integrated onto the motherboard. One is a main BIOS, and the other is a backup BIOS. The mainboard will operate normally with the main BIOS, however, if the main BIOS is corrupt or damaged for various reasons, the backup BIOS will be automatically used when the system powered-On. Your PC will operate as before the main BIOS was damaged, and is completely transparent to the user.

II. Q: Why does anyone need a motherboard with DualBIOS™ technology?

Answer:

In today's systems there are more and more BIOS failures. The most common reasons are virus attacks, BIOS upgrade failures, and/or deterioration of the BIOS (ROM) chip itself.

1. New computer viruses are being found that attack and destroy the system BIOS. They may corrupt your BIOS code, causing your PC to be unstable or even not boot normally.
2. BIOS data will be corrupted if a power loss/surge occurs, or if a user resets the system, or if the power button is pressed during the process of performing a system BIOS upgrade.
3. If a user mistakenly updates their mainboard with the incorrect BIOS file, then the system may not be able to boot correctly. This may cause the PC system hang in operation or during boot.
4. A flash ROM's life cycle is limited according to electronic characteristics. The modern PC utilizes the Plug and Play BIOS, and is updated regularly. If a user changes peripherals often, there is a slight chance of damage to the flash ROM.

With Giga-Byte Technology's patented DualBIOS™ technology you can reduce the possibility of hangs during system boot up, and/or loss BIOS data due to above reasons. This new technology will eliminate valuable system down time and costly repair bills caused by BIOS failures.

III. Q: How does DualBIOS™ technology work?

Answer:

1. DualBIOS™ technology provides a wide range of protection during the boot up procedure. It protects your BIOS during system POST, ESCD update, and even all the way to PNP detection/assignment.
2. DualBIOS™ provides automatic recovery for the BIOS. When the first BIOS used during boot up does not complete or if a BIOS checksum error occurs, boot-up is still possible. In the DualBIOS™ utility, the "Auto Recovery" option will guarantee that if either the main BIOS or backup BIOS is corrupted, the DualBIOS™ technology will use the good BIOS and correct the wrong BIOS automatically.
3. DualBIOS™ provides manual recovery for the BIOS. DualBIOS™ technology contains a built-in flash utility, which can flash your system BIOS from backup to main and/or visa versa. There is no need for an OS-dependent flash utility program.
4. DualBIOS™ contains a one-way flash utility. The built-in one-way flash utility will ensure that the corrupt BIOS is not mistaken as the good BIOS during recovery and that the correct BIOS (main vs. backup) will be flashed. This will prevent the good BIOS from being flashed.

IV. Q: Who Needs DualBIOS™ technology?

Answer:

1. Every user should have DualBIOS™ technology due to the advancement of computer viruses.

Everyday, there are new BIOS-type viruses discovered that will destroy your system BIOS. Most commercial products on the market do not have solutions to guard against this type of virus intrusion. The DualBIOS™ technology will provide a state-of-the-art solution to protect your PC:

Case I.) Vicious computer viruses may wipe out your entire system BIOS. With a conventional single system BIOS PC, the PC will not be functional until it is sent for repairs.

Case II.) If the "Auto Recovery" option is enabled in the DualBIOS™ utility, and if a virus corrupts your system BIOS, the backup BIOS will automatically reboot the system and correct the main BIOS.

Case III.) A user may override booting from the main system BIOS. The DualBIOS™ utility may be entered to manually change the boot sequence to boot from the backup BIOS.

2. During or after a BIOS upgrade, if DualBIOS™ detects that the main BIOS is corrupt, the backup BIOS will take over the boot-up process automatically. Moreover, it will verify the main and backup BIOS checksums when booting-up. DualBIOS™ technology examines the checksum of the main and backup BIOS while the system is powered on to guarantee your BIOS operates properly.
3. Power Users will have the advantage of having two BIOS versions on their mainboard. The benefit is being able to select either version BIOS to suit the performance system needs.
4. Flexibility for high-end desktop PCs and workstation/servers. In the DualBIOS™ utility, the option can be set, "Halt On When BIOS Defects," to be enabled to halt your system with a warning message that the main BIOS has been corrupted. Most workstation/servers require constant operation to guarantee services have not been interrupted. In this situation, the "Halt On When BIOS Defects" message may be disabled to avoid system pauses during normal booting. Another advantage you gain from Giga-Byte's DualBIOS™ technology is the ability to upgrade from dual 2 Mbit BIOS to dual 4 Mbit BIOS in the future if extra BIOS storage is needed.



Flash BIOS Method Introduction

Q-Flash™ is a BIOS flash utility embedded in Flash ROM. With this utility, users only have to stay in the BIOS menu when they want to update BIOS. Q-Flash™ allows users to flash BIOS without any utility in DOS or Windows. Using Q-Flash™ indicating no more fooling around with any complicated instructions and operating system since it is in the BIOS menu.



Please note that because updating BIOS has potential risk, please do it with caution!! We are sorry that Gigabyte Technology Co., Ltd is not responsible for damages of system because of incorrect manipulation of updating BIOS to avoid any claims from end-users.

Before You Begin:

Before you start updating BIOS with the Q-Flash™ utility, please follow the steps below first.

1. Download the latest BIOS for your motherboard from Gigabyte's website.
2. Extract the BIOS file downloaded and save the BIOS file (the one with model name.Fxx. For example, 7VRXP.F12) to a floppy disk.
3. Reboot your PC and press **Del** to enter BIOS menu.

The BIOS upgrading guides below are separated into two parts.

If your motherboard has dual BIOS, please refer to Part One.

If your motherboard has single BIOS, please refer to Part Two.

Part One:

Updating BIOS with Q-Flash™ Utility on Dual BIOS Motherboards.

Some of Gigabyte motherboards are equipped with dual BIOS. In the BIOS menu of the motherboards supporting Q-Flash™ and Dual BIOS, the Q-Flash™ utility and Dual BIOS utility are combined in the same screen. This section only deals with how to use Q-Flash™ utility.


In the following sections, we take GA-7VRXP as the example to guide you how to flash BIOS from an older version to the latest version. For example, from F10 to F12.

The BIOS file is F10
before updating



Entering the Q-Flash™ utility:

Step1: To use Q-Flash™ utility, you must press **Del** in the bootscreen to enter BIOS menu.

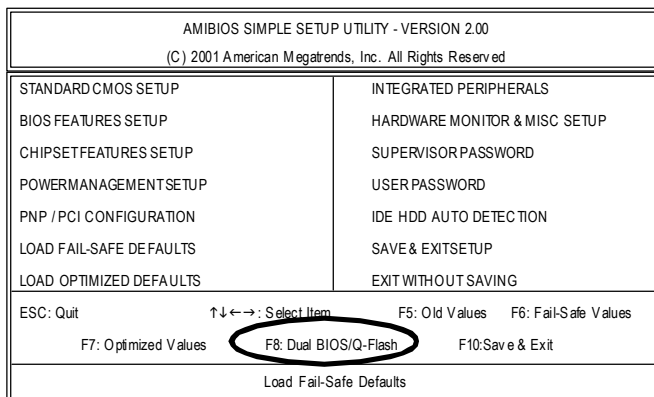

Step 2: Press **F8** button on your keyboard and then **Y** button to enter the Q-Flash™ utility.

AMBIOS SIMPLE SETUP UTILITY - VERSION 2.00 (C) 2001 American Megatrends, Inc. All Rights Reserved			
STANDARD CMOS SETUP		INTEGRATED PERIPHERALS	
BIOS FEATURES SETUP		HARDWARE MONITOR & MISC SETUP	
CHIPSET FEATURES SETUP		SUPERVISOR PASSWORD	
POWERMANAGEMENT SETUP		<div style="border: 2px solid black; border-radius: 50%; padding: 10px; text-align: center;"> ENTER DUAL BIOS/Q-FLASH UTILITY (Y/N) ? Y </div>	
PNP / PCI CONFIGURATION		SAVE & EXIT SETUP	
LOAD FAIL-SAFE DEFAULTS		SAVE & EXIT SETUP	
LOAD OPTIMIZED DEFAULTS		EXIT WITHOUT SAVING	
ESC: Quit ↑↓←→: Select Item F5: Old Values F6: Fail-Safe Values F7: Optimized Values F8: Dual BIOS/Q-Flash F10: Save & Exit Load Fail-Safe Defaults			

Exploring the Q-Flash™/Dual BIOS utility screen

The Q-Flash™/Dual BIOS utility screen consists of the following key components.

The diagram illustrates the BIOS utility menu structure, showing two main utility screens: the Dual BIOS Utility and the Q-Flash Utility.

Dual BIOS Utility Screen:

- Boot From..... Main Bios
- Main ROM Type/Size..... SST 49LF003A 256K
- Backup ROM Type/Size..... SST 49LF003A 256K
- Wide Range Protection Disable
- Boot From Main Bios
- Auto Recovery Enable
- Halt On Error Disable
- Copy Main ROM Data to Backup
- Load Default Settings
- Save Settings to CMOS

Q-Flash Utility Screen:

- Load Main BIOS from Floppy
- Load Backup BIOS from Floppy
- Save Main BIOS to Floppy
- Save Backup BIOS to Floppy

Action Bar:

Enter : Run ↑↓:Move ESC:Reset F10:Power Off

Task menu for Dual BIOS utility:

Contains the names of eight tasks and two item showing information about the BIOS ROM type. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.

Task menu for Q-Flash™ utility:

Contains the names of four tasks. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.

Action bar:


Contains the names of four actions needed to operate the Q-Flash™/Dual BIOS utility. Pressing the buttons mentioned on your keyboards to perform these actions.

Using the Q-Flash™ utility:

This section tells you how to update BIOS using the Q-Flash™ utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash™ utility, please follow the steps below to flash BIOS.

Steps:

- 1. Press arrow buttons on your keyboard to move the lightbar to "Load Main BIOS from Floppy" item in the Q-Flash™ menu and press **Enter** button.

 If you want to save the current BIOS for backup purpose, you can begin Step 1 with "Save Main BIOS to Floppy" item.

Dual BIOS Utility		
Boot From.....	Main Bios	
Main ROM Type/Size.....	SST 49LF003A	256K
Backup ROM Type/Size.....	SST 49LF003A	256K
Wide Range Protection Disable		
Boot From Main Bios		
Auto Recovery Enable		
Halt On Error Disable		
Copy Main ROM Data to Backup		
Load Default Settings		
Save Settings to CMOS		
Q-Flash Utility		
Load Main BIOS from Floppy		
Load Backup BIOS from Floppy		
Save Main BIOS to Floppy		
Save Backup BIOS to Floppy		
Enter : Run	↑↓:Move	ESC:Reset F10:Power Off


Later, you will see a box pop up showing the BIOS files you previously downloaded to the floppy disk.

2. Move to the BIOS file you want to flash and press Enter.

In this example, we only download one BIOS file to the floppy disk so only one BIOS file, 7VRXP.F12, is listed.




Please confirm again you have the correct BIOS file for your motherboard.

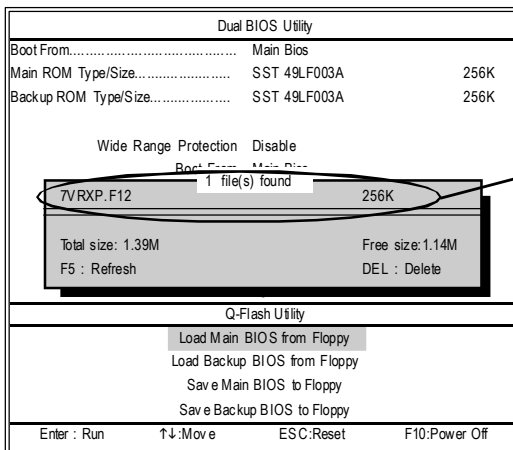

BIOS file in the floppy disk.

After pressing **Enter**, you'll then see the progress of reading the BIOS file from the floppy disk.

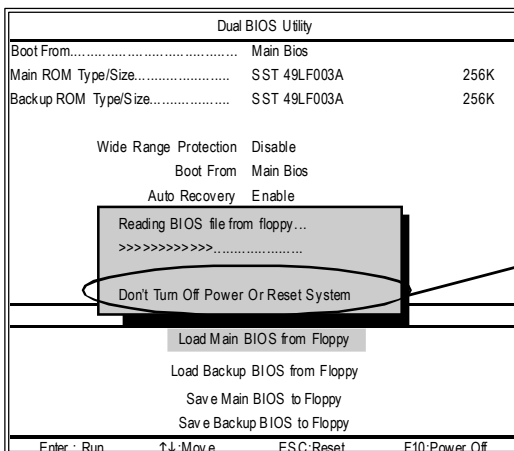


Do not turning off power or reset your system at this stage!!



Please do not take out the floppy disk when it begins flashing BIOS.


After BIOS file is read, you'll see a confirmation dialog box asking you "Are you sure to update BIOS?"

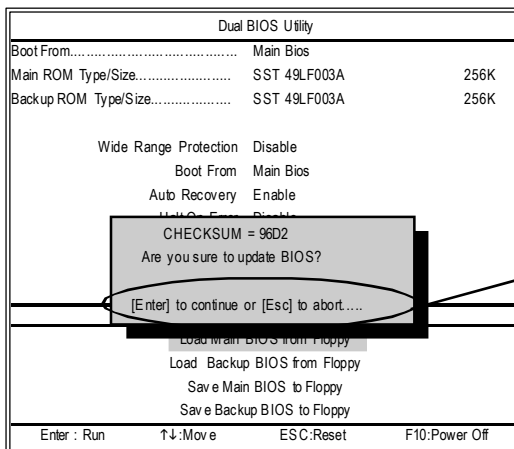

You can press "Enter" to continue updating BIOS or "ESC" to abort.

3. Press **Y** button on your keyboard after you are sure to update BIOS.

Then it will begin to update BIOS. The progress of updating BIOS will be displayed.

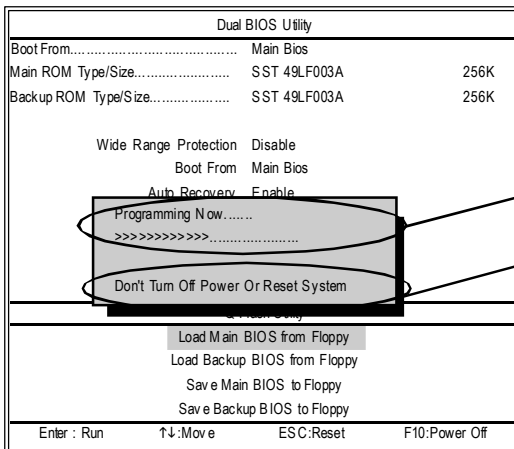

The progress of updating BIOS.




Do not turning off power or reset your system at this stage to avoid damaging your BIOS rom!!




Please do not take out the floppy disk when it begins flashing BIOS.

4. Press any keys to return to the Q-Flash™ menu when the BIOS updating procedure is completed.

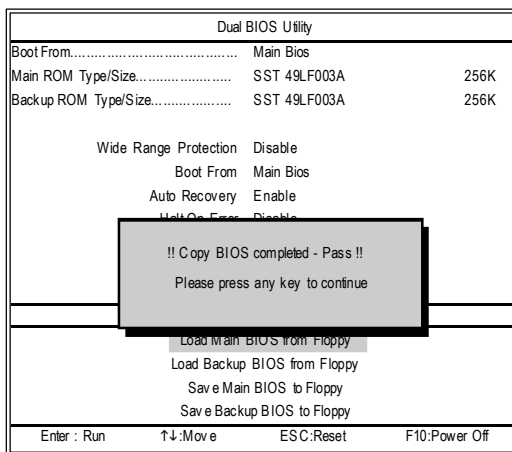


You can repeat Step 1 to 4 to flash the backup BIOS, too.

5. Press **Esc** and then **Y** button to exit the Q-Flash™ utility. The computer will restart automatically after you exit Q-Flash™.

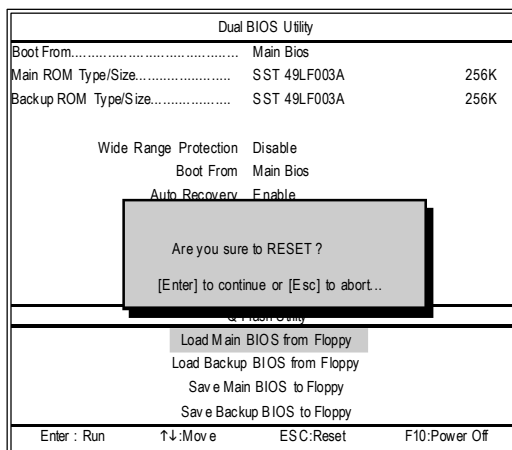


After system reboots, you may find the BIOS version on your bootscreen becomes the one you flashed.

The BIOS file becomes F12 after updating

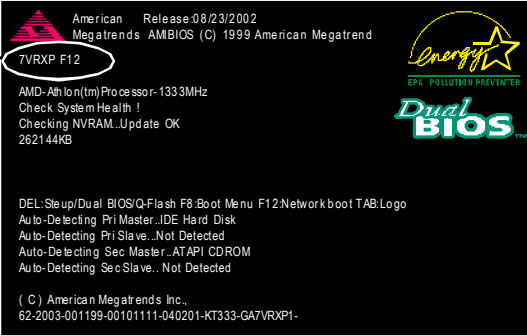

The following is an AMI BIOS menu screen. However, you can also find similar option in AWARD BIOS menu.

6. Press **Del** to enter BIOS menu after system reboots. When you are in BIOS menu, move to **Load Fail-Safe Defaults** item and press **Enter** to load BIOS Fail-Safe Defaults. Normally the system redetects all devices after BIOS has been upgraded. Therefore, we highly recommend reloading the BIOS defaults after BIOS has been upgraded.

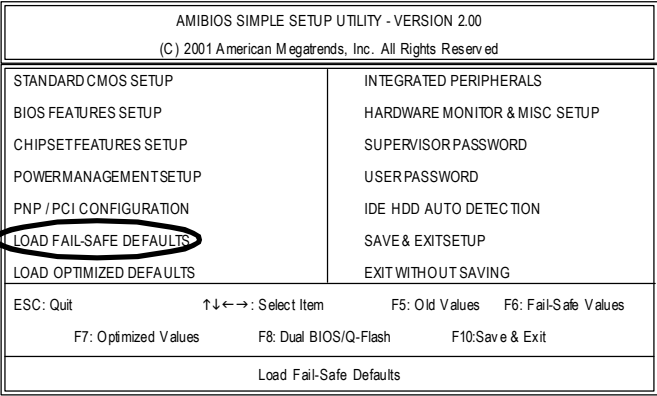

Press Enter on your keyboard

Press Y on your keyboard to load defaults.

AMIBIOS SIMPLE SETUP UTILITY - VERSION 2.00 (C) 2001 American Megatrends, Inc. All Rights Reserved	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWERMANAGEMENT	
PNP / PCI CONFIGURATION	
Load Fail-Safe Defaults (Y/N)? Y	
LOAD FAIL-SAFE DEFAULTS	SAVE & EXIT SETUP
LOAD OPTIMIZED DEFAULTS	EXIT WITHOUT SAVING
ESC: Quit ↑↓←→: Select Item F5: Old Values F6: Fail-Safe Values	
F7: Optimized Values F8: Dual BIOS/Q-Flash F10: Save & Exit	
Load Fail-Safe Defaults	

7. Select **Save & Exit Setup** item to save the settings to CMOS and exit the BIOS menu. System will reboot after you exit the BIOS menu. The procedure is completed.

Press Y on your keyboard to save and exit.

AMIBIOS SIMPLE SETUP UTILITY - VERSION 2.00 (C) 2001 American Megatrends, Inc. All Rights Reserved	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	HARDWARE MONITOR & MISC SETUP
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWERMANAGEMENT	
PNP / PCI CONFIGURATION	
SAVE to CMOS and EXIT (Y/N) ? Y	
LOAD FAIL-SAFE DEFAULTS	SAVE & EXIT SETUP
LOAD OPTIMIZED DEFAULTS	EXIT WITHOUT SAVING
ESC: Quit ↑↓←→: Select Item F5: Old Values F6: Fail-Safe Values	
F7: Optimized Values F8: Dual BIOS/Q-Flash F10: Save & Exit	
Load Fail-Safe Defaults	


Part Two:

Updating BIOS with Q-Flash™ Utility on Single-BIOS Motherboards.


This part guides users of single-BIOS motherboards how to update BIOS using the Q-Flash™ utility.

Entering the Q-Flash™ utility:

Step1: To use the Q-Flash™ utility, you must press **Del** in the bootscreen to enter BIOS menu.

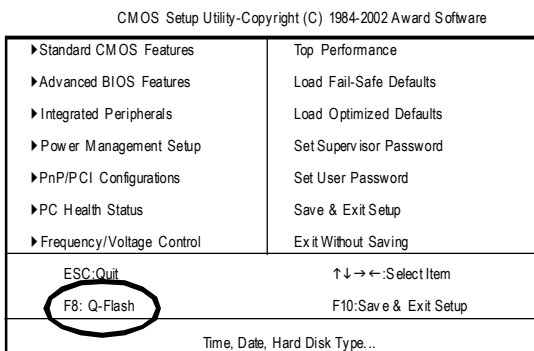


2. Press **F8** on your keyboard and then **Y** button to enter the Q-Flash™ utility.

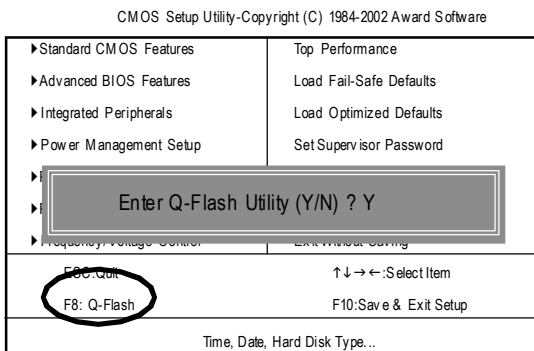

Exploring the Q-Flash™ utility screen

The Q-Flash™ BIOS utility screen consists of the following key components.

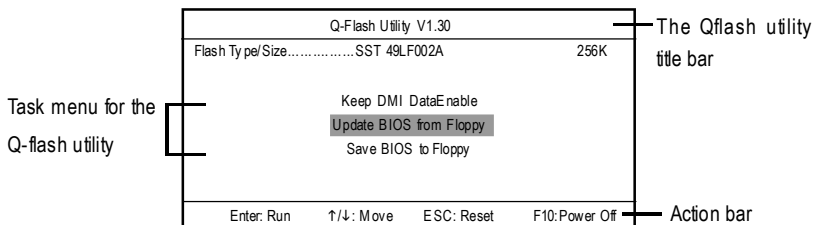

Task menu for the Q-Flash™ utility: Contains the names of three tasks. Blocking a task and pressing **Enter** key on your keyboard to enable execution of the task.

Action bar: Contains the names of four actions needed to operate the Q-Flash™ utility. Pressing the buttons mentioned on your keyboard to perform these actions.

Using the Q-Flash™ utility:


This section tells you how to update BIOS using the Q-Flash™ utility. As described in the "Before you begin" section above, you must prepare a floppy disk having the BIOS file for your motherboard and insert it to your computer. If you have already put the floppy disk into your system and have entered the Q-Flash™ utility, please follow the steps below to flash BIOS.

Steps:

1. Press arrow buttons on your keyboard to move the light bar to "Load Main BIOS from Floppy" item in the Q-Flash™ menu and press **Enter** button.




If you want to save the current BIOS for backup purpose, you can begin Step 1 with **Save Main BIOS to Floppy** item.

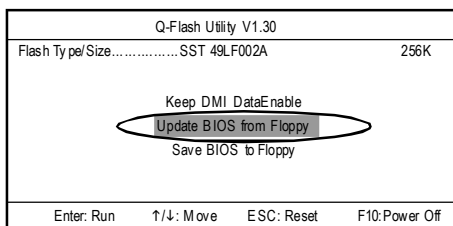

Later, you will see a box showing the BIOS files you downloaded to the floppy disk.
 In this example, we only download one BIOS for this board, 8GE800.F4 so only one BIOS file is listed.

2.Highlight the BIOS file you want to flash and press **Enter** button on your keyboard to enable reading from the BIOS file from the floppy.

 Please confirm again you have the correct BIOS file for your motherboard.

Q-Flash Utility V1.30

Flash Type/Size.....SST 49LF002A256K

Keep DMI DataEnable

Update BIOS from Floppy

1 File(s) found

8GE800.F4256K

Total Size: 1.39MFree Size: 1.14M

F5: RefreshDEL: Delete

BIOS file in the floppy.

Q-Flash Utility V1.30

Flash Type/Size.....SST 49LF002A256K


Keep DMI DataEnable

Reading BIOS file from floppy


>>>>>>

Don't turn off Power Or RESET System

Enter: Exit F5: Power OffESC: Abort F10: Power Off



 Do not turning power or reset your system at this stage!

After BIOS file is read, you'll see a confirmation dialog box asking you
 "Are you sure to update BIOS?"

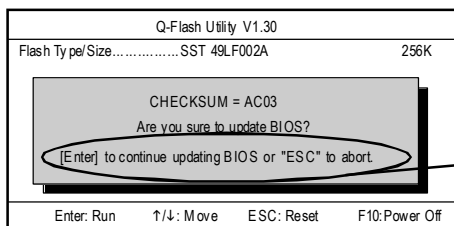


3. Press **Y** button if you make sure to update BIOS.


Then it will begin to update BIOS. The progress of updating will be shown at the same time.

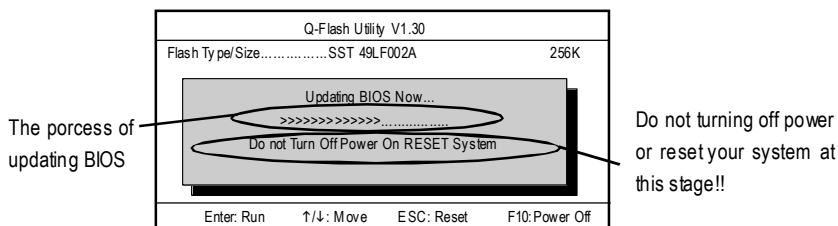

4. Press any keys to return to the Q-Flash™ menu when the BIOS updating procedure is completed.

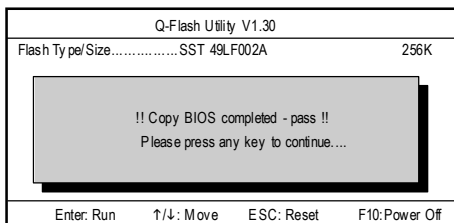

5. Press **Esc** and then **Enter** to exit the Q-Flash™ utility. System will restart.

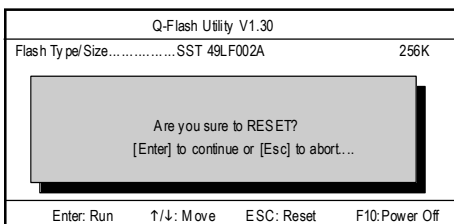

6. Press **Del** to enter BIOS menu after system reboots and load BIOS Fail-Safe Defaults. See how to load BIOS Fail-Safe Defaults, please kindly refer to Step 6 to 7 in Part One.


Congratulation!! You have updated BIOS successfully!!

Method 2: @ BIOS Utility


If you don't have DOS boot disk, we recommend that you used Gigabyte @BIOS™ program to flash BIOS.




(1)

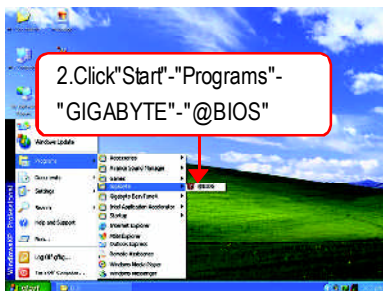

(2)

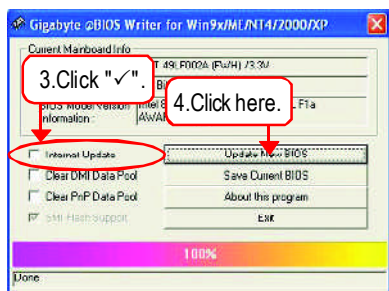

(3)

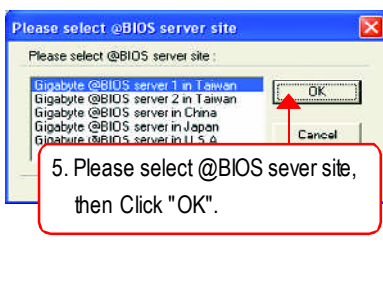

(4)

Methods and steps:

- I. Update BIOS through Internet
 - a. Click "Internet Update" icon
 - b. Click "Update New BIOS" icon
 - c. Select @BIOS™ sever
 - d. Select the exact model name on your motherboard
 - e. System will automatically download and update the BIOS.

II. Update BIOS NOT through Internet

- a. Do not click "Internet Update" icon
- b. Click "Update New BIOS"
- c. Please select "All Files" in dialog box while opening the old file.
- d. Please search for BIOS unzip file, downloading from internet or any other methods (such as: 8KNXP Ultra-64.F1).
- e. Complete update process following the instruction.

III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

Note:

- a. In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- b. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- c. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- d. Please note that any interruption during updating will cause system unbooted



2- / 4- / 6- / 8- Channel Audio Function Introduction

The installation of windows 98SE/2K/ME/XP is very simple. Please follow next step to install the function!

Stereo Speakers Connection and Settings:

We recommend that you use the speaker with amplifier to acquire the best sound effect if the stereo output is applied.


STEP 1:



Connect the stereo speakers or earphone to "Line Out".



Line Out

STEP 2 :

Following installation of the audio driver, you find a icon a Sound Effect  icon on the lower right hand taskbar. Click the icon to select the function.

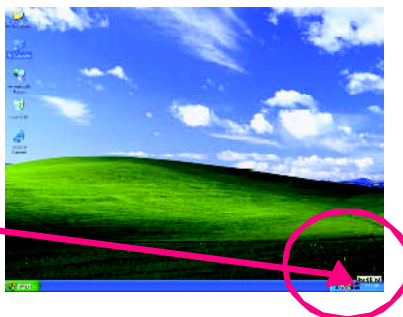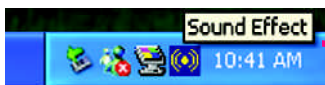

STEP 3:

Click "Speaker Configuration" then click on the left selection bar and select "2CH Speaker" to complete 2 channel audio configuration.



4 Channel Analog Audio Output Mode


STEP 1 :


Connect the front channels to "Line Out",
the rear channels to "Line In".



Line Out Line In


STEP 2 :

Following installation of the audio driver, you find a
icon a Sound Effect  on the lower right hand
taskbar. Click the icon to select the function.

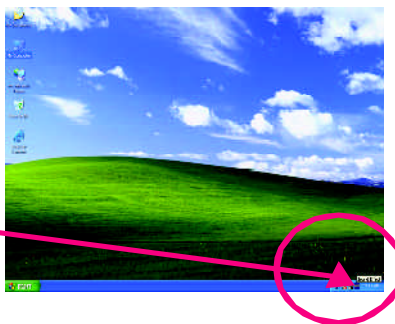

STEP 3 :

Click "Speaker Configuration" and select the "UAA
Function". Then click on the left selection bar and
select "4CH Speaker" to complete 4 channel audio
configuration.

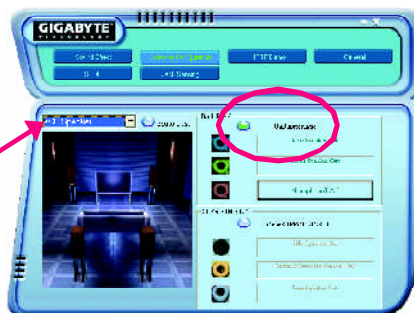


6 Channel Analog Audio Output Mode

Use the back audio panel to connect the audio output without any additional module.


STEP 1 :

Connect the front channels to "Line Out", the rear channels to "Line In", and the Center/Subwoofer channels to "MIC In".

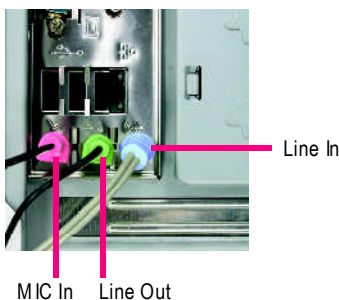


STEP 2 :

Following installation of the audio driver, you find a Sound Effect icon on the lower right hand taskbar. Click the icon to select the function.

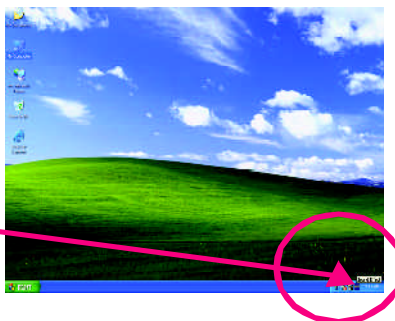

STEP 3 :

Click "Speaker Configuration" and select the "UAJ Function". Then click on the left selection bar and select "6CH Speaker" to complete 6 channel audio configuration.

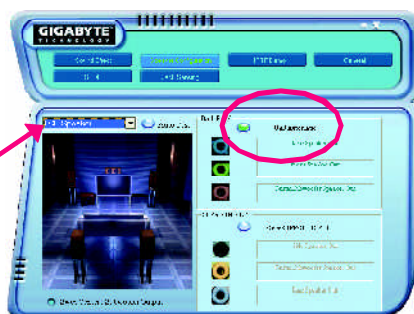


8 Channel Audio Setup (using Audio Combo Kit, Optional Device):

(Audio Combo Kit offers SPDIF output, an optical and coaxial cable and a Surround-Kit. The Surround-Kit offers R/L surround, center/subwoofer output and rear surround)




STEP 1 :

Secure the Audio Combo Kit at the panel on the back of the case.

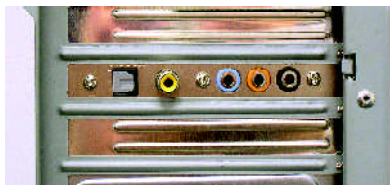

STEP 2 :

Connect the Surround-Kit to the SUR_CEN connector located on the motherboard.

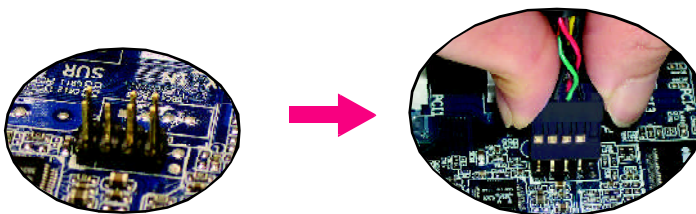


STEP 3 :

There are two methods of 8 channel audio configuration:


Method 1:

Connect the front channels to the "LINE OUT" port located on the audio panel and the rear channels to the Surround-Kit "REAR R/L" port. Connect the center/subwoofer channels to the Surround-Kit "SUB CENTER" and the R/L channels to the Surround-Kit "SUR BACK" port.

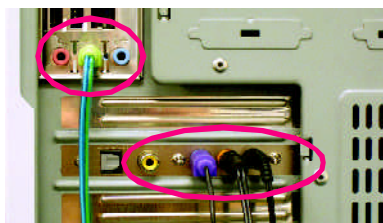


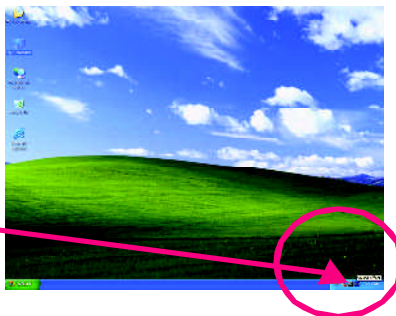
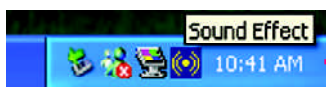
Method 2:

Connect the front channels to the "LINE OUT" port located on the audio panel and the rear channels to the "LINE IN" port. Connect the center/subwoofer channels to the "MIC IN" port located on the audio panel and the R/L channels to the Surround-Kit "SUR BACK" port. (This method requires UAJ function)

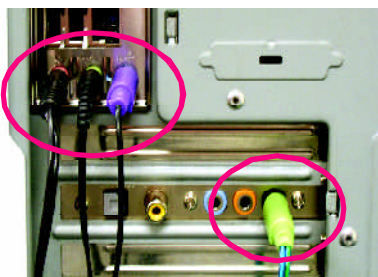

STEP 4 :

Following installation of the audio driver, you find a icon a Sound Effect  icon on the lower right hand taskbar. Click the icon to select the function.



STEP 5 :

Click "Speaker Configuration" and select both the "UAI Function" and "Only Surround-Kit". Then click on the left selection bar and select "8CH Speaker" to complete 8 channel audio configuration.



Sound Effect Configuration:

At the sound effect menu, users can adjust sound option settings as desired.




SPDIF Output Device (Optional Device)


A "SPDIF output" device is available on the motherboard. Cable with rear bracket is provided and could link to the "SPDIF output" connector (As picture.) For the further linkage to decoder, rear bracket provides coaxial cable and Fiber connecting port.



1. Connect the SPDIF output device to the rear bracket of PC, and fix it with screw.

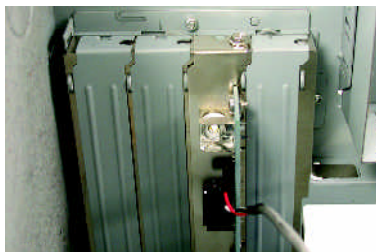

2. Connect SPDIF device to the motherboard.

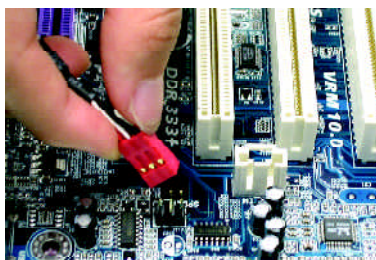

3. Connect SPDIF to the SPDIF decoder.



Jack-Sensing and UAJ Introduction

Jack-Sensing provides audio connectors error-detection function.




Install Microsoft DirectX8.1 or later version before to enable Jack-Sensing support for Windows 98/98SE/2000/ME.

Jack-Sensing includes 2 parts: AUTO and MANUAL. Following is an example for 2 channels (Windows XP):

Introduction of audio connectors

You may connect CDROM, Walkman or others audio input devices to Line In jack, speakers, ear-phone or others output devices to Line Out jack, and microphone to MIC In jack.

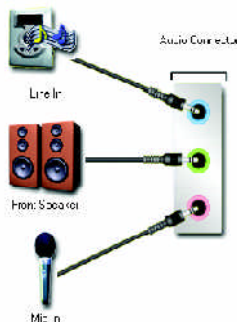

Auto-detecting:

Please connect the devices to the right jacks as above. A window will appear as right picture if you setup the devices properly.

Please note that 3D audio function will only appear when 3D audio inputs.




If you set wrong with the connectors, the warning message will come out as right picture.



Manual setting:

If the device picture shows different from what you set, please press "Manual Selection" to set.

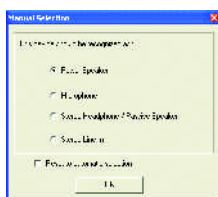

UAJ Introduction

UAJ (Universal Audio Jack) has a very smart feature: It will switch signal automatically when user plugs his audio device to the wrong jack (Line-in/ Line-out). That means users do not need to worry the audio device should be plug in Line-in or Line-out jack, the device will work perfectly after UAJ is activated.

Enable UAJ function:

You can click "UAJ Automatic" button to enable UAJ function.



Xpress Recovery Introduction

What is Xpress Recovery ^{(Note)?}

Xpress Recovery utility is an utility for backing up and restoring O.S. partition . If the hard drive can not work properly, you can restore it to the original state.



1. It supports FAT16, FAT32, NTFS format.
2. It must be connected to IDE1 Master .
3. It's only allows you to install one O.S .
4. It must be used with IDE hard disk supporting HPA .
5. The first partition must be set as the boot partition. When the boot partition is backed up, please do not change the its size.
6. It is not recommend to use Xpress Recovery if you had ever used Ghost to return boot manager to NTFS format.




1. System data and hard disk's reading/writing speed will affect backing up speed.
2. We recommend that you install Xpress Recovery immediately after installing O.S , drivers and applications.

How to use the Xpress Recovery

There are two ways to enter the Xpress Recovery utility. (see the below)

1. Text Mode: press F9 during powering on the computer.

Press F9 during powering on the computer .

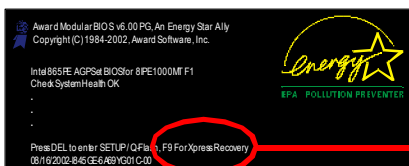

F9 For Xpress Recovery

2. BMP Mode: boot from CD-ROM

Please go to "Advanced BIOS" setting menu and set boot from CD-ROM , then save and exit the BIOS menu . Later, please insert MB driver CD into your drive when "Boot from CD:" appears at the bottom of the screen , press any key to enter Xpress Recovery.




Boot from CD:

(Note) Not all motherboard have this function.

You can highlight the item by using the arrows keys on your keyboard and enter key to enter the menu.

Text Mode:

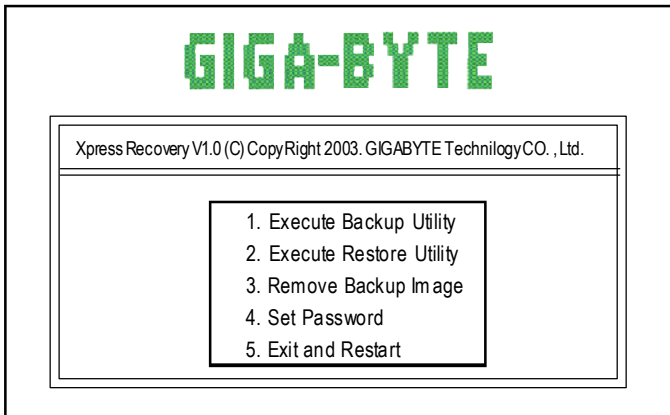

BMP Mode:



If you ever entered Xpress Recovery by booting from CD-ROM, you'll still be directed to BMP mode by pressing F9 in the bootup screen.

1. Execute Backup Utility:

Press B to Backup your System or Esc to Exit

The Backup utility will scan the system automatically and back up it.

The backed up data will be saved as an hidden image .

2. Execute Restore Utility:

This program will recover your system to factory default.

Press R to recover your system.

Press Esc to exit

Restore the backup image to the original state.

3. Remove Backup Image:

Are you sure to remove backup image? (Y/N)

Remove the backup image.

4. Set Password:

Please input the password(a~z or 0~9) or press ESC to exit.

This password must 4-16 characters.

You can set a password for Xpress Recovery to protect your hard disk data. Once this is done, password input will be required to enter Xpress Recovery during the next system restart. If you wish to remove the need for password entry, please click "Set Password" and under New Password/Confirm Password, make sure there is no entry and then click "Enter" to remove this step.

5. Exit and Restart:

Exit and restart your computer.

Chapter 5 Appendix


Install Drivers




Pictures below are shown in Windows XP (CD ver. 2.5)


Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.


INSTALL CHIPSET DRIVER


This page shows the drivers that need to be installed for the system. Click each item to install the driver manually or switch to the  to install the drivers automatically.

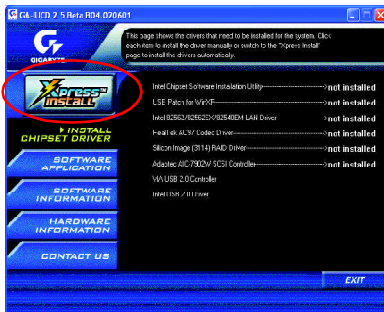

Message: Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

The "Xpress Install" uses the "Click and Go" technology to install the drivers automatically. Just select the drivers you want then click the "GO" button. The  will execute the installation for you by itself.

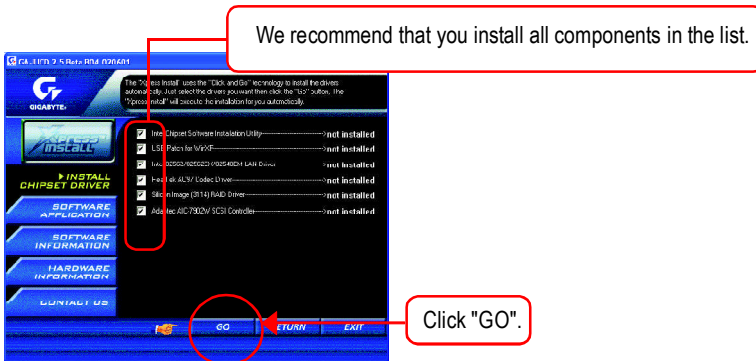

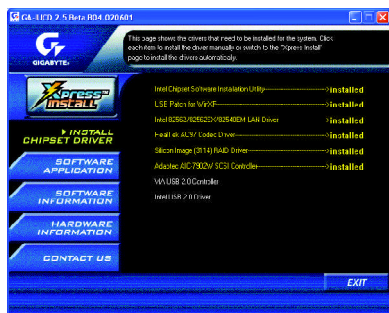

Driver install finished!! you have to reboot system!!

Item Description

- Intel Chipset Software Installation Utility
Tell the operating system how the chipset components will be configured.
- USB Patch for WinXP
This patch driver can help you to resolve the USB device wake up S3 hang up issue in XP.
- Intel 82562/82562EX/82540EM LAN Driver
For Intel(R) PRO/10/100/1000/Wireless Ethernet connections.
- RealTek AC97 Codec Driver
For Intel® ICH/ICH2/ICH4/ICH5/ICH5R AC97 audio.
- Silicon Image(3114) RAID Driver
Serial-ATA RAID Driver from Silicon Image.
- Adaptec AIC-7902W SCSI Controller
(If you enable the HostRAID, this item will change to "Adaptec SCSI HostRAID Driver")
For Adaptec AIC-7902W SCSI Controller.
- VIA USB2.0 Controller
For VIA USB2.0 Controller.
- Intel USB 2.0 Driver
It is recommended that you use the Microsoft Windows update for the most updated driver for XP/2K.




For USB2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB2.0 driver).

The drivers below are not supported by Win98/ME:

1. Adaptec SCSI / Hostraid Driver
2. 6300ESB Raid Driver
3. USB 2.0 Driver

SOFTWARE APPLICATION


This page reveals the value-added software developed by Gigabyte and its worldwide partners.

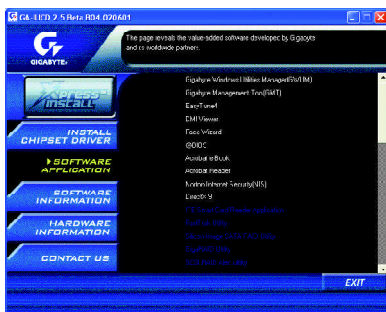

- **Gigabyte Windows Utilities Manager (GWUM)**
This utility can integrate the Gigabyte's applications in the system tray.
- **Gigabyte Management Tool (GMT)**
A useful tool which can manage the computer via the network.
- **EasyTune4**
Powerful utility that integrates the overclocking and hardware monitoring functions.
- **DMI Viewer**
Windows based utility which is used to browse the DMI/SMBIOS information of the system.
- **Face Wizard**
New utility for adding BIOS logo.
- **@BIOS**
Gigabyte windows flash BIOS utility.
- **Acrobat e-Book**
Useful utility from Adobe.
- **Acrobat Reader**
Popular utility from Adobe for reading .PDF file format documents.
- **Norton Internet Security (NIS)**
Integrated utility which includes anti-virus, ad control, etc
- **DirectX 9**
Install Microsoft DirectX 9 to enable 3D hardware acceleration that support for operating system to achieve better 3D performance.


SOFTWARE INFORMATION

This page list the contects of softwares and drivers in this CD title.

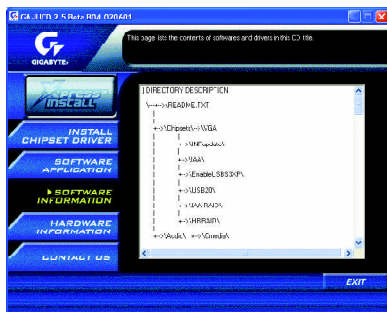

HARDWARE INFORMATION

This page lists all device you have for this motherboard.

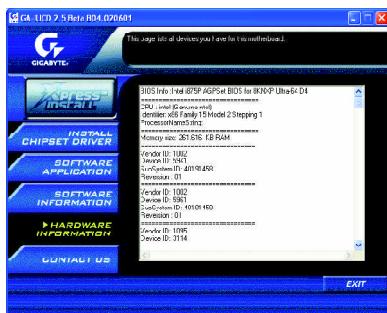

CONTACT US

Please see the last page for details.



FAQ

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to <http://tw.giga-byte.com/faq/faq.htm>

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why?

Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down?

Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

Question 3: Why cannot I use all functions in EasyTune™ 4?

Answer: The availability of the listed functions in EasyTune™ 4 depends on the MB chipset. If the chipset doesn't support certain functions in EasyTune™ 4, these functions will be locked automatically and you will not be able to use them.

Question 4: Why do I fail to install RAID and ATA drivers under Win 2000 and XP on boards that support RAID function after I connect the boot HDD to IDE3 or IDE4 ?

Answer: First of all, you need to save some files in the CD-ROM to a floppy disk before installing drivers. You also need to go through some rather different steps in the installation process. Therefore, we suggest that you refer to the installation steps in the RAID manual at our website. (Please download it at http://tw.giga-byte.com/support/user_pdf/raid_manual.pdf)

Question 5: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

1. Turn off power.
2. Disconnect the power cord from MB.
3. Take out the battery gently and put it aside for about 10 minutes (Or you can use a metal object to connect the positive and negative pins in the battery holder to make them short for one minute).
4. Re-insert the battery to the battery holder.
5. Connect power cord to MB again and turn on power.
6. Press Del to enter BIOS and load Fail-Safe Defaults.
7. Save changes and reboot the system.

Question 6: Why does system seem unstable after updating BIOS?

Answer: Please remember to load Fail-Safe Defaults (Or Load BIOS Defaults) after flashing BIOS. However, if the system instability still remains, please clear CMOS to solve the problem.

Question 7: Why do I still get a weak sound after turning up the speaker to the maximum volume?

Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 8: How do I disable onboard VGA card in order to add an external VGA card?

Answer: Gigabyte motherboards will auto-detect the external VGA card after it is plugged in, so you don't need to change any setting manually to disable the onboard VGA.

Question 9: Why cannot I use the IDE 2?

Answer: Please refer to the user manual and check whether you have connected any cable that is not provided with the motherboard package to the USB Over Current pin in the Front USB Panel. If the cable is your own cable, please remove it from this pin and do not connect any of your own cables to it.

Question 10: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

→AMI BIOS Beep Codes

*Computer gives 1 short beep when system boots successfully.

*Except for beep code 8, these codes are always fatal.

- 1 beep Refresh failure
- 2 beeps Parity error
- 3 beeps Base 64K memory failure
- 4 beeps Timer not operational
- 5 beeps Processor error
- 6 beeps 8042 - gate A20 failure
- 7 beeps Processor exception interrupt error
- 8 beeps Display memory read/write failure
- 9 beeps ROM checksum error
- 10 beeps CMOS shutdown register read/write error
- 11 beeps Cache memory bad

→ AWARD BIOS Beep Codes

- 1 short: System boots successfully
- 2 short: CMOS setting error
- 1 long 1 short: DRAM or M/B error
- 1 long 2 short: Monitor or display card error
- 1 long 3 short: Keyboard error
- 1 long 9 short: BIOS ROM error
- Continuous long beeps: DRAM error
- Continuous short beeps: Power error

Question 11: How to set in the BIOS in order to bootup from SATA HDDs by either RAID or ATA mode?

Answer: Please set in the BIOS as follow:

1. Advanced BIOS features--> SATA/RAID/SCSI boot order: "SATA"
2. Advanced BIOS features--> First boot device: "SCSI"
3. Integrated Peripherals--> Onboard H/W Serial ATA: "enable"

Then it depends on the SATA mode that you need to set "RAID" to RAID mode or "BASE" to normal ATA mode in the item named Serial ATA function.

Question 12: For the M/B which have RAID function, how to set in the BIOS in order to bootup from IDE3, 4 by either RAID or ATA mode?

Answer: Please set in the BIOS as follow:

1. Advanced BIOS features-->(SATA)/RAID/SCSI boot order: "SATA"
2. Advanced BIOS features--> First boot device: "SCSI"
3. Integrated Peripherals--> Onboard H/W ATA/RAID: "enable"

Then it depends on the RAID mode that you need to set "RAID" to RAID mode or "ATA" to normal ATA mode in the item named RAID controller function.

Question 13: How to set in the BIOS to bootup from the IDE/ SCSI/ RAID card ?

Answer: Please set in the BIOS as follow:


1. Advanced BIOS features-->(SATA)/RAID/SCSI boot order: "SCSI"
2. Advanced BIOS features--> First boot device: "SCSI"


Then it depends on the mode(RAID or ATA) that you need to set in RAID/ SCSI BIOS.

Troubleshooting



If you encounter any trouble during boot up, please follow the troubleshooting procedures .

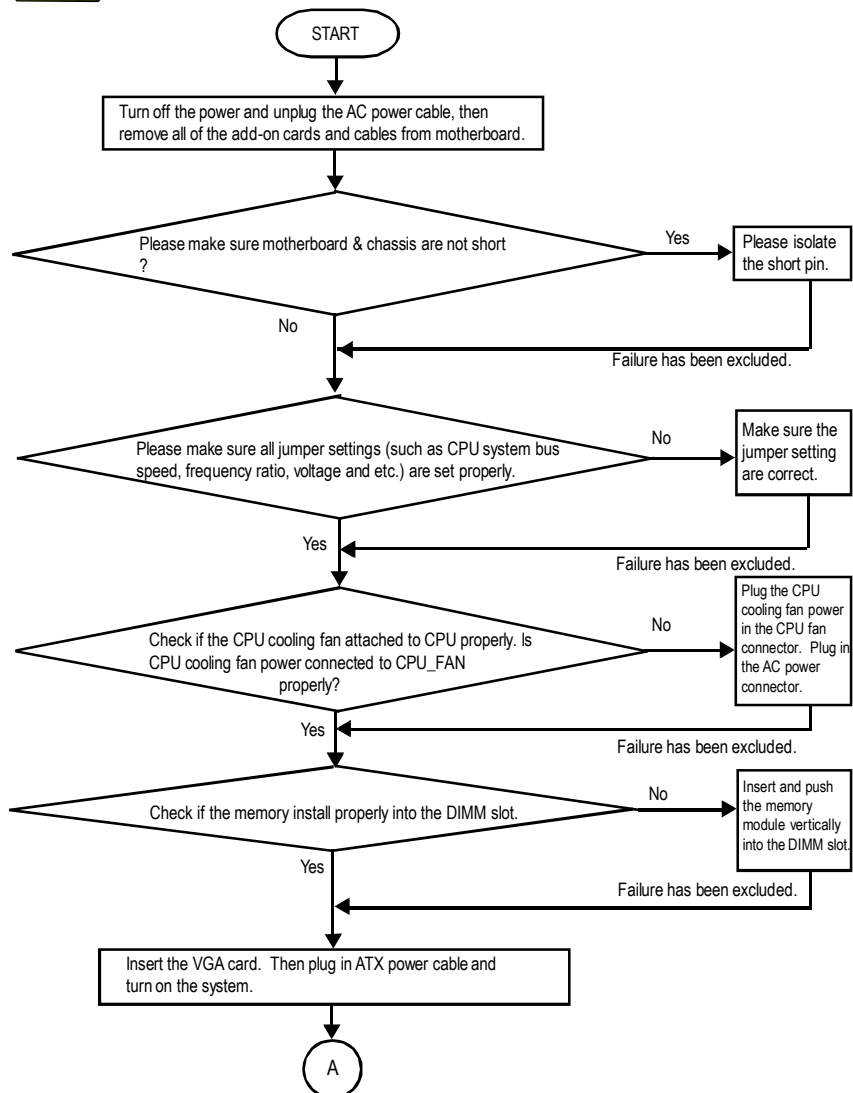

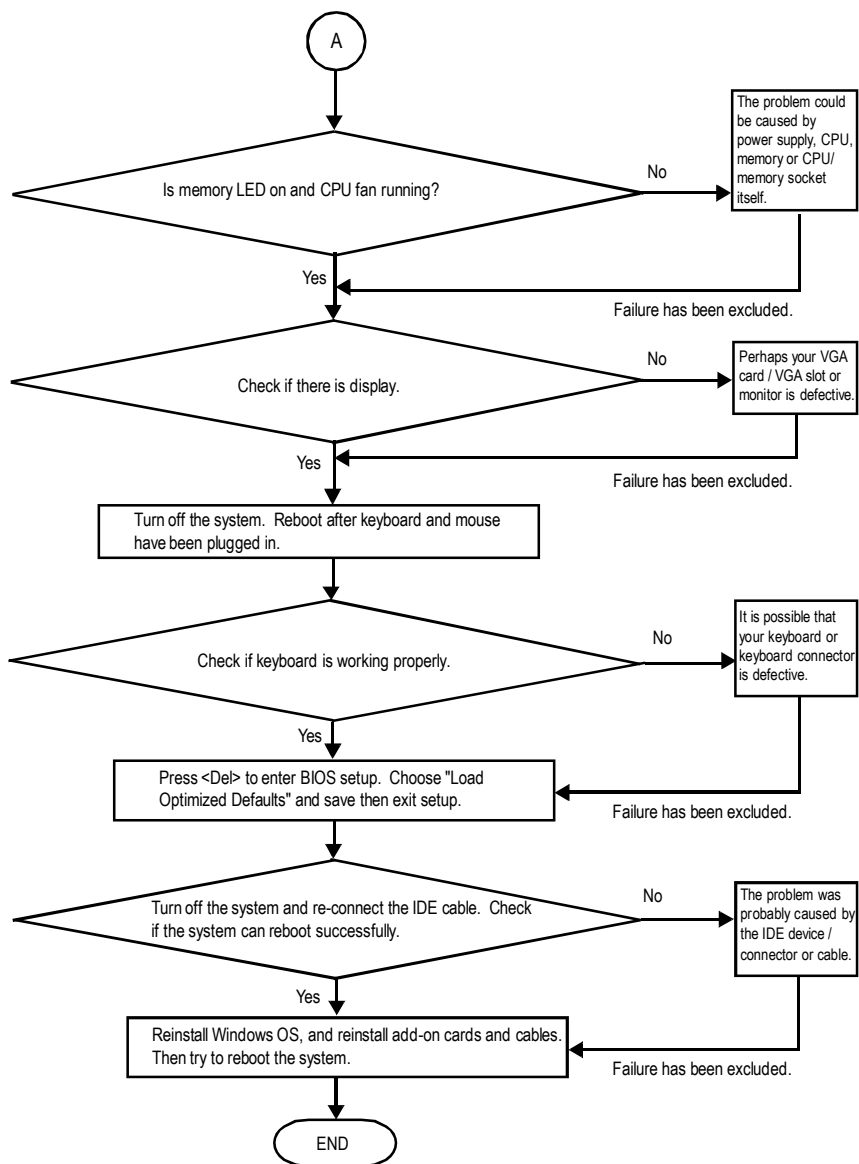

If the above procedure unable to solve your problem, please contact with your local retailer or national distributor for help. Or, you could submit your question to the service mail via Gigabyte website technical support zone (<http://www.gigabyte.com.tw>). The appropriate response will be provided ASAP.

Technical Support/RMA Sheet

Customer/Country:	Company:	Phone No.:
Contact Person:	E-mail Add. :	

Model name/Lot Number:	PCB revision:
BIOS version:	O.S./A.S.:

Hardware Configuration	Mfs.	Model name	Size:	Driver/Utility:
CPU				
Memory Brand				
Video Card				
Audio Card				
HDD				
CD-ROM / DVD-ROM				
Modem				
Network				
AMR / CNR				
Keyboard				
Mouse				
Power supply				
Other Device				

Problem Description:

Acronyms

Acronyms	Meaning
ACPI	Advanced Configuration and Power Interface
APM	Advanced Power Management
AGP	Accelerated Graphics Port
AMR	Audio Modem Riser
ACR	Advanced Communications Riser
BIOS	Basic Input / Output System
CPU	Central Processing Unit
CMOS	Complementary Metal Oxide Semiconductor
CRIMM	Continuity RIMM
CNR	Communication and Networking Riser
DMA	Direct Memory Access
DMI	Desktop Management Interface
DIMM	Dual Inline Memory Module
DRM	Dual Retention Mechanism
DRAM	Dynamic Random Access Memory
DDR	Double Data Rate
ECP	Extended Capabilities Port
ESCD	Extended System Configuration Data
ECC	Error Checking and Correcting
EMC	Electromagnetic Compatibility
EPP	Enhanced Parallel Port
ESD	Electrostatic Discharge
FDD	Floppy Disk Device
FSB	Front Side Bus
HDD	Hard Disk Device
IDE	Integrated Dual Channel Enhanced
IRQ	Interrupt Request

to be continued.....

Acronyms	Meaning
IOAPIC	Input Output Advanced Programmable Input Controller
ISA	Industry Standard Architecture
LAN	Local Area Network
I/O	Input / Output
LBA	Logical Block Addressing
LED	Light Emitting Diode
MHz	Megahertz
MIDI	Musical Instrument Digital Interface
MTH	Memory Translator Hub
MPT	Memory Protocol Translator
NIC	Network Interface Card
OS	Operating System
OEM	Original Equipment Manufacturer
PAC	PCI A.G.P. Controller
POST	Power-On Self Test
PCI	Peripheral Component Interconnect
RIMM	Rambus in-line Memory Module
SCI	Special Circumstance Instructions
SECC	Single Edge Contact Cartridge
SRAM	Static Random Access Memory

[illegible]

CONTACT US

Contact us via the information in this page all over the world.

• Taiwan

Gigabyte Technology Co., Ltd.
 Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei Hsien,
 Taiwan, R.O.C.
 Tel: 886 (2) 8912-4888
 Fax: 886 (2) 8912-4004
 Tech. Support:
<http://tw.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://www.gigabyte.com.tw>

• USA

G.B.T. INC.
 Address: 17358 Railroad St, City of Industry, CA 91748.
 Tel: 1 (626) 854-9338
 Fax: 1 (626) 854-9339
 Tech. Support:
<http://www.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://www.giga-byte.com>

• Germany

G.B.T. Technology Trading GmbH
 Tel: 49-40-2533040
 49-01803-428468 (Tech.)
 Fax: 49-40-25492343 (Sales)
 49-01803-428329 (Tech.)
 Tech. Support:
<http://de.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://www.gigabyte.de>

• Japan

Nippon Giga-Byte Corporation
 Website: <http://www.gigabyte.co.jp>

• U.K

G.B.T. TECH. CO. LTD.
 Tel: 44-1908-362700
 Fax: 44-1908-362709
 Tech. Support:
<http://uk.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://uk.giga-byte.com>

• The Netherlands

Giga-Byte Technology B.V.
 Address: Verdunplein 8 5627 SZ, Eindhoven, The Netherlands
 Tel: +31 40 290 2088
 NL Tech.Support : 0900-GIGABYTE (0900-44422983, ☎ 0.2/M)
 BE Tech.Support : 0900-84034 (☎ 0.4/M)
 Fax: +31 40 290 2089
 Tech. Support:
<http://nz.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://www.giga-byte.nl>

• China

NINGBO G.B.T. Tech. Trading CO., Ltd.
 Tech. Support:
<http://cn.giga-byte.com/TechSupport/ServiceCenter.htm>
 Non-Tech. Support (Sales/Marketing issues):
<http://ggts.gigabyte.com.tw/nontech.asp>
 Website: <http://www.gigabyte.com.cn>
Beijing
 Tel: 86-10-82856054, 86-10-82856064, 86-10-82856094
 Fax: 86-10-82856575
Chengdu
 Tel: 86-28-85236930
 Fax: 86-28-85256822
GuangZhou
 Tel: 86-20-87586273
 Fax: 86-20-87544306
Shanghai
 Tel: 86-21-64737410
 Fax: 86-21-64453227
Shenyang
 Tel: 86-24-23960918, 86-24-23960893
Wuhan
 Tel: 86-27-87854385, 86-27-87854802
 Fax: 86-27-87854031
Xian
 Tel: 86-29-5531943
 Fax: 86-29-5539821
