GA-945GCM-S2

Intel[®] Core[™] 2 Extreme dual-core / Core[™] 2 Duo / Intel® Pentium® D / Pentium® 4 / Celeron® D LGA775 Processor Motherboard

User's Manual

Rev. 3901 12ME-945GCM2R-3901R



* The WEEE marking on the product indicates this product must not be disposed of with user's other household waste and must be handed over to a designated collection point for the recycling of waste electrical and electronic equipment!! * The WEEE marking applies only in European Union's member states.

			:	
	Name : Timmy Huang	Date : Jan. 12, 2007	(D)	(Stamp)
Date: Jan. 12, 2007	Signature: Tunny Huang	Manufacturer/Importer		
Signature: $Eric Lu$	General and Safety requirements for uninterruptible power systems (UPS)	similar 🗆 EN 50091-1	Safety of household and similar electrical appliances	EN 60335
Representative Person's Name: ERIC LU	including electrical business equipment	variatus for neral use	electronic and related apparatus for household and similar general use	
including that may cause undesired operation.	re mentioned product e with LVD 2006/95/EC Codet for Information to booldary any inmant	es the c / standa	The manufacturer with the actual req	
subject to the following two conditions: (1) This device may not cause harmful and (2) this device must accept any inference received	(EC conformity marking)			I CE marking
This device complies with part 15 of the FCC Rules. Operation is		ns; Equipment sution from als	DIN VDE 0855 Cabled distribution systems; Equipment part 10 for receiving and/or distribution from part 12 sound and television signals	DIN VDE 08 part 10 part 12
(a), Class B Digital Device		asurement actoristics of juipment	Limits and methods of measurement of radio disturbance characteristics of information technology equipment	× EN 55022
FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109	EMC requirements for uninterruptible power systems (UPS)	erence of EN 50091- 2 issociated	Immunity from radio interference of broadcast receivers and associated equipment	🗆 EN 55020
Model Number: GA-945GCM-S2 Conforms to the following specifications:	Immunity requirements for household appliances tools and similar apparatus	asurement II EN 55014-2 acteristics of ninaries	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	🗆 EN 55015
Product Name: Motherboard	Generic immunity standard Part 2: Industrial environment	efectrical EN 50082-2	portable tools and similar electrical apparatus	
hereby declares that the product	Generic immunity standard Part 1: Residual, commercial and light industry	asurement EN 50082-1 acteristics of ances.	Limits and methods of measurement of radio disturbance characteristics of household electrical appliances.	EN 55014-1
City of Industry, CA 91748 Phone/Fax No: (818) 854-9338/ (818) 854-9339	Information Technology equipment-Immunity characteristic-a-Lmits and methods of measurement	asurement IX EN 55024 scteristics of issociated	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	□ EN 55013
Address: 17358 Railroad Street	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"	edical (ISM) 🛛 🖾 EN 61000-3-3	industrial, scientific and medical (ISM) high frequency equipment	
Responsible Party Name: G.B.T. INC. (U.S.A.)	Disturbances in supply systems caused		Limits and methods of measurement of radio disturbance characteristics of	EN 55011
	ective	(reference to the specification under which conformity is declared) in accordance with 89/336 EEC-EMC Directive	(reference t in	
	v which it refers)	(description of the apparatus, system, installation to which it refers) Motherboard GA-945GCM-S2	(description	
Per FCC Part 2 Section 2.1077(a)	Germany	G.B.T. Technology Trading GMbH Ausschlager Weg 41, 1F 20537 Hamburg, Germany declare that the product	Auss	
DECLARATION OF CONFORMITY	nity	Declaration of Conformity We, Manufacturer/Importer (tul address)		

Copyright

© 2007 GIGA-BYTE TECHNOLOGY CO., LTD. All rights reserved. The trademarks mentioned in the manual are legally registered to their respective companies.

Notice

The written content provided with this product is the property of Gigabyte. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without Gigabyte's prior written permission. Specifications and features are subject to change without prior notice.

Product Manual Classification

In order to assist in the use of this product, Gigabyte has categorized the user manual in the following:

- For detailed product information and specifications, please carefully read the "Product User Manual".
- For detailed information related to Gigabyte's unique features, please go to "Technology Guide" section on Gigabyte's website to read or download the information you need.

For more product details, please click onto Gigabyte's website at www.gigabyte.com.tw

Table of Contents

Item Check	dist		6
Optional Ac	cesso	ries	6
GA-945G0	CM-S2	Motherboard Layout	7
Chapter 1	Hardw	vare Installation	9
	1-1	Considerations Prior to Installation	. 9
	1-2	Feature Summary	10
	1-3	Installation of the CPU and CPU Cooler	12
	1-3	B-1 Installation of the CPU	12
	1-3	B-2 Installation of the CPU Cooler	13
	1-4	Installation of Memory	
	1-5	Installation of Expansion Cards	16
	1-6	I/O Back Panel Introduction	
	1-7	Connectors Introduction	18
Chapter 2	BIOS	Setup	29
	The N	lain Menu (For example: BIOS Ver. : D2)	30
	2-1	Standard CMOS Features	32
	2-2	Advanced BIOS Features	34
	2-3	Integrated Peripherals	36
	2-4	Power Management Setup	40
	2-5	PnP/PCI Configurations	42
	2-6	PC Health Status	43
	2-7	Frequency/Voltage Control	45
	2-8	Load Fail-Safe Defaults	
	2-9	Load Optimized Defaults	47
	2-10	Set Supervisor/User Password	
	2-11	Save & Exit Setup	49
	2-12	Exit Without Saving	49

Chapter 3	Insta	II Drivers	51
	3-1	Install Chipset Drivers	51
	3-2	Software Applications	52
	3-3	Driver CD Information	52
	3-4	Hardware Information	53
	3-5	Contact Us	53
Chapter 4	Appe	ndix	55
Chapter 4	Appe 4-1	ndix Unique Software Utilities	
Chapter 4	4-1		55
Chapter 4	4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction -2 Xpress Recovery2 Introduction	55 55 56
Chapter 4	4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction	55 55 56
Chapter 4	4-1 4-1 4-1 4-1	Unique Software Utilities -1 EasyTune 5 Introduction -2 Xpress Recovery2 Introduction	55 55 56 58


Item Checklist

- ☑ IDE Cable x 1 and FDD Cable x 1
- SATA 3Gb/s Cable x 2
- ☑ I/O Shield


* The items listed above are for reference only, and are subject to change without notice.

Optional Accessories

- 2 Ports USB 2.0 Cable (Part Number: 12CR1-1UB030-51/R)
- 4 Ports USB 2.0 Cable (Part Number: 12CR1-1UB030-21/R)
- S/PDIF In and Out Cable (Part Number: 12CR1-1SPINO-11/R)
- e-SATA Cable (Part Number: 12CF1-3SATPW-11R)
- COM Port Cable (Part Number: 12CF1-1CM001-31/12CF1-1CM001-12R)

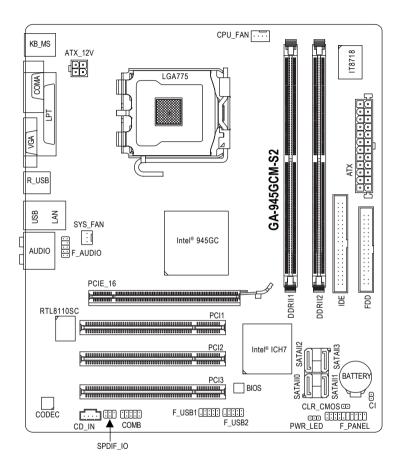

Block Diagram

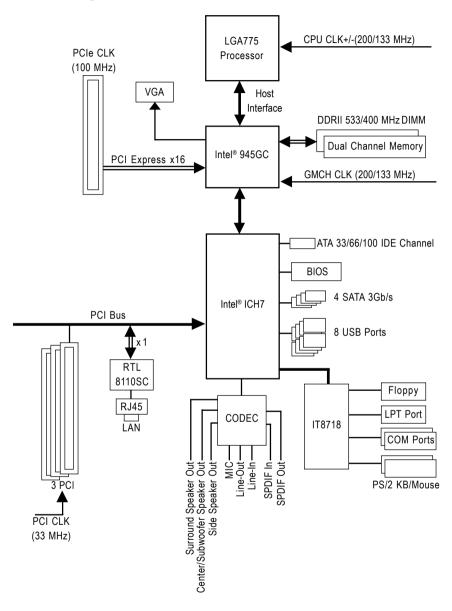

Chapter 1 Hardware Installation

1-1 Considerations Prior to Installation

Preparing Your Computer

The motherboard contains numerous delicate electronic circuits and components which can become damaged as a result of electrostatic discharge (ESD). Thus, prior to installation, please follow the instructions below:

- 1. Please turn off the computer and unplug its power cord.
- 2. When handling the motherboard, avoid touching any metal leads or connectors.
- It is best to wear an electrostatic discharge (ESD) cuff when handling electronic components (CPU, RAM).
- 4. Prior to installing the electronic components, please have these items on top of an antistatic pad or within a electrostatic shielding container.
- Please verify that the power supply is switched off before unplugging the power supply connector from the motherboard.

Installation Notices

- 1. Prior to installation, please do not remove the stickers on the motherboard. These stickers are required for warranty validation.
- 2. Prior to the installation of the motherboard or any hardware, please first carefully read the information in the provided manual.
- 3. Before using the product, please verify that all cables and power connectors are connected.
- 4. To prevent damage to the motherboard, please do not allow screws to come in contact with the motherboard circuit or its components.
- 5. Please make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- 6. Please do not place the computer system on an uneven surface.
- 7. Turning on the computer power during the installation process can lead to damage to system components as well as physical harm to the user.
- 8. If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

Instances of Non-Warranty

- 1. Damage due to natural disaster, accident or human cause.
- 2. Damage as a result of violating the conditions recommended in the user manual.
- 3. Damage due to improper installation.
- 4. Damage due to use of uncertified components.
- 5. Damage due to use exceeding the permitted parameters.
- 6. Product determined to be an unofficial Gigabyte product.

1-2 Feature Summary

CPU	٠	LGA775 for Intel [®] Core [™] 2 Extreme dual-core / Core [™] 2 Duo / Pentium [®] D /
		Pentium [®] 4 / Celeron [®] D
	٠	L2 cache varies with CPU
Front Side Bus	٠	Supports 800/533 MHz FSB
Chipset	٠	Northbridge: Intel [®] 945GC Express Chipset
	٠	Southbridge: Intel [®] ICH7
LAN	٠	Onboard RTL8110SC chip (10/100/1000 Mbit)
Audio	٠	Onboard Realtek ALC888 CODEC chip
	٠	Supports High Definition Audio
	٠	Supports 2 / 4 / 6 / 8 channel audio
	٠	Supports S/PDIF In/Out connection
	٠	Supports CD In connection
Storage	٠	Intel® ICH7 Southbrigde
		- 1 FDD connector, allowing connection of 1 FDD device
		- 1 IDE connector with Ultra ATA 33/66/100 support,
		allowing connection of 2 IDE devices
		- 4 SATA 3Gb/s connectors, allowing connection of 4 SATA 3Gb/s devices
O.S Support	٠	Microsoft Windows [®] 2000/XP
Memory	٠	2 DDRII DIMM memory slots (supports up to 2 GB memory)
	٠	Supports dual channel DDRII 533/400 unbuffered DIMMs
	٠	Supports 1.8V DDRII DIMMs
Expanstion Slots	٠	1 PCI Express x16 slot
	•	3 PCI slots
Internal Connectors	٠	1 24-pin ATX power connector
	٠	1 4-pin ATX 12V power connector
	٠	1 floppy connector
	•	1 IDE connector
	•	4 SATA 3Gb/s connectors
	•	1 CPU fan connector
	•	1 system fan connector
	•	1 front panel connector
	•	1 front audio connector
	•	1 CD In connector
	٠	1 S/PDIF In/Out connector
	٠	2 USB 2.0/1.1 connectors for additional 4 ports by cables
	٠	1 COMB connector
	٠	1 Chassis Intrusion connector

• 1 power LED connector

Rear Panel I/O	1 PS/2 keyboard port
	 1 PS/2 mouse port
	 1 parallel port
	 1 serial port
	 1 VGA port
	4 USB 2.0/1.1 ports 1 D145 ast
	1 RJ-45 port
	6 audio jacks (Line In / Line Out / MIC In/Surround Speaker Out (Rear
	Speaker Out)/Center/Subwoofer Speaker Out/Side Speaker Out)
I/O Control	• IT8718 chip
Hardware Monitor	 System voltage detection
	CPU temperature detection
	CPU / System fan speed detection
	CPU warning temperature
	CPU / System fan failure warning
	CPU smart fan control
BIOS	1 4 Mbit flash ROM
	 Use of licensed AWARD BIOS
	 PnP 1.0a, DMI 2.0, SM BIOS 2.3, ACPI 1.0b
Additional Features	Supports @BIOS
	Supports Download Center
	Supports Q-Flash
	 Supports EasyTune (only supports Hardware Monitor function) (Note)
	Supports Xpress Install
	Supports Xpress Recovery2
	Supports Xpress BIOS Rescue
Bundle Software	Norton Internet Security (OEM revision)
Form Factor	Micro ATX form factor; 22.0cm x 24.4cm

(Note) EasyTune functions may vary depending on different motherboards.

1-3 Installation of the CPU and CPU Cooler

Before installing the CPU, please comply with the following conditions:

- 1. Please make sure that the motherboard supports the CPU.
- Please take note of the one indented corner of the CPU. If you install the CPU in the wrong direction, the CPU will not insert properly. If this occurs, please change the insert direction of the CPU.
- 3. Please add an even layer of heat sink paste between the CPU and CPU cooler.
- 4. Please make sure the CPU cooler is installed on the CPU prior to system use, otherwise overheating and permanent damage of the CPU may occur.
- 5. Please set the CPU host frequency in accordance with the processor specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the required standards for the peripherals. If you wish to set the frequency beyond the proper specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.



AUTION

HT functionality requirement content :

Enabling the functionality of Hyper-Threading Technology for your computer system requires all of the following platform components:

- CPU: An Intel® Pentium 4 Processor with HT Technology
- Chipset: An Intel® Chipset that supports HT Technology
- BIOS: A BIOS that supports HT Technology and has it enabled
- OS: An operation system that has optimizations for HT Technology

1-3-1 Installation of the CPU




Fig. 1 Gently lift the metal lever located on the CPU socket to the upright position.



Fig. 2 Remove the plastic covering on the CPU socket.




Fig. 3 Notice the small gold colored triangle located on the edge of the CPU socket. Align the indented corner of the

CPU with the triangle and gently insert the CPU into position. (Grasping the CPU firmly between your thumb and forefinger, carefully place it into the socket in a straight and downwards motion. Avoid twisting or bending motions that might cause damage to the CPU during installation.)



Fig. 4 Once the CPU is properly inserted, please replace the load plate and push the metal lever back into its original position.

1-3-2 Installation of the CPU Cooler



Fig.1

Please apply an even layer of CPU cooler paste on the surface of the installed CPU.



Fig. 3

Place the CPU cooler atop the CPU and make sure the push pins aim to the pin hole on the motherboard.Pressing down the push pins diagonally.




Fig. 5

Please check the back of motherboard after installing. If the push pin is inserted as the picture, the installation is complete.




Fig. 2

(Turning the push pin along the direction of arrow is to remove the CPU cooler, on the contrary, is to install.) Please note the direction of arrow sign on the male push pin doesn't face inwards before installation. (This instruction is only for Intel boxed fan)



Fig. 4

Please make sure the Male and Female push pin are joined closely. (for detailed installation instructions, please refer to the CPU cooler installation section of the user manual)



Fig. 6

Finally, please attach the power connector of the CPU cooler to the CPU fan header located on the motherboard.



The CPU cooler may adhere to the CPU as a result of hardening of the heat paste. To prevent such an occurrence, it is suggested that either thermal tape rather than heat paste be used for heat dissipation or using extreme care when removing the CPU cooler.


1-4 Installation of Memory



Before installing the memory modules, please comply with the following conditions:

- Please make sure that the memory used is supported by the motherboard. It is recommended that memory of similar capacity, specifications and brand be used.
- 2. Before installing or removing memory modules, please make sure that the computer power is switched off to prevent hardware damage.
- 3. Memory modules have a foolproof insertion design. A memory module can be installed in only one direction. If you are unable to insert the module, please switch the direction.

The motherboard supports DDRII memory modules, whereby BIOS will automatically detect memory capacity and specifications. Memory modules are designed so that they can be inserted only in one direction. The memory capacity used can differ with each slot.

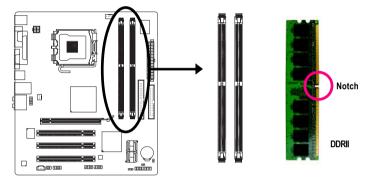

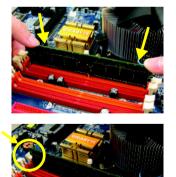


Fig.1

The DIMM socket has a notch, so the DIMM memory module can only fit in one direction. Insert the DIMM memory module vertically into the DIMM socket. Then push it down.

Fig.2

Close the plastic clip at both edges of the DIMM sockets to lock the DIMM module.

Reverse the installation steps when you wish to remove the DIMM module.



Dual Channel Memory Configuration

The GA-945GCM-S2 supports the Dual Channel Technology. After operating the Dual Channel Technology, the bandwidth of memory bus will double.

The GA-945GCM-S2 includes 2 DIMM sockets.

If you want to operate the Dual Channel Technology, please note the following explanations due to the limitation of Intel chipset specifications.


- 1. Dual Channel mode will not be enabled if only one DDRII memory module is installed.
- To enable Dual Channel mode with two memory modules (it is recommended to use memory modules of identical brand, size, chips, and speed), you must install them into DDRII1 and DDRII2 memory sockets.

1-5 Installation of Expansion Cards

To install your expansion card, follow the steps below.

- 1. Disconnect your system from its power source and read the expansion card's installation manual before installing the expansion card in the computer.
- 2. Remove your computer's chassis cover, screws and slot bracket from the computer. Ground yourself to prevent damage to your computer resulting from Electrostatic discharge (ESD).
- 3. Press the expansion card firmly into the expansion slot in the motherboard.
- 4. Make sure the metal contacts on the card are fully seated in the slot.
- 5. Replace the screw to secure the slot bracket of the expansion card.
- 6. Replace your computer's chassis cover.
- 7. Power on the computer, if necessary, configure required settings for the expansion card in system BIOS Setup.
- 8. Install related driver in the operating system.

For example: Installing a PCI Express x16 VGA card:

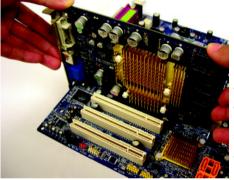


When installing the graphics card, push down on the top edge of the card until it is fully inserted into the PCI Express x16 slot. Make sure the card is securely seated in the slot and does not rock.



When removing the graphics card, gently push back on the black lever on the slot and then lift the card straight out from the slot.

1-6 I/O Back Panel Introduction



PS/2 Keyboard and PS/2 Mouse Connector

To install a PS/2 port keyboard and mouse, plug the mouse to the upper port (green) and the keyboard to the lower port (purple).

Parallel Port

The parallel port allows connection of a printer, scanner and other peripheral devices.

Serial Port

Connects to serial-based mouse or data processing devices.

VGA Port

Monitor can be connected to VGA port.

OUSB Port

Before you connect your device(s) into USB connector(s), please make sure your device(s) such as USB keyboard, mouse, scanner, zip, speaker...etc. have a standard USB interface. Also make sure your OS supports USB controller. If your OS does not support USB controller, please contact OS vendor for possible patch or driver upgrade. For more information please contact your OS or device(s) vendors.

LAN Port

The provided Internet connection is Gigabit Ethernet , providing data transfer speeds of 10/100/ 1000 Mbps.

Center/Subwoofer Speaker Out

The default Center/Subwoofer Speaker Out jack. Center/Subwoofer speakers can be connected to Center/Subwoofer Speaker Out jack.

Surround Speaker Out (Rear Speaker Out)

The default Surround Speaker Out (Rear Speaker Out) jack. Rear surround speakers can be connected to Surround Speaker Out (Rear Speaker Out) jack.

Side Speaker Out

The default Side Speaker Out jack. Surround side speakers can be connected to Side Speaker Out jack.

Line In

The default Line In jack. Devices like CD-ROM, walkman etc. can be connected to Line In jack.

Ine Out (Front Speaker Out)

The default Line Out (Front Speaker Out) jack. Stereo speakers, earphone or front surround speakers can be connected to Line Out (Front Speaker Out) jack.


MIC In

The default MIC In jack. Microphone must be connected to MIC In jack.



In addition to the default speakers settings, the ••• audio jacks can be reconfigured to perform different functions via the audio software. Only microphones still MUST be connected to the default Mic In jack (•). Please refer to the 2-/4-/6-/8- channel audio setup steps for detailed software configuration information.

1-7 Connectors Introduction

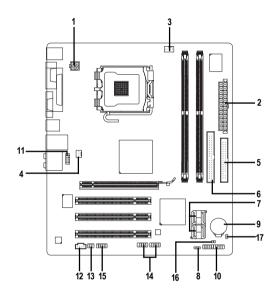


1)	ATX_12V	10)	F_PANEL
2)	ATX (Power Connector)	11)	F_AUDIO
3)	CPU_FAN	12)	CD_IN
4)	SYS_FAN	13)	SPDIF_IO
5)	FDD	14)	F_USB1 / F_USB2
6)	IDE	15)	СОМВ
7)	SATAII0 / 1 / 2 / 3	16)	CLR_CMOS
8)	PWR_LED	17)	CI
9)	BATTERY		

1/2) ATX_12V / ATX (Power Connector)

With the use of the power connector, the power supply can supply enough stable power to all the components on the motherboard. Before connecting the power connector, please make sure that all components and devices are properly installed. Align the power connector with its proper location on the motherboard and connect tightly.

The ATX_12V power connector mainly supplies power to the CPU. If the ATX_12V power connector is not connected, the system will not start.

Caution! Please use a power supply that is able to handle the system voltage requirements. It is recommended that a power supply that can withstand high power consumption be used (300W or greater). If a power supply is used that does not provide the required power, the result can lead to an unstable system or a system that is unable to start. If you use a power supply that provides a 24-pin ATX power connector, please remove the small cover on the power connector on the motherboard before plugging in the power cord; otherwise, please do not remove it.

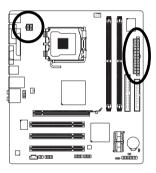



Pin No.	Definition
1	GND
2	GND
3	+12V
4	+12V

		$\overline{}$)
12	•		24
		•	
		•	
	•	•	
	•	•	
	•	•	h
		•	μ
		•	
		•	
	•	•	
		•	
1	•	•	13
		27)
	AT	ΓX	


Pin No.	Definition	Pin No.	Definition
1	3.3V	13	3.3V
2	3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON(soft On/Off)
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power Good	20	-5V
9	5V SB(stand by +5V)	21	+5V
10	+12V	22	+5V
11	+12V(Only for 24-pin ATX)	23	+5V (Only for 24-pin ATX)
12	3.3V(Only for 24-pin ATX)	24	GND(Only for 24-pin ATX)

3/4) CPU_FAN / SYS_FAN (Cooler Fan Power Connector)

The cooler fan power connector supplies a +12V power voltage via a 3-pin/4-pin(CPU FAN) power connector and possesses a foolproof connection design.

Most coolers are designed with color-coded power connector wires. A red power connector wire indicates a positive connection and requires a +12V power voltage. The black connector wire is the ground wire (GND).

Remember to connect the CPU/system fan cable to the CPU_FAN/SYS_FAN connector to prevent CPU damage or system hanging caused by overheating.

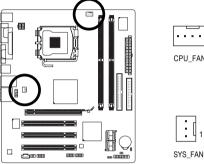

•••• 1
CPU_FAN

CPU_FAN :		
Pin No.	Definition	
1	GND	
2	+12V / Speed Control	
3	Sense	
4	Speed Control	

SYS_FAN :		
Pin No.	Definition	
1	GND	
2	+12V	
3	Sense	

5) FDD (Floppy Connector)

The FDD connector is used to connect the FDD cable while the other end of the cable connects to the FDD drive. The types of FDD drives supported are: 360 KB, 720 KB, 1.2 MB, 1.44 MB and 2.88 MB. Before attaching the FDD cable, please take note of the foolproof groove in the FDD connector.


33

n . 8 n n . 8 . n

n . n . п 2 8 =


.


n .

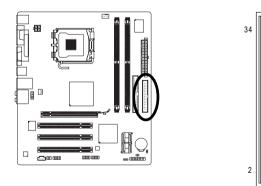

6) IDE (IDE Connector)


An IDE device connects to the computer via an IDE connector. One IDE connector can connect to one IDE cable, and the single IDE cable can then connect to two IDE devices (hard drive or optical drive). If you wish to connect two IDE devices, please set the jumper on one IDE device as Master and the other as Slave (for information on settings, please refer to the instructions located on the IDE device). Before attaching the IDE cable, please take note of the foolproof groove in the IDE connector.

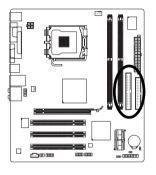




7) SATAII0 / 1 / 2 / 3 (SATA 3Gb/s Connector, Controlled by ICH7)

SATA 3Gb/s can provide up to 300 MB/s transfer rate. Please refer to the BIOS setting for the SATA 3Gb/s and install the proper driver in order to work properly.

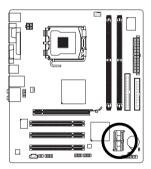




Pin No.	Definition
1	GND
2	TXP
3	TXN
4	GND
5	RXN
6	RXP
7	GND

8) PWR_LED


The PWR_LED connector is connected with the system power indicator to indicate whether the system is on/off. It will blink when the system enters suspend mode(S1).

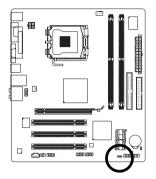


1 •••

Pin No.	Definition
1	MPD+
2	MPD-
3	MPD-

9) BATTERY

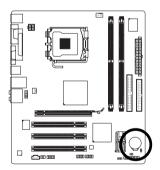




- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the manufacturer's instructions.


If you want to erase CMOS ...

- 1. Turn off the computer and unplug the power cord.
- Gently take out the battery and put it aside for about one minute. (Or you can use a metal object to connect the positive and negative pins in the battery holder to make them short for five seconds.)
- 3. Re-install the battery.
- 4. Plug the power cord in and turn on the computer.

10) F_PANEL (Front Panel Jumper)

Please connect the power LED, PC speaker, reset switch and power switch etc. of your chassis front panel to the F_PANEL connector according to the pin assignment below.

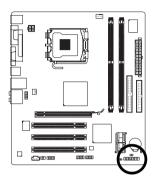


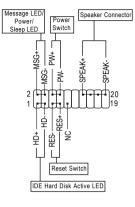

MSG (Message LED/Power/Sleep LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
PW (Power Switch)	Open: Normal
	Close: Power On/Off
SPEAK (Speaker Connector)	Pin 1: Power
	Pin 2- Pin 3: NC
	Pin 4: Data(-)
HD (IDE Hard Disk Active LED)	Pin 1: LED anode(+)
	Pin 2: LED cathode(-)
RES (Reset Switch)	Open: Normal
	Close: Reset Hardware System
NC	NC

11) F_AUDIO (Front Audio Connector)

This connector supports either HD (High Definition) or AC97 front panel audio module. If you wish to use the front audio function, connect the front panel audio module to this connector. Check the pin assignments carefully while you connect the front panel audio module. Incorrect connection between the module and connector will make the audio device unable to work or even damage it. For optional front panel audio module, please contact your chassis manufacturer.

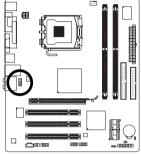


	10 • • •	Ţ		
HD Audio:			AC'97 Audi	0:
Pin No.	Definition		Pin No.	Definition
1	MIC2_L		1	MIC
2 GND			2	GND
3	3 MIC2_R		3	MIC Power
4 -ACZ_DET 4 NC				NC
5 LINE2_R 5 Line Out (F				Line Out (R)
6 FSENSE1			6	NC
7 FAUDIO_JD			7	NC
8 No Pin			8	No Pin
9	LINE2_L		9	Line Out (L)
10	FSENSE2		10	NC



By default, the audio driver is configured to support HD Audio. To connect an AC97 front panel audio module to this connector, please refer to the instructions on page 66 about the software settings.

12) CD_IN (CD IN Connector)

Connect CD-ROM or DVD-ROM audio out to the connector.

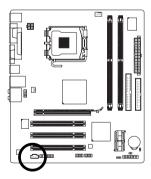




Pin No.	Definition	
1	CD-L	
2	GND	
3	GND	
4	CD-R	

13) SPDIF_IO (S/PDIF In/Out Connector)

The S/PDIF output is capable of providing digital audio to external speakers or compressed AC3 data to an external Dolby Digital Decoder. Use this feature only when your stereo system has digital input function. Use S/PDIF IN feature only when your device has digital output function. Be careful with the polarity of the SPDIF_IO connector. Check the pin assignment carefully while you connect the S/PDIF cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional S/PDIF cable, please contact your local dealer.

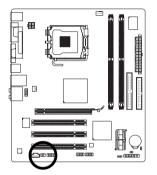




Pin No.	Definition
1	Power
2	No Pin
3	SPDIF
4	SPDIFI
5	GND
6	GND

14) F_ USB1 / F_USB2 (Front USB Connector)

Be careful with the polarity of the front USB connector. Check the pin assignment carefully while you connect the front USB cable, incorrect connection between the cable and connector will make the device unable to work or even damage it. For optional front USB cable, please contact your local dealer.

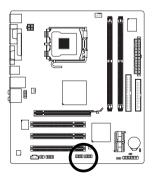




Pin No.	Definition
1	Power (5V)
2	Power (5V)
3	USB DX-
4	USB Dy-
5	USB DX+
6	USB Dy+
7	GND
8	GND
9	No Pin
10	NC

15) COMB (COMB Connector)

Be careful with the polarity of the COMB connector. Check the pin assignments while you connect the COMB cable. Please contact your nearest dealer for optional COMB cable.

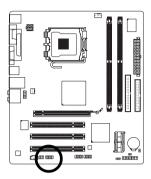




Pin No.	Definition
1	NDCDB-
2	NSINB
3	NSOUTB
4	NDTRB-
5	GND
6	NDSRB-
7	NRTSB-
8	NCTSB-
9	NRIB-
10	No Pin

16) CLR_CMOS (Clear CMOS)


You may clear the CMOS data to its default values by this header. To clear CMOS, temporarily short the two pins. Default doesn't include the jumper to avoid improper use of this header.

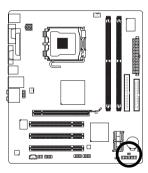



17) CI (Chassis Intrusion, Case Open)

This 2-pin connector allows your system to detect if the chassis cover is removed. You can check the "Case Opened" status in BIOS Setup.

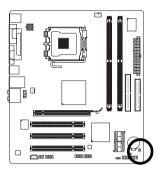

÷

Pin No.	Definition
1	Signal
2	GND

Chapter 2 BIOS Setup

BIOS (Basic Input and Output System) includes a CMOS SETUP utility which allows user to configure required settings or to activate certain system features.

The CMOS SETUP saves the configuration in the CMOS SRAM of the motherboard.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS SRAM.

When the power is turned on, press the button during the BIOS POST (Power-On Self Test) will take you to the CMOS SETUP screen. You can enter the BIOS setup screen by pressing "Ctrl + F1". If you wish to upgrade to a new BIOS, either GIGABYTE's Q-Flash or @BIOS utility can be used.

Q-Flash allows the user to quickly and easily update or backup BIOS without entering the operating system.

@BIOS is a Windows-based utility that does not require users to boot to DOS before upgrading BIOS but directly download and update BIOS from the Internet.

$\overline{<\!\!\uparrow\!\!>\!\!<\!\!\downarrow\!\!>\!\!<\!\!\leftrightarrow\!\!>\!\!<\!\!\rightarrow\!\!>}$	Move to select item	
<enter></enter>	Select Item	
<esc></esc>	Main Menu - Quit and not save changes into CMOS Status Page Setup Menu	
	and Option Page Setup Menu - Exit current page and return to Main Menu	
<page up=""></page>	Increase the numeric value or make changes	
<page down=""></page>	Decrease the numeric value or make changes	
<f1></f1>	General help, only for Status Page Setup Menu and Option Page Setup Menu	
<f2></f2>	Item Help	
<f5></f5>	Restore the previous CMOS value from CMOS, only for Option Page Setup	
	Menu	
<f6></f6>	Load the Fail-safe default CMOS value from BIOS default table	
<f7></f7>	Load the Optimized Defaults	
<f8></f8>	Q-Flash utility	
<f9></f9>	System Information	
<f10></f10>	Save all the CMOS changes, only for Main Menu	

CONTROL KEYS

Main Menu

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press <F1> to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.



Because BIOS flashing is potentially risky, please do it with caution and avoid inadequate operation that may result in system malfunction.

<F12>: Boot Menu

Select boot sequence for onboard (or add-on cards) device.



Use < \uparrow > or < \downarrow > to select a device, then press enter to accept . Press <ESC> to exit this menu.

Boot Menu
== Select a Boot First device ==
Floppy
LS120
Hard Disk
CDROM
ZIP
USB-FDD
USB-ZIP
USB-CDROM
USB-HDD
LAN

The Main Menu (For example: BIOS Ver. : D2)

Once you enter Award BIOS CMOS Setup Utility, the Main Menu (as figure below) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.

CMOS Setup Utility-Copyrigh	t (C) 1984-2006 Award Software	
Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Management Setup PnP/PCI Configurations PC Health Status	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving	
 Frequency/Voltage Control 		
ESC: Quit	↑↓→←: Select Item	
F8: Q-Flash	F10: Save & Exit Setup	
Time, Date, Hard Disk Type		



- 1. If you don't find the settings you want, press "Ctrl+F1" to access advanced options.
- Select the Load Optimized Defaults item in the BIOS Setup when somehow the system is not stable as usual. This action makes the system reset to the default settings for stability.
- The BIOS Setup menus described in this chapter are for reference only and may differ from the exact settings for your motherboard.

Standard CMOS Features

This setup page includes all the items in standard compatible BIOS.

Advanced BIOS Features

This setup page includes all the items of Award special enhanced features.

Integrated Peripherals

This setup page includes all onboard peripherals.

Power Management Setup

This setup page includes all the items of Green function features.

PnP/PCI Configuration

This setup page includes all the configurations of PCI & PnP ISA resources.

PC Health Status

This setup page is the System auto detect Temperature, voltage, fan, speed.

Frequency/Voltage Control

This setup page is control CPU clock and frequency ratio.

■ Load Fail-Safe Defaults

Fail-Safe Defaults indicates the value of the system parameters which the system would be in safe configuration.

Load Optimized Defaults

Optimized Defaults indicates the value of the system parameters which the system would be in best performance configuration.

Set Supervisor Password

Change, set, or disable password. It allows you to limit access to the system and Setup, or just to Setup.

Set User Password

Change, set, or disable password. It allows you to limit access to the system.

Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

2-1 Standard CMOS Features

CMOS Set	up Utility-Copyright (C) 1984-2006 Award Standard CMOS Features	l Software
Date (mm:dd:yy)	Fri, Nov 3 2006	Item Help
Time (hh:mm:ss)	14:31:24	Menu Level▶
 Time (hh:mm:ss) IDE Channel 0 Master IDE Channel 2 Master IDE Channel 2 Master IDE Channel 3 Master IDE Channel 3 Master IDE Channel 3 Slave Drive A Floppy 3 Mode Support Halt On Base Memory Extended Memory 	14:31:24 [None] [None] [None] [None] [None] [1.44M, 3.5"] [Disabled] [All, But Keyboard] 640K 239M	Menu Level
↑↓→←: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

ං Date

The date format is <week>, <month>, <day>, <year>.

- Week The week, from Sun to Sat, determined by the BIOS and is display-only
- ✤ Month The month, Jan. Through Dec.
- Day The day, from 1 to 31 (or the maximum allowed in the month)
- → Year The year, from 2000 through 2099
- ං Time

The times format in <hour> <minute> <second>. The time is calculated base on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00.

☞ IDE Channel 0 Master/Slave

- ▶ IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.
- ▶ IDE Channel 0 Master/Slave

IDE devices setup. You can use one of three methods:

- Allows BIOS to automatically detect IDE/SATA devices during POST. (Default value)
- None Select this if no IDE/SATA devices are used and the system will skip the automatic detection step and allow for faster system start up.
- Manual User can manually input the correct settings.
- Access Mode Use this to set the access mode for the hard drive. The four options are: CHS/LBA/Large/Auto(default:Auto)
- ➤ Capacity Capacity of currectly installed hard drive.

☞ IDE Channel 2, 3 Master/Slave

- >> IDE HDD Auto-Detection Press "Enter" to select this option for automatic device detection.
- ➡ Extended IDE Drive You can use one of the two methods:
 - Auto Allows BIOS to automatically detect IDE/SATA devices during POST(default)
 - None Select this if no IDE/SATA devices are used and the system will skip the automatic detection step and allow for faster system start up.

- Access Mode Use this to set the access mode for the hard drive. The two options are: Large/Auto(default:Auto)
- Capacity Capacity of currently installed hard drive.

Hard drive information should be labeled on the outside drive casing. Enter the appropriate option based on this information.

- Cylinder Number of cylinders
- ➡ Head Number of heads
- Precomp
 Write precomp
- Landing Zone Landing zone
- Sector Number of sectors

っ Drive A

The category identifies the types of floppy disk drive A that has been installed in the computer.

- ► None No floppy drive installed
- ▶ 360K, 5.25" 5.25 inch PC-type standard drive; 360 KB capacity.
- ▶ 1.2M, 5.25" 5.25 inch AT-type high-density drive; 1.2 MB capacity

(3.5 inch when 3 Mode is Enabled).

- ▶ 720K, 3.5" 3.5 inch double-sided drive; 720 KB capacity
- ▶ 1.44M, 3.5" 3.5 inch double-sided drive; 1.44 MB capacity.
- >> 2.88M, 3.5" 3.5 inch double-sided drive; 2.88 MB capacity.

∽ Floppy 3 Mode Support (for Japan Area)

- Disabled Normal Floppy Drive. (Default value)
- Drive A Drive A is 3 mode Floppy Drive.

・ Halt on

The category determines whether the computer will stop if an error is detected during power up.

- No Errors The system boot will not stop for any error that may be detected and you will be prompted.
 All Errors Whenever the BIOS detects a non-fatal error the system will be stopped.
- ➡ All, But Keyboard The system boot will not stop for a keyboard error; it will stop for all other errors. (Default value)
- >> All, But Diskette The system boot will not stop for a disk error; it will stop for all other errors.
- All, But Disk/Key The system boot will not stop for a keyboard or disk error; it will stop for all other errors.

ං Memory

The category is display-only which is determined by POST (Power On Self Test) of the BIOS.

➡ Base Memory

The POST of the BIOS will determine the amount of base (or conventional) memory installed in the system.

The value of the base memory is typically 512 K for systems with 512 K memory installed on the motherboard, or 640 K for systems with 640 K or more memory installed on the motherboard.

>> Extended Memory

The BIOS determines how much extended memory is present during the POST.

This is the amount of memory located above 1 MB in the CPU's memory address map.

2-2 Advanced BIOS Features

	CMOS Setup	Utility-Copyright (C) 1 Advanced BIOS I		Software	
	Hard Disk Boot Priority First Boot Device Second Boot Device Password Check HDD S.M.A.R.T. Capability CPU Hyper-Threading ^(Note) Limit CPUID Max. to 3 ^(Note) No-Execute Memory Protect ^(Note) CPU Enhanced Halt (C1E) ^(Note) CPU Enhanced Halt (C1E) ^(Note) CPU EIST Function ^(Note) CPU EIST Function ^(Note) Virtualization Technology ^(Note) On-Chip Frame Buffer Size	[Press En [Floppy] [Hard Dis [CDROM [Setup] [Disabled [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled] [Enabled]	- k]]]	Item 1 Menu	Help Level
ţ1		+/-/PU/PD: Value F6: Fail-Safe Defaults	F10: Save	ESC: Exit F7: Optimized	F1: General Help I Defaults

∽ Hard Disk Boot Priority

Select boot sequence for onboard(or add-on cards) SCSI, RAID, etc. Use $<\uparrow>$ or $<\downarrow>$ to select a device, then press<+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.

∽ First / Second / Third Boot Device

➡ Floppy Select your boot device priority by Floppy. ▶ LS120 Select your boot device priority by LS120. Hard Disk Select your boot device priority by Hard Disk. ▶ CDROM Select your boot device priority by CDROM. ▶ 7IP Select your boot device priority by ZIP. ▶ USB-FDD Select your boot device priority by USB-FDD. ▶ USB-ZIP Select your boot device priority by USB-ZIP. ▶ USB-CDROM Select your boot device priority by USB-CDROM. ▶ USB-HDD Select your boot device priority by USB-HDD. ▶ LAN Select your boot device priority by LAN. Disable this function Disabled

Password Check

- System The system can not boot and can not access to Setup page will be denied if the correct password is not entered at the prompt.
- Setup The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt. (Default value)

(Note) This item will show up when you install a processor which supports this function.

☞ HDD S.M.A.R.T. Capability

This feature allows your hard disk to report read/write errors and to issue warnings when thirdparty hardware monitor utility is installed.

- ► Enabled Enable HDD S.M.A.R.T. capability.
- Disabled Disable HDD S.M.A.R.T. capability. (Default value)

∽ CPU Hyper-Threading ^(Note)

- Enabled Enable CPU Hyper Threading Feature. Please note that this feature is only working for operating system with multi processors mode supported. (Default value)
- ✤ Disabled Disable CPU Hyper Threading.

∽ Limit CPUID Max. to 3 ^(Note)

- >> Enabled Limit CPUID Maximum value to 3 when use older OS like NT4.
- Disabled Disable CPUID Limit for windows XP. (Default value)

∽ No-Execute Memory Protect ^(Note)

- ➡ Enabled Enable No-Execute Memory Protect function. (Default value)
- ➡ Disabled Disable No-Execute Memory Protect function.

CPU Enhanced Halt (C1E) (Note)

- ➡ Enabled Enable CPU Enhanced Halt (C1E) function. (Default value)
- Disabled Disable CPU Enhanced Halt (C1E) function.

∽ CPU Thermal Monitor 2 (TM2) ^(Note)

- ▶ Enabled Enable CPU Thermal Monitor 2 (TM2) function. (Default value)
- Disabled Disable CPU Thermal Monitor 2 (TM2) function.

∽ CPU EIST Function (Note)

- Enabled Enable CPU EIST function. (Default value)
- Disabled Disable EIST function.

∽ Virtualization Technology ^(Note)

- ▶ Enabled Enable Virtualization technology function. (Default value)
- ✤ Disabled Disable this function.

∽ On-Chip Frame Buffer Size

- ▶ 1MB Set on-chip frame buffer size to 1 MB.
- ▶ 8MB Set on-chip frame buffer size to 8 MB. (Default value)

(Note) This item will show up when you install a processor which supports this function.

2-3 Integrated Peripherals

	CMOS Setu	p Utility-Copyright (C) 1984-2006 Awar Integrated Peripherals	d Software
	On-Chip Primary PCI IDE	[Enabled]	Item Help
$\ $	On-Chip SATA Mode	[Auto]	Menu Level
x	PATA IDE Set to	Ch.0 Master/Slave	
	SATA Port 0/2 Set to	Ch.2 Master/Slave	
	SATA Port 1/3 Set to	Ch.3 Master/Slave	
	USB Controller	[Enabled]	
	USB 2.0 Controller	[Enabled]	
	USB Keyboard Support	[Disabled]	
	USB Mouse Support	[Disabled]	
	Legacy USB storage detect	[Enabled]	
	Azalia Codec	[Auto]	
	Onboard H/W LAN	[Enabled]	
∥ ▶	SMART LAN	[Press Enter]	
	Onboard LAN Boot ROM	[Disabled]	
	Onboard Serial Port 1	[3F8/IRQ4]	
	Onboard Serial Port 2	[2F8/IRQ3]	
	Onboard Parallel Port	[378/IRQ7]	
	Parallel Port Mode	[SPP]	
х	ECP Mode Use DMA	3	
↑	↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

∽ On-Chip Primary PCI IDE

- ➤ Enabled Enable onboard 1st channel IDE port. (Default value)
- Disabled Disable onboard 1st channel IDE port.

∽ On-Chip SATA Mode

➡ Disabled	Disable this function.
► Auto	BIOS will auto detect. (Default value)
➡ Combined	Set On-Chip SATA mode to Combined, you can use up to 4 HDDs on
	the motherboard; 2 for SATA and the other for PATA.
Enhanced	Set On-Chip SATA mode to Enhanced, the motherboard allows up to 6 HDDs
	to use; 4 for SATA and the other for PATA.
Non-Combined	Set On-Chip SATA mode to Non-Combined, SATA will be simulated to
	PATA mode. Support a maximum of 4 SATA devices. PATA devices will be
	ignored.

PATA IDE Set to

➤ Ch.0 Master/Slave Set PATA IDE to Ch. 0 Master/Slave. (Default value)

▶ Ch.1 Master/Slave Set PATA IDE to Ch. 1 Master/Slave.

☞ SATA Port 0/2 Set to

➤ This value will auto make by the setting "On-Chip SATA Mode" and "PATA IDE Set to". If PATA IDE were set to Ch. 1 Master/Slave, this function will auto set to Ch. 0 Master/Slave.

☞ SATA Port 1/3 Set to

➡ This value will auto make by the setting "On-Chip SATA Mode" and "PATA IDE Set to". If PATA IDE were set to Ch. 0 Master/Slave, this function will auto set to Ch. 1 Master/Slave.

☞ USB Controller

➡ Enabled	Enable USB controller. (Default value)
Disabled	Disable USB controller.

□ USB 2.0 Controller

You can disable this function if you are not using onboard USB 2.0 feature.

- ➡ Enabled Enable USB 2.0 controller. (Default value)
- Disabled Disable USB 2.0 controller.

□ USB Keyboard Support

- ✤ Enabled Enable USB keyboard support.
- Disabled Disable USB keyboard support. (Default value)

☞ USB Mouse Support

- Enabled Enable USB mouse support.
- ✤ Disabled Disable USB mouse support. (Default value)

Legacy USB storage detect

This option allows users to decide whether to detect USB storage devices, including USB flash drives and USB hard drives during POST.

- >> Enabled BIOS will scan all USB storage devices. (Default value)
- ✤ Disabled Disable this function.

🗢 Azalia Codec

- ➤ Auto Auto detect Azalia audio function. (Default value)
- Disabled Disable Azalia audio function.

∽ Onboard H/W LAN

- ➡ Enabled Enable onboard H/W LAN function. (Default value)
- Disabled Disable this function.

☞ SMART LAN (LAN Cable Diagnostic Function)

CMOS	Setup Utility-Copyright (C) 1984-2006 Awa SMART LAN	rd Software
Start detecting at Port		Item Help
Pair1-2 Status = Open	/ Length = 0.0m	Menu Level▶
Pair3-6 Status = Open	/ Length = 0.0m	
Pair4-5 Status = Open	/ Length = 0.0m	
Pair7-8 Status = Open	/ Length = 0.0m	
$\uparrow \downarrow \rightarrow \leftarrow$: Move Enter: Select	+/-/PU/PD: Value F10: Save	ESC: Exit F1: General Help
F5: Previous Values	F6: Fail-Safe Defaults	F7: Optimized Defaults

This motherboard incorporates cable diagnostic feature designed to detect the status of the attached LAN cable. This feature will detect cabling issue and report the approximate distance to the fault or short. Refer to the following information for diagnosing your LAN cable:

∽ When No LAN Cable Is Attached...

If no LAN cable is attached to the motherboard, the **Status** fields of all four pairs of wires will show **Open** and the **Length** fields show **0.0m**, as shown in the figure above.

∽ When LAN Cable Is Functioning Normally...

If no cable problem is detected on the LAN cable connected to a Gigabit hub or a 10/100 Mbps hub, the following message will appear:



✤ Link Detected Displays transmission speed

>> Cable Length Displays the approximate length of the attached LAN cable

Note: The Gigabit hub will only operate at a speed of 10/100Mbps in MS-DOS mode; it will operate at a normal speed of 10/100/1000 Mbps in Windows mode or when the LAN Boot ROM is activated.

Or When a Cable Problem Occurs...

If a cable problem occurs on a specified pair of wires, the **Status** field will show **Short** and the length shown will be the approximate distance to the fault or short. Example: Pair1-2 Status = Short / Length = 1.6m Explanation: A fault or short might occur at about 1.6m on Pair 1-2.

Note: Pair 4-5 and Pair 7-8 are not used in a 10/100 Mbps environment, their **Status** fields will show **Open**, and the length shown is the approximate length of the attachedLAN cable.

Onboard LAN Boot ROM

This function decide whether to invoke the boot ROM of the onboard LAN chip.

- Enabled Enable this function.
- Disabled Disable this function. (Default value)

∽ Onboard Serial Port 1

- ➤ Auto BIOS will automatically setup the port 1 address.
- ▶ 3F8/IRQ4 Enable onboard Serial port 1 and address is 3F8/IRQ4. (Default value)
- ▶ 2F8/IRQ3 Enable onboard Serial port 1 and address is 2F8/IRQ3.
- ➡ 3E8/IRQ4 Enable onboard Serial port 1 and address is 3E8/IRQ4.
- ▶ 2E8/IRQ3 Enable onboard Serial port 1 and address is 2E8/IRQ3.
- Disabled Disable onboard Serial port 1.

○ Onboard Serial Port 2

- ➤ Auto BIOS will automatically setup the port 2 address.
- ➡ 3F8/IRQ4 Enable onboard Serial port 2 and address is 3F8/IRQ4.
- ▶ 2F8/IRQ3 Enable onboard Serial port 2 and address is 2F8/IRQ3. (Default value)
- ▶ 3E8/IRQ4 Enable onboard Serial port 2 and address is 3E8/IRQ4.
- ▶ 2E8/IRQ3 Enable onboard Serial port 2 and address is 2E8/IRQ3.
- Disabled Disable onboard Serial port 2.

Onboard Parallel Port

- Disabled Disable onboard LPT port.
- ▶ 378/IRQ7 Enable onboard LPT port and address is 378/IRQ7. (Default value)
- ▶ 278/IRQ5 Enable onboard LPT port and address is 278/IRQ5.
- ➡ 3BC/IRQ7 Enable onboard LPT port and address is 3BC/IRQ7.

☞ Parallel Port Mode

- SPP Using Parallel port as Standard Parallel Port. (Default value)
- ▶ EPP Using Parallel port as Enhanced Parallel Port.
- ➡ ECP Using Parallel port as Extended Capabilities Port.
- ► ECP+EPP Using Parallel port as ECP & EPP mode.

☞ ECP Mode Use DMA

This item will be available when "Parallel Port Mode" set to "ECP" or "ECP+EPP".

- ➡ 3 Set ECP Mode Use DMA to 3. (Default value)
- ▶ 1 Set ECP Mode Use DMA to 1.

2-4 Power Management Setup

CMOS Setuj	p Utility-Copyright (C) 1984-2006 Award Power Management Setup	Software
ACPI Suspend Type Soft-Off by PWR-BTTN PME Event Wake Up Power On by Ring Resume by Alarm x Date (of Month) Alarm Yower On By Mouse Power On By Mouse Power On By Keyboard X KB Power ON Password AC Back Function	[S1(POS)] [Instant-Off] [Enabled] [Enabled] [Disabled] Everyday 0:0:0 [Disabled] [Disabled] [Disabled] Enter [Soft-Off]	Item Help Menu Level≯
↑↓→←: Move Enter: Select F5: Previous Values	+/-/PU/PD: Value F10: Save F6: Fail-Safe Defaults	ESC: Exit F1: General Help F7: Optimized Defaults

∽ ACPI Suspend Type

S1(POS) Set ACPI suspend type to S1/POS(Power On Suspend). (Default value)

S3(STR) Set ACPI suspend type to S3/STR(Suspend To RAM).

∽ Soft-Off by PWR-BTTN

- ▶ Instant-Off Press power button then Power off instantly. (Default value)
- ➡ Delay 4 Sec. Press power button 4 sec. to Power off. Enter suspend if button is pressed less than 4 sec.

☞ PME Event Wake Up

This feature requires an ATX power supply that provides at least 1A on the 5VSB lead.

- Disabled Disable this function.
- ➡ Enabled Enable PME as wake up event. (Default value)

Power On by Ring

- Disabled Disable Power on by Ring function.
- ▶ Enabled Enable Power on by Ring function. (Default value)

☞ Resume by Alarm

You can set "Resume by Alarm" item to Enabled and key in Date/Time to power on system.

- Disabled Disable this function. (Default value)
- Enabled Enable alarm function to POWER ON system.
- If Resume by Alarm is Enabled.
- Date (of Month) Alarm : Everyday, 1~31
- ▶ Time (hh: mm: ss) Alarm : (0~23) : (0~59) : (0~59)

∽ Power On By Mouse

- ✤ Disabled Disable this function. (Default value)
- >> Double Click Double click on PS/2 mouse left button to power on the system.

Power On By Keyboard

- Disabled Disable this function. (Default value)
- Password Enter from 1 to 5 characters to set the keyboard power on password.
- ▹ Keyboard 98 If your keyboard have "POWER Key" button, you can press the key to power on the system.

∽ KB Power ON Password

When "Power On by Keyboard" set at Password, you can set the password here.

▶ Enter Input password(from 1 to 5 characters) and press Enter to set the password.

∽ AC BACK Function

- ➤ Soft-Off When AC-power back to the system, the system will be in "Off" state. (Default value)
- ▶ Full-On When AC-power back to the system, the system always in "On" state.
- Memory When AC-power back to the system, the system will return to the Last state before AC-power off.

2-5 PnP/PCI Configurations

CMOS Setu	p Utility-Copyright (C) 1984-2006 Award So PnP/PCI Configurations	oftware
PCI 1 IRQ Assignment PCI 2 IRQ Assignment PCI 3 IRQ Assignment	[Auto] [Auto] [Auto]	Item Help Menu Level
$\uparrow \downarrow \rightarrow \leftarrow: Move \qquad \text{Enter: Select} \\ F5: Previous Values$		SC: Exit F1: General Help 7: Optimized Defaults

☞ PCI 1 IRQ Assignment

▶ Auto▶ 3,4,5,7,9,10,11,12,14,15

Auto assign IRQ to PCI 1. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 1.

→ PCI 2 IRQ Assignment → Auto → 3,4,5,7,9,10,11,12,14,15

Auto assign IRQ to PCI 2. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 2.

∽ PCI 3 IRQ Assignment

▶ Auto
▶ 3,4,5,7,9,10,11,12,14,15

Auto assign IRQ to PCI 3. (Default value) Set IRQ 3,4,5,7,9,10,11,12,14,15 to PCI 3.

2-6 PC Health Status

CMOS Setu	p Utility-Copyright (C) 1984-2006 Award S PC Health Status	oftware
Reset Case Open Status Case Opened Vcore DDR18V +3.3V +12V Current CPU Temperature Current CPU FAN Speed Current SYSTEM FAN Speed	[Disabled] Yes OK OK OK OK 43°C 2880 RPM 0 RPM	Item Help Menu Level>
CPU Warning Temperature CPU FAN Fail Warning SYSTEM FAN Fail Warning CPU Smart FAN Control CPU Smart FAN Mode	[Disabled] [Disabled] [Disabled] [Enabled] [Auto]	
↑↓→←: Move Enter: Select F5: Previous Values		ESC: Exit F1: General Help 7: Optimized Defaults

Constant Case Open Status

- ➡ Disabled Don't reset case open status. (Default value)
- Enabled
 Clear case open status at next boot.

Case Opened

If the case is closed, "Case Opened" will show "No".

If the case have been opened, "Case Opened" will show "Yes".

If you want to reset "Case Opened" value, set "Reset Case Open Status" to "Enabled" and save CMOS, your computer will restart.

∽ Current Voltage(V) Vcore / DDR18V / +3.3V / +12V

➡ Detect system's voltage status automatically.

∽ Current CPU Temperature

➡ Detect CPU temperature automatically.

∽ Current CPU/SYSTEM FAN Speed (RPM)

▶ Detect CPU/system fan speed status automatically.

∽ CPU Warning Temperature

- ▶ 60°C / 140°F Monitor CPU temperature at 60°C / 140°F.
- ▶ 70°C / 158°F Monitor CPU temperature at 70°C / 158°F.
- ► 80°C / 176°F Monitor CPU temperature at 80°C / 176°F.
- ▶ 90°C / 194°F Monitor CPU temperature at 90°C / 194°F.
- ✤ Disabled Disable this function. (Default value)

CPU/System FAN Fail Warning

- Disabled Disable the fan fail warning function. (Default value)
- Enabled Enable the fan fail warning function.

☞ CPU Smart FAN Control

- ► Disabled Disable this function.
- Enabled When this function is enabled, CPU fan will run at different speed depending on CPU temperature. Users can adjust the fan speed with Easy Tune based on their requirements. (Default value)

∽ CPU Smart FAN Mode

This option is available only when CPU Smart FAN Control is enabled.

- Auto BIOS autodetects the type of CPU fan you installed and sets the optimal CPU Smart FAN control mode for it. (Default value)
- ✤ Voltage Set to Voltage when you use a CPU fan with a 3-pin fan power cable.

▶ PWM Set to PWM when you use a CPU fan with a 4-pin fan power cable.

Note: In fact, the Voltage option can be used for CPU fans with 3-pin or 4-pin power cables. However, some 4-pin CPU fan power cables are not designed following Intel 4-Wire fans PWM control specifications. With such CPU fans, selecting PWM will not effectively reduce the fan speed.

2-7 Frequency/Voltage Control

CMOS Setu	DUtility-Copyright (C) 1984-2006 Award Sof Frequency/Voltage Control	tware
CPU Clock Ratio (News) O.C FSB1066 Core 2 CPU CPU Host Clock Control x CPU Host Frequency(Mhz) x PCI Express Frequency System Memory Multiplier Memory Frequency (Mhz)	[18X] [Disabled] [Disabled] 200 Auto [Auto] 533	Item Help Menu Level
↑↓→←: Move Enter: Select F5: Previous Values		C: Exit F1: General Help Optimized Defaults



Incorrectly using these features may result in system instability or corruption.

Doing a overclock or overvoltage on CPU, chipsets and memory modules may result in damages or shortened life expectancy to these components.

Please be aware that the menu items are for power users only.

This setup option will automatically assign by CPU detection.

The option will display "Locked" and read only if the CPU ratio is not changeable.

∽ O.C FSB1066 Core 2 CPU

Enable use of Core[™] 2 CPUs with 1066 MHz FSB through overclocking. To enable this feature, you must install DDRII 533 memory module(s), a Core[™] 2 CPU and a PCI Express x16 graphics card.

Disabled Disable the use of Core[™] 2 CPU (1066 MHz FSB). (Default value)

➡ Enabled Enable the use of Core[™] 2 CPU (1066 MHz FSB).

∽ CPU Host Clock Control

Please note that if your system is overclocked and cannot restart, please wait 20secs. for automatic system restart or clear the CMOS setup data and perform a safe restart.

- Disabled Disable CPU Host Clock Control. (Default value)
- ➡ Enabled Enable CPU Host Clock Control.

∽ CPU Host Frequency (Mhz)

▶ 100 ~ 600 Set CPU Host Frequency from 100 MHz to 600 MHz. If you use a 533 MHz FSB processor, set "CPU Host Frequency" to 133 MHz. If you use a 800 MHz FSB processor, set "CPU Host Frequency" to 200 MHz. Incorrect using it may cause your system broken. For power End-User use only!

(Note) This item will show up when you install a processor which supports this function.

∽ PCI Express Frequency (Mhz)

When you use a PCI Express x16 graphics card:

➤ Auto Set PCI Express frequency automatically. (Default value)

▶ 90~150 Set PCI Express frequency from 90 MHz to 150 MHz.

When you use a onboard VGA port:

- ✤ Auto Set PCI Express frequency automatically. (Default value)
- SYC Set PCI Express frequency to SYC.

► ASYC Set PCI Express frequency to ASYC.

∽ System Memory Multiplier

The adjustable range will vary based on the CPU FSB. Default value: Auto (set memory frequency by DRAM SPD data). Wrong frequency settings may cause system unable to boot. Clear CMOS to overcome wrong frequency issue.

∽ Memory Frequency (Mhz)

The values depend on CPU Host Frequency (Mhz) and System Memory Multiplier setting.

2-8 Load Fail-Safe Defaults

CMOS	5 Setup Utility-Copyright	(C) 1984-2006 Award Software	
Standard CMOS Feature Advanced BIOS Feature Integrated Peripherals Power Ma PnP/PCI (PC Health Sumues Frequency/Voltage Con	:s Load Fail-Safe D	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password efaults (Y/N)? N]
ESC: Quit F8: Q-Flash		↑↓→←: Select Item F10: Save & Exit Setup	
	Load Fail-S	afe Defaults	

Fail-Safe defaults contain the most appropriate values of the system parameters that allow minimum system performance.

2-9 Load Optimized Defaults

CMOS Setup Utility-Copyr	ight (C) 1984-2006 Award Software
Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Ma	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password
	ed Defaults (Y/N)? N
ESC: Quit F8: O-Flash	↑↓→←: Select Item F10: Save & Exit Setup
````	timized Defaults

Selecting this field loads the factory defaults for BIOS and Chipset Features which the system automatically detects.

## 2-10 Set Supervisor/User Password

CMOS Setup Utility-Copyright	(C) 1984-2006 Award Software
Standard CMOS Features     Advanced BIOS Features     Integrated Peripherals     Power Management Control     PnP/PCI C Enter Password:     PC Health Enter Password:     Frequency/Voltage Control	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password ent Unite Discoursed
ESC: Quit F8: Q-Flash Change/Set/Di	↑↓→←: Select Item F10: Save & Exit Setup sable Password

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password, up to eight characters, and press <Enter>. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a password.

To disable password, just press <Enter> when you are prompted to enter password. A message "PASSWORD DISABLED" will appear to confirm the password being disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

The BIOS Setup program allows you to specify two separate passwords:

SUPERVISOR PASSWORD and a USER PASSWORD. When disabled, anyone may access all BIOS Setup program function. When enabled, the Supervisor password is required for entering the BIOS Setup program and having full configuration fields, the User password is required to access only basic items.

If you select "System" at "Password Check" in Advance BIOS Features Menu, you will be prompted for the password every time the system is rebooted or any time you try to enter Setup Menu.

If you select "Setup" at "Password Check" in Advance BIOS Features Menu, you will be prompted only when you try to enter Setup.

### 2-11 Save & Exit Setup

	Standard CMOS Features Advanced BIOS Features Integrated Peripherals Power Mic r	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password
		and EXIT (Y/N)? Y
ESC: F8: Q	: Quit Q-Flash	↑↓→←: Select Item F10: Save & Exit Setup
	Save D	ta to CMOS

Type "Y" will quit the Setup Utility and save the user setup value to RTC CMOS. Type "N" will return to Setup Utility.

### 2-12 Exit Without Saving

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software				
Standard CMOS Features     Advanced BIOS Features     Integrated Peripherals     Power Margan	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password			
	aving (Y/N)? N			
ESC: Quit F8: Q-Flash	↑↓→←: Select Item F10: Save & Exit Setup			
Abandon all Data				

Type "Y" will quit the Setup Utility without saving to RTC CMOS. Type "N" will return to Setup Utility.

## **Chapter 3 Install Drivers**



Pictures below are shown in Windows XP.

Insert the driver CD-title that came with your motherboard into your CD-ROM drive, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the Run.exe.

#### **Install Chipset Drivers** 3-1

"Xpress Install " is now analyizing your computer....9%

After insert the driver CD. "Xpress Install" will scan automatically the system and then list all the drivers that recommended to install. Please pick the item that you want and press "install" followed the item; or you can press "Xpress Install" to install all items defaulted.

5/955/945 1.	13 86, 1011, 1			
IGAB	YTE Intel® 975/955/945 Chipset Family Utilities CD			
tall pset Drivers tware plications	Install Chipset Drives     Install     I	nstall all drivers automatic		
iver CD	🖬 Yahoo! Toolbar	Install		
formation Irdware	Size 698.1KB Version 1.0 Yahoo! Toolloar Utility			
formation	IIIF Update Utility	Install		
ontact Us	Size         1.1MB         Version         8.1.0.1006           This utility installs INF files that inform the operating system how to properly configure the chipset for specific functionality UVB interface.	y such as PCI-Express or		
	Intel®Graphics Media Accelerator Driver	Install		
	Size 15.3MB Version 14.12.0.4299 Installs drivers for the integrated graphics controller of Intel®chipsets. This is not to be used if the system has a third par	ty graphics card.		
	Microsoft UAA Bus driver for High Definition Audio	Install		
	Ster         2.3MB         Version         5.10.0.5010           The Microsoft UA (Chinesia Audio Architecture) Bus driver provides support for High Definition Audio (Azalia). This drive the Boltowing versions of Windows: 1 Microsoft Windows: 2008 Texel: 2013 2 Microsoft Windows: 2008 Texel: 2014 (SP1) 3 Microsoft Windows: 2008 Texel: 2014 (SP1)	r is designed to work with		
Realtek Audio Codec Driver				
	Size 50.3MB Version 5.10.0.5282 The Realtek Audio Codec driver provides support for 7.1 channel audio.			
	Realtek LAN Driver	install		
	Size 8.0MB Version 5.658.0814.2006 Realtek LAN driver for Gigabit			



Some device drivers will restart your system automatically. After restarting your system the "Xpress Install" will continue to install other drivers.

System will reboot automatically after install the drivers, afterward you can install others application.



For USB 2.0 driver support under Windows XP operating system, please use Windows Service Pack. After install Windows Service Pack, it will show a question mark "?" in CAUTION "Universal Serial Bus controller" under "Device Manager". Please remove the question mark and restart the system (System will auto-detect the right USB 2.0 driver).

### 3-2 Software Applications

This page displays all the tools that Gigabyte developed and some free software, you can choose anyone you want and press "install" to install them.

nstall	Intel* 975/955/945 Chipset Family Utilities CD     Software Applications     Prease citik on te following applications listed below to install	
Chipset Drivers	Prease circx on the following applications insted below to install	
oftware Applications		
Driver CD	Norton Internet Security(NIS)	Install
nformation	Size 102.3MB	
Hardware nformation	Noriton Internet Security 2006 provides essential protection from viruses hackers and privacy threats. It includes: - Noriton AntiVirus - Noriton Personal Fictorial	
Contact Us	- Norton Privacy Control     Norton AntiSparn     Norton Privacy Control.	
	Kaspersky antvirus	Install
	Size 27.1MB	
	Kaspersky antvirus	
	Acrobat Reader	Install
	Size 15.9MB	
	Utility for viewing or printing Adobe Portable Document Format (PDF) files.	
	Marvell Network Tools	Install
	Size 6.6MB	
	Marvell Network Tools	
	GIGABYTE C.O.M. (Corporate Online Manager)	Install
	Size 8.7MB	
	A web-based system management tool that allows client system hardware information such as CPU and memory and graphics ca be monitored or controlled via a host.	rd and much mor
	EasyTune 5	Install
	Citra A TMD	

### 3-3 Driver CD Information

This page lists the contents of software and drivers in this CD-title.

	Driver CD information	Intel [®] 975/955/945 Chipset Family Utilities CD vs the detail contents stored in this Driver CD.	
Chipset Drivers	, including includion on o		
Software Applications			
Driver CD	Chipset MA		
Information	Directory Name	Description	
Hardware Information	INFUpdate	- Intel® chipset software installation utility for Vindrows XP - Intel® chipset software installation utility for Vindrows 2000 - Intel® chipset software installation utility for Vindrows ME - Intel® chipset software installation utility for Vindrows 89	
Contact Us	• MSM	-Intel® application accelerator for Windows XP -Intel® application accelerator for Windows 2000	
	• VGA	-Win2k_XP -Intel® Graphics Media Accelerator Driver for Windows XP -Win2k_XP -Intel® Graphics Media Accelerator Driver for Windows 2000	
	<ul> <li>EnableUSBS3Xp</li> </ul>	Enable USB device back form S3 mode	
	<ul> <li>XPR2</li> </ul>	XPR2	
	<ul> <li>USB2.0</li> </ul>	For fixed USB issue on WinXP64 bit.	
	Vaudio		
	Directory Name	Description	
	<ul> <li>MSHDQFE</li> </ul>	High Definition Audio patch file from Microsoft	
	Realtek	Realtek High Definition Audio driver	
	<ul> <li>RtlAc97</li> </ul>	Realtek AC'97 Audio driver	
	Network		
	Directory Name	Description	
	Rtl8139	RealTek 8139/8100/8110s LAN driver	
	<ul> <li>R88139</li> <li>R88111</li> </ul>	RealTex 81 X LAN driver	
	<ul> <li>Rtis187</li> </ul>	RealTex 8187 LAN driver	
	Marvell	Marvell 10/100/1000 Base LAN driver	
	BroadCom	BroadCom PCI-E LAN driver	
	<	Broaddonin CH2 Brit amer	

### 3-4 Hardware Information

This page lists all device you have for this motherboard.

TE Intel® 975/955/945 Chipset Family Utilities CD	
Hardware information The following information shows the detail hardware information of your motherboard.	
System Info	
Memory Info:515,564 KB RAM	
Overlam         Device Descriptionschel/PD (2201 PCI Bridge - 244E           • Device Descriptionschel/PD (2201 PCI Bridge - 244E           • Device DescriptionsPCI standard des CPU Indige           • Device DescriptionsPCI standard des CPU Indige           • Device DescriptionsPCI standard des Antoge           • Device DescriptionsPCI standard ISA bridge	
VSI  Desktor Description/Standard Universal PCI to USB Host Controller  Desktor Daverty eviden Microsoft  D	
Device Description:Standard Universal PCI to USB Host Controller     Deviced DriverProvider:Microsoft	
Device Description:Standard Universal PCI to USB Host Controller     Device Discription:Standard Universal PCI to USB Host Controller	
	Hardware Information Telefoliosing information shows the detail hardware information of your methanisms. Control of the Control of C

### 3-5 Contact Us

Please see the last page for details.




## Chapter 4 Appendix

### 4-1 Unique Software Utilities

(Not all model support these Unique Software Utilities, please check your MB features.)

### 4-1-1 EasyTune 5 Introduction

EasyTune 5 presents the most convenient Windows based system performance enhancement and manageability utility. Featuring several powerful yet easy to use tools such as 1) Overclocking for enhancing system performance, 2) C.I.A. and M.I.B. for special enhancement for CPU and Memory, 3) Smart-Fan control for managing fan speed control of both CPU cooling fan and North-Bridge Chipset cooling fan, 4) PC health for monitoring system status.^(Note)

#### **User Interface Overview**



	Button / Display	Description
1.	Overclocking	Enters the Overclocking setting page
2.	C.I.A. and M.I.B.	Enters the C.I.A. and M.I.B. setting page
3.	Smart-Fan	Enters the Smart-Fan setting page
4.	PC Health	Enters the PC Health setting page
5.	GO	Confirmation and Execution button
6.	"Easy Mode" & "Advance Mode"	Toggles between Easy and Advance Mode
7.	Display screen	Display panel of CPU frequency
8.	Function display LEDs	Shows the current functions status
9.	GIGABYTE Logo	Log on to GIGABYTE website
10.	Help button	Display EasyTune [™] 5 Help file
11.	Exit or Minimize button	Quit or Minimize EasyTune [™] 5 software

(Note) EasyTune 5 functions may vary depending on different motherboards.

Appendix

### 4-1-2 Xpress Recovery2 Introduction



Xpress Recovery2 is designed to provide quick backup and restoration of hard disk data. Supporting Microsoft operating systems including Windows XP/2000/NT/98/Me and DOS, and file systems including FAT16, FAT32, and NTFS, Xpress Recovery2 is able to back up data

on hard disks on PATA and SATA IDE controllers. After Xpress Recovery2 is executed from CD-ROM for the first time, it will stay permanent in your hard disk. If you wish to run Xpress Recovery2 later, you can simply press F9 during system bootup to enter Xpress Recovery2 without the CD-ROM.

#### System requirements:

- 1. Intel x86 platforms
- 2. At least 64M bytes of system memory
- 3. VESA-supported VGA cards

#### How to use the Xpress Recovery2

Initial access by booting from CD-ROM and subsequent access by pressing the F9 key:

Steps: After entering BIOS Setup, go to Advanced BIOS Feature and set to boot from CD-ROM. Save the settings and exit the BIOS Setup. Insert the provided driver CD into your CD-ROM drive. Upon system restart, the message which says "Boot from CD/DVD:" will appear in the bottom left corner of the screen. Press any key to enter Xpress Recovery2.

After the steps above are completed, subsequent access to Xpress Recovery2 can be made by simply pressing the <F9> key during system power-on.





- If you have already entered Xpress Recovery2 by booting from the CD-ROM, you can enter Xpress Recovery2 by pressing the <F9> key in the future.
- 2. System storage capacity and the reading/writing speed of the hard disk will affect the data backup speed.
- 3. It is recommended that Xpress Recovery2 be immediately installed once you complete installations of OS and all required drivers as well as software.

#### The Main Screen of Xpress Recovery2



#### 1. RESTORE:

Restore the backed-up data to your hard disk. (This button will not appear if there is no backup file.)

#### 2. BACKUP:

Back up data from hard disk.

#### 3. REMOVE:

Remove previously-created backup files to release disk space.

(This button will not appear if there is no backup file.)

#### 4. REBOOT:

Exit the main screen and restart the system.

#### Limitations:

- 1. Not compatible to Xpress Recovery.
- 2. For the use of Xpress Recovery2, a primary partition must be reserved.
- 3. Xpress Recovery2 will store the backup file at the end of the hard disk, so free space available on the hard disk for the backup file must be allocated in advance. (A minimum 4GB is recommended but the actual space is dependent on the size of the data to be backed up)
- Capable of backing up hard disks installed with Windows operating systems including DOS and Windows XP/2000/NT/9x/Me.
- 5. USB hard disks are currently not supported.
- 6. Does not support RAID/AHCI (class code 0104/0106) hard disks.
- 7. Capable of backing up and restoring only the first physical hard disk.

Hard disks detection sequence is as follows:

- a. PATA IDE primary channel
- b. PATA IDE secondary channel
- c. SATA IDE channel 1
- d. SATA IDE channel 2
- e. SATA IDE channel 3
- f. SATA IDE channel 4

#### Precautions:

- 1. When using hard disks with more than 128G under Windows 2000, be sure to execute the EnableBigLba.exe program from the driver CD before data backup.
- 2. It is normal that data backup takes longer time than data restoration.
- 3. Xpress Recovery2 is compliant with the GPL regulations.
- 4. On a few motherboards based on Nvidia chipsets, BIOS update is required for Xpress Recovery2 to correctly identify RAID and SATA IDE mode. Please contact your motherboard manufacturer.

### 4-1-3 Flash BIOS Method Introduction



#### Method 1 : Q-Flash™

Q-Flash[™] is a BIOS update tool that allows the user to update BIOS without entering operating systems like MS-DOS or Windows.Embedded in the BIOS, the Q-Flash[™] tool frees you from the hassles of

going through complicated BIOS flashing process.

#### Before Use:

Follow the steps below before using Q-Flash to update BIOS:

- 1. From GIGABYTE's website, download the latest compressed BIOS update file that matches your motherboard model.
- Extract the downloaded BIOS files and save the new BIOS file (e.g. 945gcms2.F1) to your floppy disk or hard disk. Note: Q-Flash only supports hard disks or flash drives using FAT32/16/12 file system.
- Restart the system. During BIOS POST, press the End key to enter Q-Flash. NOTE: Press the End key to enter Q-Flash if you wish to use hard drives in RAID/AHCI mode or hard drives attached to the independent IDE/SATA controller.



Because BIOS flashing is potentially risky, please do it with caution and avoid inadequate operation that may result in system malfunction.

### Updating the BIOS


Step 1:

a. In the Q-Flash menu, use the UP or DOWN ARROW key to select **Update BIOS from Drive** and press ENTER.



If you wish to back up the current BIOS file, use the  $\ensuremath{\textbf{Save BIOS}}$  to  $\ensuremath{\textbf{Drive}}$  function.

Select the floppy drive or hard drive where the BIOS file is saved, such as "Floppy A" and press ENTER.

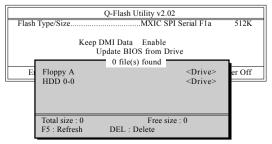

c. Select the BIOS file and press ENTER.




Make sure again the BIOS file matches your motherboard model.

Step 2: The process of system reading the BIOS file from the floppy disk is displayed on the screen. When the message "Are you sure to update BIOS?" appears, press ENTER. The BIOS update will begin and the current process will be displayed.



1. Do not turn off or restart the system when the system is reading/updating the BIOS.

- 2. Do not remove the floppy disk or hard drive/USB drive when the system is updating the BIOS.
- Step 3: When the update process is complete, press any key to return to the Q-Flash main menu.



- Step 4: Press ESC and then ENTER to exit Q-Flash and the system will restart. As the system reboots, you will see the new BIOS version during POST.
- Step 5: As the system reboots, press DELETE to enter BIOS Setup. Select Load Optimized Defaults and press ENTER to load BIOS defaults. System will re-detect all peripherals devices after BIOS update, so we recommend that you reload BIOS defaults.

CMOS Setup Utility-Copyright (C) 1984-2006 Award Software						
Standard CMOS Features     Advanced BIOS Features     Integrated Peripherals     Power Marr	Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password					
	Optimized Defaults (Y/N)? Y EXIL WILDOUT Saving					
ESC: Quit	↑↓→←: Select Item					
F8: Q-Flash	F8: Q-Flash F10: Save & Exit Setup					
Load Optimized Defaults						

Press Y to load BIOS defaults

Step 6: Select **Save & Exit Setup** and then press Y to save settings to CMOS and exit BIOS Setup. When the system restarts, the whole update process is complete.



### Method 2 : @BIOS™ Utility

If you do not have a DOS startup disk, we recommend that you use the new @BIOS utility. @BIOS allows users to update their BIOS under Windows. Just select the desired @BIOS server to download the latest version of BIOS.

#### Fig 1. Installing the @BIOS utility



#### Fig 3. The @BIOS Utility



#### 1. Methods and steps:

- I. Update BIOS through Internet
  - a. Click "Internet Update" icon
  - b. Click "Update New BIOS" icon
  - c. Select @BIOS™ sever
  - d. Select the exact model name on your motherboard
  - e. System will automatically download and update the BIOS.
- II. Update BIOS NOT through Internet:
  - a. Do not click "Internet Update" icon
  - b. Click "Update New BIOS"
  - c. Please select "All Files" in dialog box while opening the old file.
  - Please search for BIOS unzip file, downloading from internet or any other methods (such as: 945gcms2.F1).
  - e. Complete update process following the instruction.

#### Fig 2. Installation Complete and Run @BIOS



#### Fig 4. Select the desired @BIOS server



III. Save BIOS

In the very beginning, there is "Save Current BIOS" icon shown in dialog box. It means to save the current BIOS version.

IV. Check out supported motherboard and Flash ROM:

In the very beginning, there is "About this program" icon shown in dialog box. It can help you check out which kind of motherboard and which brand of Flash ROM are supported.

#### 2. Note:

- In method I, if it shows two or more motherboard's model names to be selected, please make sure your motherboard's model name again. Selecting wrong model name will cause the system unbooted.
- II. In method II, be sure that motherboard's model name in BIOS unzip file are the same as your motherboard's. Otherwise, your system won't boot.
- III. In method I, if the BIOS file you need cannot be found in @BIOS™ server, please go onto Gigabyte's web site for downloading and updating it according to method II.
- IV. Please note that any interruption during updating will cause system unbooted.
- V. Do not use @BIOS and C.O.M. (Corporate Online Management) at the same time.



4-1-4 2- / 4- / 6- / 8- Channel Audio Function Introduction

The default speaker settings for the 6 audio jacks are as shown in the picture to the right. The jack retasking capability supported by HD Audio allows users to change the function for each audio jack by the audio software provided. For example, if a rear speaker is plugged into the center/subwoofer speaker out jack, you can change the center/ subwoofer speaker out jack to fucntion as a rear speaker out jack via the audio software.Please follow the steps to install the function. (Following pictures are in Windows XP)



Note that if you wish to connect a microphone, you MUST connect it to the default Mic In jack

#### HD Audio

With multiple built-in high quality digital-to-analog converters (DACs) that support audio output at up to 192 kHz/24-bit quality and multi-streaming applications, HD Audio is able to handle multiple audio streams (in and out) simultaneously. Multi-channel audio experiences have become a reality so you can, for instance, listen to MP3 music, have an Internet chat, make a telephone call over the Internet, and etc. all at the same time.

#### Stereo Speakers Connection and Settings:

We recommend that you use the speaker with amplifier to acquire the best sound effect if the stereo output is applied.

#### STEP 1:

After installation of the audio driver, you should find an Audio Manager icon in your system tray (you can also find the icon in Control Panel). Doubleclick the icon to open the Audio Control Panel.





In the Audio Control Panel, click the **Audio I/O** tab. In the upper left list, click **2CH Speaker**.



#### STEP 3:

Connect a speaker or headphone to the rear Line Out jack, a small window will pop up and ask you what type of equipment is connected. Choose **Headphone** or **Line Out** depending on the device connected and click **OK**. The 2-channel audio setup is completed.


Sound Effect Mixer Audio VC	GIGABYTE Microphone 3D Audio I	Demo
Connected device i Which device did you play in? Lives In Hespitable Hespitable Connected System Connected System	ANALOG Back Panel	* •
	Front Panel	DIGITAL ©

### Setting Up 4-Channel Audio

STEP 1:

After installation of the audio driver, you should find an Audio Manager i icon in your system tray (you can also find the icon in Control Panel). Doubleclick the icon to open the Audio Control Panel.



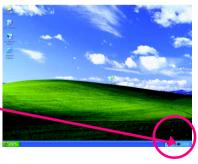

In the Audio Control Panel, click the **Audio I/O** tab. In the upper left list, click **4CH Speaker**.



#### STEP 3:

Connect the 4-channel speakers to the audio jacks on the motherboard and the surround cable, a small window will pop up and ask you what type of equipment is connected. Choose a device depending on the type of speaker connected (4channel audio consists of Front Speaker Out (Line Out) and Rear Speaker Out) and then click **OK**. The 4-channel audio setup is completed.

Sound Effect Mixer Audio VO	GIGABYTE Microphone 3D Audio (	emo emo
Connected derives : Vehicle derives did you play in? Mich in Head in He	ANALOG Back Panel SS	* • • • • • • • • • • • • • • • • • • •
	Front Panel	DIGITAL () () () -1) () () -1)

#### Setting Up 6-Channel Audio

#### STEP 1:

After installation of the audio driver, you should find an Audio Manager (a) icon in your system tray (you can also find the icon in Control Panel). Doubleclick the icon to open the Audio Control Panel.





In the Audio Control Panel, click the **Audio I/O** tab. In the upper left list, click **6CH Speaker**.



#### STEP 3:

Connect the 6-channel speakers to the audio jacks on the motherboard and the surround cable, a small window will pop up and ask you what type of equipment is connected. Choose a device depending on the type of speaker connected (6channel audio consists of Front Speaker Out (Line Out), Rear Speaker Out, and Center/Subwoofer Speaker Out) then click **OK**. The 6-channel audio setup is completed.

	GIGABYTE	00
Sound Effect Mixer Audio VO	Microphone 3D Audio I	Demo
Which device did you plug in? Line In Mich Mich Mich Mich Mich Did Center/Solution Enter Spake Out Statis Spake Out Statis Spake Out	ANALOG Back Panel	* • • • • • • • • • • • • • • • • • • •
	Front Panel	DIGITAL () () () () () () () () () ()

### Setting Up 8-Channel Audio

#### STEP 1:

After installation of the audio driver, you should find an Audio Manager (1) icon in your system tray (you can also find the icon in Control Panel). Doubleclick the icon to open the Audio Control Panel.





In the Audio Control Panel, click the Audio I/O tab. In the upper left list, click 8CH Speaker.

#### STEP 3:

Connect the 8-channel speakers to the audio jacks on the motherboard and the surround cable, a small window will pop up and ask you what type of equipment is connected. Choose a device depending on the type of speaker connected (8channel audio consists of Front Speaker Out (Line Out), Rear Speaker Out, Center/Subwoofer Speaker Out, and Side Speaker Out) then click **OK**. The 8-channel audio setup is completed.

#### Sound Effect Configuration:

At the **Sound Effect** menu, users can adjust sound option settings as desired.







#### AC'97 Audio Configuration:

To enable the front panel audio connector to support AC97 Audio mode, go to the Audio Control Panel and click the **Audio I/O** tab. In the **ANA-LOG** area, click the **Tool** icon and then select the **Disable front panel jack detection** check box. This action completes the AC'97 Audio configuration.





### 4-2 Troubleshooting

Below is a collection of general asked questions. To check general asked questions based on a specific motherboard model, please log on to http://www.gigabyte.com.tw

Question 1: I cannot see some options that were included in previous BIOS after updating BIOS. Why? Answer: Some advanced options are hidden in new BIOS version. Please press Ctrl and F1 keys after entering BIOS menu and you will be able to see these options.

Questions 2: Why is the light of my keyboard/optical mouse still on after computer shuts down? Answer: In some boards, a small amount of electricity is kept on standby after computer shuts down and that's why the light is still on.

#### Question 3: How do I clear CMOS?

Answer: If your board has a Clear CMOS jumper, please refer to the Clear CMOS steps in the manual. If your board doesn't have such jumper, you can take off the on-board battery to leak voltage to clear CMOS. Please refer to the steps below:

Steps:

- 1. Turn off power.
- 2. Disconnect the power cord from MB.
- Take out the battery gently and put it aside for about 1 minute (Or you can use a metal object to connect the positive and negative pins in the battery holder to makethem short for 5 seconds).
- 4. Re-insert the battery to the battery holder.
- 5. Connect power cord to MB again and turn on power.
- 6. Press Del to enter BIOS and load Fail-Safe Defaults(or load Optimized Defaults).
- 7. Save changes and reboot the system.

Question 4: Why do I still get a weak sound after turning up the speaker to the maximum volume? Answer: Please make sure the speaker you are using is equipped with an internal amplifier. If not, please change another speaker with power/amplifier and try again later.

Question 5: Sometimes I hear different continuous beeps from computer after system boots up. What do these beeps usually stand for?

Answer: The beep codes below may help you identify the possible computer problems. However, they are only for reference purposes. The situations might differ from case to case.

- → AWARD BIOS Beep Codes
  - 1 short: System boots successfully
  - 2 short: CMOS setting error
  - 1 long 1 short: DRAM or M/B error
  - 1 long 2 short: Monitor or display card error
  - 1 long 3 short: Keyboard error
  - 1 long 9 short: BIOS ROM error
  - Continuous long beeps: DRAM error
  - Continuous short beeps: Power error





. Taiwan (Headquarters) GIGA-BYTE TECHNOLOGY CO., LTD. Address: No.6, Bau Chiang Road, Hsin-Tien, Taipei 231. Taiwan TEL: +886-2-8912-4888 FAX: +886-2-8912-4003 Tech. and Non-Tech. Support (Sales/Marketing) : http://ggts.gigabyte.com.tw WEB address (English): http://www.gigabyte.com.tw WEB address (Chinese): http://www.gigabyte.tw

#### U.S.A.

G B T INC TEL:+1-626-854-9338 FAX:+1-626-854-9339 Tech. Support: http://rma.gigabyte-usa.com Web address: http://www.gigabyte.us

#### • Mexico

G.B.T Inc (USA) Tel: +1-626-854-9338 x 215 (Soporte de habla hispano) FAX:+1-626-854-9339 Correo: soporte@gigabyte-usa.com Tech. Support: http://rma.gigabyte-usa.com Web address: http://www.gigabyte-latam.com • Japan

NIPPON GIGA-BYTE CORPORATION WEB address : http://www.gigabyte.co.jp

#### • Singapore

GIGA-BYTE SINGAPORE PTE, LTD. WEB address : http://www.gigabyte.com.sg

#### . China

NINGBO G.B.T. TECH. TRADING CO., LTD. WEB address : http://www.gigabyte.cn Shanghai TEL:+86-21-63410999 FAX:+86-21-63410100 Beiiina TEL:+86-10-62102838 FAX +86-10-62102848 Wuhan TEL: +86-27-87851061 FAX:+86-27-87851330 GuangZhou TEL:+86-20-87540700 FAX: +86-20-87544306 ext 333 Chengdu TEL:+86-28-85236930 FAX: +86-28-85256822 ext. 814 Xian TEL: +86-29-85531943 FAX: +86-29-85539821 Shenyang TEL:+86-24-83992901 FAX: +86-24-83992909 India • GIGABYTE TECHNOLOGY (INDIA) LIMITED WEB address : http://www.gigabyte.in Australia •

GIGABYTE TECHNOLOGY PTY I TD WEB address : http://www.gigabyte.com.au Germany

G.B.T. TECHNOLOGY TRADING GMBH

WEB address : http://www.gigabyte.de

U.K.

G.B.T. TECH. CO., LTD.

WEB address : http://www.giga-byte.co.uk

#### The Netherlands

GIGA-BYTE TECHNOLOGY B.V.

WEB address : http://www.giga-byte.nl

#### France

GIGABYTE TECHNOLOGY FRANCE

WEB address : http://www.gigabyte.fr

Italy

WEB address : http://www.giga-byte.it

#### Spain

GIGA-BYTE SPAIN

WEB address : http://www.giga-byte.es

#### Czech Republic

Representative Office Of GIGA-BYTE Technology Co., Ltd. in CZECH REPUBLIC

WEB address : http://www.gigabyte.cz

#### Turkey

Representative Office Of GIGA-BYTE Technology Co., Ltd. in TURKEY

WEB address : http://www.gigabyte.com.tr

### • GIGABYTE Global Service System



#### Russia

Moscow Representative Office Of GIGA-BYTE Technology Co., Ltd.

WEB address : http://www.gigabyte.ru

#### Latvia

GIGA-BYTE Latvia

WEB address : http://www.gigabyte.com.lv

#### Poland

Office of GIGA-BYTE TECHNOLOGY Co., Ltd. in POLAND WEB address : http://www.gigabyte.pl

#### Ukraine

WEB address : http://www.gigabyte.kiev.ua

#### Romania

Representative Office Of GIGA-BYTE Technology Co., Ltd. in Romania

WEB address : http://www.gigabyte.com.ro

#### Serbia & Montenegro

Representative Office Of GIGA-BYTE Technology Co., Ltd. in SERBIA & MONTENEGRO

WEB address : http://www.gigabyte.co.yu

To submit a technical or non-technical (Sales/ Marketing) question, please link to : http://ggts.gigabyte.com.tw Then select your language to enter the system.



#### 关于符合中国《电子信息产品污染控制管理办法》的声明 Management Methods on Control of Pollution from Electronic Information Products (China RoHS Declaration)

#### 产品中有毒有害物质或元素的名称及含量

Hazardous Substances Table 有毒有害物质或元素(Hazardous Substances)						
部件名称(Parts)	铅(Pb)	<u>有毒有</u> 害 汞(Hg)	初原或元: 镉(Cd)	<u>素(Hazardou</u> 六价铬	s Substance   多溴联苯	s) 多溴二苯醚
				(Cr (VI))	(PBB)	(PBDE)
PCB板 PCB	0	0	0	0	0	0
结构件及风扇 Mechanical parts and Fan	×	0	0	0	0	0
芯片及其他主动零件 Chip and other Active components	×	0	0	0	0	0
连接器 Connectors	×	0	0	0	0	0
被动电子元器件 Passive Components	×	0	0	0	0	0
线材 Cables	0	0	0	0	0	0
焊接金属 Soldering metal	0	0	0	0	0	0
助焊剂, 散热膏, 标签及其他耗材 Flux,Solder Paste,Label and other Consumable Materials	0	0	0	0	0	0
○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。 Indicates that this hazardous substance contained in all homogenous materials of this part is below the limit requirement SJ/T 11363-2006						
×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。 Indicates that this hazardous substance contained in at least one of the homogenous materials of this part is above the limit requirement in SJ/T 11363-2006						
对销售之日的所受售产品,本表显示我 可能会也可能不会含有所有所列的部件 This table shows where these subst information products, as of the da the component types listed above m	ances may	/befound sale of	l in the s the enclo	supply chain sed product	n of our el ts, Note th	ectronic