

GV-NX78X512VP-B

GeForce™ 7800 GTX Graphics Accelerator

User's Manual

Rev. 101

12MD-NX78X5P-101R



* The WEEE marking on the product indicates this product must not be disposed of with user's other household waste and must be handed over to a designated collection point for the recycling of waste electrical and electronic equipment!!

* The WEEE marking applies only in European Union's member states.

Copyright

© 2005 GIGABYTE TECHNOLOGY CO., LTD

Copyright by **GIGA-BYTE TECHNOLOGY CO., LTD.** ("GBT"). No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of **GBT**.

Trademarks

Third-party brands and names are the property of their respective owners.

Notice

Please do not remove any labels on VGA card, this may void the warranty of this VGA card.

Due to rapid change in technology, some of the specifications might be out of date before publication of this booklet.

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.

Table of Contents

1. Introduction	3
1.1. Features	3
1.2. Minimum System Requirement	3
2. Hardware Installation	4
2.1. Board Layout	4
2.2. Hardware Installation	6
3. Software Installation	9
3.1. Windows® XP Driver and Utilities Installation	9
3.1.1. Operating System Requirement	9
3.1.2. DirectX Installation	10
3.1.3. Driver Installation	11
3.1.4. Vedio In Introduction	13
3.1.5. Taskbar Icon	18
3.1.6. Display Properties Pages	19
3.1.7. nView Properties Pages	24
3.2. Windows® 2000 driver installation	29
4. Troubleshooting Tips	30
5. Appendix	31
5.1. How to Reflash the BIOS in MS-DOS mode	31
5.2. Resolutions and Color Depth Table (In Windows® XP)	32

1. Introduction

1.1. Features

- Powered by **NVIDIA® GeForce™ 7800 GTX** Graphics Processing Unit (GPU)
- Supports the newest PCI Express x 16
- Integrated with 512MB DDR III memory
- Supports DirectX 9.0c
- Supports NVIDIA® SLI™ (Scalable Link Interface) technology ^(note)
- Supports video capture for video editing (VIVO)
- Supports AV / S-Video and HDTV output
- Supports D-sub connector (by adapter)
- Supports 2 DVI-I connectors


1.2. Minimum System Requirement

- IBM® or 100% PC compatible with Pentium® III 650MHz or AMD Athlon 650MHz class processor or higher
- One PCI Express x 16 slot
- Operating Systems Windows® 2000 / Windows® XP
- 64MB system memory
- 50MB of available disk space for full installation
- CD-ROM or DVD-ROM drive
- Minimum power supply 400W

(Note) SLI technology requires a PCI Express motherboard with two x16 physical connectors. Graphics cards working in an SLI configuration must be with the same model name (i.e. GV-NX78X512VP-B) and from the same vendor (i.e. GIGABYTE TECHNOLOGY).

2. Hardware Installation

2.1. Board Layout

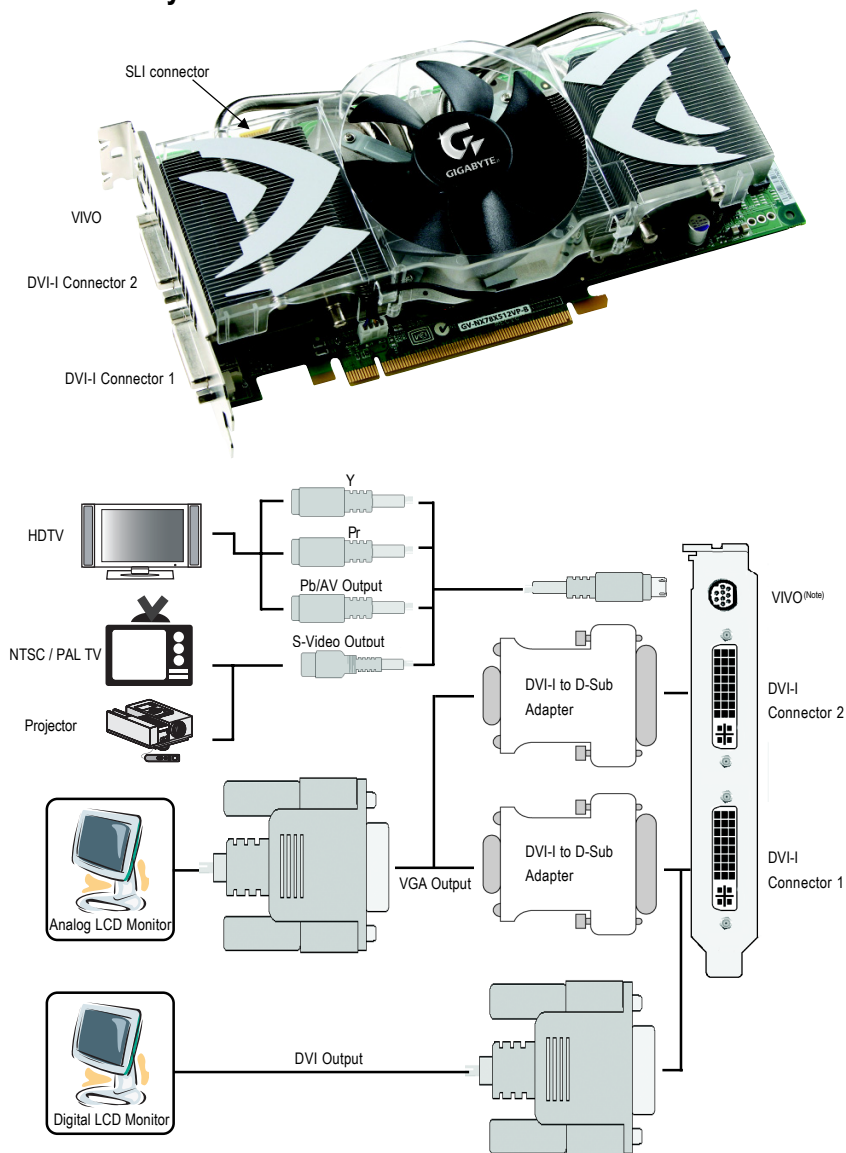

(Note) Please refer to page 13 about Video In introduction.



Expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Turn off your computer and unplug power supply.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.

The card contains sensitive electric components, which can be easily damaged by static electricity, so the card should be left in its original packing until it is installed.

Unpacking and installation should be done on a grounded anti-static mat. The operator should be wearing an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card carton for obvious damage. Shipping and handling may cause damage to your card. Be sure there are no shipping and handling damages on the card before proceeding.

❗ **DO NOT APPLY POWER TO YOUR SYSTEM IF IT HAS BEEN DAMAGED ON THE CARD.**

❗ **In order to ensure your graphics card working correctly, please use official Gigabyte BIOS only. Use none official Gigabyte BIOS might cause problem on the graphics card.**

2.2. Hardware Installation

Installing Your graphics card.


Now that you have prepared your computer, you are ready to install your graphics accelerator card.

To remove the existing graphics card:

1. Power off the computer and monitor, then disconnect the display cable from the back of your computer.




2. Remove the computer cover. If necessary, consult your computer's manual for help in removing the cover.

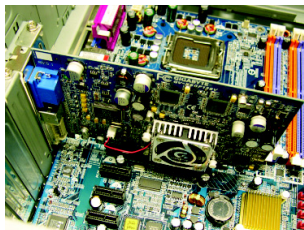


3. Remove any existing graphics card from your computer.

Or, if your computer has any on-board graphics capability, you may need to disable it on the motherboard. For more information, please see your computer documentation.


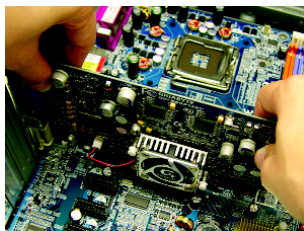


To install your new graphics card:

1. Locate the PCI Express x 16 slot. If necessary, remove the metal cover from this slot; then align your graphics card with the PCI Express x 16 slot, and press it in firmly until the card is fully seated.

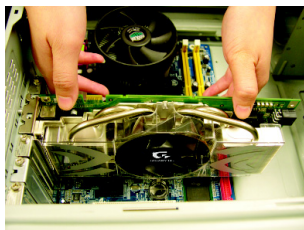


2. Replace the screw to fasten the card in place, and replace the computer cover.

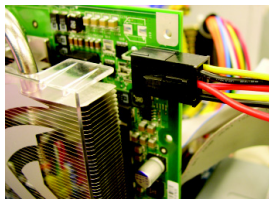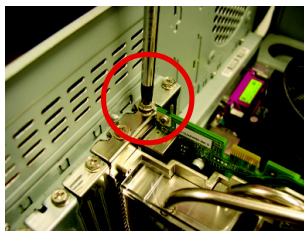


After installing the GV-NX78X512VP-B to your computer, please remember to connect at least one power cable on the graphics card to the power supply connector.

We suggest you to connect both of the two power cables on the graphics card to the power supply to achieve optimal graphics performance.

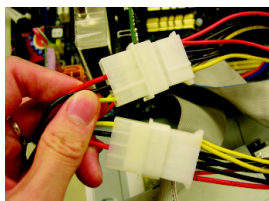

3. Plug the display cable into your graphics card; then turn on the computer and monitor. To connect a flat panel directly to your graphics card, use the DVI-I connector. To connect a VGA monitor to the DVI-I connector, plug the DVI-I to D-sub adapter into the DVI-I connector, then plug the monitor cable into the adapter.

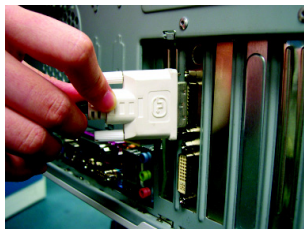


Connect a flat panel



To Flat Panel Display



To TV / VCR / VIVO

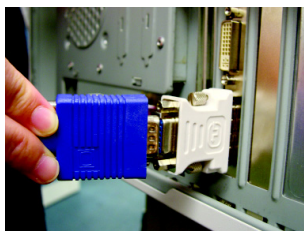

Connect a VGA monitor via DVI-I to D-sub adapter


You are now ready to proceed with the installation of the graphics card driver. Please refer to next chapter for detailed instructions.

How NVIDIA® SLI™ (Scalable Link Interface) technology works:

In an SLI configuration, two SLI-ready graphics cards with the same model and from the same manufacturers are connected together via SLI bridge connector in a system that provides two x 16 PCI Express slots to scale graphics performance. The picture below shows that two graphics cards are linked in parallel in an SLI configuration.

Two SLI-ready graphics cards of the same type.
(Example: GV-NX66T128D)

SLI bridge connector
(provided by motherboard manufacturer)

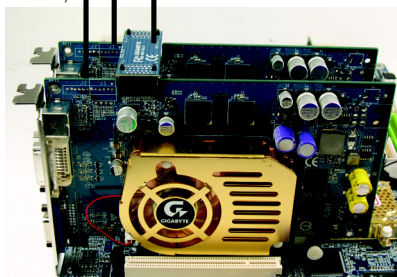

For more information about the hardware configuration of an SLI system, please refer to motherboard user manual.

3. Software Installation

In this manual, we assume that your CD-ROM Drive letter to be Drive D:

The installation of Windows® 2000 / Windows® XP drivers is very simple. When you insert the driver CD into your CD-ROM drive, you can see the AUTORUN window (if it does not show up, run "D:\setup.exe"). Then you can follow the guides to setup your graphics card driver. (Please follow the subsection 3.1.3 "Driver installation" to install the driver for your graphics accelerator.)

3.1. Windows® XP Driver and Utilities Installation

3.1.1. Operating System Requirement

- When loading the graphics card drivers for the system, please make sure your system has installed DirectX 9.0c or later version.
- If you install the graphics card drivers for the motherboard, which consist of SIS, or VIA chipsets, please install the appropriate driver program for that motherboard. Or please contact your motherboard nearest dealer for motherboard driver.


3.1.2. DirectX Installation

Install Microsoft DirectX to enable 3D hardware acceleration support for Windows® 2000 or Windows® XP to achieve better 3D performance.


- Note: For software MPEG support in Windows® 2000 or Windows® XP, you must install DirectX first. Users who run Windows XP with Service Pack 2 or above do not need to install DirectX separately.




Step 1. When autorun window show up, click the **Install DirectX 9** item.

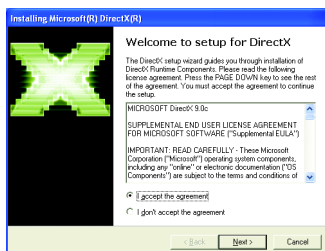


Step 2. Choose **I accept the agreement** and click the **Next** button.

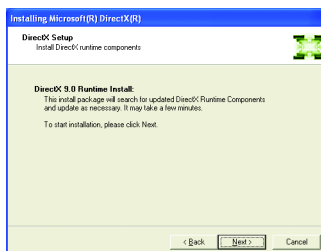

Step 3. Click the **Next** button.

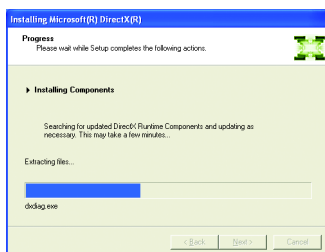

Installing the components.

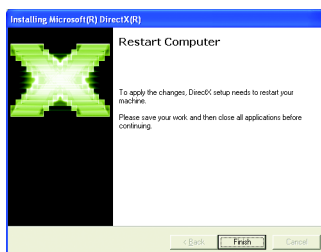

Step 4. Click **Finish** to restart computer.
Then the DirectX 9 installation is completed.

3.1.3. Driver Installation

A. New hardware found

After the graphics card is inserted into your computer at the first time, the windows will automatically detect a new hardware in the system and pop out a "New Hardware Found" message. The following is the step-by-step installation guide.

Step 1: Found new hardware wizard: Video controller (VGA Compatible)




Click "Next" button to install the driver. (There is a driver CD disk that came with your graphics accelerator, please insert it now.)

Or click the "Cancel" button to install the driver from AUTORUN window.


Step 2: Found new hardware wizard: Searching and installing

The wizard will search for the driver and install it automatically.

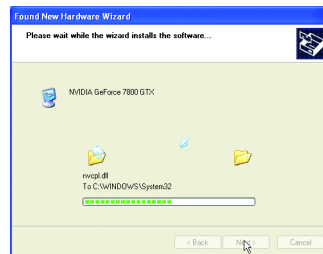

Step 3: Found new hardware wizard: Finish

Click the "Finish" button to finish the installation.

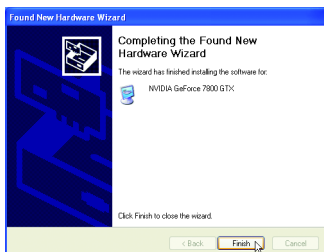

B. Driver installation (Autorun Window)


Insert the driver CD disk into your CD-ROM, and then you can see the AUTORUN window. If it does not show up, please run "D:\setup.exe".




Step 1. When autorun window show up, click the **Display Driver** item.




Then click the **Install Display Driver** item.

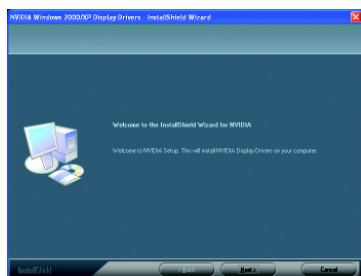

Step 2. Click the **Next** button.

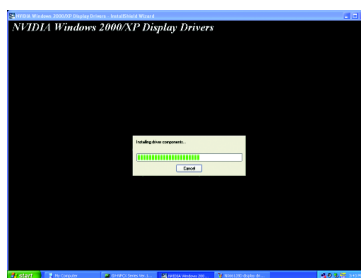

Windows installings the components.

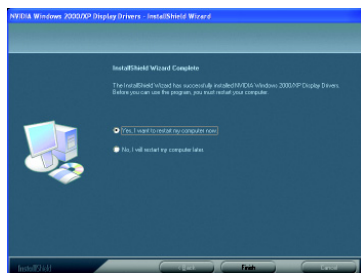

Step 3. Click the **Finish** button to restart computer. Then the driver installation is completed.

3.1.4. Vedio In Introduction


A. Install WDM Driver



Step 1. When the Autorun screen appears, click the **Display Driver** item.




Then click the **WDM Driver** item. Restart your computer when the installation is completed.

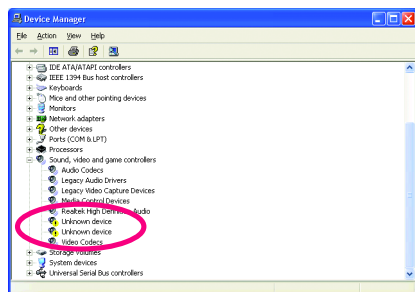


Step 2. After system restarts, go to Device Manager and you should see two unknown devices marked with yellow exclamation marks.


NOTE Use the "Found New Hardware Wizard" to install the driver. The wizard will search for the driver and install it automatically. Follow the installation steps below.

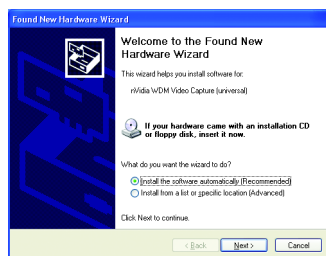

Step 3. On the Found New Hardware Wizard Welcome screen, select **Install the software automatically (Recommended)** and click **Next**.

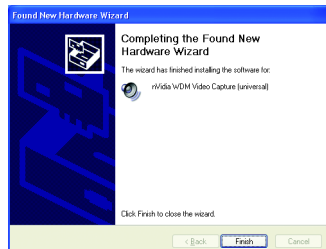


Step 4. Click **Finish** after the software installation procedure is finished. Then the Found New Hardware Wizard for **nVidia WDM A/V Crossbar** will appear.

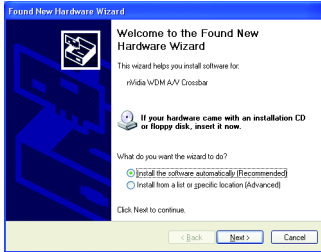


Step 5.

On the Found New Hardware Wizard Welcome screen, select **Install the software automatically (Recommended)** and click **Next**.

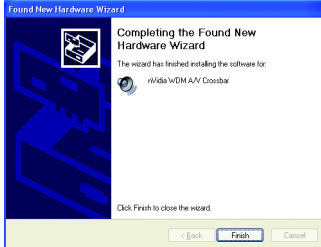

Step 6.

When the installation is completed, press **Finish** to exit the wizard.

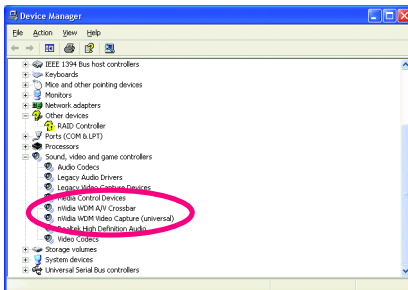


Step 7.

Go to Device Manager > Sound, video and game controllers and you should find that **nVidia WDM A/V Crossbar** and **nVidia WDM Video Capture (universal)** are both installed.

B. Cyberlink Power Director 3.X Installation (Note)

Please install the Cyberlink Power Director 3.X (or above) version with your graphics card. Press the "Capture" button, PowerDirector enter Capture mode, in which you can capture media from a variety of device. (Figure 1)

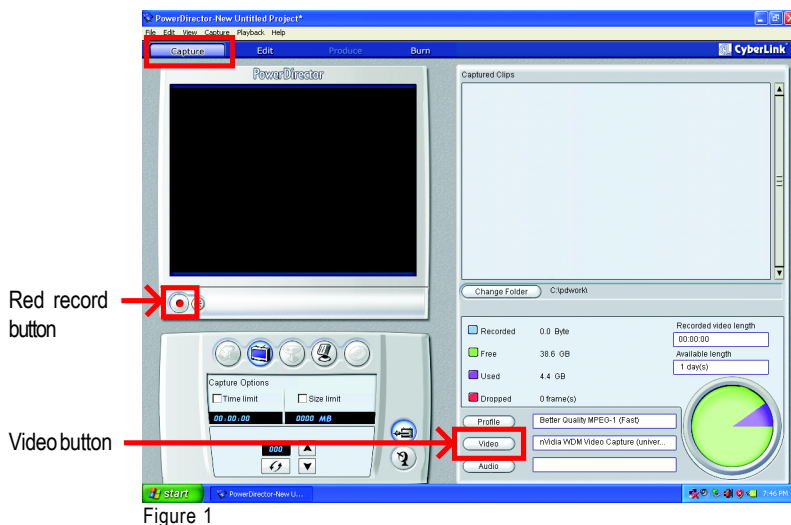

(Note) Power Director 3.X only supported on the Windows XP operating systems.

C. Introduction of the capture sources device

Please check out your capture source. In general, the media sources comprise the following item:

1. Video Tape Recorder (VCR), V8 :

Connect the AV connector or video cable of the VCR to the Video In of the video capture card. And if your VCR, V8 supports S-Video output, connect S-Video connector to the S-Video In port of the graphics card. Connect the audio cable of the VCR, V8 to the Line In of the sound card.

If your sound card has no Line In port, try the Microphone port.

2. DV (recommend to use IEEE1394 card)

DV (Check out if the power of DV is turned on, and enter VCR mode; moreover, make sure FireWire cable connect well.

Furthermore, when capturing media by VIVO-based graphics card, you could chose two ways^(Note), including Composite (COMP-IN) and SVideo(SVID-IN). Afterward please click the play button of captured devices, and click the red REC button between Capture preview window and Capture device selection area.



Please verify how your cable connects. If the cable connects to SVID-IN port on HDTV/VIVO cable, please press the "Video" button (Figure 2), and please select the "Video SVideo" item (Figure 2); if it connects to COMP-IN port on HDTV/VIVO cable, please select the "Video Composite" item (Figure 3).

Figure 2

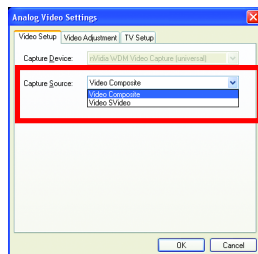



Figure 3

When you got the media you need, click the red REC button again to stop capturing. And then the media clips will be loaded into Capture clips area automatically. (Figure 4)



Figure 4

Once you click the "Edit" button to return Edit mode, the media clips will be loaded into Library immediately.

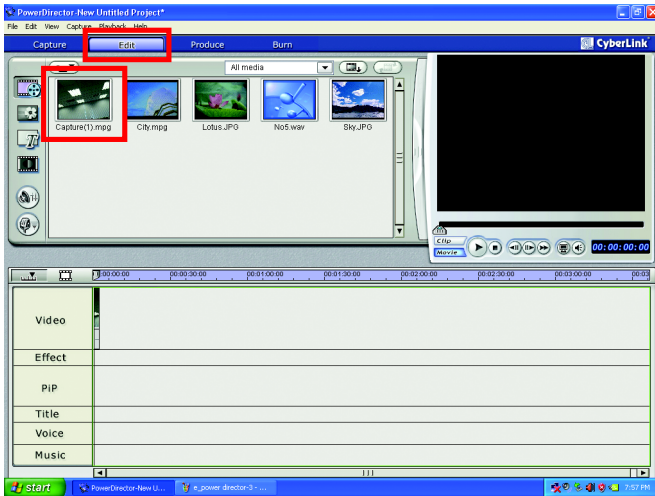


(Figure. 4)

At this moment in time, you can expand a series of outstanding editing experience to fill you life with boundless possibility.


(For more details about movie editing function of PowerDirector, please refer to user's guide, or visit Cyberlink website for official technical support.)

D. HDTV / VIVO cable introduction

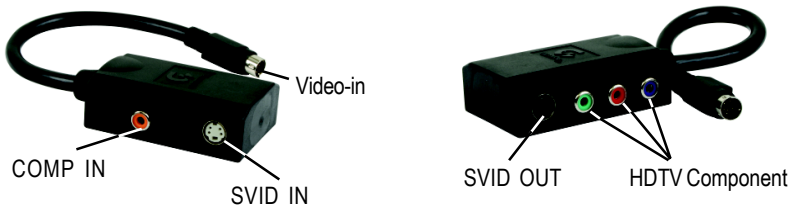


3.1.5. Taskbar Icon

After installation of the display drivers, you will find a NVIDIA icon  on the taskbar's status area. Click this icon to open the control panel.

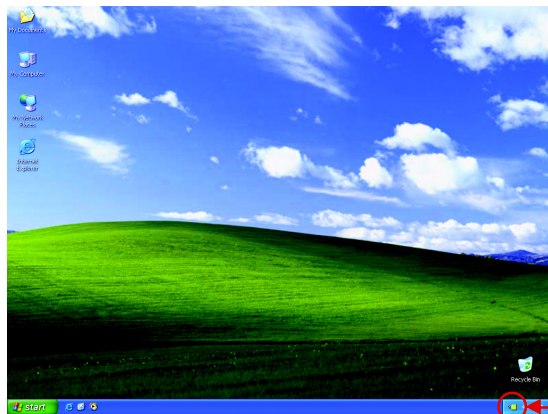

Right click the icon.

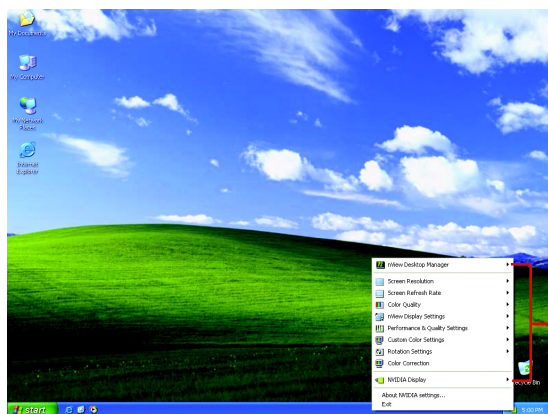


You can adjust the properties of the graphics accelerator from here.

3.1.6. Display Properties Pages

To access Display Properties pages, right-click the GBT icon on the taskbar and select **Display Properties** or right-click on Desktop and then select **Properties**. The **Display Properties** dialog box shows the information of display adapter, color, the range of display area, and the refresh rate.

Settings (Resolutions and Color depth for Windows)


You may adjust the screen resolution and color quality settings in this dialog box.

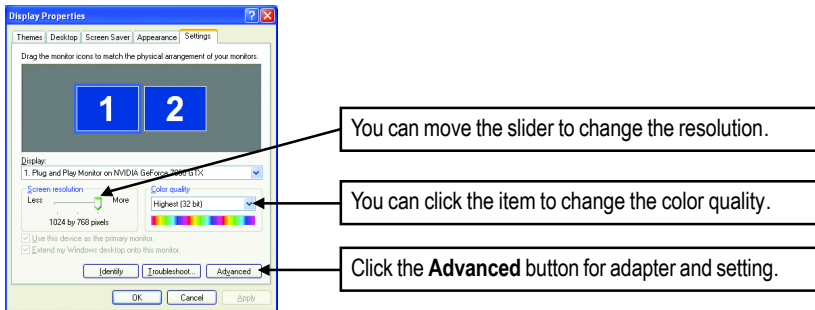

To access more advanced options, click the "Advanced" button.

GeForce 7800 GTX properties


After pressing the "Advanced" button in **Settings**, you'll see the **Plug and Play Monitor and NVIDIA GeForce 7800 GTX** dialog box. Click the **GeForce 7800 GTX** tab. (You can also click the Nvidia icon on the taskbar and select **Nvidia Display** to access the GeForce 7800 GTX page.)

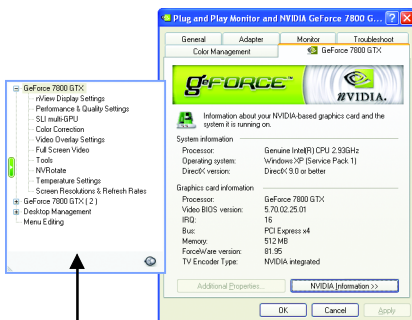

- This page shows the Adapter, System and Driver version information.

You can select other properties from the pop-out menu.


nView Display properties

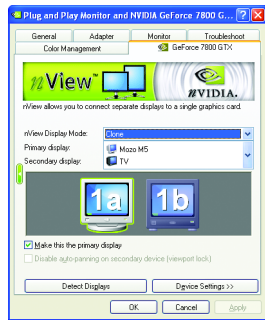

- nView allows you to connect separate displays to single graphics card.
 - nView Display mode: select your preferred nView display modes here. Options: Single display/ Clone/ Horizontal span/ Vertical span/ Dualview
 - Primary/Secondary display: select a single display or display pair. The selected display combination will appear in the graphical representation below.
 - Make this the primary display: Specifies that the display corresponding to the icon you selected above is the primary display.
 - Click Apply to apply settings or click OK to save settings.
- If TV is chosen as the display, you will need to select the proper TV format. To do this, click "Device Settings" followed by "Select TV format". Select the format for your television and then click "Apply" followed by "OK".

Display	Model	GV-NX78X512VP-B
Matrix	CRT+TV	Yes
	CRT+DVI	Yes
	DVI+TV	Yes

Performance and Quality Settings properties

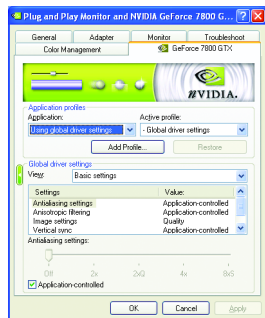

- The sliders lets to decide whether your application should use quality or high performance texture.
 - Application profiles: Select the application profile from the list of profiles.
 - Global Driver Settings: Select the Settings item and move the slider below to set the degree of antialiasing to be used in Direct3D and OpenGL applications.
 - Antialiasing settings: allows to set the degree of the Global Driver Settings.

SLI multi-GPU properties




- Your graphics card features NVIDIA Scalable Link Interface (SLI) technology.

Add a second graphics card with SLI technology for significant improvements in rendering performance.


Note: Only Windows XP operating system supports the dual GPUs mode. Please do not enable **SLI multi-GPU** in Windows 2000.

Color Correction properties

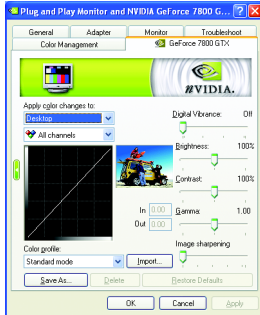


- The **Color Correction Properties** is used to compensate for variations in luminance between a source image and its output on a display device. Adjust the color correction settings to provide more accurate color reproduction of images (such as photographs) on your display device. Also, many 3D-accelerated games may appear too dark to play. Increasing the brightness and/or the gamma value equally across all channels makes these games appear brighter and more playable.

Video Overlay Settings properties

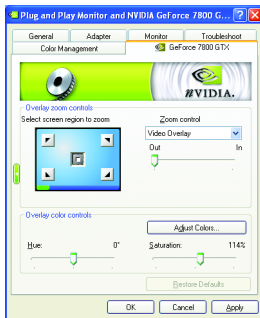


- The **Overlay Controls Properties** can adjust Overlay zoom controls and Overlay color controls. There is only one video overlay, which is only available on the **Primary** display. The video overlay controls are automatically activated during playback of any video file type that supports overlay adjustments. The "Adjust Colors" button will access "Color Correction" properties page.

Full Screen Video properties

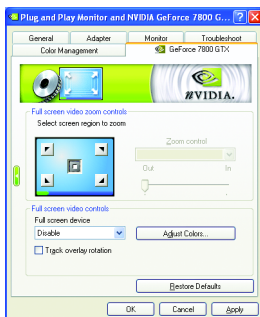

- The **Full Screen Video Properties** can adjust the display to full screen mode when video is being played.


Tools properties

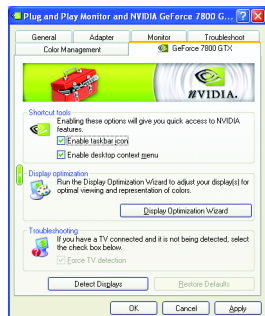

- The NVIDIA settings taskbar utility lets you conveniently access various features and presets you've configured in the Display Properties directly from the Windows taskbar.

- **Shortcut tools:**
Enabling these options will give you quick access to NVIDIA features.
- **Display Optimization:**
Run the Display Optimization Wizard to adjust your display(s) for optimal viewing and representation of colors .
- **Troubleshooting:**
If you have a TV connected and it is not being detected, select the check box below.


NV Rotate properties

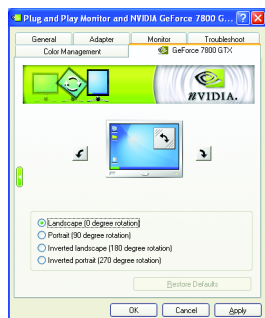

- The **NV Rotate Properties** is used to rotate the screen. If your monitor is capable of operating in either Landscape or Portrait mode, you can adjust the screen by this properties.


- Landscape (0 degree rotation)
- Portrait (90 degree rotation)
- Inverted Landscape (180 degree rotation)
- Inverted Portrait (270 degree rotation)

Temperature Settings properties

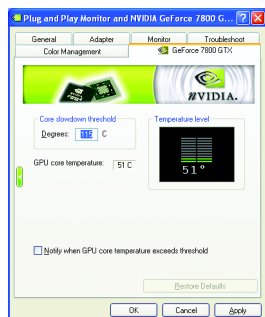


- The **Temperature Properties** can auto detected the GPU Core temperature and Ambient temperature. You can select the **Notify when GPU core temperature exceeds threshold** check box.

Screen Resolutions & Refresh Rates properties

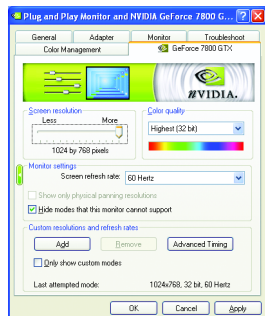

- The **Screen Resolutions & Refresh Rates properties** allows you to adjust the screen resolution, color quality and monitor settings (screen refresh rates). Or you can customize resolutions and refresh rates.

Menu Editing properties

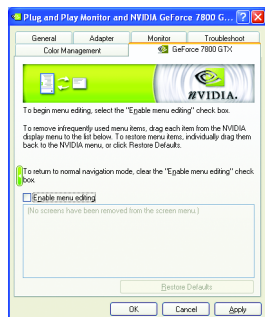

- The **Menu Editing Properties** can remove infrequently used screens by dragging them from the screen menu to the list below. Restore screens to the menu by dragging them individually, or click Restore Defaults.


To begin, check the **Enable screen menu editing** check box. To return to normal navigation mode, uncheck the check box.

3.1.7. nView Properties Pages

nView is a set of desktop tools designed to help you be more productive when using your graphics card. With **nView** you can set up multiple desktops to work with your applications. Multiple desktops give you extra desktop areas on which to run your applications so you won't have to crowd several open application windows on one desktop.

Enable the nView Desktop Manager features:

Right-click on desktop and choose Properties>Settings>Advanced>GeForce 7800 GTX>Desktop Management

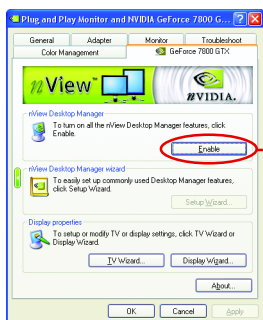


Click Enable button to turn on all the nView Desktop Manager features.

Access nView properties page:


To access the **nView** properties page, you can click the NVIDIA icon  on the taskbar and select **nView Properties** under **nView Desktop Manager** (Method A). Or right-click on Desktop, select Properties/Settings/Advanced/ GeForce 7800 GTX. Double-click **Desktop Management** item on the pop-up menu (Method B).

Method A:

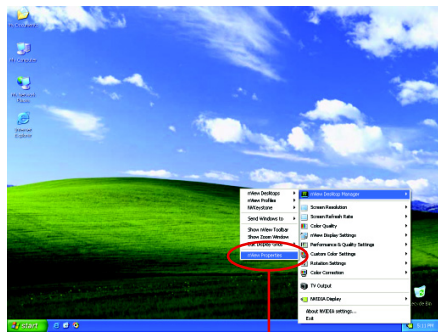


Click the item to start nView Properties.

Method B:

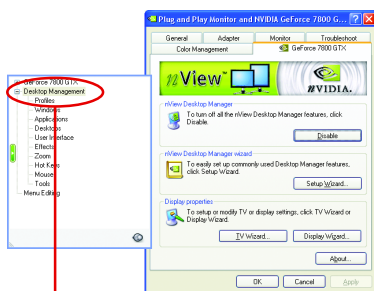


Double-click Desktop Management to see more nView properties.

nView Desktop Management properties

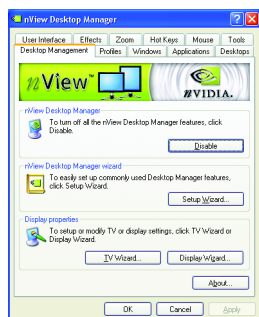


- This tab contains information about the nView Desktop Manager. The setup wizard can also be accessed from this tab.

nView Profile properties

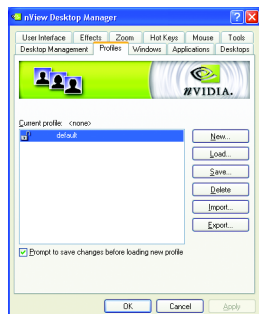


- This tab contains a record all nView display settings for easy software setup.

nView Windows properties

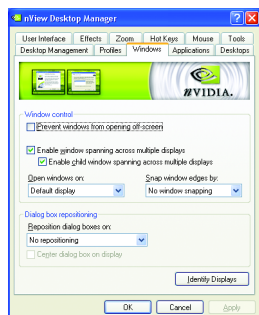


- This tab allows you to control of window and dialog box placement when using multiple monitors.

nView Applications properties

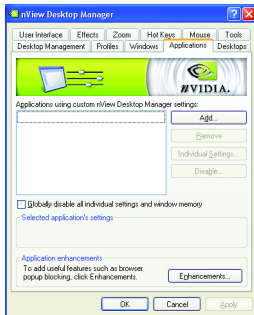


- This tab allows you to control nView settings depending on different applications.

nView Desktops properties

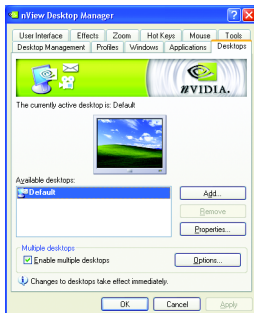


- This tab allows you to create up to 32 unique desktops.

nView User Interface properties

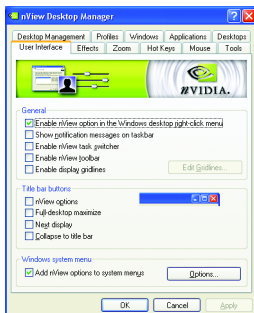


- This tab allows customization of the nView user interface.

nView Effects properties

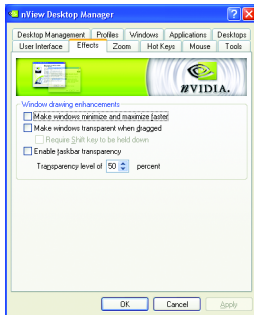


- This tab provides special windows effects that you can apply to your applications.

nView Zoom properties

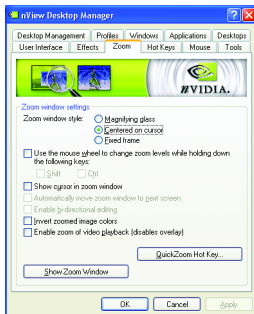


- This tab provides dynamic zoom functionality on the desktop. Also enables full screen video playback via the video mirroring control button.

nView Hot Keys properties

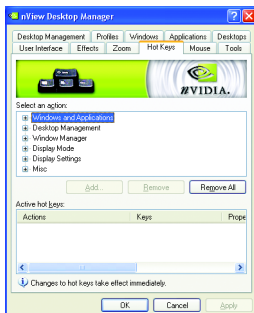


- This tab lets you perform various actions with shortcut keys or key combinations.

nView Mouse properties

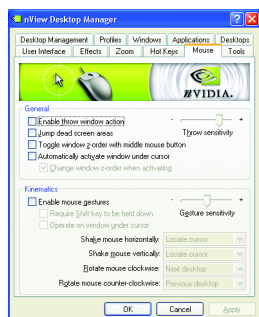

- This tab can modify and extend mouse behavior with kinematic actions.

nView Tools properties

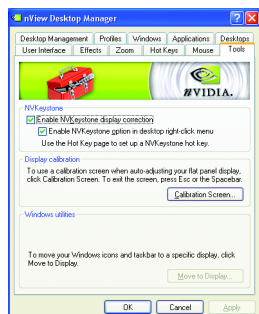

- This tab can improve nView functionality for mobile and desktop users.

3.2. Windows® 2000 driver installation

With Windows running on your computer, you need to install the graphics card driver to take advantage of the higher performance, resolutions, and special graphics features of the graphics card. To ensure you install the latest driver, insert the Installation CD that shipped with your graphics card.

To install the graphics card driver for Windows® 2000, please insert the Installation CD. Then the AUTORUN window will show up. Click **Install Display Driver** item, and follow the wizard to install the driver.

If Windows® does not show the CD automatically, please run following steps:

1. Click the Start button on the control bar.
2. Select Run.
3. Type the following: D:\SETUP.exe
(If D is not your CD-ROM drive, substitute D with the correct drive letter.)
4. Click "OK".
5. Click on "Install Display Drivers" to begin the Installation Wizard.
6. Click "Next".
7. Click "Yes" to the license agreement.
8. Follow the Wizard's on-screen instructions to complete the installation.



Please make sure the Windows® 2000 have installed Windows® 2000 Service Pack (or later) before installing the graphics accelerator driver.

4. Troubleshooting Tips

The following troubleshooting tips may help if you experience problems. Contact your dealer or Gigabyte for more advanced troubleshooting information.

- Check that the card is seated properly in the PCI Express x 16 slot.
- Ensure that the display cable is securely fastened to the card's display connector.
- Make sure that the monitor and computer are plugged in and receiving power.
- If necessary, disable any built-in graphics capabilities on your motherboard. For more information, consult your computer's manual or manufacturer.

(NOTE: Some manufacturers do not allow the built-in graphics to be disabled or to become the secondary display.)

- Make sure you selected the appropriate display device and graphics card when you installed the graphics driver.
- Restart your computer. Press the **F8** key on your keyboard after system starts up. When the Windows Advanced Options Menu appears, select Safe Mode and press Enter. After getting into Safe Mode, in Device Manager check whether the driver for the graphics card is correct.
- For more assistance, use the Troubleshooting Guide located in the Windows® Help or contact your computer manufacturer.



If necessary, adjust your monitor's setting by monitor's adjust panel to make the screen looks focused, crisp, and sharp. (Please refer to the monitor's manual.)

5. Appendix

5.1. How to Reflash the BIOS in MS-DOS mode

1. Extract the downloaded Zip file to your hard disk(s) or floppy disk. This procedure assumes drive A.
2. Restart the computer in MS-DOS mode. (For Windows 2000/XP, you need a startup disk to restart the computer in MS-DOS mode.)
3. Change the command prompt to A:\>.
4. To back up the current BIOS, at the A:\> prompt, type `[BIOS flash utility name] -s [BIOS file name]` (**example: gvf11 -s nx68256d.f1**) and press **Enter**.
5. To flash BIOS, at the A:\> prompt, type `[BIOS flash utility name] -p [BIOS file name]` (**example: gvf11 -p nx68256d.f2**) and press **Enter**.
6. Wait until it's done, then restart your computer.

5.2. Resolutions and Color Depth Table (In Windows® XP)

GeForce 7800 GTX Single Display Standard Modes

Display Screen Resolution	Refresh Rate (Hz)	Color Depth (bpp) 8bpp(256 color) Standard mode	16bpp(65K color) High mode	32bpp(16.7M) True mode
320 x 200	60~75	✓	✓	✓
320 x 240	60~75	✓	✓	✓
400 x 300	60~75	✓	✓	✓
480 x 360	60~75	✓	✓	✓
512 x 384	60~75	✓	✓	✓
640 x 400	60~75	✓	✓	✓
640 x 480	60~240	✓	✓	✓
720 x 480	60	✓	✓	✓
720 x 576	60	✓	✓	✓
800 x 600	60~240	✓	✓	✓
848 x 480	60~240	✓	✓	✓
960 x 600	60~240	✓	✓	✓
1024 x 768	60~200	✓	✓	✓
	240	✓	✓	X
1088 x 612	60~200	✓	✓	✓
	240	✓	✓	X
1152 x 864	60~170	✓	✓	✓
	200	✓	✓	X
1280 x 720	60~150	✓	✓	✓
	170	✓	✓	X
1280 x 768	60~150	✓	✓	✓
	170	✓	✓	X
1280 x 960	60~150	✓	✓	✓
	170	✓	✓	X
1280 x 1024	60~150	✓	✓	✓
	170	✓	✓	X
1360 x 768	60~150	✓	✓	✓
	170	✓	✓	X
1600 x 900	60~120	✓	✓	✓
	140~150	✓	✓	X
1600 x 1024	60~100	✓	✓	✓
	120	✓	✓	X

To be continued...

Display Screen Resolution	Refresh Rate (Hz)	Color Depth (bpp)		
		8bpp(256 color) Standard mode	16bpp (65K color) High mode	32bpp (16.7M) True mode
1600 x 1200	60~100	✓	✓	✓
	120	✓	✓	X
1920 x 1080	30~85	✓	✓	✓
	100	✓	✓	X
1920 x 1200	60~85	✓	✓	✓
	100	✓	✓	X
1920 x 1440	60~85	✓	✓	✓
2048 x 1536	60~85	✓	✓	✓

* This table is for reference only. The actual resolutions supported depend on the monitor you use.

