


3DMercury CPU water block installation detail

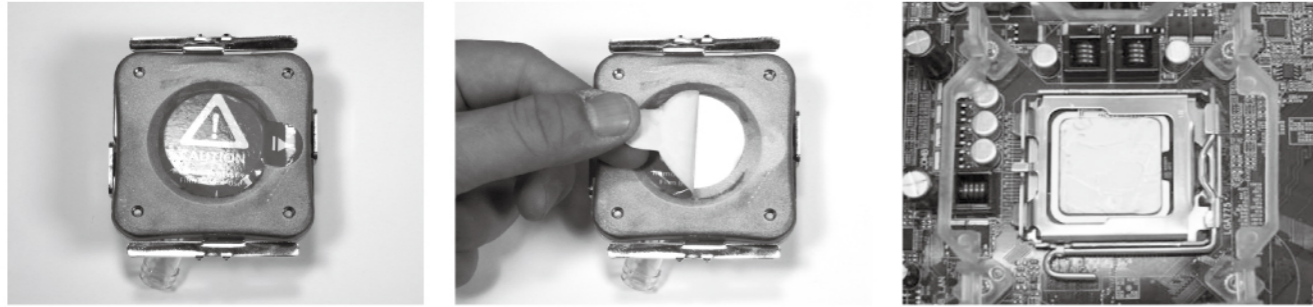

Be sure to remove the "CAUTION" sticker from the bottom of the CPU water block. Spread the thermal paste evenly on the CPU surface.



AMD K8 (754/939/940) Clip Cover Installation

Note: The AMD K8 clip can be separated from the water block (Fig. a) to adjust to the appropriate installation direction (Fig. b/c).




▲ Fig. a

▲ Fig. b

▲ Fig. c

1-1. Please change the LGA775 clip cover with the AMD K8 clip cover and align the AMD K8 clip to the three raised points on the CPU.

1-2. Fasten the latch from the AMD K8 clip cover and make sure that the water block is well secured on the CPU.

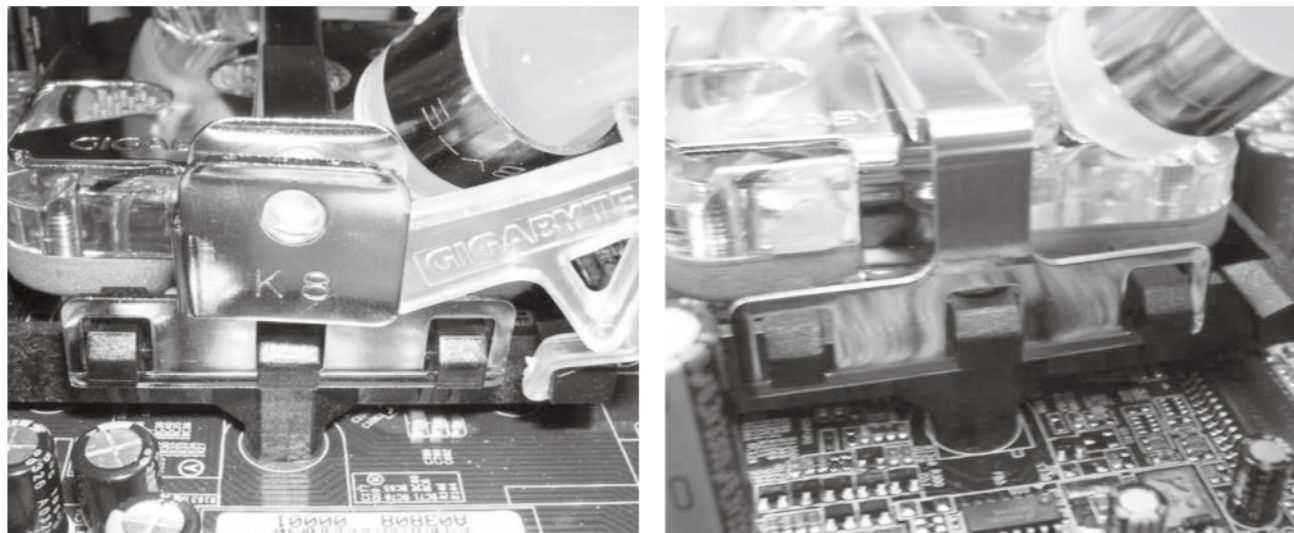


▲ 1-1

▲ 1-2

Intel R Pentium4 LGA775 bracket installation

2-1. Place the water block on top of the Intel R Pentium4 LGA775 CPU (Fig. a), and adjust to the desired direction (Fig. b)

2-2. Secure the water block onto the motherboard with the attached spring screws.

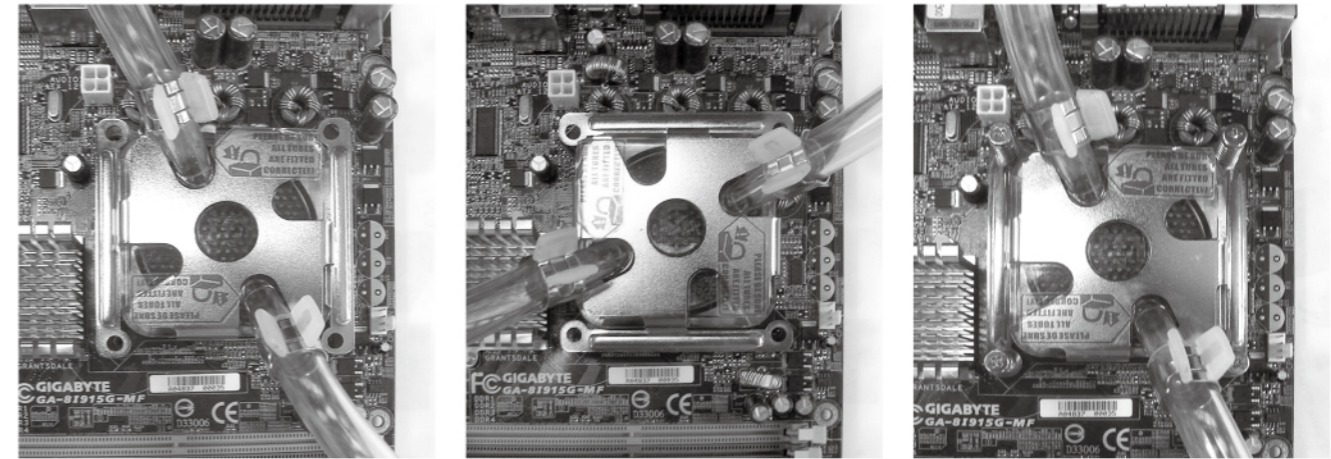

▲ 2-1. Fig. a


▲ 2-1. Fig. b

▲ 2-2

AM2 Clip Cover Installation

3-1. Replace the clip cover on the water block to the AMD AM2 clip cover. Align the AMD AM2 clip to the raised points on the CPU.

3-2. Fasten the latch on the AMD AM2 clip cover and make sure that the water block is well secured on the CPU.

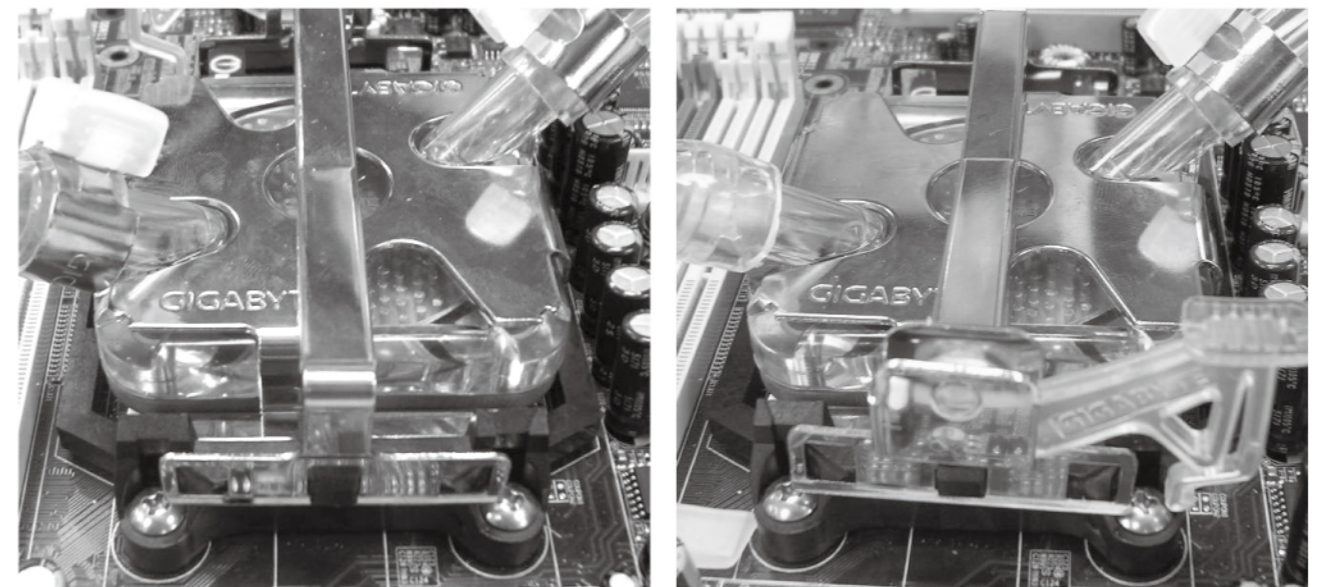

▲ 3-1

▲ 3-2