

Set up the computer


21.5"AIO System Quick Start Guide

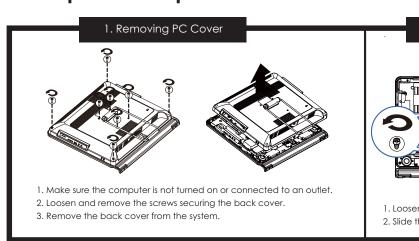

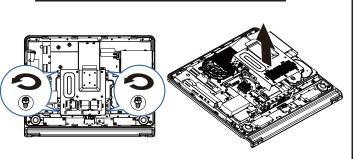


2. Removing Motherboard Metal Cover

- 1. Loosen and remove the screws securing the motherboard metal cover.
- 2. Slide the metal cover away from the I/O ports then lift up.

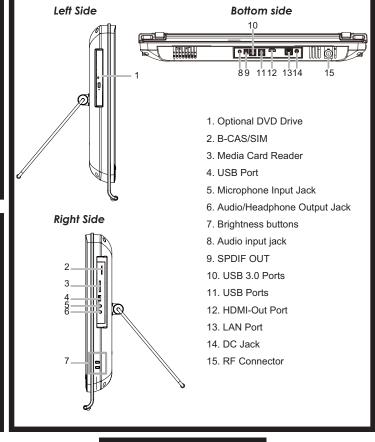

System I/O Connectors

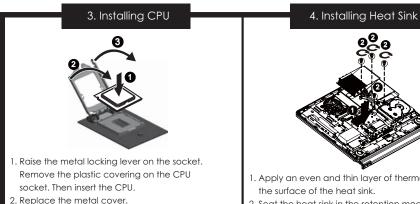


3. Push the metal lever back into the locked position.

- 1. Apply an even and thin layer of thermal paste on the surface of the heat sink.
- 2. Seat the heat sink in the retention modules and secure with the four screws in a diagonal pattern.

5. Installing Memory

- the SODIMM memory module into the SODIMM slot.
- 2. Push down the memory and seat it firmly.


1. Align the memory with the SODIMM and insert

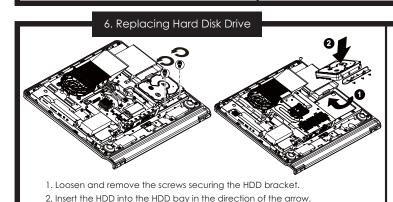

Loosen the four screws. Push down the memory and secure

the screws to the locked place.

7. Installing WiFi Module

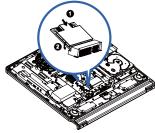

- 1. Align the WiFi card with the Mini Card Slot and insert the card
- Please note that the WiFi module has a foolproof insertion design. A WiFi module can be installed in only one direction.
- 2. Press down the WiFi card and fasten it firmly with a screw.

