GV-N84STC-1GI/ GV-N84S-512I Rev3.0/ GV-N84STC-512I Rev2.0

NVIDIA® GeForce™ 8400 GS Graphics Accelerator

User's Manual

Rev. 205 12MM-N84S5I-205R

Copyright

© 2010 GIGABYTE TECHNOLOGY CO., LTD

Copyright by GIGA-BYTE TECHNOLOGY CO., LTD. ("GBT"). No part of this manual may be reproduced or transmitted in any form without the expressed, written permission of GBT.

Trademarks

Third-party brands and names are the properties of their respective owners.

<u>Notice</u>

Please do not remove any labels on this graphics card. Doing so may void the warranty of this card.

Due to rapid change in technology, some of the specifications might be out of date before publication of this this manual. The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information contained herein.

Rovi Product Notice:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Declaration of Conformity We, Manufacturer/Importer

G.B.T. Technology Trading GMbH

	☐ EN 60335 Safety of household and similar electrical appliances	☐ EN 60065 Safety requirements for mains operated electronic and related apparatus for household and similar general use	The manufi	⊠ CE marking	□ DIN VDE 0855 Cabled distribution systems; Equipment □ part 10 for receiving and/or distribution from sound and television signals	EN 55022 Limits and methods of measurement of radio disturbance characteristics of information technology equipment	☐ EN 55020 Immunity from radio interference of broadcast receivers and associated equipment	☐ EN 55015 Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	portable tools and similar electrical apparatus	☐ EN 55014-1 Limits and methods of measurement of radio disturbance characteristics of household electrical appliances	☐ EN 55013 Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment.	industrial, scientific and medical (ISM) high frequency equipment	☐ EN 55011 Limits and methods of measurement of radio disturbance characteristics of	(ren		(des	
Manufactur	and similar	rated	The manufacturer also declares the conformity of above mentioned product with the actual required safety standards in accordance with LVD 2006/95/EC		systems; Equipment distribution from n signals	of measurement characteristics of ggy equipment		ant as of		-	_ g =	edical (ISM)		GV-N845-5121 Rev3.0 GV-N845-5121 Rev3.0 (reference to the specification under which conformity is declared in accordance with 2004/108EC EMC Directive	<	declare that the product (description of the apparatus, system, installation to which it refers)	Bullenkoppel 16, 22047 Hamburg, Germany
Manufacturer/Importer	□ EN 50091-1	⊠ EN 60950	informity of above ds in accordance	(EC co	•		□ EN 50091-2	□ EN 55014-2	□ EN 50082-2	□ EN 50082-1	⊠ EN 55024	⊠ EN 61000-3-3	⊠ EN 61000-3-2	GV-N84S-512I Rev3.0 is in conformity with lication under which conformit with 2004/108/EC EMC Dire	VGA Card	the product tem, installation to v	ly Irading GMDH 17 Hamburg, Germ
Signature: Timmu Huana	General and Safety requirements for uninterruptible power systems (UPS)	Safety for information technology equipment including electrical business equipment	mentioned product with LVD 2006/95/EC	(EC conformity marking)			EMC requirements for uniinterruptible power systems (UPS)	immunity requirements for household appliances tools and similar apparatus	Generic immunity standard Part 2: Industrial environment	Generic immunity standard Part 1: Residual, commercial and light industry	Information Technology equipment-Immunity characteristics-Limits and methods of measurement	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"	Disturbances in supply systems caused	y is declared) stive		which it refers)	any

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street

Phone/Fax No: (818) 854-9338/ (818) 854-9339 City of Industry, CA 91748

hereby declares that the product

Product Name: VGA Card

Model Number: GV-N84S-512I Rev3.0

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(a), Class B Digital Device

Supplementary Information:

including that may cause undesired operation. cause harmful and (2) this device must accept any inference received, subject to the following two conditions: (1) This device may not This device complies with part 15 of the FCC Rules. Operation is

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Oct.29,2010

(Stamp)

Date : Oct.29,2010

Name : Timmy Huang

Declaration of Conformity We, Manufacturer/Importer (ful address)

G.B.T. Technology Trading GMbH

n to wind 2.0 Directions 3 3 3 C confidence with the confidence wi	Signature: 7immy Huang	e: Oct.29,2010	Manufactureriii Date: Oct.29,2010	(Stamp)
declare that the products of declare that the products of declare that the products of the apporature, system, recallablish to VGA Card GV-NUSS-5121 Rev2.D (effectivenes to the specification with 2004/109EC BMC Direct of reasonation of the specification or the product of the specification or the vision of the products of the specification or the vision of the products of the specification of the vision of	General and Safety req uninterruptible power sy	□ EN 50091-1	Safety of household and similar electrical appliances	□ EN 60335
(description of the apparatus, system, relatibilist to VGA Gard Gave specific and the apparatus, system, relatibilist to VGA Gard GAV-8145-5 121 Rev. 22.0 (reference to the specification system, relatibilist to VGA Gard GAV-8145-5 121 Rev. 22.0 (reference to the specification of th	Safety for information te including electrical busing	⊠ EN 60950	Safety requirements for mains operated electronic and related apparatus for household and similar general use	□ EN 60065
(description of the apparatus, system, retailabilish to w VGA, Card GV-RNS-5-512 Rev2.2.) (reference to the apparatus, system, retailabilish to w VGA, Card GV-RNS-5-512 Rev2.2.) (reference to the apparatus, system, retailabilish to w VGA, Card GV-RNS-5-512 Rev2.2.) (reference to the apparatus system, retailabilish in accordance with 2004/16/EC ENC Direct in a condition of the specification of the property of the condition of th	e mentioned product with LVD 2006/95/EC	the conformity of abov landards in accordance	The manufacturer also declares with the actual required safety st	
(description of the apparatus, system, relatibilish to w VGA, Carld GV, NB, 455, 512 Re, 2022. Limits and methods of measurement is no conformity with (reference to the specification of the specification of relationships of of radio distributions characteristics of industrial distributions of the specification of relationships with the conformation of radio distributions of apparatus of relationships of relati	onformity marking)	(Ec.		⊠ CE marking
Conception of the apparatus system, metallishin to w Conception of the apparatus Conception of the appara		`	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals	□ DIN VDE 0855 □ part 10 □ part 12
(description of the appearance special control of the appearance of th			Limits and methods of measurement of radio disturbance characteristics of information technology equipment	⊠ EN 55022
(description of the appendix system, metallished to w VFGA Card GVH New Year Card GV	EMC requirements for uninterruptible power systems (UPS)	□ EN 50091- 2	Immunity from radio interference of broadcast receivers and associated equipment	□ EN 55020
(description of the apparatus, system installation to w UGA Card GV-N945-512 Rev2.0 (reference to the specification contents) in a coordinate with a condemnia of radio disturbance characteristics of industrial, scientifica and methods of measurement of radio disturbance characteristics of industrial, scientifica and methods (SM) Limits and methods of measurement of radio disturbance characteristics of industrial, scientifica and methods of measurement of radio disturbance characteristics of the properties of the propertie	Immunity requirements for household appliances tools and similar apparatus	□ EN 55014-2	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	□ EN 55015
(description of the appendix system must be product (Secription of the appendix system metallished to w VIGA Card CV VIGA Card CV VIGA Card (reference to the specification under white producing with necessary and metallished to w (reference to the specification under white producing with necessary and metallished of resourcement with 2004/108/EC EMC Direct Limits and methods of resourcement of the producing vigation viga	Generic immunity standard Part 2 Industrial environment	□ EN 50082-2	portable tools and similar electrical apparatus	
(description of the approximate system, installation to with CA Card VGA Ca	Generic immunity standard Part 1: Residual, commercial and light industry	□ EN 50082-1	Limits and methods of measurement of radio disturbance characteristics of household electrical analiances.	□ EN 55014-1
description of the apparatus, system, installation to w VGA, Cand GVA,045-5121 Rev2.0 (retirence to the specification and confirmation of the specification	Information Technology equipment-Immunity characteristics-Limits and methods of measurement	⊠ EN 55024	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	□ EN 55013
detains that he product (description of the approach, system, residents) VEA Cand VE	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"	⊠ EN 61000-3-3	industrial, scientific and medical (ISM) high frequency equipment	
description of the appearants yearon, installation to which it refers) V.A. Cate G.V.NB45-5-51/1 Reviz 0. G.V.NB45-5-51/1 Reviz 0. (reference to the appearant years) in accordance with 2004-104EC EMC Directive	Disturbances in supply systems caused	⊠ EN 61000-3-2	Limits and methods of measurement	□ EN 55011
declare that the product (description of the appearus, system, restaliation to which it refers) VQA Card GV-N84S-5121 Rev2.0	ity is declared) active	n conformity with ion under which conform h 2004/108/EC EMC Dir	(reference to the specification in accordance with	
declare that the product (description of the apparatus, system, installation to which it refers)		/-N84S-512I Rev2.0	6)	
declare that the product	which it refers)	us, system, installation to VCA Card	(description of the apparatu	
		re that the product	decla	

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: VGA Card

Model Number: GV-N84S-512I Rev2.0

Conforms to the following specifications:

FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

(a), Class B Digital Device

Supplementary Information:

including that may cause undesired operation. cause harmful and (2) this device must accept any inference received, subject to the following two conditions: (1) This device may not This device complies with part 15 of the FCC Rules. Operation is

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Oct.29,2010

Declaration of Conformity We, Manufacturer/Importer (ful address)

G.B.T. Technology Trading GMbH llenkoppel 16, 22047 Hamburg, Germany

	Bullenkoppel 16, 22047 Hamburg, Germany declare that the product (description of the appearum, system, inspalletion to which it refers)	Bullenkoppel 16, 22047 Hamburg, Germany declare that the product of the apparatus, system, installation to which	many which it rafars)
	6)	VGA Card GV-N84STC-1GI	
	is in conformity with (reference to the specification under which conformity is declared)	is in conformity with ication under which conform	ity is declared)
	in accordance with 2	in accordance with 2004/108/EC EMC Directive	ective
□ EN 55011	Limits and methods of measurement	⊠ EN 61000-3-2	Disturbances in supply systems caused
	industrial, scientific and medical (ISM) high frequency equipment	⊠ EN 61000-3-3	Disturbances in supply systems caused by household appliances and similar electrical equipment "Voltage fluctuations"
□ EN 55013	Limits and methods of measurement of radio disturbance characteristics of broadcast receivers and associated equipment	⊠ EN 55024	Information Technology equipment-Immunity characteristics-Limits and methods of measurement
□ EN 55014-1	Limits and methods of measurement of radio disturbance characteristics of household electrical analogous	□ EN 50082-1	Generic immunity standard Part 1: Residual, commercial and light industry
	portable tools and similar electrical apparatus	□ EN 50082-2	Generic immunity standard Part 2: Industrial environment
□ EN 55015	Limits and methods of measurement of radio disturbance characteristics of fluorescent lamps and luminaries	□ EN 55014-2	Immunity requirements for household appliances tools and similar apparatus
□ EN 55020	Immunity from radio interference of broadcast receivers and associated equipment	□ EN 50091- 2	EMC requirements for uninterruptible power systems (UPS)
⊠ EN 55022	Limits and methods of measurement of radio disturbance characteristics of information technology equipment		
□ DIN VDE 0855 □ part 10 □ part 12	Cabled distribution systems; Equipment for receiving and/or distribution from sound and television signals	7	
⊠ CE marking	(EC conformity marking) The manufacturer also declares the conformity of above mentioned product	(EC or	(EC conformity marking) above mentioned product
T EN SOORS	In maintaincure days declare the Contoninary of above mentioned product with the actual required safety standards in accordance with LVD 20059SECE varieties nearlies nearlies (SEN 8080). Safety for information and the contoning product of the con	dards in accordance	with LVD 2006/95/EC
□ EN 60065	Safety requirements for mains operated electronic and related apparatus for household and similar general use	⊠ EN 60950	Safety for information technology equipment including electrical business equipment
□ EN 60335	Safety of household and similar electrical appliances	□ EN 50091-1	General and Safety requirements for uninterruptible power systems (UPS)
	Manufaci	Manufacturer/Importer	Signature: Timmy Huang
	No. 2	20 2010	

DECLARATION OF CONFORMITY

Per FCC Part 2 Section 2.1077(a)



Responsible Party Name: G.B.T. INC. (U.S.A.)

Address: 17358 Railroad Street City of Industry, CA 91748

Phone/Fax No: (818) 854-9338/ (818) 854-9339

hereby declares that the product

Product Name: VGA Card

Model Number: GV-N84STC-1GI

Conforms to the following specifications:

(a), Class B Digital Device FCC Part 15, Subpart B, Section 15.107(a) and Section 15.109

Supplementary Information:

including that may cause undesired operation. cause harmful and (2) this device must accept any inference received, subject to the following two conditions: (1) This device may not This device complies with part 15 of the FCC Rules. Operation is

Representative Person's Name: ERIC LU

Signature: Eric Lu

Date: Nov.29,2010

(Stamp)

Date: Nov. 29,2010

Name : Timmy Huang

Table of Contents

1. Introduction	6
1.1. Features	6
1.2. Minimum System Requirements	6
2. Hardware Installation	8
2.1. Board Layout	8
2.2. Hardware Installation	12
3. Software Installation	13
3.1. Driver and Utility Installation	13
3.1.1. Driver Installation	13
3.2. Display Properties Pages	15
3.3. Accessing NVIDIA Control Panel	16
4. Troubleshooting Tips	24
5. Appendix	25
5.1. How to Reflash the BIOS in MS-DOS Mode	25
5.2. Resolutions and Color Depth Tables	
5.3. Regulatory Statements	

1. Introduction

1.1. Features

• The graphics card supports NVIDIA TurboCache technology, which enhances graphics card performance by allowing the graphics processing unit (GPU) to dynamically share the available system memory. The total effective VGA memory differs depending on system memory. See the following table for details:

System Memory	256 MB	512 MB	1 GB
Onboard Graphics Memory (a)	256 MB	256 MB	512 MB
Allocated System Memory (b)	0 MB	0 MB	256 MB
Total Effective Graphics Memory (a)+(b)	256 MB	256 MB	768 MB

(For GV-N84STC-512I Rev2.0 only)

Windows Vista &Windows7

System Memory	1GB	2GB	4GB
On board graphics memory (MB)	512	512	512
Shared system memory (MB)	253	765	1150
Total graphics memory (MB)	765	1277	1662

Windows XP

System Memory	1GB	2GB	4GB
On board graphics memory (MB)	512	512	512
Shared system memory (MB)	512	512	512
Total graphics memory (MB)	1024	1024	1024

(For GV-N84STC-1GI only)

- Powered by NVIDIA® GeForce™ 8400 GS Graphics Processing Unit (GPU)
- Supports PCI Express 2.0
- Integrated with 512MB GDDR2 memory

(For GV-N84S-512I Rev3.0/GV-N84STC-1GI only)

- Integrated with 128MB GDDR3 memory (For GV-N84STC-512I Rev2.0 only)
- Supports DirectX 10.1
- Supports 1 HDMI connector
- Supports 1 Dual-Link DVI-I connector
- Supports 1 D-sub connector
- Supports HDCP (High-Bandwidth Digital Content Protection) technology

1.2. Minimum System Requirements

Hardware

- Intel® Pentium®/Core™ 2 or AMD Athlon™/Phenom™
- 128 MB of system memory; 2 GB or more for best performance
- Optical drive for software installation (CD-ROM or DVD-ROM drive)
- A 300 Watt power supply or above is recommended

Operating System


- Windows® 7
- Windows® Vista
- Windows® XP with Service Pack 2 (SP2)
- Windows® XP Professional x64 Edition


- 7 - Introduction

2. Hardware Installation


2.1. Board Layout


1. GV-N84S-512I Rev3.0

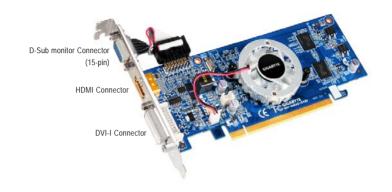


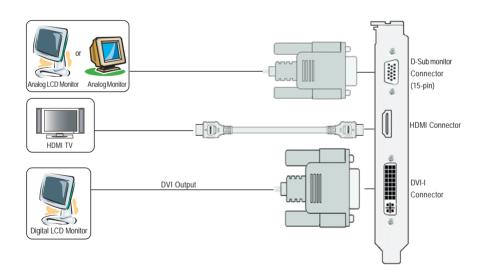

2.GV-N84STC-512I Rev2.0

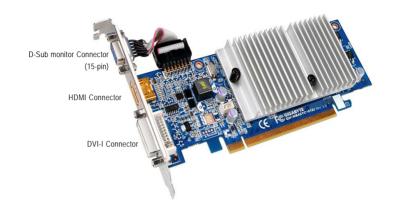

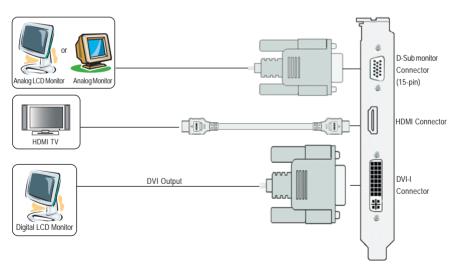

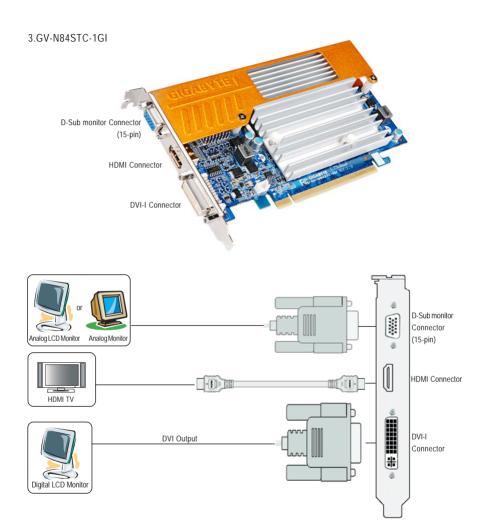



Expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

- 1. Turn off your computer and unplug power supply.
- 2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
- 3. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.

The card contains sensitive electric components, which can be easily damaged by static electricity, so the card should be left in its original packing until it is installed.

Unpacking and installation should be done on a grounded anti-static mat. The operator should be wearing an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the card carton for obvious damage. Shipping and handling may cause damage to your card. Be sure there are no shipping and handling damages on the card before proceeding.

- ●* DO NOT APPLY POWER TO YOUR SYSTEM IF THE GRAPHICS CARD IS DAMAGED.
- ◆* In order to ensure that your graphics card can work correctly, please use official GIGABYTE BIOS only. Using non-official GIGABYTE BIOS might cause problem(s) on the graphics card.

2.2. Hardware Installation

Now that you have prepared your computer, you are ready to install your graphics card.

Step 1.

Locate the PCI Express x16 slot. If necessary, remove the metal cover from this slot; then align your graphics card with the PCI Express x16 slot, and press it in firmly until the card is fully seated.



Make sure that the gold edge connector of the graphics card is securely inserted.



Step 2.

Replace the screw to fasten the card in place, and replace the computer cover.



Step 3.

Plug the display cable into your card; then turn on the computer and monitor. To connect a D-Sub monitor to your graphics card, use the D-Sub connector. To connect a flat panel display to your graphics card, use the DVI-I connector. To connect an HDMI monitor to your graphics card, use the HDMI connector.







Connect a flat panel display



You are now ready to proceed with the installation of the graphics card driver. Please refer to next chapter for detailed instructions.

3. Software Installation

Notice the following guidelines before installing the drivers:

- 1. First make sure your system has installed DirectX 9 or later version.
- Make sure your system has installed the appropriate motherboard drivers (for the motherboard drivers, please contact the motherboard manufacturer.)

3.1. Driver and Utility Installation

3.1.1. Driver Installation

After installing the operating system, insert the driver disk into your optical drive. The driver Autorun screen is automatically displayed which looks like that shown in the screen shot below. (If the driver Autorun screen does not appear automatically, go to My Computer, double-click the optical drive and execute the **setup**.exe program.)



Step 1: Click the **Install Display Driver** item.




Step 2: Click the **Next** button.



For software MPEG support in Windows XP, you must install DirectX first. Users who run Windows XP with Service Pack 2 or above do not need to install DirectX separately.



Step 3: Click the **Yes** button.

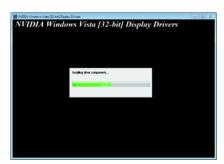

The system is installing the components.



Step 4: Click the **Finish** button to restart the computer. Then the driver installation is completed.

3.2. Display Properties Pages

Display Settings (Resolutions and Color Quality for Windows)

To access **Display Settings** page, right-click on desktop and select **Personalize**, then the Personalization windows will show up. Select **Display Settings** to adjust the screen resolution and color quality settings.





3.3. Accessing NVIDIA Control Panel

After installation of the display driver, right-click on the desktop and select NVIDIA Control Panel. The NVIDIA Control Panel is used to configure all your graphics card settings.



Right-click on the desktop and select NVIDIA Control Panel.

Or you can right-click on the desktop and select Personalize, and then the Control Panel\Appearance Personalization\Personalization window will show up. Select Display Settings. When the Display Settings dialog box appears, click Advanced Settings.

After clicking the Advanced Settings button in Display Settings, you'll see the Generic PnP Monitor and NVIDIA GeForce 8400 GS Properties dialog box. Click the GeForce 8400 GS tab to access the NVIDIA Control Panel.



On the GeForce 8400 GS tab page, click Start the NVIDIA Control Panel to launch the NVIDIA Control Panel.



Select the view of the NVIDIA Control Panel that is most appropriate for you.

- Standard Settings
- Advanced Settings

The following pages provide details on configuring advanced settings.



In the NVIDIA Control Panel, select a category to alter specific NVIDIA display settings.

The categories are:

- 3D Settings
- Display
 - Video & Television



In the NVIDIA Control Panel, change a view if you want.

The supported modes are:

- Standard
- Advanced
- Custom

3D Settings

Tasks in the 3D Settings pages allow you to do the following:

- Change the image and rendering settings of your 3D applications and games that utilize Direct3D and OpenGL technology.
- Override the shipped clocked frequencies of your GPU and GPU memory to increase your GPU performance.
- Assign specific 3D settings to a game so that these settings automatically load when a game is launched.



Adjust Image Settings with Preview If you are unfamiliar with 3D technology or not an advanced graphics user, use the Adjust Image Settings with Preview page to preview any changes you make for improved image quality and rendering.



Manage 3D Settings (Note 1)

The Manage 3D Settings page enables you to establish default 3D settings to use for all your Direct3D or OpenGL applications and to establish a unique set of 3D settings for a particular game or application.

(Note 1) This item is present only in Advanced view mode.

Display

A variety of display features enable you to further manipulate and configure your display settings to optimize the use of your displays. Tasks in the Display pages allow you to do the following:

- · Change resolution
- · Change Flat Panel Scaling
- · Adjust desktop color settings
- · Rotate display
- Manage custom resolutions (Note)
- · Set up multiple displays



Change Resolution

Using the Change Resolution controls, you can change the color setting, reduce screen flickering, or adjust the amount of information appearing on your display.



Change Flat Panel Scaling

Not using the display's native resolution may result in a desktop that does not fill the display. You can change how the desktop is scaled to fit the viewable area.

(Note) This item is present only in Advanced view mode.



Adjust Desktop Color Settings

Use this page to set the contrast, sharpness, and color depth (Digital Vibrance) of the images on your desktop. These changes will not affect any video playback. To change video color settings, go to Adjust Video Color Settings under the Video and TV section from the Start page.



Rotate Display

The NVIDIA Rotate features enable you to change the orientation of your desktop to portrait, landscape, and inverted modes. This is useful if you have rotated your physical display and need to rotate the desktop to match the orientation of your display.



Manage Custom Resolutions (Note)

If you are an advanced user, you can create custom timing modes with the width, height, bit-color depth, and the refresh rate etc. The Advanced Timing page enables you to adjust timings for your graphics card in order to support a variety of different display timings for ultimate flexibility for analog CRT and DVI connections. You can use the advanced Change Resolution Attributes page to view custom display modes you have saved in the Create Custom Resolutions page.

(Note) This item is present only in Advanced view mode.



■ Set Up Multiple Displays

NVIDIA nView technology enables you to view your desktop in one of several multi-display modes to make the best use of the displays (monitors) that are connected to your computer.

Dual-Monitor Setup

You can set the display to output from two monitors on the Set Up Multiple Displays page.



Select your preferred nView display modes here.

- · Only use one display (Single)
- The same on both display (Clone)
- Configured independently from each other (Dualview)
- As one large horizontal desktop (Horizontal span) (Note)
- As one large vertical desktop (Vertical span) (Note)

(1) The same on both display (Clone)

Clone mode indicates that both displays in the display pair show images of the same desktop.



(2) Configured independently from each other (Dualview)

Dualview mode indicates that both displays in the display pair function as one virtual desktop. Unlike Horizontal Span or Vertical Span mode, Dualview treats each display as a separate device. This means that the taskbar will not be stretched across displays and 3D applications are not accelerated as efficiently as when the application spans displays.

(Note) This item is present only in Windows XP.



Dualview Mode

(3) As one large horizontal desktop (Horizontal span) (Note 1)

Horizontal Span mode indicates that both displays in the display pair function as one wide virtual desktop. The width of each display is half the width of the total virtual desktop width.



Horizontal Span Mode

(4) As one large vertical desktop (Vertical span) (Note 1)

Vertical Span mode indicates that both displays in the display pair function as one tall virtual desktop. The height of each display is half the height of the total virtual desktop height.



Vertical Span Mode

Display	Model	GV-N84S-512I Rev3.0	GV-N84STC-512I Rev2.0	GV-N84STC-1GI
Matrix	CRT+HDMI	Yes	Yes	Yes
	DVI+HDMI	Yes	Yes	Yes
	DVI+HDMI+CRT	No	No	No
	DVI+DVI (Note 2)	Yes	Yes	Yes

(Note 1) This item is present only in Windows XP. (Note 2) By an HDMI-to-DVI adapter.

Video & Television

Video and television features are similar to those for analog for optimal viewing. Tasks in the Video & Television pages allow you to do the following:

- Adjust your television picture quality and video color settings for the best possible viewing in its
 environment.
- · Change the position and size of the desktop video to best fit your television screen.



Adjust Video Color Settings

Use the controls on this page to fine tune the color settings for video content on your display. Select one of the test images to monitor your changes. For best results, play a video while you make adjustment to view the changes as they happen.



Adjust Video Image Settings

Use the controls on this page to fine tune the image settings for video content on your display. You can choose to use inverse telecine, adjust edge sharpness, or apply noise filtering. For best results, play a video while you make adjustment to view the changes as they happen.

Note:

Support for some features under Windows Vista is in development and may not be available with your ForceWare graphics driver version. Consult the release notes for updated information on supported features.

4. Troubleshooting Tips

The following troubleshooting tips may help if you experience problems. Contact your dealer or GIGABYTE for more advanced troubleshooting information.

- Check that the card is seated properly in the PCI Express x16 slot.
- Ensure that the display cable is securely fastened to the card's display connector.
- Make sure that the monitor and computer are plugged in and receiving power.
- If necessary, disable any built-in graphics capabilities on your motherboard. For more information, consult your computer's manual or manufacturer.
 - (NOTE: Some manufacturers do not allow the built-in graphics to be disabled or to become the secondary display.)
- Make sure you selected the appropriate display device and graphics card when you install the graphics driver.
- Restart your computer.
 - Press <F8> on your keyboard after system starts up. When the Windows Advanced Options Menu appears, select Safe Mode and press <Enter>.
 - After getting into Safe Mode, in Device Manager check whether the driver for the graphics card is correct.
- For more assistance, use the Troubleshooting Guide located in the Windows Help or contact your computer manufacturer.
- If you are not able to find the desired monitor color/resolution settings:
 The color and screen resolution options available for selection depend on the graphics card being installed.



If necessary, adjust your monitor's setting using monitor's adjust panel to make the screen look focused, crisp, and sharp. (Please refer to the monitor's manual.)

5. Appendix

5.1. How to Reflash the BIOS in MS-DOS Mode

- 1. Extract the downloaded Zip file to your hard disk(s) or floppy disk. This procedure assumes drive A.
- Restart the computer in MS-DOS mode. (You may need a startup disk to restart the computer in MS-DOS mode.)
- 3. Change the command prompt to A:\>.
- 4. To back up the current BIOS, at the A:\> prompt, type [BIOS flash utility name] -s [BIOS file name] (example: gvf19 -s n84s5i.F1) and press Enter.
- 5. To flash BIOS, at the A:\> prompt, type[BIOS flash utility name] -p [BIOS file name] (example: gvf19 -p n84s5i.F2) and press Enter.
- 6. Wait until it's done, then restart your computer.

- 25 - Appendix

5.2. Resolutions and Color Depth Tables

GeForce 8400 GS Single Display Standard Modes

Display	Refresh	Color Depth (bpp)		
Screen	Rate	8bpp(256 color)	16bpp(65K color)	32bpp(16.7M)
Resolution	(Hz)	Standard mode	High mode	True mode
320 x 200	60~75	✓	✓	✓
320 x 240	60~75	✓	✓	✓
400 x 300	60~75	✓	✓	✓
480 x 360	60~75	✓	✓	✓
512 x 384	60~75	✓	✓	✓
640 x 400 (16:10)	60~75	✓	✓	✓
640 x 480	60~240	✓	✓	✓
720 x 480	60	✓	✓	✓
720 x 576	50~60	✓	✓	✓
800 x 600	60~240	✓	✓	✓
848 x 480	60~240	✓	✓	✓
960 x 600 (16:10)	60~240	✓	✓	✓
1024 x 768	60~200	✓	✓	✓
	240	✓	✓	Χ
1088 x 612 (16:9)	60~200	✓	✓	✓
	240	✓	✓	Χ
1152 x 864	60~170	✓	✓	✓
	200	✓	✓	Χ
1280 x 720 (16:9)	60~150	✓	✓	✓
	170	✓	✓	Χ
1280 x 768	60~150	✓	✓	✓
	170	✓	✓	Χ
1280 x 800	60~150	✓	✓	✓
	170	✓	✓	Χ
1280 x 960	60~150	✓	✓	✓
	170	✓	✓	Χ
1280 x 1024	60~150	✓	✓	✓
	170	✓	✓	Χ
1360 x 768	60~150	✓	✓	✓
	170	✓	✓	Χ
1600 x 900 (16:9)	60~120	✓	✓	√
, ,	140~150	✓	✓	Χ
1600 x 1024	60~100	✓	✓	√

To be continued...

Display	Refresh	Color Depth (bpp)		
Screen	Rate	8bpp(256 color)	16bpp(65K color)	32bpp(16.7M)
Resolution	(Hz)	Standard mode	High mode	True mode
1600 x 1200	60~100	✓	✓	✓
	120	\checkmark	✓	Χ
1920 x 1080 (16:9)	60~85	✓	✓	✓
	100	\checkmark	\checkmark	Χ
1920 x 1200 (16:10)	60~85	✓	✓	✓
	100	\checkmark	\checkmark	Χ
1920 x 1440	60~85	✓	✓	✓
2048 x 1536	60~85	✓	✓	✓
2560 x 1600	60	✓	✓	✓
(Dual-Link)				

^{*} This table is for reference only. The actual resolutions supported depend on the monitor you use.

5.3. Regulatory Statements

Regulatory Notices

This document must not be copied without our written permission, and the contents there of must not be imparted to a third party nor be used for any unauthorized purpose. Contravention will be prosecuted. We believe that the information contained herein was accurate in all respects at the time of printing. GIGABYTE cannot, however, assume any responsibility for errors or omissions in this text. Also note that the information in this document is subject to change without notice and should not be construed as a commitment by GIGABYTE.

Our Commitment to Preserving the Environment

In addition to high-efficiency performance, all GIGABYTE motherboards fulfill European Union regulations for RoHS (Restriction of Certain Hazardous Substances in Electrical and Electronic Equipment) and WEEE (Waste Electrical and Electronic Equipment) environmental directives, as well as most major worldwide safety requirements. To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, GIGABYTE provides the following information on how you can responsibly recycle or reuse most of the materials in your "end of life" product.

Restriction of Hazardous Substances (RoHS) Directive Statement

GIGABYTE products have not intended to add and safe from hazardous substances (Cd, Pb, Hg, Cr+6, PBDE and PBB). The parts and components have been carefully selected to meet RoHS requirement. Moreover, we at GIGABYTE are continuing our efforts to develop products that do not use internationally banned toxic chemicals.

Waste Electrical & Electronic Equipment (WEEE) Directive Statement

GIGABYTE will fulfill the national laws as interpreted from the 2002/96/EC WEEE (Waste Electrical and Electronic Equipment) directive. The WEEE Directive specifies the treatment, collection, recycling and disposal of electric and electronic devices and their components. Under the Directive, used equipment must be marked, collected separately, and disposed of properly.

WEEE Symbol Statement



The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a

manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local government office, your household waste disposal service or where you purchased the product for details of environmentally safe recycling.

- When your electrical or electronic equipment is no longer useful to you, "take it back" to your local
 or regional waste collection administration for recycling.
- If you need further assistance in recycling, reusing in your "end of life" product, you may contact us
 at the Customer Care number listed in your product's user's manual and we will be glad to help you
 with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly. With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of "end of life" products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

China Restriction of Hazardous Substances Table

The following table is supplied in compliance with China's Restriction of Hazardous Substances (China RoHS) requirements:



关于符合中国《电子信息产品污染控制管理办法》的声明 Management Methods on Control of Pollution from Electronic Information Products (China RoMS Declaration)

产品中有毒有害物质或元素的名称及含量

	Hazardous	s Substanc	es Table			
		有毒有害	物质或元	表 (Hazardou:	s Substance	s)
部件名称(Parts)	铅(Pb)	汞 (Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB板 PCB	0	0	0	0	0	0
结构件及风扇 Mechanical parts and Fan	×	0	0	0	0	0
芯片及其他主动零件 Chip and other Active components	×	0	0	0	0	0
连接器 Connectors	×	0	0	0	0	0
被动电子元器件 Passive Components	×	0	0	0	0	0
线材 Cables	0	0	0	0	0	0
焊接金属 Soldering metal	0	0	0	0	0	0
助焊剂,散热膏,标签及其他耗材 Flux, Solder Paste, Label and other Consumable Materials	0	0	0	0	0	0

^{○:}表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。 Indicates that this hazardous substance contained in all homogenous materials of this part is below the limit requirement SJ/T 11363-2006

对销售之日的所受售产品,本表显示我公司供应链的电子信息产品可能包含这些物质。注意:在所售产品中 可能会也可能不会含有所有所列的部件。

This table shows where these substances may be found in the supply chain of our electronic information products, as of the date of the sale of the enclosed products. Note that some of the component types listed above may or may not be a part of the enclosed product.

X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。 Indicates that this hazardous substance contained in at least one of the homogenous materials of this part is above the limit requirement in SJ/T 11363-2006

	<u> </u>	