

GS-R114V

1U Rack Mount Server

System Installation Guide

Intel® Pentium Prescott LGA775 Processor Serverboard
Rev. 1.1
25A080-01141-F00

Table of Content

| | |
|---|----|
| Safety, Care and Regulatory Information | 4 |
| Introduction | 8 |
| Contents Packages | 8 |
| WARNING! | 8 |
| Chapter 1 Features Summary | 9 |
| Chapter 2 System Overview | 11 |
| Chapter 3 System Hardware Installation | 12 |
| Step 3-1: Chassis Removal and Installation | 12 |
| Step 3-2: CPU Installation | 13 |
| Step 3-3: Heat Sink Installation | 14 |
| Step 3-4: Memory Installation | 14 |
| Step 3-5: PCI Expansion Card Installation | 15 |
| Step 3-6: Hard Disk Drive Installation | 16 |
| Step 3-7: FAN Duct Removal and Installation | 17 |
| Chapter 4 Appearance of GS-R114V | 18 |
| 4-1: Front View of GS-R114V | 18 |
| 4-2: Rear View of GS-R114V | 19 |
| 4-3: Switch and LED Indicators Introduction | 20 |
| 4-4: LAN LED Description | 21 |
| 4-5 : Connector Icon Description | 22 |
| Chapter 5 Motherboard Layout & Jumper Setting | 23 |
| 5-1: GA-4MPSV Motherboard Layout | 23 |
| 5-2: Jumper Setting | 24 |
| Chapter 6 BIOS Setup | 26 |
| Main | 28 |
| Advanced Processor Options | 31 |

| | |
|---|----|
| Advanced | 33 |
| Memory Configuration | 34 |
| PCI Configuration | 35 |
| I/O Device Configuration | 37 |
| Advanced Chipset Control | 42 |
| Hardware Monitor | 44 |
| Security | 46 |
| Server | 48 |
| System Management | 49 |
| Console Redirection | 50 |
| Boot | 53 |
| Exit | 54 |
| Chapter 6 Driver Installation | 58 |
| A.Intel Chipset Software Installation Utilities | 58 |
| B.Intel LAN Driver Installation | 60 |
| C.Intel Host RAID Driver Installation | 62 |
| D.VGA ES100 Driver Installation | 64 |
| E.DirectX 9.0 Driver Installation | 65 |
| Chapter 7 Appendix | 66 |
| 7-1: Acronyms | 66 |

Safety, Care and Regulatory Information

⚡ Important safety information

Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.

- * The product should be operated only from the type of power source indicated on the rating label.
- * If your computer has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- * The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- * All product shipped with a three-wire electrical grounding-type plug only fits into a grounding-type power outlet. This is a safety feature. The equipment grounding should be in accordance with local and national electrical codes. The equipment operates safely when it is used in accordance with its marked electrical ratings and product usage instructions
- * Do not use this product near water or a heat source.
- * Set up the product on a stable work surface or so as to ensure stability of the system.
- * Openings in the case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space around the system for ventilation when you set up your work area. Never insert objects of any kind into the ventilation openings.
- * To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before removing covers.
- * Allow the product to cool before removing covers or touching internal components.

⚡ Precaution for Product with Laser Devices

Observe the following precautions for laser devices:

- * Do not open the CD-ROM drive, make adjustments, or perform procedures on a laser device other than those specified in the product's documentation.
- * Only authorized service technicians should repair laser devices.

⚡ Precaution for Product with Modems, Telecommunications, or Local Area Network Options

Observe the following guidelines when working with options:

- * Do not connect or use a modem or telephone during a lightning storm. There may be a risk of electrical shock from lightning.

- * To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.
- * Do not plug a modem or telephone cable into the network interface controller (NIC) receptacle.
- * Disconnect the modem cable before opening a product enclosure, touching or installing internal components, or touching an uninsulated modem cable or jack.
- * Do not use a telephone line to report a gas leak while you are in the vicinity of the leak.

📌 Federal Communications Commission (FCC) Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Neither the provider nor the manufacturer are responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

📌 FCC part 68 (applicable to products fitted with USA modems)

The modem complies with Part 68 of the FCC Rules. On this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

If your telephone equipment causes harm to the telephone network, the Telephone Company may discontinue your service temporarily. If possible, they will notify in advance. But, if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect proper operation of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

The FCC prohibits this equipment to be connected to party lines or coin-telephone service.

The FCC also requires the transmitter of a FAX transmission be properly identified (per FCC Rules Part 68, Sec. 68.381 (c) (3)).

/ for Canadian users only /

📌 Canadian Department of Communications Compliance Statement

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

📌 DOC notice (for products fitted with an Industry Canada-compliant modem)

The Canadian Department of Communications label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user satisfaction.

Before installing this equipment, users ensure that it is permissible to be connected to the facilities of the local Telecommunications Company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions might not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop which is used by the device, to prevent overloading. The termination on a loop may consist of any combination of devices subject only to the requirement that the sum of the Load Numbers of all the devices does not exceed 100.

/ for European users only /



CAUTION

- ❖ Danger of explosion if battery is incorrectly replaced.
- ❖ Replace only with the same or equivalent type recommended by the manufacturer.
- ❖ Dispose of used batteries according to the manufacturer's instructions.



Introduction

Welcome to Gigabyte GS-R114L Rack mount Server System Installation Guide. The guide provides instructions for configuration hardware for the GS-R114L your system.

This installation guide will assist you in installing all the essential components for the sever system. For your protection, please read and undertand all of the safety and operating instructions regarding your Gigabyte Server and retain for future reference. The procedures in this guidebook assume that your are a system or network administrator experienced in installing similar hardware.

Contents Packages

When opening the package, please ensure the system components are not damaged during the shipping. Using the following checklist to verify the contents. If any component is missing or damaged in the system, please contact your vendor immediately.

- | | |
|---|--|
| <input checked="" type="checkbox"/> Chassis | <input checked="" type="checkbox"/> GA-4MPSV Motherboard (Installed) |
| <input checked="" type="checkbox"/> Power Supply (Installed) | <input checked="" type="checkbox"/> GSMT User's Manual |
| <input checked="" type="checkbox"/> FAN Duct x 1 | <input checked="" type="checkbox"/> CPU Heat Sink x 1 |
| <input checked="" type="checkbox"/> Standard Floppy Drive (Installed) | <input checked="" type="checkbox"/> Silm type CD-ROM drive (Installed) |
| <input checked="" type="checkbox"/> Cables (RJ45) | <input checked="" type="checkbox"/> GS-R114V System Installation Guide |
| <input checked="" type="checkbox"/> Case Handle Kit x 2 | <input checked="" type="checkbox"/> Driver CD for motherboard driver & utility |



WARNING!

Computer motherboards and expansion cards contain very delicate Integrated Circuit (IC) chips. To protect them against damage from static electricity, you should follow some precautions whenever you work on your computer.

1. Unplug your computer when working on the inside.
2. Use a grounded wrist strap before handling computer components. If you do not have one, touch both of your hands to a safely grounded object or to a metal object, such as the power supply case.
3. Hold components by the edges and try not touch the IC chips, leads or connectors, or other components.
4. Place components on a grounded antistatic pad or on the bag that came with the components whenever the components are separated from the system.
5. Ensure that the ATX power supply is switched off before you plug in or remove the ATX power connector on the motherboard.

Chapter 1 Features Summary

| | |
|-----------------------------|---|
| Motherboard | <ul style="list-style-type: none"> GA-4MPSV |
| Processor Supported | <ul style="list-style-type: none"> Supports Intel® Pentium Prescott and Smithfield processor Intel® Prescott LGA 775 supports 800/1066MHz FSB L2 cache on-die per processor from 1M |
| Chipset | <ul style="list-style-type: none"> Intel® Mukilteo Chipset Intel® ICH7R Intel® 6702PXH-V |
| System Memory: | |
| Memory Capacity | <ul style="list-style-type: none"> 4 x DDRII socket up to 8 GB |
| Memory Type | <ul style="list-style-type: none"> Un-buffered DDRII 533/667 |
| DIMM Size | <ul style="list-style-type: none"> Support 256MB, 512MB, and 1GB memory |
| Error Correction: | <ul style="list-style-type: none"> Single-bit Errors Correction, Multiple Bit Errors Detection |
| Expansion Slot | <ul style="list-style-type: none"> 1 Riser card supports 1 x 64/133 MHz & 1 PCI-E x8 add-on cards (3.3V) 1 x Low Profile PCI-X add-on card (Half-High/Half-Length) 1 x Full-Size add-on card (Full-High/Half-Length) |
| SATA RAID controller | <ul style="list-style-type: none"> ICH7R Supports SATA RAID 0, 1, 5 without Linux support |
| Cooling Fans: | <ul style="list-style-type: none"> 8 X System Fan 1 X Power Fan |
| Integrated LANs: | |
| Controller | <ul style="list-style-type: none"> Dual Intel 82573V® Gigabit Ethernet controllers |
| Integrated Graphics: | |
| Controller | <ul style="list-style-type: none"> ATI RN50 ES1000 |
| Graphics Memory | <ul style="list-style-type: none"> 16Mb DDR SDRAM |
| Mass Storage System | <ul style="list-style-type: none"> 2 x Hot-Swap SATA HDD 1 x Slim Type FDD 1 Slim Type CD-ROM Optional DVD Combo |

Super I/O

| | |
|------------|---|
| Controller | <ul style="list-style-type: none">• ITE IT8712FIX-A Super I/O |
|------------|---|

Built-in I/O

- 1 x Serial port (COM)
 - 2 x USB 2.0 dual-port connector (1 at front panel)
 - 1 x VGA connector
 - 2 x RJ45 LAN ports
 - P/S 2 Keyboard and Mouse Connectors
 - 1 x RJ45 on front for console redirection
-

System BIOS:

| | |
|------------------|---|
| BIOS Type | <ul style="list-style-type: none">• Phoenix® BIOS, Multi-boot BBS 1.0 Compliant 8Mb Flash Memory |
| Special Features | <ul style="list-style-type: none">• BIOS HW Monitoring reporting (The values monitored by HW Monitoring chipset)• Console Redirection via COM ports• Intel® Hyper Threading Support• Resume after AC Back• Wake On LAN• ACPI 1.0B Compliant/ ACPI defined S1, S4, and S5• Software Mini BMC supported |

Server Management Functions: (Optional)

| | |
|-------------------|--|
| BMC Chip | <ul style="list-style-type: none">• NS IPMI 1.5 controller |
| Failure Detection | <ul style="list-style-type: none">• IPMI 1.5 specification of Server management |
| Event Logging | <ul style="list-style-type: none">• 32KB Nonvolatile Memory to Log System Failure Events |
| Remote Management | <ul style="list-style-type: none">• Follow the IPMI 1.5 specification of Server management |

Environment


| | |
|---------------------|---|
| Ambient Temperature | <ul style="list-style-type: none">• Operating Temperature: 5°C to 35°C• Non-operating Temperature: 0°C to 50°C |
| Relative Humidity | <ul style="list-style-type: none">• 10-80% operating Humidity at 30°C |

| | |
|---------------------------|---|
| Safety Regulations | <ul style="list-style-type: none">• FCC, CE, BSMI, CB, Win2000, 2003 WHQLIPMI 1.5 (Option) |
|---------------------------|---|

| | |
|--------------------------|---|
| System Dimention: | <ul style="list-style-type: none">• 427.5mm x 521mm x 42.6 mm |
|--------------------------|---|

| | |
|--------------------------------|--|
| Electrical Power Supply | <ul style="list-style-type: none">• Single Power Supply 250W |
|--------------------------------|--|

Chapter 2 System Overview

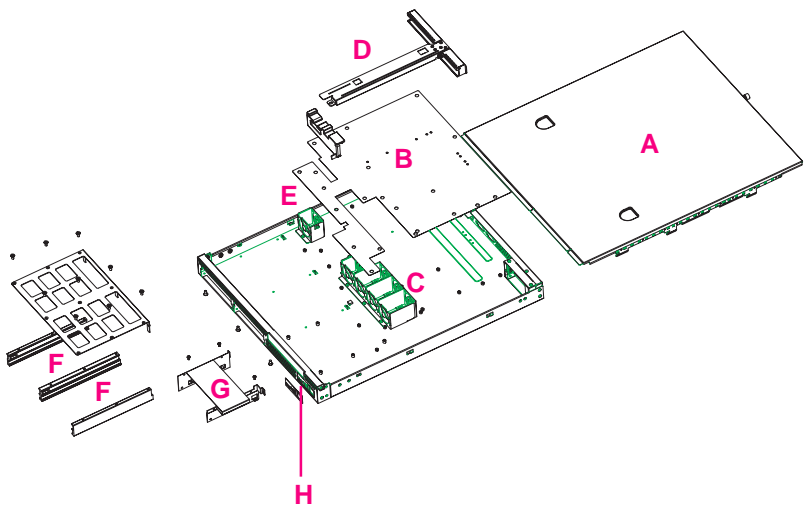

| | |
|---------------------------|-------------------------|
| A. Chassis Cover | E. Fan Wall |
| B. Motehrboard - GA-4MPSV | F. Hard Disk Drive Tray |
| C. System Fans | G. Floppy Drive |
| D. Riser Card Support | H. Front LED |



Chapter 3 System Hardware Installation



Please observe the safety information in chapter "Important Safety Information"
Do not expose the server to extreme environmental conditions. Protect it from dust, humidity, and heat.

Step 3-1: Chassis Removal and Installation

- Step 1 Loosen the thumbscrew from the back of the server.
- Step 2 Push down the indentation located at two sides of the chassis, and slide toward to remove the top cover.
- Step 3 Reverse Step 1, and 2 to replace the chassis cover.

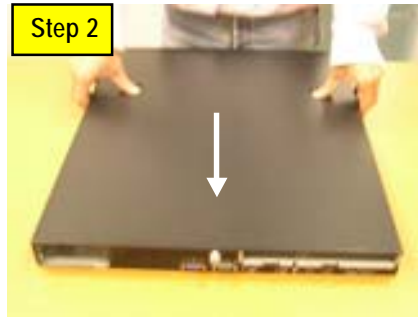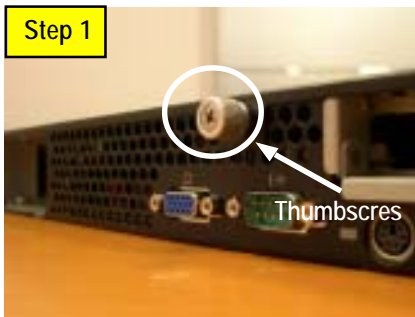


Note: Before installing CPU, you must remove the FAN duct. For FAN duct removal, please see Sub-section 3-7 "FAN Duct Removal and Installation" for detail instruction.

Step 3-2: CPU Installation



Please make sure the CPU type and speed that are supported by the motherboard.

- Step 1 Gently lift the metal lever located on the CPU socket to the upper-right position.
- Step 2 Remove the plastic covering on the CPU socket.
- Step 3 Align the indented corner of the CPU with the triangle and gently insert the CPU into position. (Grasping the CPU firmly between your thumb and forefinger, carefully place it into the socket in a straight and downwards motion. Avoid twisting or bending motions that might cause damage to the CPU during installation.)
- Step 4 Once the CPU is properly inserted, please replace the plastic covering and push the metal lever back into its original position.
- Step 5 Close the lever, reverse step 1 & 2.

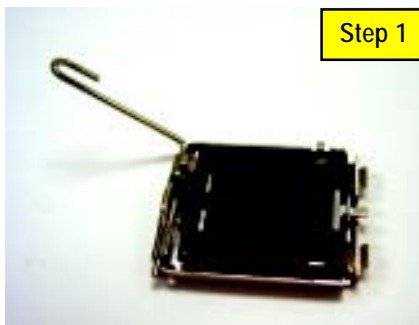



Step 3-3: Heat Sink Installation

- Step 1 Place the Heat Sink on the CPU. Before putting the heat sink on the CPU, please well remember to apply the thermal conductivity compound on the CPU.
- Step 2 Seat the heat sink in the retention modules with the four screws. Installation completed.



Step 3-4: Memory Installation

1. Unlock a DIMM socket by pressing the retaining clips outwards.
2. Aling a DIMM on the socket such that the notch on the DIMM exactly match the notches in the socket.
3. Firmly insert the DIMM into the socket until the retaining clips snap back in place.
4. When installing the DIMM into the DIMM socket, we recommend to populate one DIMM in Channel A module and one in Channel B module for best performance.
Please note that each logical DIMM must be made of two identical DIMMs having the same device size on each and the same DIMM size.
5. Reverse the installation steps when you wish to remove the DIMM module.


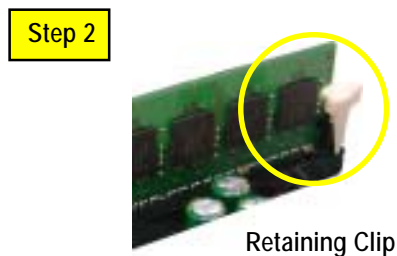
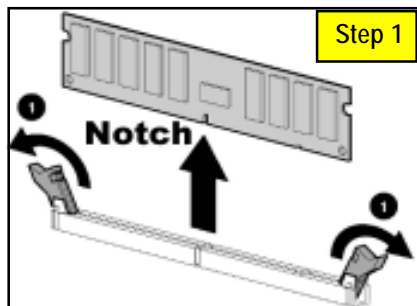


Step 3-5: PCI Expansion Card Installation

GS-R114L provides expansion riser slots for one PCI-X full-height/full-length 64/66~100MHz; and one with PCI-E x8 slot. To install the peripheral, please go through the following steps.

Note!! Before installing the PCI expansion card, please check the card size limitation. Size limitation for PCI-X full-height/full-length is 228.5 mm x 91.5 mm; size limitation for Low-Profile Card : 167.5 mm x 56 mm .

- Step 1 Lift the riser bracket slightly, then pull it out from the server chassis.
- Step 2 Loosen the screw on the riser bracket.
- Step 2 Align the expansion card with the guiding groove. Slide the expansion card into the slot until the card firmly seats.
- Step 3 Align the riser bracket to the system module (see the arrow direction mark 1), and push it to locked position.
- Step 4 Reverse Step 1 & 2 to lock the riser bracket firmly. Installation completed.

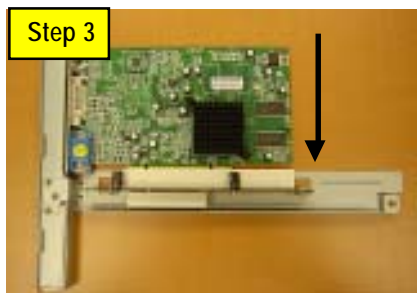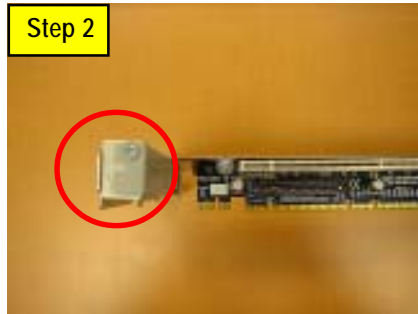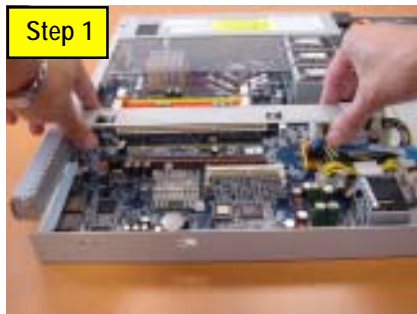


Step 3-6: Hard Disk Drive Installation

- Step 1 Press the release button and pull the blank out of the drive bay.
- Step 2 Remove the plastic hard disk tray.
- Step 3 Slide hard disk into blank and secure it with screws.
- Step 4 To replace the hard drive blank, slide the blank into the bay until it locks into place. Connect cable and power.
- Step 5 Place the hard disk into the server system.




Step 3-7: FAN Duct Removal and Installation

- Step 1 Pull up the screw-holder and loosen the thumbscrews. Lift up to remove the fan duct.
- Step 2 For FAN Duct Installation, place the fan duct on the top of heat sinks. Fasten the screws to the locked position and push down the screw-holders.

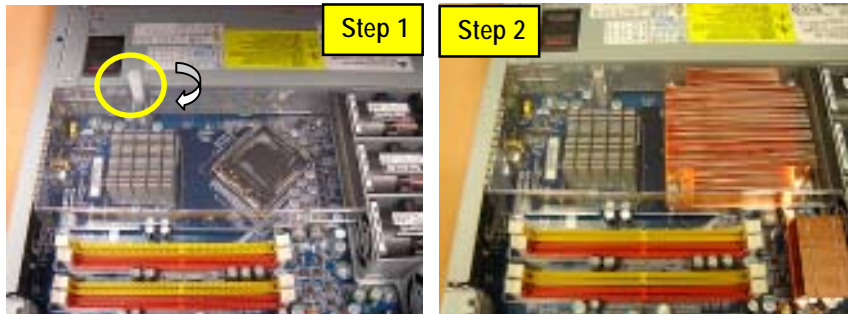


Chapter 4 Appearance of GS-R114V

4-1: Front View of GS-R114V

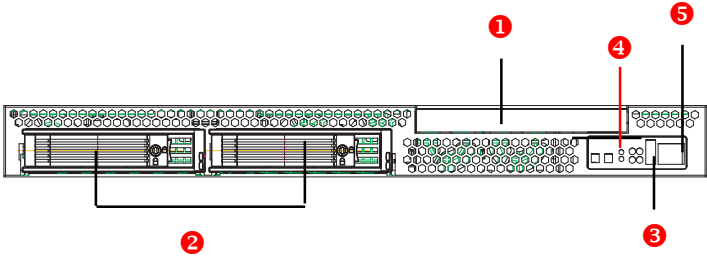


| | |
|---|--------------------------------|
| ❶ | Slim Type CD-ROM |
| ❷ | Hot-Swap SATA HDDs |
| ❸ | USB Connector |
| ❹ | LEDs |
| ❺ | RJ45 (For Console Redirection) |

4-2: Rear View of GS-R114V

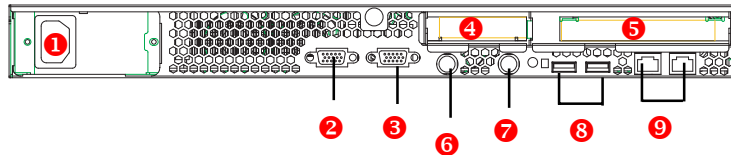

| | |
|---|----------------------------------|
| ❶ | Power |
| ❷ | VGA Port |
| ❸ | COM Port |
| ❹ | Low Profile Riser Slot |
| ❺ | Full-size/Full-length Riser Slot |
| ❻ | Keyboard Connector |
| ❼ | Mouse Connector |
| ❽ | USB Connectors |
| ❾ | LAN 1 & 2 Ports |

4-3: Switch and LED Indicators Introduction

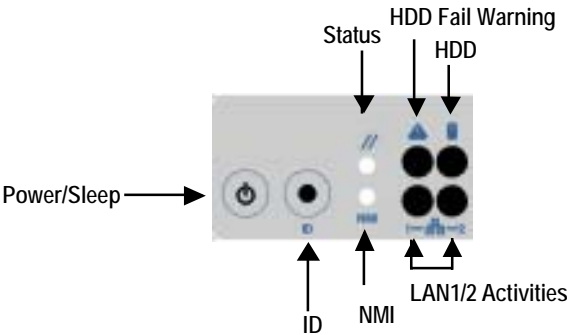








| Name | Color | Condition | Description |
|----------------|-------|-----------|---|
| Power | Green | On | Power On |
| | Green | Blink | Sleep (S1) |
| | -- | Off | Power Off (S4/S5) |
| Status | Green | On | System Ready On/ Alarm |
| | Amber | Blink | System Ready but degraded, CPU Failed, DIMM Killed. |
| | Amber | On | Critical Alarm: Critical Power Module Failure, Critical FANs Failure, Voltage (Power Supply) Critical Temperature and Voltage |
| | -- | Off | System Not Ready/ Post error/NMI event/CPU or terminator missing |
| HDD | Green | Blink | Hard Disk Drive Access |
| | Amber | On | HDD Fault |
| | -- | Off | No Access and No HDD Fault |
| LAN1 Activity | Green | On | LAN Link / No access |
| | Green | Blink | LAN access |
| | -- | Off | Idle |
| LAN2 Activity | Green | On | LAN Link / No access |
| | Green | Blink | LAN access |
| | -- | Off | Idle |
| Identification | Blue | Blink | Unit selected for identification |
| | -- | Off | No identification |

4-4: LAN LED Description




| Name | Color | Condition | Description |
|------------------|--------|-----------|---|
| LAN | Green | ON | LAN Link / no Access |
| Link/Activity | Green | BLINK | LAN Access |
| | - | OFF | Idle |
| GbE LAN Speed | Yellow | ON | 1Gbps connection |
| | Yellow | BLINK | Port identification with 1Gbps connection |
| | Green | ON | 100Mbps connection |
| | Green | BLINK | Port identification with 10 or 100Mbps connection |
| | - | OFF | 10Mbps connection |

4-5 : Connector Icon Description

| Suggest Icon | Description |
|---|---------------|
|  | Keyboard |
|  | VGA |
|  | Mouse |
|  | LAN |
|  | Parallel Port |
|  | Serial Port |
|  | USB |

Chapter 5 Motherboard Layout & Jumper Setting

5-1: GA-4MPSV Motherboard Layout

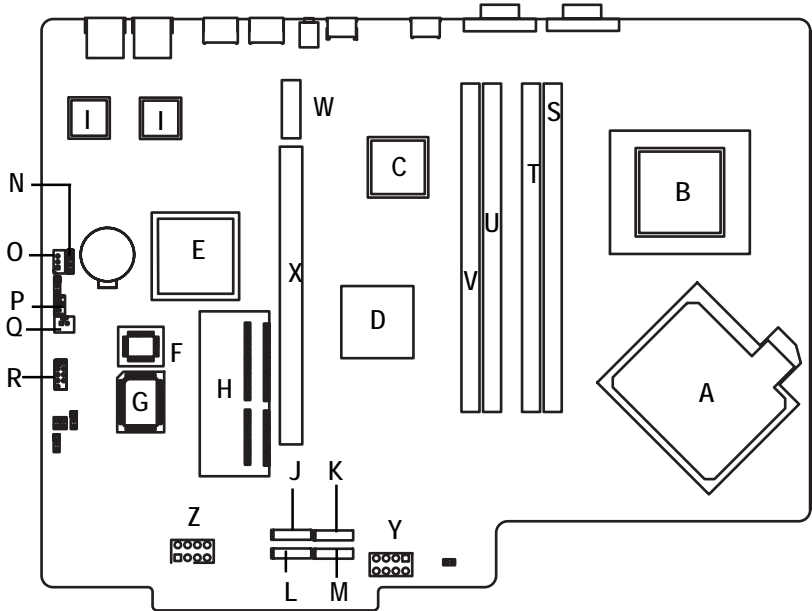


| | | | |
|---|------------------|---|------------|
| A | CPU LGA775 | N | IPMB2 |
| B | Intel® Mukilteo | O | IPMB1 |
| C | ATI RN50 | P | WOL |
| D | Intel ICH7R | Q | WOR |
| E | Intel 6702 PXH-V | R | COM2 |
| F | BIOS | S | DDR2A1 |
| G | ITE IT8712F | T | DDR2B1 |
| H | IPMI Connector | U | DDR2A2 |
| I | Intel 82573V GbE | V | DDR2B2 |
| J | SATA1 | W | PCIE_RISER |
| K | SATA2 | X | PCI-X_1 |
| L | SATA3 | Y | ATX1 |
| M | SATA4 | Z | ATX2 |

5-2: Jumper Setting



CLR_CMOS (Clear CMOS Function)

You may clear the CMOS data to its default values by this jumper.

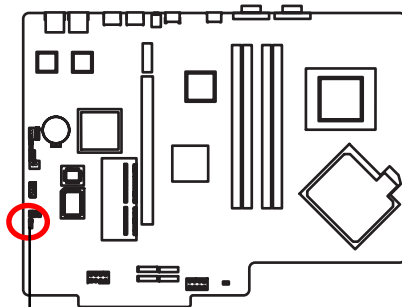
Default value doesn't include the "Shunter" to prevent from improper use this jumper.
To clear CMOS, temporarily short 1-2 pin.





CLR_CMOS

- 1  1-2 close: Clear CMOS
- 1  2-3 close: Normal (Default value)

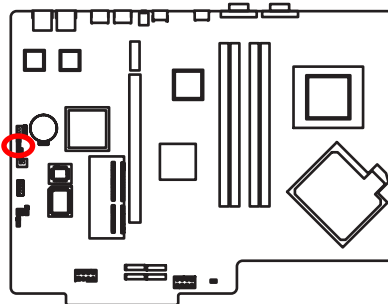RECOVERY (BIOS Recovery Function)





- 1  1-2 close: Enable BIOS Recovery function.
- 1  2-3 close: Disable this function. (Default value)




Please remove the jumper when system access recovery flopp disk.

PASSWORD (Clear CMOS Password Function)

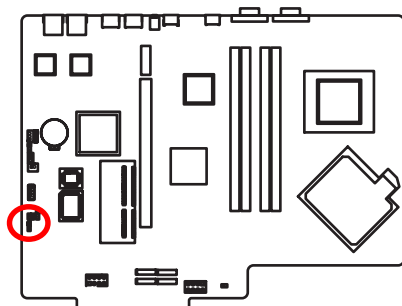

 Open: Clear Password

 Short: Normal (Default)



Please remove the jumper when system reboot next time.

Chapter 6 BIOS Setup

BIOS Setup is an overview of the BIOS Setup Program. The program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

ENTERING SETUP

Power ON the computer and press <F2> immediately will allow you to enter Setup.

CONTROL KEYS

| | |
|----------|---|
| <↑> | Move to previous item |
| <↓> | Move to next item |
| <←> | Move to the item in the left hand |
| <→> | Move to the item in the right hand |
| <Esc> | Main Menu - Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu - Exit current page and return to Main Menu |
| <+/PgUp> | Increase the numeric value or make changes |
| <-/PgDn> | Decrease the numeric value or make changes |
| <F1> | General help, only for Status Page Setup Menu and Option Page Setup Menu |
| <F2> | Reserved |
| <F3> | Reserved |
| <F4> | Reserved |
| <F6> | Reserved |
| <F7> | Reserved |
| <F8> | Reserved |
| <F9> | Load the Optimized Defaults |
| <F10> | Save all the CMOS changes, only for Main Menu |

GETTINGHELP**Main Menu**

The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Status Page Setup Menu / Option Page Setup Menu

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc>.

- **Main**

This setup page includes all the items in standard compatible BIOS.

- **Advanced**

This setup page includes all the items of AMI special enhanced features.

(ex: Auto detect fan and temperature status, automatically configure hard disk parameters.)

- **Security**

Change, set, or disable password. It allows you to limit access the system and setup.

- **Server**

Server additional features enabled/disabled setup menus.

- **Boot**

This setup page include all the items of first boot function features.

- **Exit**

There are five options in this selection: Exit Saving Changes, Exit Discarding Changes, Load Optimal Defaults, Load Failsafe Defaults, and Discard Changes.

Main

Once you enter Phoenix BIOS Setup Utility, the Main Menu (Figure 1) will appear on the screen. Use arrow keys to select among the items and press <Enter> to accept or enter the sub-menu.



Figure 1: Main

⌘ System Time

The time is calculated based on the 24-hour military time clock. Set the System Time (HH:MM:SS)


⌘ System Date

Set the System Date. Note that the "Day" automatically changed after you set the date.
(Weekend: DD: MM: YY) (YY: 1099~2099)

Legacy Diskette A/B

This category identifies the type of floppy disk drive A that has been installed in the computer.

- » Disabled Disable this device.
- » 360KB, 5^{1/4} in. 3^{1/2} inch AT-type high-density drive; 360K byte capacity
- » 1.2MB, 3^{1/2} in. 3^{1/2} inch AT-type high-density drive; 1.2M byte capacity
- » 720K, 3^{1/2} in. 3^{1/2} inch double-sided drive; 720K byte capacity
- » 1.44M, 3^{1/2} in. 3^{1/2} inch double-sided drive; 1.44M byte capacity.
- » 2.88M, 3^{1/2} in. 3^{1/2} inch double-sided drive; 2.88M byte capacity.

 **Note:** The 1.25MB,3^{1/2} reference a 1024 byte/sector Japanese media format. The 1.25MB,3^{1/2} diskette requires 3-Mode floppy-disk drive.

Hard Disk Pre-Delay

This item provides function for user to add a delay before the first access of a hard disk by BIOS. Some hard disks hang if accessed before they have initialized themselves. The delay ensures the hard disk initialized after powering up, prior to being accessed.

- » Options Disabled, 3 Seconds, 6 Seconds, 9 Seconds, 12 Seconds, 21 Seconds, 30Seconds. Default value is **Disabled**.

IDE Primary Master, Slave / Secondary Master, Slave, Parallel ATA

The category identifies the types of hard disk from drive C to F that has been installed in the computer. There are two types: auto type, and manual type. Manual type is user-definable; Auto type which will automatically detect HDD type.

Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category.

If you select User Type, related information will be asked to enter to the following items. Enter the information directly from the keyboard and press <Enter>. Such information should be provided in the documentation from your hard disk vendor or the system manufacturer.

» TYPE

1-39: Predefined types.

Users: Set parameters by User.

Auto: Set parameters automatically. (Default Values)

CD-ROM: Use for ATAPI CD-ROM drives or double click [Auto] to set all HDD parameters automatically.

ATAPI Removable: Removable disk drive is installed here.

» Multi-Sector Transfer

This field displays the information of Multi-Sector Transfer Mode.

Disabled: The data transfer from and to the device occurs one sector at a time.

Auto: The data transfer from and to the device occurs multiple sectors at a time if the device supports it.

» LBA Mode

This field shows if the device type in the specific IDE channel support LBA Mode.

» 32-Bit I/O

Enable this function to maximize the IDE data transfer rate.

» Transfer Mode

This field shows the information of Transfer Mode.

» Ultra DMA Mode

This field displays the DMA mode of the device in the specific IDE channel.

Advanced Processor Options

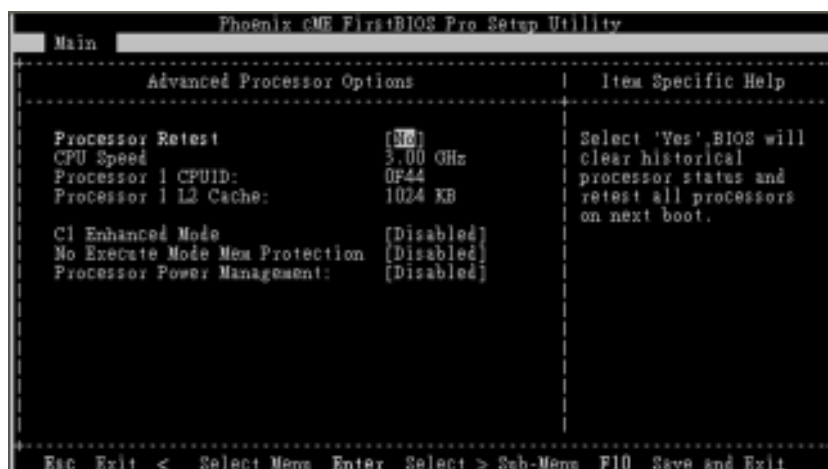


Figure 1-1: Advanced Processor Option

Advanced Processor Option

This category includes the information of CPU Speed, Processor ID, Processor L2 Cache. And setup menu for C1 Enhanced Mode, No Execute Mode Memory Protection, and Processor Power Management.

Processor Reset

- » Yes Select 'Yes' BIOS will clear historical processor status and reset all processors on next boot.
- » No Disables Processor Reset function. (Default value)

C1 Enhanced Mode

With enabling C1 Enhanced Mode, all logical processors in the physical processor have entered the C1 state, the processor will reduce the core clock frequency to system bus ratio and VID.

- » Enabled Enabled C1 Enhanced Mode.
- » Disabled Disables C1 Enhanced Mode. (Default value)

No Execute Mode Mem. Protection

- | | |
|------------|--|
| » Enabled | Enable No Execute Mode Memory Protection function. (Default value) |
| » Disabled | Disables No Execute Mode Memory Protection function. |

Processor Power Management

Select the Power Management desired:

- | | |
|-----------------|--|
| » Enabled | C states and GV1/GV3 are enabled. |
| » C States Only | GV1/GV3 are disabled. |
| » GV1/GV3 Only | C states are disabled. (Default value) |
| » Disabled | C states and GV1/GV3 are disabled. |

Advanced

About This Section: Advanced

With this section, allowing user to configure your system for basic operation. User can change the processor options, chipset configuration, PCI configuration and chipset control.



Figure 2: Advanced

Memory Configuration

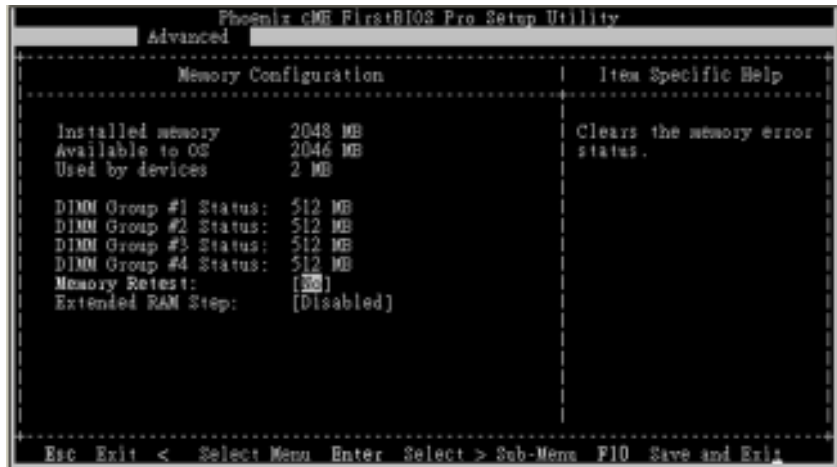


Figure 2-1: Memory Configuration

☞Installed Memory/Available to OS/DIMM Group 1,2,3,4 Status

These category is display-only which is determined by POST (Power On Self Test) of the BIOS.

☞Memory Reset

- » Yes Select 'Yes', system will clear the memory error status. Save the changes and restart system. After rebooting system, the Memory Reset item will set to 'No' automatically.
- » No Disable this function. (Default value)

☞Extend RAM Step

- » Enabled Enable test extended memroy process.
- » Disabled Disable this function. (Default value)

PCI Configuration

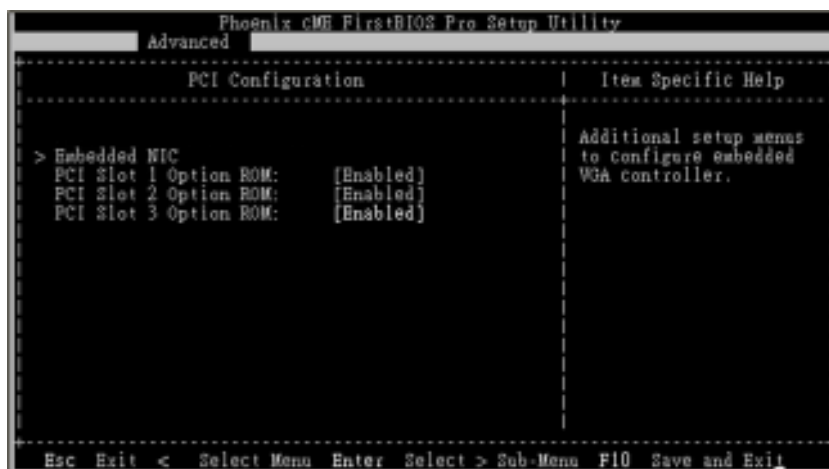


Figure 2-2: PCI Configuration

⚙️ EmbeddedNIC#1

▶ Onboard LAN1 Control

- ▶▶ Enabled Enable onboard LAN1 device. (Default value)
- ▶▶ Disabled Disable this function.

▶ Option ROM Scan

- ▶▶ Enabled Enableing this item to initialize Lan device expansion ROM.
- ▶▶ Disabled Disable this function. (Default value)

🔗PCI Slot 1/2/3/4/5 Option ROM

- | | |
|-------------|--|
| ▶▶ Enabled | Enableing this item to initialize device expansion ROM. (Default value) |
| ▶▶ Disabled | Disable this function. |

I/O Device Configuration



Figure 2-3: I/O Device Configuration

Serial Port A

This allows users to configure serial port A by using this option.

- » Enabled Enable the configuration (Default value)
- » Disabled Disable the configuration.

Base I/O Address/IRQ

- » 3F8 Set IO address to 3F8. (Default value)
- » 2F8 Set IO address to 2F8.
- » 3E8 Set IO address to 3E8.
- » 2E8 Set IO address to 2E8.

IRQ

- » IRQ3 Set Interrupt as IRQ3.
- » IRQ4 Set Interrupt as IRQ4.(Default value)

Serial Port B

This allows users to configure serial port B by using this option.

- » Enabled Enable the configuration
- » Disabled Disable the configuration. (Default value)

▸ Base I/O Address/IRQ

- » 3F8 Set IO address to 3F8.
- » 2F8 Set IO address to 2F8. (Default value)
- » 3E8 Set IO address to 3E8.
- » 2E8 Set IO address to 2E8.

▸ IRQ

- » IRQ3 Set Interrupt as IRQ3. (Default value)
- » IRQ4 Set Interrupt as IRQ4.

Parallel Port

This allows users to configure parallel port by using this option.

- » Enabled Enable the configuration.
- » Disabled Disable the configuration. (Default value)

▸ Mode

This option allows user to set Parallel Port transfer mode.

- » Bi-directional Use this setting to support bi-directional transfers on the parallel port. (Default value)
- » EPP Using Parallel port as Enhanced Parallel Port.
- » ECP Using Parallel port as Extended Capabilities Port.

▶ **Base I/O Address**

- » 378 Set IO address to 378
- » 278 Set IO address to 278.

▶ **IRQ**

- » IRQ5 Set Interrupt as IRQ5. (Default value)
- » IRQ7 Set Interrupt as IRQ7. (Default value)

🔓 **PS/2 Mouse**

Set this option 'Enabled' to allow BIOS support for a PS/2 - type mouse.

- » Enabled 'Enabled' forces the PS/2 mouse port to be enabled regardless if a mouse is present. (Default value)
- » Disabled 'Disabled' prevents any installed PS/2 mouse from functioning, but frees up IRQ12.

🔓 **USB Controller**

This item allows users to enable or disable the USB device by setting item to the desired value.

- » Enabled Enable USB controller. (Default value)
- » Disabled Disbale this function.

🔓 **USB 2.0 Controller**

This item allows users to enable or disable the USB 2.0 device by setting item to the desired value.

- » Enabled Enable USB 2.0 controller. (Default value)
- » Disabled Disbale this function.

🔓 **Legacy USB Support**

This option allows user to function support for legacy USB.

- » Enabled Enables support for legacy USB (Default Value)
- » Disabled Disables support for legacy USB

☞Route Port 80h cycles to

Set route port 80h cycles to either PCI or LPC bus.

- » PCI Set Route Port 80h I/O cycles to the PCI bus. (Default Value)
- » LPC Set Route Port 80h I/O cycles to the LPC bus.

☞Parallel ATA

- » Enabled Enable Parallel ATA. (Default value)
- » Disabled Disable the device.

☞Serial ATA

- » Enabled Enables on-board serial ATA function. (Default Value)
- » Disabled Disables on-board serial ATA function.

► Native Mode Operation

This option allows user to set the native mode for Serial ATA function.

- » Auto Auto detected. (Default value)
- » Serial ATA Set Native mode to Serial ATA.

► SATA Controller Mode Option

- » Compatible Mode SATA and PATA drives are auto-detected and placed in Legacy mode. (Default value)
- » Enhanced Mode SATA and PATA drives are auto-detected and placed in Native mode.

Note: Pre-Win2000 operating system do not work in Enhanced mode.

► SATA AHCI Enable

- » Enabled Set this item to enable SATA AHCI function for WinXP-SP1+IAA driver supports AHCI mode.
- » Disabled Disabled this function.

► SATA RAID Enable

- » Enabled Enabled SATA RAID function.
- » Disabled Disable this function.

Advanced Chipset Control

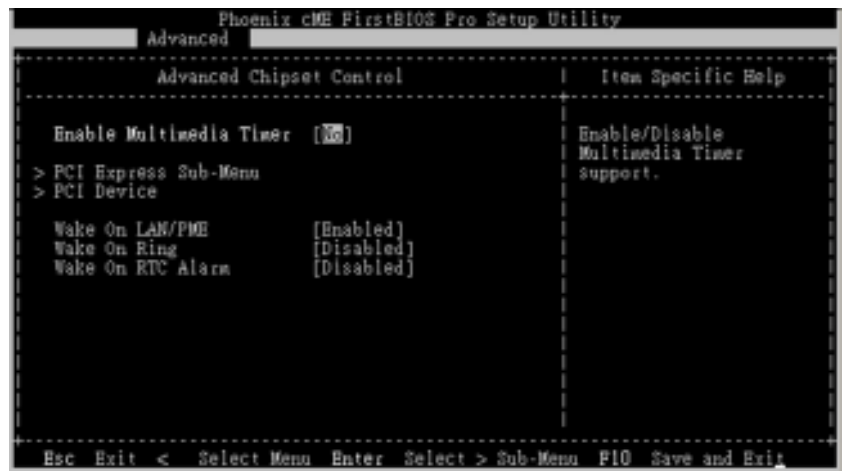


Figure 2-4: Advanced Chipset Control

☞Enable Multimedia Timer

- ☞Enabled Enable Multimedia Timer support.
- ☞Disabled Disable this function. (Default value)

☞PCIExpress Sub-Menu

These items are for debugging the PCI-Express Ports.

☞PCIDevice

- ▶ PCI IRQ Line 1/2/3/4/5
When ACPI device cannot use IRQs already in use by ISA or EISA devices. Use 'Auto Select' only if no ISA or EISA legacy cards are installed.
 - ☞Auto Select Auto selecting PCI IRQ lines. (Default value)
 - ☞3,4,5,7,9,10,11,12,14,15 Selecting specify PCI IRQ lines.
 - ☞Disabled Disable this function..

☞Wake On LAN / PME

This option allow user to determine the action of the system when a LAN/PME wake up event occurs.

- | | |
|------------|---|
| » Enabled | Enable Wake On LAN/PME. (Default value) |
| » Disabled | Disable this function. |

Note: This item must enabled if you're running under Windows operating system.

☞Wake On Ring

This option allow user to determine the action of the system power is off and the modem is ringing.

- | | |
|------------|--------------------------------------|
| » Enabled | Enable Wake On Ring. (Default value) |
| » Disabled | Disable this function. |

Note: This item must enabled if you're running under Windows operating system.

☞Wake On RTC Alarm

When "RTC Alarm Resume" item is set to enabled, system will wakeup from RTC. (This item will be functionalized under ACPI OS)

- | | |
|------------|---|
| » Enabled | Enable alarm function to POWER ON system. (Default value) |
| » Disabled | Disable this function. |

Note: This item must enabled if you're running under Windows operating system.

Hardware Monitor

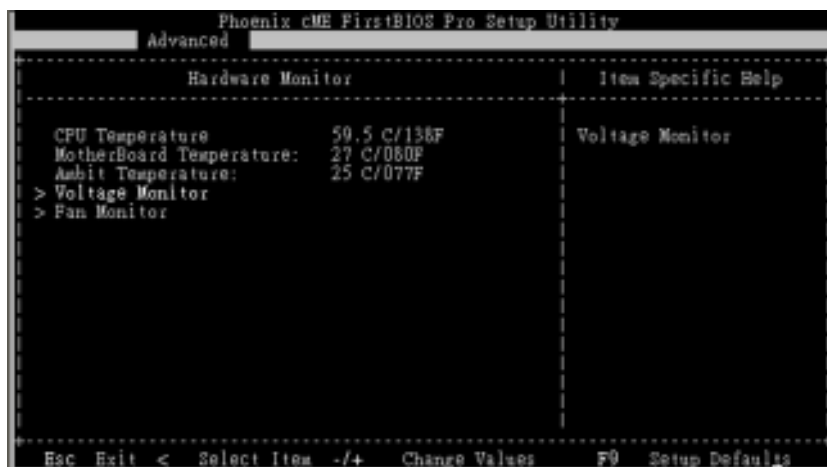


Figure 2-5: Hardware Monitor

☞ CPU/Motherboard/Ambit Temperature

» Display the current CPU temperature, Motherboard, and Ambient temperature.

☞ Voltage Monitor: 3V Dual, VCC3, VCC, 12V2, 12V1, VBAT, 5VSB

» Detect system's voltage status automatically.

☞ FAN Monitor: System 1/2/3/4/5/6/7/8 (RPM)

» Display the current System FAN 1/2/3/4/5/6/7/8 speed.



This Menu will disappear when BMC module is populated.

⚙️ Boot -time Diagnostic

When this item is enabled, system will shows Diagnostic status when system boot.

- » Enabled Enable Boot-time Diagnostic.
- » Disabled Disable this function. (Default value)

⚙️ Reset Configuration Data

- » Yes Reset all configuration data.
- » No Do not make any changes. (Default value)

⚙️ NumLock

This option allows user to select power-on state for NumLock.

- » On Enable NumLock.
- » Off Disable this function.

⚙️ Memory Processor Error

When Boot is selected, the system will attempt to boot after a memory or proocessor error occurred.

- » Boot System attempts to boot if a memory or proocessor error cooured.
(Default value)
- » Halt System will stop if an error is detected during power up.

⚙️ Multiprocessor Specification

This option allows user to configure the multiprocessor(MP) specification revision level. Some operating system will require 1.1 for compatibility reasons.

- » 1.4 Support MPS Version 1.4 . (Default value)
- » 1.1 Support M PS Version 1.1.

Security

About This Section: Security

In this section, user can set either supervisor or user passwords, or both for different level of password securities. In addition, user also can set the virus protection for boot sector.



Figure 3: Security

Set User Password

You can only enter but do not have the right to change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Type the password up to 6 characters in length and press <Enter>. The password typed now will clear any previously entered password from the CMOS memory. You will be asked to confirm the entered password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a specified password.

🔓 **Set Supervisor Password**

You can install and change this options for the setup menus. Type the password up to 6 characters in length and press <Enter>. The password typed now will clear any previously entered password from the CMOS memory. You will be asked to confirm the entered password. Type the password again and press <Enter>. You may also press <Esc> to abort the selection and not enter a specified password or press <Enter> key to disable this option.

🔓 **Password on boot**

Password entering will be required when system on boot.

- » Enabled Requires entering password when system on boot.
- » Disabled Disable this function. (Default value)

🔓 **Fixed disk boot sector**

- » Write Protect Write protects boot sector on harddisk to protect against virus.
- » Normal Set the fixed disk boot sector at Normal state. (Default value)

🔓 **Diskette access**

Control access to diskette drives.

- » User Requires user's password to access floppy drives.
- » Supervisor Requires supervisor's password to access floppy drives. (Default value)

Server


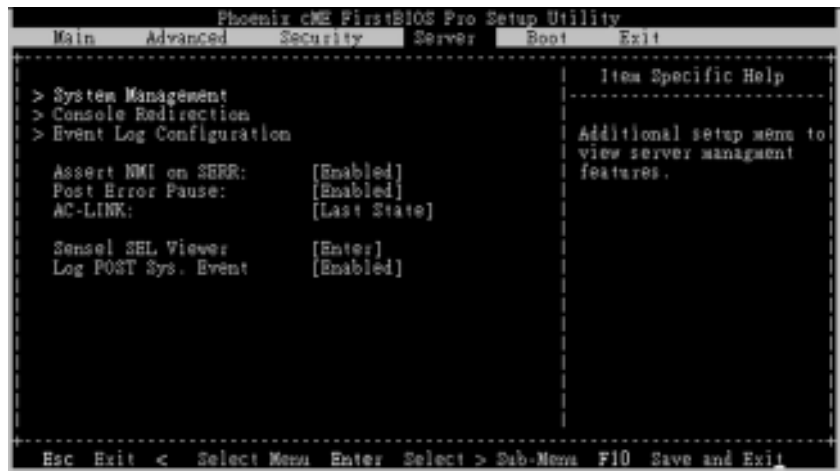


Figure 4: Server



When IPMI card is installed, screen will display the information of the card during system boots.

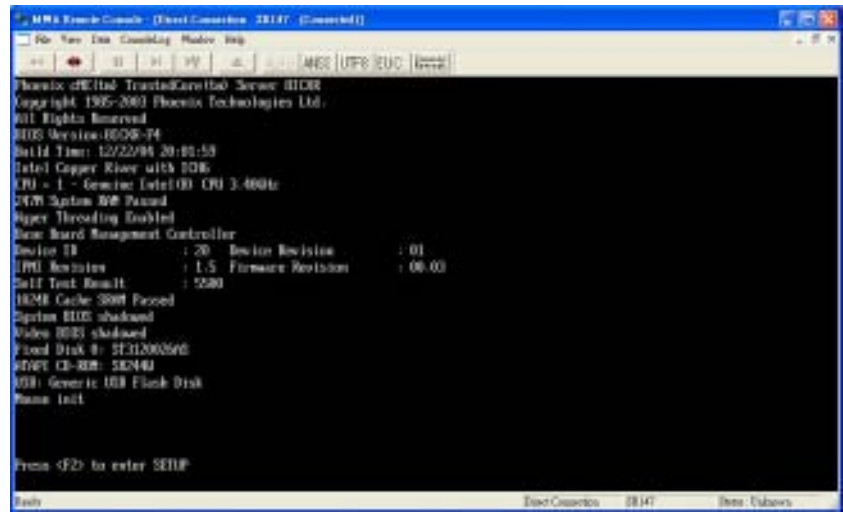

System Management

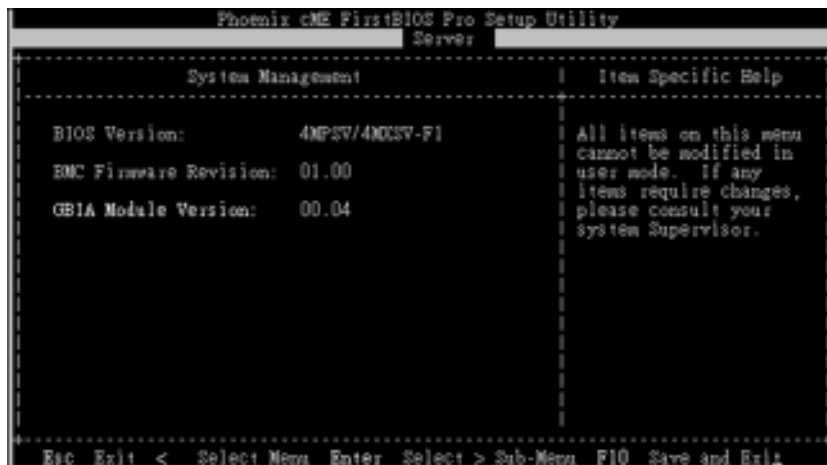


Figure 4-1: System Management

Server Management

This category allows user to view the server management features. Including information of **BIOS Version**. All items in this menu cannot be modified in user's mode. If any items require changes, please consult your system supervisor.

Console Redirection

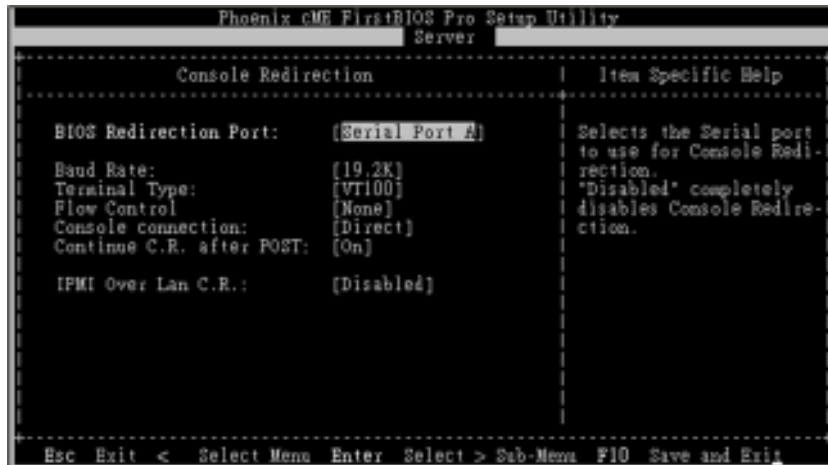


Figure 4-2: Console Redirection

🔗 BIOS Redirection Port

If this option is set to enabled, it will use a port on the motherboard.

- » On-board COMA Use COMA as the COM port address.
- » Disabled Disable this function. (Default value)

Note: Tower has COMA and COMB.

🔗 Baud Rate

This option allows user to set the specified baud rate.

- » Options 300, 1200, 2400, 9600, 19.2K, 38.4K, 57.6K, 115.2K.

🔑 Terminal Type

This option allows user to select the specified terminal type. This is defined by IEEE.

» Options VT100, VT100 8bit, PC-ANSI 7bit, VT100+, VT-UTF8

🔑 Flow Control

This option provide user to enable the flow control function.

» None Not supported.
» XON/OFF Software control.
» CTS/RTS Hardware control. (Default value)

🔑 Console Connect

This field indicates whether the console is connected directly to the system or a modem is used to connect.

» Direct Console is connected directly to the system. (Default)
» Disabled Console is connected via the modem.

🔑 Continue C.R. after POST

This option allows user to enable console redirection after O.S has loaded.

» On Enable console redirection after O.S has loaded.
» Off Disable this function. (Default value)

🔑 Event Log Configuration

This option contains additional setup menu to configure the Event Log Configuration.

▶ Clear all Event Logs
» Enter The system event log will be cleared if pressing Enter.

🔑 Assert NMI on SERR

If this option is set to enabled, PCI bus system error (SERR) is enabled and is routed to NMI.

» Enabled Enable Assert NMI on SERR. (Default value)
» Disabled Disable this function.

🔓 Post Error Pause

If this item is set to enabled, the system will wait for user intervention on critical POST errors. If this item is disabled, the system will boot with no intervention if possible.

- » Enabled Enable Post Error Pause. (Default value)
- » Disabled Disable this function.

🔓 AC-LINK

This option provides user to set the mode of operation if an AC / power loss occurs.

- » Power On System power state when AC cord is re-plugged.
- » Stay Off Do not power on system when AC power is back.
- » Last State Set system to the last state when AC power is removed. Do not power on system when AC power is back. (Default value)

🔓 Mini BMC Function

- » Enabled Enable Mini BMC function. (Default value)
- » Disabled Disable this function.



This option will disappear and disable when BMC module is populated.

🔓 Mini BMC SEL View

Press [Enter] to view the Mini BMC SEL.



This option will disappear and disable when BMC module is populated.

🔓 Log POST System Event

- » Enabled Enable Log POST System Event. (Default value)
- » Disabled Disable this function.

🔓 Event Log Viewer

- » Enabled Enable Event Log Viewer function(Default value)
- » Disabled Disable this function.



This option will appear when BMC module is populated.

Boot

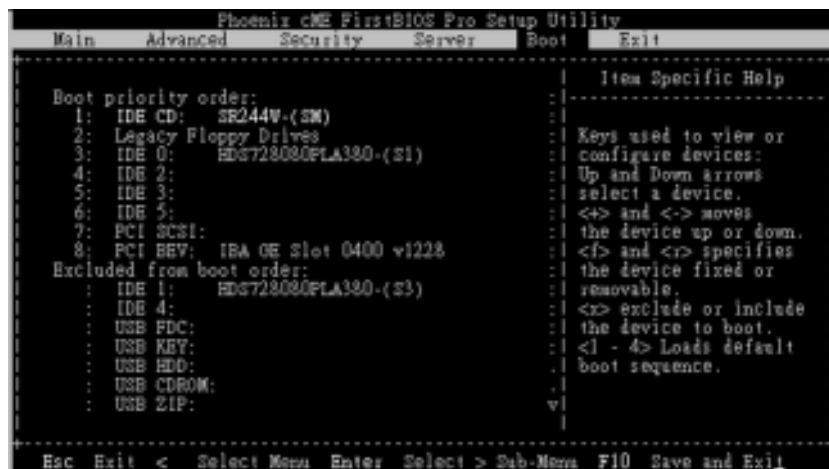


Figure 5: Boot

About This Section: Boot

The “Boot” menu allows user to select among four possible types of boot devices listed using the up and down arrow keys. By applying <+> and <Space> key, you can promote devices and by using the <-> key, you can demote devices. Promotion or demotion of devices alerts the priority that the system uses to search for boot device on system power on.

Boot Priority Order

This field determines which type of device the system attempt to boot from after **PhoenixBIOS Post** completed. Specifies the boot sequence from the available devices. If the first device is not a bootable device, the system will seek for next available device.

Key used to view ot configure devices:

Up and Down arrows select a device.

<+> and <-> moves the device up or down.

<f> and <r> specifies the device fixed or removable.

<x> exclude or include the device to boot.

<1-4> Loads default boot sequence.

Exit

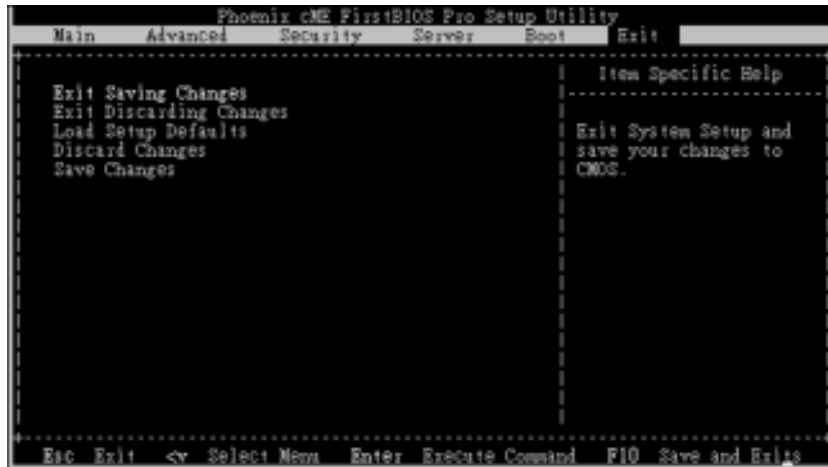


Figure 6: Exit

🔧 About This Section: Exit

Once you have changed all of the set values in the BIOS setup, you should save your changes and exit BIOS setup program. Select “Exit” from the menu bar, to display the following sub-menu.

- 🔹 Exit Saving Changes
- 🔹 Exit Discarding Changes
- 🔹 Load Setup Default
- 🔹 Discard Change
- 🔹 Save Changes


☞ Exit Saving Changes

This option allows user to exit system setup with saving the changes.

Press <Enter> on this item to ask for the following confirmation message:

Pressing 'Y' to store all the present setting values tha user made in this time into CMOS.

Therefore, whenyou boot up your computer next time, the BIOS will re-configure your system according data in CMOS.

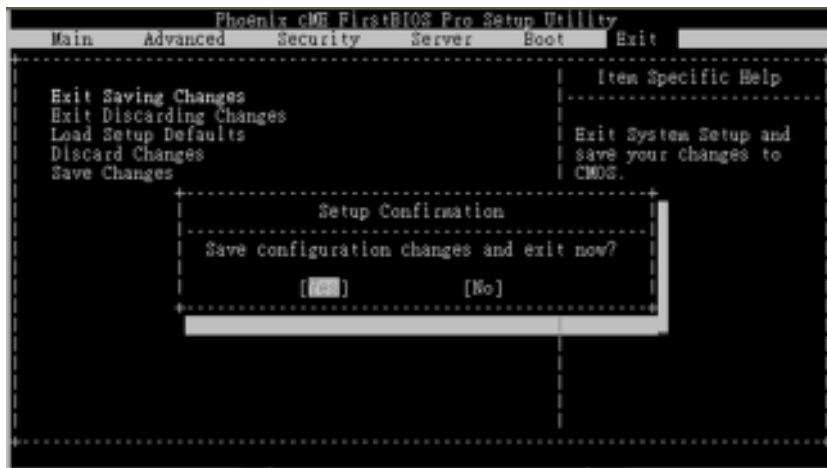

☞ Exit Discarding Changes

This option allows user to exit system setup without changing any previous settings values in CMOS. The previous selection remain in effect.

This will exit the Setup Utility and restart your compuetr when selecting this option.

Press <Enter> on this item then system will reboot automatically.

☞Load Setup Default

This option allows user to load default values for all setup items.

When you press <Enter> on this item, you will get a confirmation dialog box with a message as below:



☞Discard Changes

This option allows user to load previos values from CMOS for all setup item.

When you press <Enter> on this item, you will get a confirmation dialog box with a message as below:



☞ Save Changes

This option allows user to save setup data to CMOS.

When you press <Enter> on this item, you will get a confirmation dialog box with a message as below:



Press [Yes] to save setup data to CMOS.

Chapter 6 Driver Installation

A. Intel Chipset Software Installation Utilities

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show a series of Setup Wizard dialog boxes. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

Installation Procedures:


1. The CD auto run program starts, **Double click** on "Intel Chipset Software Installation Utilities" to start the installation.
2. Then, a series of installation wizards appear. Follow up the wizards to install the drivers.
3. Setup completed, click "Finish" to restart your computer.

Auto Run window




(1)

Setup Wizard

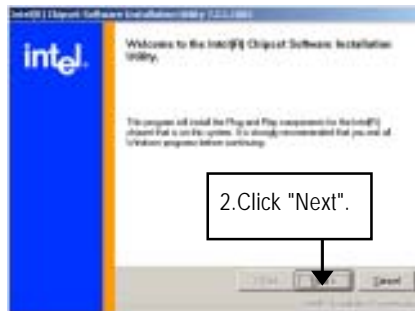


(2)

License Agreement

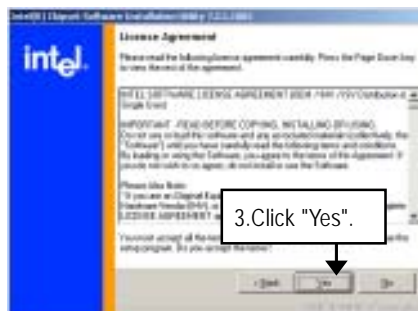

(3)

Readme Information

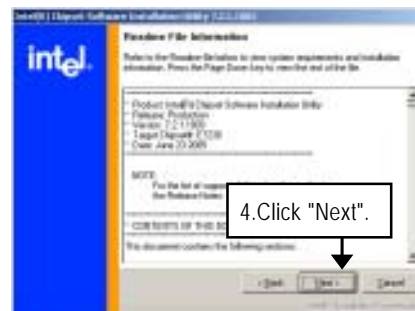

(4)

Installation Completed



5. Installation completed, Click "Finish" to restart computer.

(5)

B. Intel LAN Driver Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show a series of Setup Wizard dialog boxes. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

Installation Procedures:

1. The CD auto run program starts, **Double click** on "Intel LAN Driver" to start the installation.
2. Select "Install Base Driver."
3. System starts to install the LAN Driver automatically.

Auto Run window




(1)

Intel LAN Drivers



(2)

Installation Wizard

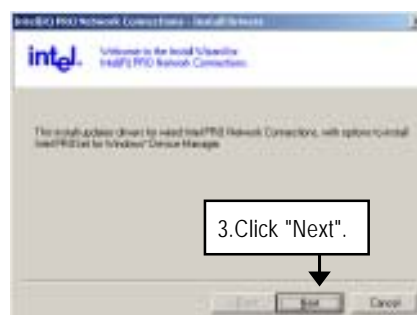


(3)

License Agreement




(4)

Install Option

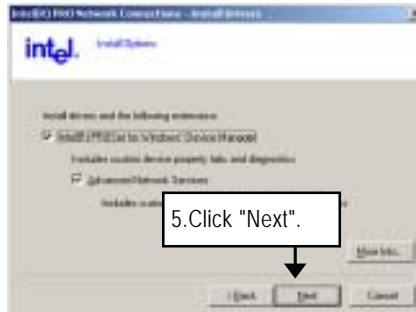


(5)

Start Installation

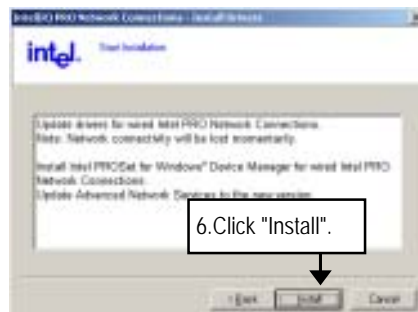


(6)

Installation Progress

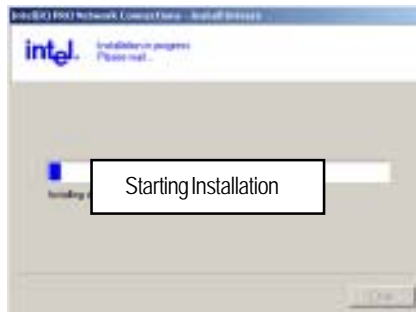

(7)

Installation Complete

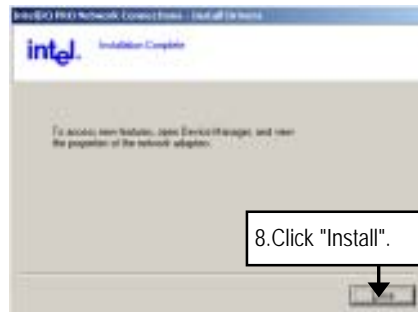

(8)

C. Intel Host RAID Driver Installation

Installation Procedures:


1. The CD auto run program starts, **Double click** on "Intel Host RAID Driver" to make a driver disk.
2. Select a folder referring to your operating system.
3. Insert a floppy disk in the floppy drive.
4. Click on the self-extractor file.
5. System starts making a driver disk automatically.
6. Driver disk creation completed.

Auto Run window




(1)

Host RAID Driver

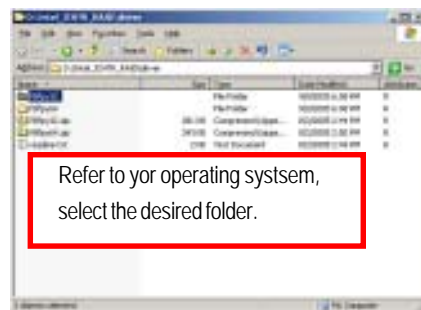

(2)

Starting make a driver disk

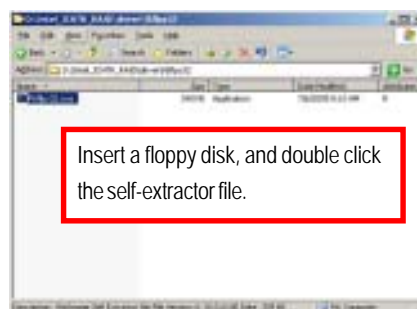


(3)



(4)

Formatting and writing in floppy disk

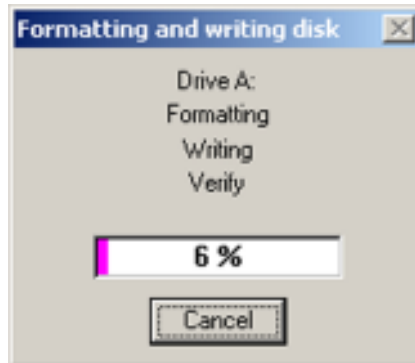

(5)

D. VGA ES100 Driver Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show a series of Setup Wizard dialog boxes. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

Installation Procedures:


1. The CD auto run program starts, **Double click** on "VGA ES1000 Driver" to start the installation.
2. Then, a series of installation wizards appear. Follow up the wizards to install the drivers.
3. Setup completed, click "Finish" to restart your computer.

Auto Run window




(1)

Setup Wizard

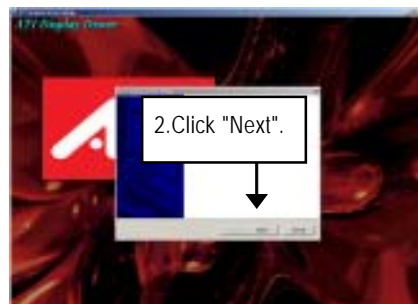


(2)

License Agreement

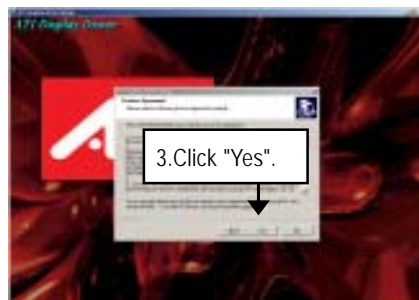

(3)

Installation Complete

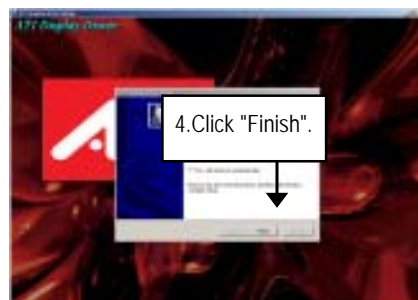

(4)

E. DirectX 9.0 Driver Installation

Insert the driver CD-title that came with your motherboard into your CD-ROM driver, the driver CD-title will auto start and show the installation guide. If not, please double click the CD-ROM device icon in "My computer", and execute the setup.exe.

Installation Procedures:


1. The CD auto run program starts, **Double click** on "Directx9.0" to start the installation.
2. Then, a series of installation wizards appear. Follow up the wizards to install the drivers.
3. Setup completed, click "Finish" to restart your computer.

Auto Run window




(1)

License Agreement

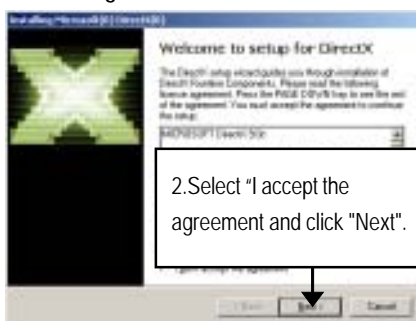

(2)

Starting Installaiton

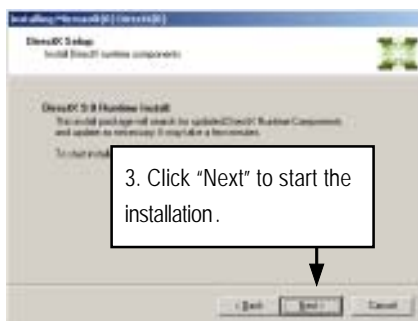

(3)

Installaiton Wizard completed



(4)

Chapter 7 Appendix

7-1: Acronyms

| Acronyms | Meaning |
|----------|--|
| ACPI | Advanced Configuration and Power Interface |
| APM | Advanced Power Management |
| AGP | Accelerated Graphics Port |
| AMR | Audio Modem Riser |
| ACR | Advanced Communications Riser |
| BBS | BIOS Boot Specification |
| BIOS | Basic Input / Output System |
| CPU | Central Processing Unit |
| CMOS | Complementary Metal Oxide Semiconductor |
| CRIMM | Continuity RIMM |
| CNR | Communication and Networking Riser |
| DMA | Direct Memory Access |
| DMI | Desktop Management Interface |
| DIMM | Dual Inline Memory Module |
| DRM | Dual Retention Mechanism |
| DRAM | Dynamic Random Access Memory |
| DDR | Double Data Rate |
| ECP | Extended Capabilities Port |
| ESCD | Extended System Configuration Data |
| ECC | Error Checking and Correcting |
| EMC | Electromagnetic Compatibility |
| EPP | Enhanced Parallel Port |
| ESD | Electrostatic Discharge |
| FDD | Floppy Disk Device |
| FSB | Front Side Bus |
| HDD | Hard Disk Device |
| IDE | Integrated Dual Channel Enhanced |
| IRQ | Interrupt Request |

| Acronyms | Meaning |
|----------|---|
| I/O | Input / Output |
| IOAPIC | Input Output Advanced Programmable Input Controller |
| ISA | Industry Standard Architecture |
| LAN | Local Area Network |
| LBA | Logical Block Addressing |
| LED | Light Emitting Diode |
| MHz | Megahertz |
| MIDI | Musical Instrument Digital Interface |
| MTH | Memory Translator Hub |
| MPT | Memory Protocol Translator |
| NIC | Network Interface Card |
| OS | Operating System |
| OEM | Original Equipment Manufacturer |
| PAC | PCI A.G.P. Controller |
| POST | Power-On Self Test |
| PCI | Peripheral Component Interconnect |
| RIMM | Rambus in-line Memory Module |
| SCI | Special Circumstance Instructions |
| SECC | Single Edge Contact Cartridge |
| SRAM | Static Random Access Memory |
| SMP | Symmetric Multi-Processing |
| SMI | System Management Interrupt |
| USB | Universal Serial Bus |
| VID | Voltage ID |
| ZCR | Zero Channel RAID |